



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R90BT. You'll find the answers to all your questions on the JVC KD-R90BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R90BT
User guide JVC KD-R90BT
Operating instructions JVC KD-R90BT
Instructions for use JVC KD-R90BT
Instruction manual JVC KD-R90BT

JVC




ENGLISH

FRANÇAIS

KD-R90BT

CD RECEIVER / RÉCEPTEUR CD

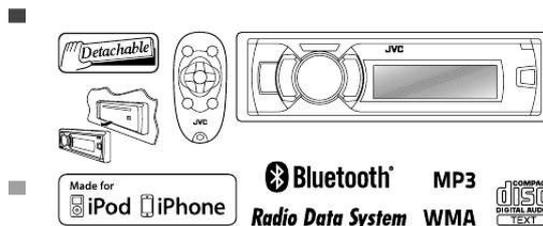

For canceling the display demonstration, see page 4.
Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual.
Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS
MANUEL D'INSTRUCTIONS

GET0803-003A
[E/EN]



[You're reading an excerpt. Click here to read official JVC KD-R90BT user guide](#)

<http://yourpdfguides.com/dref/4539189>

Manual abstract:

@@CAUTION: Do not open the top cover. @@ 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. Warning: Stop the car before operating the unit. Caution: Battery Products Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident. Avoid using the USB device or iPod/iPhone if it might hinder driving safety. Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality.

@@@@@Temperature inside the car: If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit. Appears on the display and animation/text scroll will be stopped to prevent the display from being blurred when the temperature falls below 0°C. Once operating temperature is normalised, these functions will start working again. . Condensation: When the car is air-conditioned, moisture may collect on the laser lens.

This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate. 2 \ ENGLISH 2012/2/15 17:53:26 KD-R90BT_E_EN How to attach the control panel Contents Preparation . 4 Canceling the display demonstration Setting the clock Basic operations . 4 How to detach the control panel Avoid touching the connectors.

How to forcibly eject a disc (Hold) Be careful not to drop the disc when it ejects. If this does not work, reset your unit. 32 Maintenance Cleaning the unit Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the unit. How to read this manual: This manual mainly explains operations using the buttons on the control panel. <> indicates the displays on the control panel. [XX] indicates the initial setting of a menu item. Cleaning the connector Wipe off dirt on the connector of the unit and panel. use a cotton swab or cloth. ENGLISH \ 3 KD-R90BT_E_EN 2012/2/15 17:53:26 Preparation Preparation Canceling the display demonstration The display demonstration is always turned on unless you cancel it.

(Hold) Source Radio CD/USB/Bluetooth Audio iPod/iPhone (Headunit Mode/iPod Mode) iPod/iPhone (Application Mode) External Components (AUX) *1 Display (Normal display pattern)*1 Non-Radio Data System station: Frequency FM Radio Data System station: Programme type (PTY)/ Frequency/Station name (PS) Track title/Album title/Artist* * "No Name" appears for conventional CDs or if not recorded. Application Mode Aux In Display information varies for large font and large clock display patterns. 4 \ ENGLISH 2012/2/15 17:53:26 KD-R90BT_E_EN Basic operations Control panel Display window Remote controller Flips down the panel Control dial Remote sensor Aim the remote controller directly at the sensor. DO NOT expose to bright sunlight. When you press or hold the following button(s). (Hold) Press the /SOURCE button on the control panel and turn the control dial within 2 seconds to select the source. Press the button again to cancel muting or resume playback. confirms selection. Selects the preset sound mode. (page 19) Enters "Hands-Free" menu (page 14), or answers incoming call when the unit rings.

(Hold) "M" appears, then press the button repeatedly. □ST" lights up when receiving an FM stereo broadcast with sufficient signal strength. Storing stations in memory Manual presetting You can preset up to 18 stations for FM and 6 stations for AM. while listening to a station. Setting the Radio Timer You can tune in to a preset station at a specific time regardless of the current source.

Auto presetting (FM only) SSM (Strong-station Sequential Memory) You can preset up to 18 stations for FM. When all the stations are stored, "SSM" disappears. Lights up after the Radio Timer has been set. Only one timer can be set. Setting a new timer will override the previous setting.

The Radio Timer will not activate if the unit is turned off or if <AM> is set to <Hide> after selecting an AM station for the timer. (page 26) Selecting a preset station You can also select a preset station using /. 6 \ ENGLISH 2012/2/15 17:53:26 KD-R90BT_E_EN Radio The following features are available only for FM Radio Data System stations. If the volume is adjusted during reception of Traffic Announcement or News, the adjusted volume is automatically memorized. It will be applied the next time the unit switches to Traffic Announcement or News. pTY Search starts. If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. Tracking the same programme —Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station PTY codes News, Affairs, Info, Sport, Educate, Drama, Culture, Science, of the same network, possibly broadcasting the Varied, Pop M (music), Rock M (music), Easy M (music), Light same programme with stronger signals. m (music) , Classics , Other M (music) , Weather , Finance , Children , Social , Religion , Phone In , Travel , Leisure , Jazz , Country , Nation M (music) , Oldies , Folk M (music) , Document 1 (Hold) <Tuner> <AF-Regional> * Switches to another station. The programme may differ from the one currently received (the AF indicator lights up).

Switches to another station broadcasting the same programme (the REG indicator lights up). cancels. Activating TA/News Standby Reception Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) or NEWS programme from any source other than AM. Tune in to another station providing the Radio Data System signals. again. * AF-Regional: Alternative Frequencies-Regional Automatic station selection— Programme Search When the signal of a preset station you have selected is weak, this unit searches for another station possibly broadcasting the same programme as the original preset station is broadcasting. <P-Search> (page 25) ENGLISH \ 7 Flashes To deactivate, press KD-R90BT_E_EN 2012/2/15 17:53:26 CD/USB CD/USB Playing a CD/USB device Label side USB cable from the rear of the unit or The source changes to "CD" and playback starts. The source changes to "USB" and playback starts. This unit can play MP3/WMA files stored in CD-R, CD-RW, and MP3/WMA/WAV files in USB mass storage device (such as a USB memory and Digital Audio Player). make sure all important data has been backed up.

We shall bear no responsibility for any loss of data in USB mass storage class device while using this system.



[You're reading an excerpt. Click here to read official JVC KD-R90BT user guide](http://yourpdfguides.com/dref/4539189)

<http://yourpdfguides.com/dref/4539189>

Ejected disc not removed within 15 seconds will reload automatically. If the disc cannot be ejected, page 3. selecting a folder/track Selects folder. (For MP3/WMA/WAV) Selecting the playback modes You can select one of the following playback modes at a time.

Randomly plays all tracks of current folder, then tracks of next folders. All * For MP3/WMA/WAV For MP3/WMA/WAV If there are many folders or tracks, you can fast search for the desired folder or track by turning the control dial quickly, or use Quick Search (page 10). 8 \ ENGLISH 2012/2/15 17:53:26 KD-R90BT_E_EN iPod/iPhone Playing an iPod/iPhone USB cable from the rear of the unit 2 Select the desired list. * Recommend to use a cable suitable for car use. 3 Select the desired track.

Selecting the control mode (Hold) Headunit Mode iPod Mode Application Mode <Headunit Mode>/ <iPod Mode>/ <Application Mode> Controls iPod playback through this unit. controls iPod playback from the iPod/iPhone. The sound of any functions (music, games, applications, etc.) running on the connected iPod/ iPhone is emitted through the speakers connected to this unit. Repeat this step until the desired track is selected. If the selected menu contains many tracks, you can fast search for the desired track by turning the control dial quickly, or use Quick Search (page 10). selecting the playback modes Applicable under <Headunit Mode> only. You can select one of the following playback modes at a time. 1 (Hold) <Repeat> <Random> 2 You can also change the setting using <iPod Switch> in the menu. (page 26) Repeat Off One All Random Off Song Selecting a track Applicable under <Headunit Mode>/<iPod Mode> only.

For <Application Mode>, applicable only for some audio applications. Functions the same as “Repeat One” of the iPod. Functions the same as “Repeat All” of the iPod. cancels random playback. Functions the same as “Shuffle Songs” of the iPod. Functions the same as “Shuffle Album Albums” of the iPod.

□Album” is not applicable for some iPod/ iPhone. Selecting a track from the list Applicable under <Headunit Mode> only. iPod/iPhone application You can operate JVC original application with this unit in <Application Mode>. For more details, visit JVC website: <http://www3.

1 ENGLISH \ 9 KD-R90BT_E_EN 2012/2/15 17:53:26 Quick Search Quick Search If you have many folders/tracks/contacts, you can search through them quickly according to the first character (A to Z, 0 to 9 and OTHERS). 2 Select the desired character (A to Z, 0 to 9 and OTHERS). 3 Select your desired folder/track/contact. □OTHERS” appears if the first character is not A to Z or 0 to 9, such as #, -, !, etc. For CD/USB and iPod/iPhone, repeat step 3 until the desired track is selected.

Searching may not work on some of the layers of the selected menu (for iPod/iPhone). External components You can connect an external component to the AUX (auxiliary) cable from the rear of the unit. For details, refer also to the instructions supplied with the external components. . Playing an external component from AUX Portable audio player, etc.

1 Connect to AUX cable from the rear of the unit. 2 Select <AUX IN>. AUX 3 Turn on the connected component and start playing the source. 3. 5 mm stereo mini plug (not supplied) Use a 3-terminal plug head stereo mini plug for optimum audio output. 10 \ ENGLISH KD-R90BT_E_EN 2012/2/15 17:53:26 Bluetooth connection Bluetooth connection By connecting the supplied KS-UBT1 USB Bluetooth Adapter and microphone to this unit, you can operate a Bluetooth device using this unit. Refer to the “Installation/Connection Manual” for details on connecting the microphone. Once the USB Bluetooth Adapter is attached, this unit is always available for pairing. Refer also to the instructions supplied with the Bluetooth device. Refer to the separate appendix to check the countries where Microphone KS-UBT1 you may use the Bluetooth function.

If you turn off the unit, detach the control panel, or unplug the USB Bluetooth Adapter during a phone call conversation, the Bluetooth connection is disconnected. Continue the conversation using your mobile phone. This unit supports the following Bluetooth profiles Hands-Free Profile (HFP 1. 3)

Warning: Stop the car in a safe place before operating complicated steps such as dialing numbers, using phonebook, etc. Pairing a Bluetooth device When connecting a Bluetooth device to the unit for the first time, perform pairing between the unit and the device. Up to five Bluetooth devices can be registered in this unit. A maximum of two Bluetooth phones and one Bluetooth audio device can be connected at any time. this unit supports Secure Simple Pairing (SSP). 1 Coto return to 1st phone’s “Hands-Free” menu. Making a call from the hands-free menu 1 Enter the “Hands-Free” menu.

2 Select a calling method. Refer to the table below for options. 3 Select and call the contact (name/phone number). Dialed Calls Received Calls Missed Calls Phonebook If the phonebook contains many numbers, you can fast search for the desired number by turning the control dial quickly, or use Quick Search (page 10). □No History the current group.

eNGLISH \ 17 KD-R90BT_E_EN 2012/2/15 17:53:26 Illumination color adjustments Button zone Display zone All zone: Includes both Button zone and Display zone. All zone Selecting the preset color You can select a preset color for <Button Zone>, <Display Zone>, and <All Zone> separately. Storing your own adjustments You can store your own day and night colors for <Button Zone> and <Display Zone> separately. 3 3 Button Zone Display Zone All Zone Color 01-29/User/ COLORFLOW 1-3* * Color changes in different speeds. @@@@ 4 Press MENU to exit.

@@@@ your adjustment is automatically stored to “User”. @@@@@@ 4 Press MENU to exit. @@@@@@ 3 Select the frequency. @@@@@@ 5 . The adjustments are stored and <USER> is activated. @@@@@@ 2 Select “Default Music”. Result Flat Default Music: Sample music pre-stored in the unit. @@3 Customize sound level for each step (instrument). @@To store another sound mode, repeat steps 1 to 6. @@Step 2: Adjust low frequency sound level.

Bass) Step 3: Adjust middle frequency sound level. 2 Download your preferred music sample (<. @@@@@@ 6 ft 4 Select the seat position for the best listening experience. @@5 Confirm the car type and seat position. The settings are stored and car type <USER> is activated. @@ 7 Press MENU to exit. @@@@@@ 22 \ ENGLISH KD-R90BT_E_EN 2012/2/15 17:53:26 Sound adjustments Setting the cutoff frequency — X’over HPF/LPF You can select or customize the cutoff frequencies from this unit according to your speakers for an improved sound quality. 1 (Hold) 2 Select the adjustment method. <Audio> <X’over HPF/LPF> <Easy> or <Pro> Easy The unit will adjust the cutoff frequencies automatically based on your selected speaker size.



[You're reading an excerpt. Click here to read official JVC KD-R90BT user guide](http://yourpdfguides.com/dref/4539189)

<http://yourpdfguides.com/dref/4539189>

HPF/LPF PUSH Pro You can customize the cutoff frequencies and the filter depth.

*1 *2 Select "Full" if you are not sure of the speaker size. Frequencies higher than the selected frequency are sent to the front/rear speakers. As the number decreases, the filter depth is adjusted closer to selected filter frequency. activates the Low Pass Filter (LPF). Frequencies lower than the selected frequency are sent to the subwoofer.

eNGLISH \ 23 KD-R90BT_E_EN 2012/2/15 17:53:26 Menu operations Menu operations 1 (Hold) 3 Repeat step 2 if necessary. To return to the previous menu, press . to exit from the menu , press DISP or MENU. If no operation is done for about 60 seconds, the operation will be canceled. 2 Menu item DEMO

Clock Display Set Clock 24H/12H Clock Adjust Clock Color Color Setup Dimmer Set Selectable setting (Initial: [XX]) For settings , page 4.

On: Shows the clock display when the power is off. [Auto]: The built-in clock is synchronized with the clock data received from the FM Radio Data System station. for settings , page 18. Selects the display and button illumination adjusted in the <Brightness>/ <Color Setup> setting. [Auto]: Changes between the Day and Night adjustments when you turn off/on the car headlights. *1 Time Set: Sets the start/end timer for dimmer. Turn the control dial to adjust the start time, then press the control dial to confirm. Repeat this step to enter the end time. Day Brightness[31]/Night Brightness[11]: Brightness settings for the display and button illumination for day and night. [On]: Shows the TAG information while playing MP3/WMA/WAV tracks.

Auto: Positive pattern will be selected during the day*3, while negative will be selected during the night*3. Level 01 — Level 15 [Level 09]: Adjusts the contrast of the display to make indications clear and legible.) This setting may not work correctly on some vehicles (particularly on those having a control dial for dimming). In this case, change the setting to other than <Dimmer Auto>. Some characters or symbols will not be shown correctly (or will be blanked) on the display. Depends on the <Dimmer Set> setting. Loud1/ 2/ 3: Boosts low and high frequencies to produce a well-balanced sound at low volume levels.

[Off]: Cancels. Level -5 — Level +5 [Level 0]: Presets the volume adjustment level of each source, compared to the FM volume level. Before adjustment, select the source you want to adjust.

Low Power: Limits the maximum volume level to 30. (Select if the maximum input power of each speaker is less than 50 W to prevent damaging the speakers. (Displayed only when the source is "FM". @@ (Stereo effect may be lost. @@(Displayed only when the source is "FM".

) (page 7) Displayed only when the source is "FM". @@This adjustment will not affect the subwoofer output. @@ [Headunit Mode]/iPod Mode/Application Mode: For settings , page 9. @@Initial selection depends on your iPod/iPhone setting. @@@@ (page 13) For settings , page 13.

@@ changes the PIN code (1 to 6-digits). @@After entering the PIN code, press the control dial to confirm. @@@@*8 Displayed only when the source is "USB-1/USB-2". *9 Displayed only when the source is "iPod-1/iPod-2". *10 If the USB Bluetooth Adapter is not connected to the unit, "Please Connect BT Adapter" appears on the display. *11 <Connect> will not be displayed if two Bluetooth phones are connected at the same time. *12 Displayed only when a

Bluetooth phone/audio player/application is connected. *13 Displayed only when the unit is in any source other than the corresponding source "AM Source/AUX Source". *14 Displayed only when the USB Bluetooth Adapter (KS-UBT1) is attached and current source is not "BT-1/BT-2". 26 \ ENGLISH KD-R90BT_E_EN 2012/2/15 17:53:26 Remote controller Preparing When you use the remote controller for the first time, pull out the insulation sheet.

Remote controller Warning: Do not install any battery other than CR2025 or its equivalent. Do not leave the remote controller in places (such as dashboards) exposed to direct sunlight for a long time. Store the battery in places out of reach of children. Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire. Do not place the battery with other metallic materials. Do not poke the battery with tweezers or similar tools. Insulate the battery by wrapping it with tape when disposing or storing it. This unit is equipped with the steering wheel remote control function. For details, refer also to the instructions supplied with the remote adapter. Insulation sheet Replacing the lithium coin battery If the effectiveness of the remote controller decreases, replace the battery.

CR2025 Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like. Additional information About discs This unit can only play the following CDs: Handling discs Do not touch the recording surface of the disc. do not stick tape etc.

On the disc, or use a disc with tape stuck on it. Do not use any accessories for the disc. Clean from the center of the disc and move outwards. Clean the disc with a dry silicon or soft cloth. Do not use any solvents.

When removing discs from this unit, pull them out horizontally. Remove any burrs from the center hole and disc edge before inserting a disc. This unit can play back multi-session discs; however, unclosed sessions will be skipped during playback. unplayable discs Discs that are not round. Discs with coloring on the recording surface or discs that are dirty. Recordable/ReWritable disc that has not been finalized. (For details on disc finalization, refer to your disc writing software and your disc recorder instruction manual.) 8 cm CD. Attempting to insert using an adapter can cause malfunction. There may also be problems ejecting the disc if inserted.

DualDisc playback The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended. (The elapsed time for VBR files will not be displayed correctly. You cannot connect a computer or portable HDD to the USB input terminal of the unit. Connect only one USB device to the unit at a time. do not use a USB hub. USB devices equipped with special functions such as data security functions cannot be used with the unit. Do not use a USB device with 2 or more partitions. This unit cannot recognize a

USB device whose rating is other than 5 V and exceeds 1 A. This unit may not recognize a memory card inserted into the USB card reader.

This unit may not play back files in a USB device properly when using a USB extension cord. Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose. Operation and power supply may not work as intended for some USB devices.



[You're reading an excerpt. Click here to read official JVC KD-R90BT user guide](http://yourpdfguides.com/dref/4539189)

<http://yourpdfguides.com/dref/4539189>

The maximum number of characters for: – Folder names: 25 characters – File names: 25 characters – MP3 Tag: 128 characters – WMA Tag: 128 characters – WAV Tag: 128 characters This unit can recognize a total of 20 000 files, 2 000 folders (999 files per folder including folder without unsupported files), and of 8 hierarchies. However, the display can only show until 999 folders/files.

Unplayable files MP3 files: - encoded in MP3i and MP3 PRO format - encoded in an inappropriate format - encoded with Layer 1/2 WMA files: - encoded in lossless, professional, and voice format - not based upon Windows Media® Audio - copy-protected with DRM Files which include data such as AIFF, ATRAC3, etc. Cautions Do not pull out and attach the USB device repeatedly while “READING” is shown on the display. Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then reset this unit and the USB device. Do not leave a USB device in the car, expose to direct sunlight, or high temperature.

Failure to do so may result in deformation or cause damages to the device. File/folder names This unit supports files/folder names recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet, and the proper extension code <. The search function works but search speed is not constant. 28 | ENGLISH KD-R90BT_E_EN 2012/2/15 17:53:26 Additional information About iPod/iPhone iPod/iPhone that can be connected to this unit: - iPod touch (4th generation) - iPod touch (3rd generation) - iPod touch (2nd generation) - iPod touch (1st generation) - iPod classic - iPod with video (5th generation)* - iPod nano (6th generation) - iPod nano (5th generation) - iPod nano (4th generation) - iPod nano (3rd generation) - iPod nano (2nd generation) - iPod nano (1st generation)* - iPhone 4S - iPhone 4 - iPhone 3GS - iPhone 3G - iPhone *<iPod Mode>/<Application Mode> are not applicable. It is not possible to browse video files on the “Videos” menu in <Headunit Mode>. The song order displayed on the selection menu of this unit may differ from that of the iPod. When operating an iPod/iPhone, some operations may not be performed correctly or as intended. In this case, visit the following JVC website: <<http://www3.jvc.com>>. About Bluetooth Depending on the Bluetooth version of the device, some Bluetooth devices may not be able to connect to this unit. This unit may not work with some Bluetooth devices.

signal conditions vary, depending on the surroundings. When the unit is turned off, the device is disconnected. For more information about Bluetooth, visit the following JVC website: <<http://www3.jvc.com>> (English website only) Trademark and license notice Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners. □Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.

@@ remedy/Cause Check the cords, aerial and cable connections. @@@@ (page 3) If the message does not disappear, consult your JVC car audio dealer or kits supplying company. (page 26) This unit can only display letters (capital: A – Z, small: a – z), numbers (0 – 9), and a limited number of symbols, and spacing. store stations manually. □Miswiring Check Wiring Reset The Unit”/“Warning Check Wiring Reset The Unit” appears on the display and no operations can be done.

The unit does not work at all. source cannot be selected. The correct characters are not displayed (e. □Reading” keeps flashing on the display. Tracks/folders are not played back in the order you have intended.

The elapsed playing time is not correct. “No File” appears on the display. □Not Support” appears on the display and track skips. “Cannot Play” flashes on the display. The unit cannot detect the connected device. The iPod/iPhone does not turn on or does not work. Press [], then insert the disc correctly. The disc cannot be ejected properly. Make sure nothing is blocking the loading slot. A longer readout time is required.

Do not use too many hierarchical levels and folders. Reload the disc or reattach the USB device. The playback order is determined by the file name (USB) or the order in which files were recorded (disc). This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. @@ check whether the track is a playable file format. Check whether the connected device is compatible with this unit. @@ (page 28) Reattach the device. Check the connection between this unit and iPod/iPhone. Detach and reset the iPod/iPhone using hard reset.

@@@Delete pairing information from both the unit and the Bluetooth device, then perform pairing again. You have already registered the maximum of five Bluetooth devices in the unit. To pair another device, delete an existing paired device from the unit first. (page 16) Reduce the distance between the unit and the Bluetooth device. Move the car to a place where you can get a better signal reception.

You may have tried to copy the same entries (as stored) to the unit. press DISP or to exit. Reduce the distance between the unit and the Bluetooth audio player. Turn off, then turn on the unit and try to connect again. Other Bluetooth devices might be trying to connect to the unit.

Check whether the connected Bluetooth audio player supports Audio/Video Remote Control Profile (AVRCP). (Refer to the instructions of your audio player.) Disconnect and connect the Bluetooth player again. Use “Voice” calling method in a more quiet environment. Reduce the distance from the microphone when you speak the name. change “NR/EC Mode” to “Off” (page 16), then try again. The connected phone does not support this feature. The device is registered but the connection has failed. If “Error” appears again, check if the device supports the function you have tried. The unit is preparing to use the Bluetooth function.

If the message does not disappear, turn off and turn on the unit, then connect the device again (or reset the unit). (page 3) Reset the unit and try the operation again. If “HW Error” appears again, consult your nearest JVC car audio dealer. The unit failed to search for the registered Bluetooth devices during Auto Connect.



[You're reading an excerpt. Click here to read official JVC KD-R90BT user guide](http://yourpdfguides.com/dref/4539189)

<http://yourpdfguides.com/dref/4539189>

Turn on Bluetooth from your device and connect manually. □Pairing Full” appears on the display when trying to perform pairing. The unit does not respond when you try to copy the phonebook to the unit. Sound is being interrupted or skipped during playback of a Bluetooth audio player. The connected Bluetooth audio player cannot be controlled. □Voice” calling method is not successful.

□Not Support” appears when trying to perform voice dial. ENGLISH \ 31 KD-R90BT_E_EN 2012/2/15 17:53:26 Specifications Specifications AUDIO AMPLIFIER SECTION Maximum Power Output Continuous Power Output (RMS) Load Impedance Frequency Response Signal-to-Noise Ratio Line-Out, Subwoofer-Out Level/Impedance Output Impedance 50 W per channel 20 W per channel into 4Ω, 40 Hz to 20 000 Hz at less than 1% total harmonic distortion. Remplacez-la uniquement avec le même type de pile ou un type équivalent. 28 \ FRANÇAIS KD-R90BT_E_FR 2012/2/15 18:27:59 Informations complémentaires À propos d'iPod/iPhone iPod/iPhone qui peuvent être raccordés à cet appareil : - iPod touch (4e Génération) - iPod touch (3e Génération) - iPod touch (2e Génération) - iPod touch (1e Génération) - iPod classic - iPod avec vidéo (5e Génération)* - iPod nano (6e Génération) - iPod nano (5e Génération) - iPod nano (4e Génération) - iPod nano (3e Génération) - iPod nano (2e Génération) - iPod nano (1e Génération)* - iPhone 4S - iPhone 4 - iPhone 3GS - iPhone 3G - iPhone *<iPod Mode>/<Application Mode> ne sont pas applicables. □Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance. Please reset your unit Refer to page of How to reset your unit Vous avez des PROBLÈMES de fonctionnement? .



[You're reading an excerpt. Click here to read official JVC KD-R90BT user guide](http://yourpdfguides.com/dref/4539189)

<http://yourpdfguides.com/dref/4539189>