



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-X30. You'll find the answers to all your questions on the JVC KD-X30 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-X30
User guide JVC KD-X30
Operating instructions JVC KD-X30
Instructions for use JVC KD-X30
Instruction manual JVC KD-X30

JVC

 


ENGLISH

FRANÇAIS

KD-X40/KD-X30

DIGITAL MEDIA RECEIVER /
RÉCEPTEUR MULTIMÉDIA NUMÉRIQUE



Radio Data System WMA MP3



For canceling the display demonstration, see page 3./
Pour annuler la démonstration des affichages, référez-vous à la page 3.

For installation and connections, refer to the separate manual.
Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS
MANUEL D'INSTRUCTIONS

GET0783-003B
[E/EN]



[You're reading an excerpt. Click here to read official JVC KD-X30 user guide](http://yourpdfguides.com/dref/4539187)

<http://yourpdfguides.com/dref/4539187>

Manual abstract:

Warning: Caution: Stop the car before operating the unit. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead. Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident. Avoid using the USB device or iPod/iPhone if it might hinder driving safety. Caution on volume setting: Digital devices (USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by the sudden increase of the output level. Temperature inside the car: If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit. How to read this manual: This manual mainly explains operations using the buttons on the control panel. < > indicates the displays on the control panel. How to reset your unit Your preset adjustments will also be erased. Maintenance Cleaning the unit Wipe off the dirt on the panel with a dry silicon or soft cloth.

Failure to observe this precaution may result in damage to the unit. 2 ENGLISH 2011/11/8 22:24:41 KD-X40_E_EN Contents Preparation . 3 Canceling the display demonstration Setting the clock Basic operations . 19 Preparation Canceling the display demonstration The display demonstration is always turned on unless you cancel it. ENGLISH \ 3 KD-X40_E_EN 2011/11/8 22:24:41 Basic operations Basic operations Control panel Display window Remote controller (For KD-X40 only) Front AUX input jack Control dial USB input terminal Remote sensor Aim the remote controller directly at the sensor. dO NOT expose to bright sunlight. When you press or hold the following button(s). Press the button again to cancel muting or resume playback. (KD-X40 only) Switches the iPod mode when in the iPod source. (KD-X40 only) (page 9) Selects the preset sound mode. We recommend that you use remote controller RM-RK52 with your unit. /Playing time Clock (back to the beginning) EXT MODE BT AUDIO Clock Clock Clock Track no. / USB iPod/iPhone (HEAD MODE/ IPOD MODE) *1 iPod/iPhone (EXT MODE) *1 External Components (AUX) Bluetooth Audio *1 For KD-X40 only. F-AUX or R-AUX Remote controller Preparing When you use the remote controller for the first time, pull out the insulation sheet. Warning: Do not install any battery other than CR2025 or its equivalent.

Do not leave the remote controller in places (such as dashboards) exposed to direct sunlight for a long time. Store the battery in places out of reach of children. Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire. Do not place the battery with other metallic materials. Do not poke the battery with tweezers or similar tools. Insulate the battery by wrapping it with tape when disposing or storing it. This unit is equipped with the steering wheel remote control function. For details, refer also to the instructions supplied with the remote adapter. Insulation sheet Replacing the lithium coin battery If the effectiveness of the remote controller decreases, replace the battery. cR2025 Caution: Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type. (Hold) "M" flashes, then press the button repeatedly. while listening to a station. Lights up after the Radio Timer has been set. Only one timer can be set.

Setting a new timer will override the previous setting. When all the stations are stored, "SSM" stops flashing. If the volume is adjusted during reception of Traffic Announcement or News, the adjusted volume is automatically memorized. It will be applied the next time the unit switches to Traffic Announcement or News. pTY Search starts.

If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. Tracking the same programme —Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station PTY codes of the same network, possibly broadcasting the NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, same programme with stronger signals. sCIENCE, VARIED, POP M (music), ROCK M (music), EASY M (music), LIGHT M (music), CLASSICS, OTHER M (music), WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M (music), OLDIES, FOLK M (music), DOCUMENT 1 2 (Hold) <TUNER> <AF-REG> * Switches to another station. The programme may differ from the one currently received (the AF indicator lights up). Switches to another station broadcasting the same programme (the AF indicator lights up). cancels. Activating TA/News Standby Reception Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) or NEWS programme from any source other than AM. Tune in to another station providing the Radio Data System signals. again. Automatic station selection— Programme Search When the signal of a preset station you have selected is weak, this unit searches for another station possibly broadcasting the same programme as the original preset station is broadcasting.

This unit can play MP3/WMA files stored in USB mass storage device (such as a USB memory and Digital Audio Player). make sure all important data has been backed up. We shall bear no responsibility for any loss of data in USB mass storage class device while using this system. selecting a folder/track Selects folder. Selecting the playback modes You can select one of the following playback modes at a time. Randomly plays all tracks of current folder, then tracks of next folders. iPod Controls iPod playback from the MODE iPod/iPhone. EXT Allows any audio signals from iPod/ MODE iPhone. (page 15) 3 Select the desired track. Repeat this step until the desired track is selected.

You can select one of the following playback modes at a time. Functions the same as "Repeat All" of the iPod. "ALBUM RND" is not applicable for some iPod/ iPhone. Playing an external component from Front/Rear AUX 3. 4 Turn on the connected component and start playing the source.

Use a 3-terminal plug head stereo mini plug for optimum audio output. Please contact your dealer where you purchased this unit. For details, refer also to the instructions supplied with the device. 1 Register (pair) a Bluetooth device with KS-BTA100. 2 Change the <SRC SELECT> settings of this unit.

3 3 BUTTON ZONE DISP ZONE ALL ZONE COLOR 01-29/USER/ COLOR FLOW 01-03* * Color changes in different speeds.



[You're reading an excerpt. Click here to read official JVC KD-X30 user guide](#)

<http://yourpdfguides.com/dref/4539187>

@@@ 4 Press MENU to exit. @@@ your adjustment is automatically stored to "USER". @@@@ 4 Press MENU to exit. @@1 Brightness button is only available for KD-X30. Sound adjustments This unit memorizes sound settings adjusted for each individual source. Selecting the preset sound You can select a preset sound mode, for each individual source, suitable for the music genre. pro Equalizer 1 2 (Hold) <PRO EQ> <BASS>*/<MIDDLE>/<TREBLE> ----- or ----- Press repeatedly. 3 Adjust the sound elements of the selected tone. 5 kHz LVL -06 to +06 [+05] [Q FIX] DYNAMIC VOCAL BOOST BASS BOOST USER FLAT NATURAL (back to the beginning) Storing your owt jack is connected to the Bluetooth adapter, KS-BTA100 (page 10).

The source name will be changed to "BT AUDIO". sRC SELECT TUNER *11 Only for FM Radio Data System stations. *12 Displayed only when the unit is in any source other than the corresponding source "AM/F-AUX/R-AUX/BT AUDIO". (The elapsed time for VBR files will not be displayed correctly. You cannot connect a computer or portable HDD to the USB input terminal of the unit. Connect only one USB device to the unit at a time. do not use a USB hub. USB devices equipped with special functions such as data security functions cannot be used with the unit. Do not use a USB device with 2 or more partitions.

This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A.

This unit may not recognize a memory card inserted into the USB card reader. This unit may not play back files in a USB device properly when using a USB extension cord. @@@@ Unplayable files MP3 files: - encoded in MP3i and MP3 PRO format - encoded in an inappropriate format - encoded with Layer 1/2 WMA files: - encoded in lossless, professional, and voice format - not based upon Windows Media® Audio - copy-protected with DRM Files which include data such as AIFF, ATRAC3, etc. Maximum number of characters for file/folder name Varies depending on the format used (includes 4 extension characters—<. The search function works but search speed is not constant.

Cautions Do not pull out and attach the USB device repeatedly while "READING" is shown on the display. Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then reset this unit and the USB device. @@@@ The song order displayed on the selection menu of this unit may differ from that of the iPod. When operating an iPod/iPhone, some operations may not be performed correctly or as intended.

In this case, visit the following JVC website: <<http://www3.jvc.com>>. Trademark and license notice Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. □Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performan.



[You're reading an excerpt. Click here to read official JVC KD-X30 user guide](http://yourpdfguides.com/dref/4539187)

<http://yourpdfguides.com/dref/4539187>