



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KW-R500. You'll find the answers to all your questions on the JVC KW-R500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual JVC KW-R500
User guide JVC KW-R500
Operating instructions JVC KW-R500
Instructions for use JVC KW-R500
Instruction manual JVC KW-R500



ENGLISH
FRANÇAIS

KW-R500/KW-R400

CD RECEIVER / RÉCEPTEUR CD

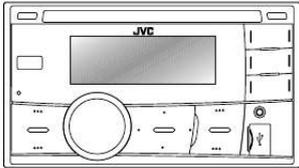

WMA
MP3

Made for iPod iPhone **Radio Data System** 

For canceling the display demonstration, see page 4./
Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual.
Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS
MANUEL D'INSTRUCTIONS

GET0789-003B
[E/EN]



[You're reading an excerpt. Click here to read official JVC KW-R500 user guide](http://yourpdfguides.com/dref/4539152)
<http://yourpdfguides.com/dref/4539152>

Manual abstract:

@@CAUTION: Do not open the top cover. @@ 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. Warning: Stop the car before operating the unit. Caution: Battery Products Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident. Avoid using the USB device or iPod/iPhone if it might hinder driving safety. Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead. Caution on volume setting: Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by the sudden increase of the output level. Temperature inside the car: If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Condensation: When the car is air-conditioned, moisture may collect on the laser lens. This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate. 4 Canceling the display demonstration Setting the clock Remote controller . 21 How to forcibly eject a disc (Hold) Be careful not to drop the disc when it ejects.

If this does not work, reset your unit. Maintenance Cleaning the unit Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the unit. @@< > indicates the displays on the control panel. [XX] indicates the initial setting of a menu item.

@@@Remote controller Warning: Do not install any battery other than CR2025 or its equivalent. Do not leave the remote controller in places (such as dashboards) exposed to direct sunlight for a long time. Store the battery in places out of reach of children. Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire. Do not place the battery with other metallic materials.

Do not poke the battery with tweezers or similar tools. Insulate the battery by wrapping it with tape when disposing or storing it. This unit is equipped with the steering wheel remote control function. For details, refer also to the instructions supplied with the remote adapter. Insulation sheet Replacing the lithium coin battery If the effectiveness of the remote controller decreases, replace the battery. cR2025 Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like. @@@@/Playing time Track no. @@@@Press the button again to cancel muting or resume playback.

Stores the current station into the selected number button. (Hold) (page 8) Selects the preset sound mode. @@We recommend that you use remote controller RM-RK52 with your unit. (Hold) "M" flashes, then press the button repeatedly. @A B Storing stations in memory Manual presetting You can preset up to 18 stations for FM and 6 stations for AM.

The current station is stored to the selected number button (1 - 6). - - - - - or - - - - - You can also select a preset station using / . Setting the Radio Timer You can tune in to a preset station at a specific time regardless of the current source. The preset number flashes and "MEMORY" appears. Auto presetting (FM only) SSM (Strong-station Sequential Memory) You can preset up to 18 stations for FM.

When all the stations are stored, "SSM" stops flashing. Lights up after the Radio Timer has been set. Only one timer can be set. Setting a new timer will override the previous setting. The Radio Timer will not activate if the unit is turned off or if <AM> is set to <OFF> after selecting an AM station for the timer. 8 \ ENGLISH 2011/12/13 2:37:15 KW-R500_E_EN Radio The following features are available only for FM Radio Data System stations. If the volume is adjusted during reception of Traffic Announcement or News, the adjusted volume is automatically memorized. It will be applied the next time the unit switches to Traffic Announcement or News. pTY Search starts. If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in.

Tracking the same programme —Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically PTY codes tunes in to another FM Radio Data System station NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, of the same network, possibly broadcasting the SCIENCE, VARIED, POP M (music), ROCK M (music), EASY M same programme with stronger signals. (music), LIGHT M (music), CLASSICS, OTHER M (music), WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M (music), OLDSIES, FOLK M (music), DOCUMENT 1 (Hold) <TUNER> <AF-REG> * Switches to another station. The programme may differ from the one currently received (the AF indicator lights up). Switches to another station broadcasting the same programme (the AF indicator lights up). cancels. 2 Activating TA/News Standby Reception Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) or NEWS programme from any source other than AM. Tune in to another station providing the Radio Data System signals. again. @@The source changes to "USB" and playback starts. @@ make sure all important data has been backed up.

@@Ejected disc not removed within 15 seconds will reload automatically. If the disc cannot be ejected, page 3. selecting a folder/track Selects folder.

@@@@@ iPod Controls iPod playback from the MODE iPod/iPhone. EXT Allows any audio signals from iPod/ MODE iPhone.

@@ (page 17) 3 Select the desired track. Repeat this step until the desired track is selected. @@@@You can select one of the following playback modes at a time. @@ 2 1 2 Select the desired list. @@Functions the same as "Repeat All" of the iPod.

@@@@@ALBUM RND" is not applicable for some iPod/iPhone. @@Playing an external component from Front/Rear AUX 3. @@4 Turn on the connected component and start playing the source. Use a 3-terminal plug head stereo mini plug for optimum audio output. @@@@Please contact your dealer where you purchased this unit. @@For details, refer also to the instructions supplied with the device. @@ 1 Register (pair) a Bluetooth device with KS-BTA100.



[You're reading an excerpt. Click here to read official JVC KW-R500 user guide](http://yourpdfguides.com/dref/4539152)

<http://yourpdfguides.com/dref/4539152>

2 Change the <SRC SELECT> settings of this unit. @@@@ your adjustment is automatically stored to "USER". @@@@ (Displayed only when the source is "FM").

(Displayed only when the source is "FM".) (page 9) SEARCH ON/[SEARCH OFF]: Activates Programme Search (if <AF-REG> is set to <AF ON> or <AF-REG ON>) or deactivates. Displayed only when the source is "FM". [AUTO]: Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.) WIDE: Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain. (Displayed only when the source is "USB-IPOD".) [BT ADAPTER]: Select if the rear auxiliary input jack is connected to the Bluetooth adapter, KS-BTA100 (page 12). The source name will be changed to "BT AUDIO". *10 Only for FM Radio Data System stations.

*11 Displayed only when the unit is in any source other than the corresponding source "AM/F-AUX/R-AUX/BT AUDIO". ENGLISH \ 17 KW-R500_E_EN 2011/12/13 2:37:15 Additional information Additional information About discs This unit can only play the following CDs: About audio files Playable files File extensions: MP3. (The elapsed time for VBR files will not be displayed correctly.) This unit can play back multi-session discs; however, unclosed sessions will be skipped during playback. unplayable discs Discs that are not round.

Discs with coloring on the recording surface or discs that are dirty. Recordable/ReWritable disc that has not been finalized. (For details on disc finalization, refer to your disc writing software and your disc recorder instruction manual.) 8 cm CD. Attempting to insert using an adapter can cause malfunction.

There may also be problems ejecting the disc if inserted. @@ Handling discs Do not touch the recording surface of the disc. do not stick tape etc. On the disc, or use a disc with tape stuck on it. Do not use any accessories for the disc. Clean from the center of the disc and move outwards. Clean the disc with a dry silicon or soft cloth. Do not use any solvents. When removing discs from this unit, pull them out horizontally. @@@@ ISO 9660 Level 1 and 2: 64 characters Romeo: 64 characters Joliet: 32 characters Windows long file name: 64 characters DualDisc playback The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard.

TA longer readout time is required. Do not use too many hierarchical levels and folders. Reload the disc or reattach the USB device. The playback order is determined by the file name (USB) or the order in which files were recorded (disc). This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. check whether the track is a playable file format. Check whether the connected device is compatible with this unit. (USB: page 21) (iPod/iPhone: page 19) Ensure that the device contains files in the supported formats. (page 18) Reattach the device.

Check the connection between this unit and iPod/iPhone. Detach and reset the iPod/iPhone using hard reset. For details on resetting the iPod/iPhone, refer to the instruction manual supplied with the iPod/iPhone. 20 \ ENGLISH KW-R500_E_EN 2011/12/13 2:37:15 Specifications AUDIO AMPLIFIER SECTION

Maximum Power Output Continuous Power Output (RMS) Load Impedance Frequency Response Signal-to-Noise Ratio Line-Out, Subwoofer-Out Level/Impedance Output Impedance Specifications 50 W per channel 20 W per channel into 4Ω, 40 Hz to 20 000 Hz at less than 1% total harmonic distortion. Remplacez-la uniquement avec le même type de pile ou un type équivalent.

À propos d'iPod/iPhone iPod/iPhone qui peuvent être raccordés à cet appareil : - iPod touch (4e Génération) - iPod touch (3e Génération) - iPod touch (2e Génération) - iPod touch (1e Génération) - iPod classic - iPod avec vidéo (5e Génération)* - iPod nano (6e Génération) - iPod nano (5e Génération) - iPod nano (4e Génération) - iPod nano (3e Génération) - iPod nano (2e Génération) - iPod nano (1e Génération)* - iPhone 4S - iPhone 4 - iPhone 3GS - iPhone 3G - iPhone * <IPOD MODE>/<EXT MODE> ne sont pas applicables. @@@@ Please reset your unit Refer to page of How to reset your unit Vous avez des PROBLÈMES de fonctionnement? .



[You're reading an excerpt. Click here to read official JVC KW-R500 user guide](http://yourpdfguides.com/dref/4539152)
<http://yourpdfguides.com/dref/4539152>