



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KW-XR411. You'll find the answers to all your questions on the JVC KW-XR411 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual JVC KW-XR411**  
**User guide JVC KW-XR411**  
**Operating instructions JVC KW-XR411**  
**Instructions for use JVC KW-XR411**  
**Instruction manual JVC KW-XR411**

**Having TROUBLE with operation?**  
Please reset your unit  
Refer to page of How to reset your unit

**Vous avez des PROBLÈMES de fonctionnement?**  
Réinitialisez votre appareil  
Référez-vous à la page intitulée Comment réinitialiser votre appareil

---

Dear Customer,  
This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:  
JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Germany

Cher(e) client(e),  
Cet appareil est conforme aux directives et normes européennes en vigueur concernant la compatibilité électromagnétique et à la sécurité électrique.

Représentant européen de la société Victor Company of Japan, Limited:  
JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Allemagne

ENGLISH

FRANÇAIS

**KW-XR411**  
CD RECEIVER / RÉCEPTEUR CD

**Radio Data System**

**MP3**

**WMA**

For canceling the display demonstration, see page 4. / Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual. / Pour l'installation et les raccordements, se référer au manuel séparé.

EN, FR  
© 2010 Victor Company of Japan, Limited

0110DTSMDTJEIN

**INSTRUCTIONS**  
MANUEL D'INSTRUCTIONS

GET0657-003A  
[E/EU]



[You're reading an excerpt. Click here to read official JVC KW-XR411 user guide](http://yourpdfguides.com/dref/2821661)  
<http://yourpdfguides.com/dref/2821661>

**Manual abstract:**

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel. 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident. [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

Do not raise the volume level too much, as this will block outside sounds, making driving dangerous. Stop the car before performing any complicated operations. Reference page number Menu setting item Continued on the next page Canceling the display demonstration Setting the clock Basic operations Listening to the radio Listening to a disc Listening to the USB device Listening to the other external components Using the remote controller Selecting a preset sound mode Menu operations More about this unit Troubleshooting Maintenance Specifications How to reset your unit Be careful not to drop the disc when it ejects. If this does not work, reset your unit. Control dial Remote sensor You can control this unit with an optionally purchased remote control, RM-RK50 ( 12).

When you press or hold the following button(s). Selects the available sources (if the power is turned on). "ST" lights up when receiving an FM stereo broadcast with sufficient signal strength. @50 MHz into preset number "04. You can tune in to a station broadcasting your favourite programme by searching for a PTY code.

Pressing and holding the number buttons (1-6) can also store the current station to the selected number buttons (1-6). If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. Pressing the number buttons (1-6) can also select the preset stations (1-6).

TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM. The volume changes to the preset TA volume level if the current level is lower than the preset level. Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals. PTY Standby Reception allows the unit to switch temporarily to your favourite PTY programme from any source other than AM. To activate and select your favourite PTY code for PTY Standby Reception, see 15) <PTY-STANDBY> ( If the PTY indicator lights up, PTY Standby Reception is activated. To activate the reception, tune in to another station providing these signals. Programme Search Usually when you select a preset number, the station preset in that number is tuned in.

Discs produce very little noise compared with other sources. You can use only one of the following playback modes at a time. This unit can play MP3/WMA files stored in a USB device. USB devices produce very little noise compared with other sources. If you have turned off the power (without detaching the USB device). Pressing SOURCE turns on the power and playback starts from where it has been stopped previously. If a different USB device is currently attached, playback starts from the beginning. Straightly pull it out from the unit. You can operate the USB device in the same way you operate the files on a disc. Avoid using the USB device if it might hinder your safety driving.

Do not pull out and attach the USB device repeatedly while "READING" is shown on the display. Do not start the car engine if a USB device is connected. This unit may not be able to play the files depending on the type of USB device. Operation and power supply may not work as intended for some USB devices. Make sure all important data has been backed up to avoid losing the data. Some USB devices may not work immediately after attaching USB device or turn on the power. For more details about USB operations, 19, 20. Adjust the sound as you want. We recommend that you use remote controller RM-RK50 with your unit. Turns the power on if pressed briefly. Turns the power off if pressed and held. Do not install any battery other than CR2025 or its equivalent. Store the battery in a place where children cannot reach. You can select a preset sound mode suitable for the music genre. The sound mode is automatically stored and changed to "USER. The current sound mode changes to "USER" automatically. : Cancels. ( 4) : Adjust the hour, then the minute. Takes effect only when CT (clock time) data is received. (The AF indicator lights up.

Frequencies lower than 72 Hz are sent to the subwoofer. : Frequencies lower than 111 Hz are sent to the subwoofer. : Frequencies lower than 157 Hz are sent to the subwoofer. : Cancels. \*9 The volume level automatically changes to "VOLUME 30" if you change to <LOW POWER> with the volume level set higher than "VOLUME 30. " \*10 Displayed only when any source other than "AM" is selected. \*11 Displayed only when any source other than "AUX IN" is selected. More about this unit If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power. If no operation is done for about 60 seconds after pressing MENU button, the operation will be canceled. If you change the source while listening to a disc, playback stops.

If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust. MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders. " While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds. Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons: Discs are dirty or scratched. Moisture condensation has occurred on the lens inside the unit.



[You're reading an excerpt. Click here to read official JVC KW-XR411 user guide](http://yourpdfguides.com/dref/2821661)  
<http://yourpdfguides.com/dref/2821661>

• The pickup lens inside the unit is not focused properly. Make sure the unit is not muted/paused ( • Check to be sure the terminals of the speaker leads are covered with insulating tape properly, then reset the unit ( 3). If "PROTECT" does not disappear, consult your JVC IN-CAR ENTERTAINMENT dealer or a company supplying kits. The unit does not work at all.

• CD-R/CD-RW cannot be played back. Disc playback Disc can neither be played back nor ejected. Disc sound is sometimes interrupted. Disc cannot be played back. Finalize the CD-R/CD-RW with the component which you used for recording. Stop playback while driving on rough roads. ••••• Do not use too many hierarchical levels and folders. ••••• recorded. The elapsed playing time is not correct.

This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. "NOT SUPPORT" appears on the Skip to the next track encoded in an appropriate format display and track skips. or to the next non-copy-protected WMA track. The correct characters are not displayed (e. This unit can only display letters (upper case), numbers, and a limited number of symbols. The track played back is not an MP3/WMA track. Do not use too many hierarchy or folders. • Turn off the power then on again. "NOT SUPPORT" appears on the Skip to the next track encoded in an appropriate format display and track skips.

or to the next non-copy-protected WMA track. Tracks/folders are not played back in the order you have intended. While playing a track, sound is sometimes interrupted. the playback order is determined by the write-in time stamp. The first track/folder written into the USB device will be the first track/folder for playback.

The MP3/WMA tracks have not been properly copied into the USB device. Copy MP3/WMA tracks again into the USB device, and try again. This unit can only display letters (upper case), numbers, and a limited number of symbols. Correct characters are not displayed (e. \* Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.

Moisture may condense on the lens inside the unit in the following cases: • If it becomes very humid inside the car. Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated. Do not use the f.



[You're reading an excerpt. Click here to read official JVC KW-XR411 user guide](http://yourpdfguides.com/dref/2821661)

<http://yourpdfguides.com/dref/2821661>