



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD DDX1035. You'll find the answers to all your questions on the KENWOOD DDX1035 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD DDX1035
User guide KENWOOD DDX1035
Operating instructions KENWOOD DDX1035
Instructions for use KENWOOD DDX1035
Instruction manual KENWOOD DDX1035

KENWOOD

DDX155
DDX1035
DDX1035M

MONITOR WITH DVD RECEIVER
INSTRUCTION MANUAL
МОНИТОР С DVD-ПРИЙМАЧЕМ
ІНСТРУКЦІЯ ПО ЕКСПЛУАТАЦІЇ
MONITOR-DVD-PRIJIMACHEM
ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ

JVC KENWOOD Corporation



Сделано в Китае
© 2013 JVC KENWOOD Corporation

B5A-0026-00/01 (C)



[You're reading an excerpt. Click here to read official KENWOOD DDX1035 user guide](http://yourpdfguides.com/dref/5533854)
<http://yourpdfguides.com/dref/5533854>

Manual abstract:

@@ □ it may obstruct the operation of safety devices such as air bags. – it may obstruct visibility. □ DO NOT operate the unit while driving. @@ □ The driver must not watch the monitor while driving. temperature inside the car. @@@@ The unit returns to factory settings when the Reset button is pressed (except the registered Bluetooth devices). How to read this manual: • This manual mainly explains operations using the buttons on the monitor panel and touch panel. For operations using the remote controller, + page 6. □ < > indicates the variable screens/menus/ operations/settings that appear on the touch panel. □ [] indicates the buttons on the touch panel.

Cautions on the monitor: • The monitor built in this unit has been produced with high precision, but it may have some ineffective dots. This is inevitable and is not considered defective. □ Do not expose the monitor to direct sunlight. □ Do not operate the touch panel using a ball-point pen or similar tool with the sharp tip. Press the buttons on the touch panel with your finger directly (if you are wearing a glove, take it off).

□ When the temperature is very cold or very hot. □ Chemical changes occur inside, causing malfunction. □ Pictures may not appear clearly or may move slowly. Pictures may not be synchronized with the sound or picture quality may decline in such environments. for safety.

□ Do not raise the volume level too much, as this will make driving dangerous by blocking outside sounds, and may cause hearing loss. □ Stop the car before performing any complicated operations. The displays and panels shown in this manual are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual displays or panels. English 3 The marking of products using lasers The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class.

There is no danger of hazardous radiation outside the unit. (+ page 3) • Lights up while the unit is turned on. (Turn) 7 USB input terminal 8 iPod/AV IN2 input terminal 9 Remote sensor English 5 Overview Of The Remote Control CAUTION • Keep battery out of reach of children and in original package until ready to use. □ Do not leave the battery near fire or under direct sunlight.

A fire, explosion or excessive heat generation may result. □ Do not set the remote control in hot places such as on the dashboard. • The Lithium battery is in danger of explosion if replaced incorrectly. Replace only with the same or equivalent type. How to install the battery • Aim the remote control directly at the remote sensor on the faceplate. □ DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting). □ If the effectiveness of the remote control decreases, replace the batteries. Displays the item list for the selected source. (Not available for still picture playback. Displays the function menu for the source.

DIRECT English 7 Setting the clock 1 Display the <Top Menu> screen. On the source control screen: 5 Select the hour or minute. (+ page 28) Displaying the source control screen On video playback screen • The operation buttons disappear by touching the screen. English 9 Disc operations Playing a disc • If a disc does not have a disc menu, all tracks on it will be played repeatedly until you change the source or eject the disc. inserting a disc Label side Ejecting a disc The source changes to “DISC” and playback starts.

□ If “ ” appears on the screen, the unit cannot accept the operation you have tried to do. □ In some cases, without showing “ ”, operations will not be accepted. □ When playing back a multi-channel encoded disc, the multi-channel signals are downmixed to stereo. □ You can eject a disc when playing another AV source. □ If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. When removing a disc, pull it horizontally. 10 English Playable disc types Disc type DVD Recording format, file type, etc. DVD-Video *1 Region Code: • For DDX155: 5 • For DDX1035: 3 • For DDX1035M: 2 DVD-Audio/DVD-ROM DVD Recordable/ Rewritable (DVD-R/-RW, +R/+RW *2) • DVD Video: UDF bridge • MPEG1/MPEG2/MPEG4/ JPEG/MP3/WMA: ISO 9660 level 1, level 2, Romeo, Joliet Dual Disc CD/VCD DVD-Video MPEG1/MPEG2/MPEG4 JPEG MP3/WMA DVD-VR/DVD+VR/DVD-RAM/DivX/WAV/AAC DVD side/Non-DVD side Audio CD VCD (Video CD) SVCD (Super Video CD)/CD-ROM/CD-I (CD-I Ready) CD Recordable/ Rewritable (CD-R/-RW) • ISO 9660 level 1, level 2, Romeo, Joliet CD-DA VCD (Video CD)

MPEG1/MPEG2/MPEG4 JPEG MP3/WMA DivX/WAV/AAC *1 If you insert a DVD Video disc of an incorrect Region Code, “DVD Region error” appears on the screen. Playing time [EQ] [BASS] [DIM] [2 1/3 3] [FNC] [8] Enters the <Equalizer> settings. *1 Search speed varies depending on the type of disc or file. *2 Does not appear for VCD. *1 Search speed varies depending on the type of disc or file. *2 Does not appear for CD. Selecting folder/track on the list Returns to the previous screen Selects a file Playing Recordable/Rewritable discs • This unit can recognize a total of 9 999 files and 999 folders (a maximum of 9 999 files per folder). • Use only “finalized” discs.

□ This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing. □ Some discs or files may not be played back due to their characteristics or recording conditions. English Selects music files/ photo files/movie files Changes the page 13 Video menu operations You can display the video menu screen during video playback. □ Available items on the screen differ depending on the types of the loaded disc and playback files. • The operation buttons disappear by touching the screen. □ To select a title, chapter, or time directly Selects title search/ Returns to the chapter search/ previous screen time search – When you enter a wrong number, press [X] to delete the last entry. press [CLR] to delete the all entry. Setting the functions For DVD 1 2 Selects view angle Audio Subtitle MENU Aspect Direct 14 English Selects the audio type. (+ below) • Each time you press the button, the playback mode changes. For CD/MPEG1/MPEG2/MPEG4/MP3/WMA 1 2 Setting <Video Setting> • You can change the setting for video playback.

(+ page 26) For VCD 1 • Each time you press the button, the playback mode changes. – Available items differ depending on the types of loaded disc and playback file. Setting <Repeat> Display 2 One Selects the audio channel (Stereo/ Left/ Right) Playback mode Repeats the current track. Folder All Setting <Random> Display On Off Activates/deactivates the PBC function Playback mode Randomly plays all tracks.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533854)

[DDX1035 user guide](http://yourpdfguides.com/dref/5533854)

<http://yourpdfguides.com/dref/5533854>

cancel all the random function.

Setting <Video Setting> • You can change the setting for video playback. (+ page 26) • Each time you press the button, the playback mode changes. English
All 15 USB operations Playing a USB device • This unit can play JPEG/MPEG1/MPEG2/ MPEG4/MP3/WMA files stored in a USB mass storage class
device. • This unit can recognize a total of 9 999 files and 999 folders (a maximum of 9 999 files per folder). □ Make sure all important data has been backed
up to avoid losing the data.

Cautions: • This unit may not play back files in a USB device properly when using a USB extension cable. □ USB devices equipped with special functions
such as data security functions cannot be used with the unit. □ Do not use a USB device with 2 or more partitions. □ Depending on the shape of the USB
devices and connection ports, some USB devices may not be attached properly or the connection might be loose. □ This unit may not recognize a memory
card inserted into the USB card reader. □ When connecting with a USB cable, use the USB 2. 0 cable. □ The maximum number of characters: – Folder
names : 15 characters – File names : 15 characters • Avoid using the USB device if it might effect driving safety. □ Do not pull out and connect the USB
device repeatedly while “Reading.” is shown on the screen.

□ Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then reset this unit and
the USB device. □ Operation and power supply may not work as intended for some USB devices. □ Do not leave a USB device in the car, or expose to direct
sunlight or high temperature to avoid deformation or damage to the device. Connecting a USB device You can connect a USB mass storage class device such
as a USB memory, Digital Audio Player etc. to the unit. □ You cannot connect a computer or portable HDD to the USB input terminal. The source changes to
“USB” and playback starts. □ All tracks in the USB device will be played repeatedly until you change the source. Track/file information (for MP3/WMA)
Playing time [EQ] [BASS] [DIM] [] [FNC] [8] Enters the <Equalizer> settings.

*1 Search speed varies depending on the type of disc or file. English 17 Setting the functions For music 1 For photo/movie 1 2 2 Activates/deactivates slide
show Setting <Repeat> Display One Folder All Playback mode Repeats the current track. Setting <Video Setting> • You can change the setting for video
playback. (+ page 26) 18 English Listening to the iPod/iPhone device • Connect iPod/iPhone. (+ page 37) – When connecting iPhone/iPod touch, turn off App
beforehand; otherwise the playback may not be started after connection.

□ Use the following cables: – To watch the video and to listen to the music (digital): USB Audio and Video cable for iPod/iPhone—KCA-iP22F (sold
separately) – To listen to the music (digital): USB Audio cable for iPod/iPhone—USB 2. 0 cable (accessory of the iPod/iPhone) • Select appropriate input
settings on <AV IN SETUP> according to the connection method (+ the right column) • Do not use extension cables. iPod/iPhone that can be connected to
this unit: Made for – iPod classic – iPod nano (7th Generation) – iPod nano (6th Generation) – iPod nano (5th Generation) – iPod nano (4th Generation) –
iPod nano (3rd Generation) – iPod touch (5th Generation) – iPod touch (4th Generation) – iPod touch (3rd Generation) – iPod touch (2nd Generation) –
iPhone 5 – iPhone 4S – iPhone 4 – iPhone 3GS – iPhone 3G * You cannot watch video or use iPod touch/ iPhone Apps when connecting iPod nano (7th
Generation)/iPod touch (5th Generation)/iPhone 5. @@@@ 1 2 Audiobook Selects the speed of audio books. @@@@ • To change settings for video
playback , + page 14.

@@: □ ontrol playback from C the iPod/iPhone. *2 : □ ontrol playback from C the unit. @@@@ • The text information may not be displayed correctly.
@@ In this case, disconnect thoperation performed do not match. @@@@) , detergent , or insecticide. This may damage the monitor or the unit. @@To
keep discs clean A dirty disc may not play correctly. @@@@) to clean discs. @@If such a disc is used, this unit may reject the disc. @@@@ □ If it becomes
very humid inside the car.

Should this occur, the unit may malfunction. @@@@ □ Always hold the disc by the edges. Do not touch its recording surface. @@ □ Make sure to store discs
in their cases after use. @@@@ @@Playing MP3/WMA files • This unit can play back files with the extension code <. □ This unit can play back the files
meeting the conditions below: – Bit rate: 32 kbps – 320 kbps – Sampling frequency: 8 kHz – 48 kHz • This unit can show ID3 Tag Version 1. □ This unit can
play back files recorded in VBR (variable bit rate). □ Files recorded in VBR have a discrepancy in elapsed time indication. □ This unit cannot play back the
following files: – MP3 files encoded with MP3i and MP3 PRO format. – MP3 files encoded with Layer 1/2.

□ WMA files encoded with lossless, professional, and voice format. □ WMA files which are not based upon Windows Media® Audio. – WMA files copy-
protected with DRM. Playing JPEG files • This unit can play back JPEG files with the extension code <. jpg>.

□ This unit can play back JPEG files that are at 32 x 32 to 8 192 x 7 680 resolution. It may take time to display the file. □ This unit can play back baseline
JPEG files. progressive JPEG files or lossless JPEG files cannot be played. We bear no responsibility for any loss of data in an iPod/iPhone and USB mass
storage class device while using this unit.

Sound signals emitted through the rear terminals Through the analog terminals (Speaker out/Front Preout/Rear Preout) 2-channel signal is emitted. When
playing multi-channel encoded disc, multi-channel signals are downmixed. English 31 Troubleshooting What appears to be trouble is not always serious.
Check the following points before calling a service center. □ For operations with the external components, refer also to the instructions supplied with the
adapters used for the connections (as well as the instructions supplied with the external components). If there seems to be a problem Symptom General No
sound comes out of the speakers. The unit does not work at all. The remote controller does not work. aME automatic presetting does not work. Static noise
while listening to the radio.

□ Recordable/Rewritable discs cannot be played back. □ Tracks on the Recordable/ Rewritable discs cannot be skipped. playback does not start. No picture
appears on the external monitor. Disc cannot be played back. Remedy/Cause • Adjust the volume to the optimum level.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533854)

[DDX1035 user guide](http://yourpdfguides.com/dref/5533854)

<http://yourpdfguides.com/dref/5533854>

□ Finalize the discs with the component which you used for recording. Disc in general TUNER The format of files is not supported by the unit. • Connect the video cord correctly. □ Select the correct input on the external monitor.

□ Record the tracks using a compliant application on the appropriate discs. (+ page 11) • Add appropriate extension codes to the file names. MPEG1/MPEG2/MPEG4/ JPEG/MP3/WMA Tracks are not played back as Playback order may differ from the one played back you have intended them to play. using other players. 32 AV IN1/ AV IN2 No picture appears on the screen.

□ Turn on the video component if it is not on. English Symptom No sound comes out of the speakers. The iPod/iPhone does not turn on or does not work. Remedy/Cause • Disconnect the iPod/iPhone, then connect it again. □ Select another source and then reselect “iPod”.

□ ••• Check the connecting cable and its connection. Sound does not synchronize with the video. • Videos cannot be played. □ No sound of videos comes out. Deactivate the equalizer either on this unit or the iPod/iPhone. Turn off (uncheck) the “VoiceOver” feature of the iPod. For details, visit <[While playing a track, sound is sometimes interrupted. The tracks are not properly copied into the USB device. Copy tracks again, and try again. WARNING • If you connect the ignition wire \(red\) and the battery wire \(yellow\) to the car chassis \(ground\), you may cause a short circuit, that in turn may start a fire.](http://www. Other cables cannot be used. □ keeps flashing on the Turn off the power and on again. screen.</p></div><div data-bbox=)

Always connect those wires to the power source running through the fuse box. □ Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse. For best safety, leave the mounting and wiring work to professionals. □ Make sure to ground the unit to a negative 12V DC power supply. □ Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity.

Also avoid places with too much dust or the possibility of water splashing. □ Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit. □ If your car’s ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key.

If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained. □ If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one with the same rating. □ Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals. 2 Installation Procedure 1 To prevent a short circuit, remove the key from the ignition and disconnect the battery.

2 Make the proper input and output wire connections for each unit. 3 Connect the speaker wires of the wiring harness. (Accessory 2) 4 Connect the wiring harness wires in the following order: ground, battery, ignition. (Accessory 1) 5 Connect the wiring harness connector to the unit. 6 Install the unit in your car. 34 English • Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the

Wires or ground them to any metal part in the car. □ When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not use one from each). For example, if you connect the “ connector of the left speaker to a front output terminal, do not connect the connector to a rear output terminal. □ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc.

On the car are working properly. □ Mount the unit so that the mounting angle is 30° or less. □ Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result. ⚠ CAUTION Install this unit in the console of your vehicle. Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot. English 35 Connecting Wires to Terminals

Change the FUSE location to switch ACC and B+ pin location on the ISO connector. Audio Video input 1 (AV IN1) • Video input (Yellow) • Audio left input (White) • Audio right input (Red) Rear Preout • Audio left output (White) • Audio right output (Red) Front Preout • Audio left output (White) Video Output • Audio right output (Red) Purple/White (Reverse sensor wire) Connect to vehicle’s reverse lamp harness when using the optional rear view camera. FUSE (15A) Accessory 1 (DDX1035/DDX1035M only) Accessory 2 (DDX1035/DDX1035M only) Light Green (Parking sensor wire) Extension cable (Accessory 3)

For best safety, be sure to connect the parking sensor.

connect to the vehicle’s parking brake detection switch harness. □ FM/AM antenna input Antenna Cord Subwoofer Preout (monaural) Rear View Camera Input (Yellow) Blue/White (Power control/ Antenna control wire) To the power control terminal when using the optional power amplifier, P. cONT. Or to the antenna control terminal in the vehicle. If no connections are made, do not remove the cap.

Red (Ignition wire) Yellow (Battery wire) ACC B+ Ignition key switch Car fuse box (Main fuse) Battery White / White/black (To car chassis) 36 English Connecting a USB device/iPod/iPhone iPod/iPhone except for iPhone 5/ iPod touch (5th Generation)/ iPod nano (7th Generation) (sold separately) KCA-iP102 (0. 0 cable (accessory of the iPod/iPhone) English 37 Installing/Removing the Unit Installing the Unit (DDX155 only) Installing the Trim Plate 1

Attach accessory 4 to the unit. Bend the tabs of the mounting sleeve with a screwdriver or similar utensil and attach it in place. @@If the unit is unstable, it may malfunction (eg, the sound may skip). Removing the Trim Plate 1 Remove accessory 4 to the unit.

@@@) 5 3 Pull out the unit halfway. □ • Be careful to avoid injury from the catch pins on the removal tool. 4 Pull the unit all the way out with your hands, being careful not to drop it. 9 kg (DDX1035/DDX1035M) • Although the effective pixels for the liquid crystal panel is given as 99. 99% or more , 0. 01% of pixels may not light or may light incorrectly. □ Specifications are subject to change without notice. 5 kHz ± 15 dB English 41 • “DVD Logo” is a

trademark of DVD Format/Logo Licensing Corporation registered in the US, Japan and other countries. □ Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533854)

[DDX1035 user guide](http://yourpdfguides.com/dref/5533854)

<http://yourpdfguides.com/dref/5533854>

• Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories. □ “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. *аписываемый (DVD-R/-RW, +R/+RW *2) • DVD Video: UDF bridge • MPEG1/MPEG2/MPEG4/JPEG/MP3/WMA: ISO 9660 level 1, level 2, Romeo, Joliet Dual Disc CD/VCD DVD-Video MPEG1/MPEG2/MPEG4 JPEG MP3/WMA DVD-VR/DVD+VR/DVD-RAM/DivX/WAV/AAC Сторона DVD/Сторона не DVD Audio CD VCD (Video CD) SVCD (Super Video CD)/CD-ROM/CD-I (CD-I Ready) CD з писываемый/перез аписываемый (CD-R/-RW) • ISO 9660 level 1, level 2, Romeo, Joliet CD-DA VCD (Video CD) MPEG1/MPEG2/MPEG4 JPEG MP3/WMA DivX/WAV/AAC Воспроиз а исключением iPhone 5/iPod touch (5th Generation)/ iPod nano (7th Generation) (продается отдельно) KCA-iP102 (0,8 м) (продается отдельно) KCA-iP22F (0,8 м) (продается отдельно) Вывод USB Вход iPod/Audio Visual 2 (iPod/AV IN2) (переключаемый вход iPod/AV 2) iPhone 5/iPod touch (5th Generation)/ iPod nano (7th Generation) (продается отдельно) CA-U1EX (макс. кие частоты: 100 Гц ± 15 дБ 1 кГц ± 15 дБ Средние частоты: 12,5 кГц ± 15 дБ Высокие частоты: Русский 83 • “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation registered in the US, Japan and other countries. □ Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. □ “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.*

аднього динаміку (правий) 120 Українська Підключення пристрою USB/iPod/iPhone iPod/iPhone крім iPhone 5/ iPod touch (5th Generation)/ iPod nano (7th Generation) (продается окремо) KCA-iP102 (0,8 м) (продается окремо) Вивід USB KCA-iP22F (0,8 м) (продается окремо) iPod/AB-вхід 2 (iPod/AV IN2) (iPod/AB-вхід 2, що перемикається) iPhone 5/iPod touch (5th Generation)/ iPod nano (7th Generation) (продается окремо) Пристрій USB (продается окремо) CA-U1EX (макс. ькі частоты: 100 Гц ± 15 дБ Середні частоты: 1 кГц ± 15 дБ 12,5 кГц ± 15 дБ Високі частоты: Українська 125 • “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation registered in the US, Japan and other countries. □ Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. □ “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance. .



[You're reading an excerpt. Click here to read official KENWOOD DDX1035 user guide](http://yourpdfguides.com/dref/5533854)
<http://yourpdfguides.com/dref/5533854>