



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD DNX-4210DAB. You'll find the answers to all your questions on the KENWOOD DNX-4210DAB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD DNX-4210DAB  
User guide KENWOOD DNX-4210DAB  
Operating instructions KENWOOD DNX-4210DAB  
Instructions for use KENWOOD DNX-4210DAB  
Instruction manual KENWOOD DNX-4210DAB

KENWOOD

**DNX521DAB  
DNX521VBT  
DNX4210DAB**

GPS NAVIGATION SYSTEM  
**INSTRUCTION MANUAL**

JVC KENWOOD Corporation

Before reading this manual, click the button below to check the latest edition and the modified pages.

[Check the latest edition](#)



© 2012 JVC KENWOOD Corporation

12DNXDAB\_JM356\_Ref\_E\_En\_00 (E)



## What Do You Want To Do?

Thank you for purchasing the KENWOOD GPS NAVIGATION SYSTEM.  
In this manual, you will learn various convenient functions of the system.

**Click the icon of the media you want to play.**  
With one-click, you can jump to the section of each media!



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](#)  
<http://yourpdfguides.com/dref/4380313>

**Manual abstract:**

In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer. Return to the Top page CD, Disc, iPod, USB device Link header You can refer each section or top page with one-click. Operation title Introduces the function. NOTE Introduces some tips, notes, etc. Reference mark Displayed in blue notes. With one-click, you can jump to the article related to the current section. Search Operation You can search the music, video, or picture file by some operations. @@@@ • Do not stick tape etc. on the disc, or use a disc with tape stuck on it.

• Do not use disc type accessories. • Clean from the center of the disc and move outward. @@@@ • Discs that are not round cannot be used. List search You can search tracks, folders, and files according to hierarchy. For USB devices and iPods, you can list and search files in the device by using playlist. Precautions on using this unit • When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area. • You can select language to display menus, audio file tags, etc. See Language setup (P.73). • The Radio Data System or Radio Broadcast Data System feature won't work where the service is not supported by any broadcasting station. 1 2 3 Press the <MENU> button during playback. Simple Control screen appears. Touch [ J ]. List Control screen appears. Touch desired track/file. Operation procedure Explains necessary procedures to achieve the operation. < >: □ Indicates the name of panel buttons. Indicates the name of touch [ J ]: □ keys. Screen shot Shows some screen shots displayed during operation for reference. The area or keys to touch are surrounded with a red frame.

Protecting the monitor To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with the sharp tip. Playback starts. • 8-cm (3 inch) discs cannot be used. • Discs with coloring on the recording surface or discs that are dirty cannot be used. • This unit can only play the CDs with . This unit may not correctly play discs which do not have the mark. • You cannot play a disc that has not been finalized. (For the finalization process see your writing software, and your recorder instruction manual.) 27 Other search When you want to narrow the list down, there are other search ways. Cleaning the unit If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth.

If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth. 1 2 Press the <MENU> button during playback. Simple Control screen appears. Touch [ J ]. The search type screen appears.

NOTE • The screens and panels shown in this manual are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual screens or panels used, or some display patterns may be different. ☒ • Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase screened print.

4 5 Return to the Top page Basic Operations Return to the Top page Basic Operations Number Name Reset microSD card slot Motion If the unit or the connected unit fails to operate properly, the unit returns to factory settings when this button is pressed (P.

95). A slot to insert a microSD card. The card is used for upgrading the map. For how to upgrade the map, refer to the instruction manual of the navigation system. Also, you can play audio/visual file in the card. • Receives the remote control signal. • You can enable or disable this feature by Remote Sensor (P.72). Basic Operations Functions Of The Buttons On The Front Panel DNX521DAB/ DNX521VBT 1 16 15 14 7 8 9 13 12 11 Remote Sensor 2 3 4 5 6 7 NOTE • If [Remote Sensor] is set to off, the remote control of TV reception is rejected. 10 11 12 13 13 14 15 16 AUDIO USB DISC DNX521DAB: DAB DNX521VBT: TUNER Release key Disc insert slot SI indicator Displays the Tone Control screen (P.

85). \* Switches to the USB or iPod sources (P.72). Switches to the disc media sources. Switches to the DAB or Tuner sources. Switches to the Tuner sources. Detaches the part of front panel. A slot to insert a disc media. If the SI function is turned on, this indicator flashes when the panel is detached (P.74).

10 9 8 • The panels shown in this guide are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual panels. • In this manual, each model name is abbreviated as follows. DNX521DAB and DNX521VBT: If above icon is showed, read the article applicable to the unit you use. Number Name 0 (Eject) MENU • Ejects the disc.

Motion • Pressing for 1 second ejects the disc forcibly. • Displays the Top Menu screen (P.16). • Pressing for 1 second turns the power off. • When the power off, turns the power on.

1 2 3 4 5 6 \* The display may not switch to the Tone Control screen in some conditions. NAV TEL SCR N • Displays the navigation screen. • Pressing for 1 second switches AV out sources. • Displays the Hands Free screen (P.58). • Pressing for 1 second turns off the display. • Displays the Screen Control screen. • Pressing for 1 second displays rear view camera display. Volume Knob • Turning adjusts volume up or down. • Pressing switches attenuation of the volume on/off.

6 7 Return to the Top page Basic Operations Return to the Top page Basic Operations Number Name fi (Reset) Motion • If the unit or the connected unit fails to operate properly, the unit returns to factory settings when this button is pressed (P.95). • If the SI function is turned on, this indicator flashes when the vehicle ignition is off (P.74). DNX4210DAB 1 7 8 9 1 2 3 4 5 6 2 3 4 5 MENU • Displays the Top Menu screen (P.16). • Pressing for 1 second turns the power off. • When the power off, turns the power on. NAV TEL • Displays the navigation screen. • Pressing for 1 second switches AV out sources.

• Displays the Hands Free screen (P.58). • Pressing for 1 second turns off the display. Volume Knob • Pressing switches attenuation of the volume on/off. • Turning adjusts volume up or down.

• Pressing for 1 second displays Tone Control screen (P.85). \* SCR N Remote Sensor 0 (Eject) Disc insert slot • Displays the Screen Control screen. • Pressing for 1 second displays rear view camera display. Receives the remote control signal.

• Ejects the disc. • Pressing for 1 second ejects the disc forcibly. A slot to insert a disc media. NOTE • The panels shown in this guide are examples used to provide clear explanations of the operations.



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)  
<http://yourpdfguides.com/dref/4380313>

For this reason, they may be different from the actual panels. • In this manual, each model name is abbreviated as follows. DNX4210DAB : If above icons are showed, read the article applicable to the unit you use. 6 7 8 9 \* The display may not switch to the Tone Control screen in some conditions. 8 9 Return to the Top page Basic Operations Return to the Top page Basic Operations Turning On The Unit The method of turning on is different depending on the model. Initial setup Perform this setup when you use this unit first time or when you reset the unit (P.

95). 1 Press the <MENU> button. 1 Set each item as follows. Language Select the language used for the control screen and setting items. Default is "British English (en)". 1 Touch [SET]. 2 Touch [2] or [3] to select the desired language. 3 Touch [Enter]. For detailed operation, see Language setup (P.73). iPod AV Interface Use Set the terminal which your iPod is connected to. Default is "iPod". 1 Touch [iPod] or [AV-IN2]. Color Set the screen and button illumination color. You can select whether to allow color scan operation or select a fixed color for operation. 1 Touch [SET]. 2 Touch [ON] or [OFF] of [Panel Color Scan]. 3 If you want to change color, touch [SET] of [Panel Color Coordinate]. 4 Touch your desired color and [ ]. For detailed operation, see Panel color coordinate (P.

76). Camera Set the parameters for the camera. 1 Touch [SET]. 2 Touch [ON] or [OFF] of [R-CAM Interruption]. 3 Touch [ ]. For detailed operation, see Camera Setup (P.10n, please refer to the Navigation Instruction Manual. 2 Touch [ ] or [ ] in the navigation screen. Display the navigation screen 1 Press the <NAV> button. Touching this area displays the audio screen. : □ Displays the navigation and control keys of the current source.

: □ Displays the navigation and current video/picture playback display. The navigation screen appears. Control audio from the navigation screen You can control audio sources while the navigation screen is displayed. Also, you can view the navigation information while the source control screen is displayed. 1 Touch the information bar. NOTE • The screen switches between playback screen and camera view each time the viewing area is touched. • Touching the source icon in the bottom of the screen displays the full audio screen. □□ To return to the full navigation screen: Touch [ NOTE The navigation screen with audio information appears. • For details on control keys, refer to the instructions in each section. ].

20 21 Return to the Top page DVD, VCD Return to the Top page DVD, VCD 5 Sub function menu The following functions can be performed by using keys in this area. Touch [ • Repeats the current content: □ ]. Each time you touch the key, repeat mode switches in the following sequence; , "chapter repeat" , "function off" DVD: "title repeat" VCD (PBC On): Does not repeat VCD (PBC Off): "track repeat" , "function off" • Hides all keys: Touch [ ]. Touch [1] or [;]. Each time you touch the key, the speed • Fast forward or fast backward: □ changes; standard, 2 times, 3 times.

• Confirms play time: See #:##:##. DVD: □ You can switch the time display between title play time, chapter play time, and title remaining time. Each time you touch, the display switches between "T #:##:##" (title play time display), "C #:##:##" (chapter play time display), and "R #:##:##" (title remaining time display). As well as the time display, the bar indicating current location appears. You can also confirm disc remaining time by touching time VCD (PBC off): □ display.

Each time you touch, the display switches between "P #:##:##" (play time display) and "R #:##:##" (disc remaining time). • Confirms the current location: □ See the bar in center (DVD only). The bar does not appear when the time display is remaining time display. 6 Searching area Touch to search the next/previous content. Scrolling from center of display to left or right performs fast backward or fast forward. Each time you touch each area, the speed changes; standard, 2 times, 3 times. To stop fast backward/forward, touch center of the display. 7 Menu display area This area functions differently depending on the current status. Displays the DVD menu. During the menu display, displays the highlight • During DVD playback: □ control screen.

• During VCD playback: Displays the Zoom Control screen (P.26). 8 Key display area Touch to display the last control screen. NOTE • If you use a remote controller, you can jump directly to the desired image with entering the chapter number, scene number, play time, etc (P.89). DVD/Video CD (VCD) Operation DVD/VCD Basic Operation Most functions can be controlled from the source control screen and playback screen. NOTE • Set the remote controller mode switch to DVD mode before starting operation, see Switching the operation mode (P.89). • The screen shot below is for DVD. It may be different from the one for VCD.

1 Control screen Video screen 6 5 2 3 4 6 7 8 guage Touch [Subtitle]. Each time you touch this key, language is switched. Switches the audio language Touch [Audio]. Each time you touch this key, language is switched. Controls zoom ratio Touch [Zoom].

For details, see step2 in Zoom Control For DVD And VCD (P.26). Switches the picture angle Touch [Angle]. Each time you touch this key, picture angle is switched. Exits menu control Touch [Exit].

Displays the Menu Control 1 screen Touch [Previous]. Switches zoom ratio Touch [Zoom]. For DVD, changes the zoom ratio at 4 levels; Off, 2 times, 3 times, 4 times. For VCD, changes the zoom ratio at 2 levels; Off, 2 times. Scrolls the screen Touch [5], [∞], [2], or [3] to scroll the screen in the direction you touch. Exits menu control Touch [Exit]. Displays the previous menu\* Touch [Return]. \* □ This function may not be performed depending on the disc. NOTE • You cannot touch the menu keys directly on the screen when zooming. Touch [ ] in the control screen.

Multi function menu appears. Touch [SETUP]. SETUP Menu screen appears. Touch [Source]. 2 3 Source SETUP Menu screen appears. 4 5 Touch [DVD SETUP] in the list. DVD SETUP screen appears. Set each item as follows. Zoom Control For DVD And VCD You can enlarge Playback screen for DVD and VCD. 1 For VCD, touch illustrated area during playback.

Zoom Control screen appears. 26 27 Return to the Top page DVD, VCD Return to the Top page DVD, VCD Language setup This setting is for the language used in the menu, subtitle, and voice. You cannot setup these items during DVD playback. Parental level Sets a parental level. You cannot setup this item during DVD playback.

Disc setup Performs setup when using disc media. 1 Touch [SET] of the desired item; [Menu Language], [Subtitle Language], [Audio Language]. Language Set screen appears. Enter the desired language code and touch [Enter].



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)  
<http://yourpdfguides.com/dref/4380313>

1 2 Touch [SET] of [Parental Level].

Parental Pass screen appears. Enter the parental code and touch [Enter]. Parental Level screen appears. 1 2 Touch [SET] of [DISC SETUP]. DISC SETUP screen appears. Select an option as follows. 2 NOTE • To cancel the setup and return to the previous screen, touch [Cancel]. • To clear the entered code, touch [Clear]. • Current parental level appears as [Level#]. 3 Touch [2] or [3] to select a parental level.

Sets the entered language and returns to the DVD SETUP screen. NOTE • To cancel the setup and return to the previous screen, touch [Cancel]. • To clear the entered code, touch [Clear]. • To set the DVD's original language for audio language, touch [Original]. CD Read Sets the motion of this unit when a music CD is played. 1 (Default): Automatically recognizes and plays back an audio file disc, a DVD or a music CD. 2: Forcibly plays back a disc as a music CD. Select [2] if you wish to play a music CD having a special format or if you cannot play a disc in [1] position. On Screen DVD Sets an on-screen display.

Auto:  When updated, information appears for 5 seconds.

OFF (Default): Information does not appear. NOTE • [CD Read] is not available when a disc is in the unit. • You cannot play an audio file/VCD disc in the [2] position. Also, you may not play some music CDs in the [2] position. NOTE • If a disc has higher parental lock level, you need to enter the code number.

• The parental lock level varies depending on a loaded disc. • If a disc has no parental lock, anybody can play it back even when you have set the parental lock. 28 29 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card 4 Multi function menu Various functions can be performed by using keys in this area. For details on the menu, see Multi function menu (P.34).

5 Sub function key Touch to display "Sub function menu" (7 in this table). 6 Track information Displays the information of the current track. For music CD and disc media, you can switch the current track information and the current folder list by touching the list switching key (8 in this table). However, only "No Information" is displayed for music CD. 7 Sub function menu Various functions can be performed by using keys in this area. For details on the keys, see Sub function menu (P.35). 8 List switching key Touch to switch between the track list and the CD-TEXT display (CD)/ID3 tag information (disc media only). Video screen (disc media only) CD/Audio And Visual Files/iPod Operation Music/Video/Picture Basic Operation Most functions can be controlled from the source control screen and playback screen. NOTE • Set the remote controller mode switch to AUD mode before starting operation, see Switching the operation mode (P.

89). • To connect iPod to this unit, optional accessory KCA-iP202 is necessary. See the following sections for each source operation. • Music CD (P.30) • USB device (P.32) • Disc media (P.30) • SD Card • iPod (P.32) (P.32) Music CD and disc media NOTE • In this manual, "Music CD" will be referred to as the general CDs which include music tracks in. "Disc media" will be referred to as CD/DVD disc which includes audio, picture or video files. • The screen shot below is for CD. It may be different from the one for disc media. 9 9 Simple Control screen List Control screen 1 2 2 6 7 10 11 9 Searching file area (disc media only) Touch to search the next/previous file. Scrolling from center of display to left or right performs fast backward or fast forward. Each time you touch each area, the speed changes; standard, 2 times, 3 times.

To stop fast backward/forward, touch center of the display. 10 Menu display area (disc media only) Touch to display the disc menu. For details, see Movie Control (P.41). 11 Key display area (disc media only) Touch to display the last control screen.

3 4 5 3 4 8 1 Information display Displays the following information. • Track #: Each time you touch this area, display switches between current track number, text, etc. • 3, j, ç, 7, etc.:  Current play mode display The meanings of each icon are as follows; 3 (play), j (fast forward), 1 (fast backward), ç (search up), 4 (search down), 7 (stop), R (resume stop), 8 (pause). 2 Movie display area/Control switching area Touch to switch between the Simple Control and List Control screen. 3 Multi function key Touch to switch the multi function menu. For details on the menu, see Multi function menu (P.34). 30 31 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card Picture/video screen USB device, iPod, and SD card NOTE • SD card is for DNX521DAB and DNX521VBT only. • The screen shot below is for USB device.

It may be different from the one for iPod and SD card. 9 9 Simple Control screen List Control screen 1 2 2 6 7 10 9 Searching file area (picture/video file only) • Touch to search the next/previous file. • During slide show in USB mode, touching each area searches the next/previous music file. • Scrolling from center of display to left or right performs fast backward or fast forward. To stop fast backward/forward, touch center of the display. This function is not available when there is no music file in the current folder. 10 Key display area (picture/video file only) Touch to display the last control screen. 3 4 5 3 4 8 1 Information display Displays the following information. • Current file name:  Each time you touch this area, display switches between file number/folder number and file name. • 3, j, etc.

:  Current play mode display The meanings of each icon are as follows; 3 (play, searching), 8 (pause), j (forward manual search), 1 (reverse manual search). 2 Artwork/Control switching area The picture data is displayed if available from the current file. When the picture is not available, "No Photo" is displayed. Touch to switch between the Simple Control and List Control screen. 3 Multi function key Touch to switch the multi function menu. For details on the menu, see Multi function menu (P.34). 4 Multi function menu Various functions can be performed by using keys in this area. For details on the keys, see Multi function menu (P.34).

5 Sub function key Touch to display "Sub function menu" (7 in this table). 6 Contents list Displays the list and contents. The contents of the list differ depending on the playback status and source. 7 Sub function menu Various functions can be performed by using keys in this area. For details on the keys, see Sub function menu (P.35). 8 List switching key Touch to switch between the file list and the current file information. 32 33 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card Multi function menu Music CD Disc media Sub function menu Music CD iPod Disc media USB device and SD card iPod USB device and SD card The following functions can be performed by using keys in this area.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/4380313)

[DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)

<http://yourpdfguides.com/dref/4380313>

[ ] (Disc media, iPod, USB device, and SD card only) Searches track/file. For details on search operation, see Search Operation (P.

36). [4] [€] Searches the previous/next track/file. [3] [8] (iPod only) / [38] Plays or pauses. [7] (music CD and disc media only) Stops playback. When touched twice, the disc is played from the beginning when you play it the next time. [0] (iPod, USB device, and SD card only) Touch for 1 second to disconnect the device. For details, see How To Play Media (P.13). [ ] (iPod only) Touch to switch among the App mode and Normal mode cyclically. App mode: □ Allows this unit to output the sounds and images produced by the application running on your iPod touch or iPhone.

In the App mode, you can control only the "Pause and play", "Selecting a song", and "Fast Forward or Fast Backward of the Song" functions from this unit. [ [ [ [ [ ] ] (Disc media, USB device, and SD card only) Searches previous/next folder. ] (picture files in USB device and SD card only) SETUP] AUDIO] ]

During picture playback, switches to picture display. Touch to display the SETUP Menu screen. See Setting Up (P.

70). Touch to display the Audio Control screen. See Controlling Audio (P.82). [ REAR Touch to mute the rear speaker.

The following functions can be performed by using keys in this area. [ ] Repeats the current track/folder. Each time you touch the key, repeat mode switches in the following sequence; CD, iPod: "track repeat", "repeat off" Disc media, USB device, SD card: "file repeat", "folder repeat", "repeat off" [ ] (USB device, SD card, and iPod only) Searches track from the album artwork list. For details on search operation, see Search from album artwork (P.39). [ ] (During video file playback only) Hides all keys. [1] [j] (Music CD and disc media only) Fast forward or fast backward. [ ] [ ] (USB device and iPod only) Plays the previous or next album in Favorite list (P.40). #:##:## or ##:## Confirms play time.

During music CD playback, you can also confirm disc remaining time by touching time display. Each time you touch, the display switches between "P #:##" (track play time display) and "R #:##" (disc remaining time). [ ] Randomly plays all tracks in current folder/disc or in current playlist in the connected iPod.

Each time you touch the key, random mode switches in the following sequence; CD: "track random", "random off" Disc media, USB device, SD card: "file random", "random off" iPod: "track random", "album random", "random off" Status bar in center (USB device, SD card, and iPod only) Confirms the current location. During USB device, SD card, and iPod playback, you can drag the circle left or right to change the playing position. 34 35 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card Search Operation You can search music, video or picture files by the following operations. NOTE • If you use a remote controller, you can jump directly to the desired track/file with entering the track/folder/file number, play time, etc. For details, see Direct search mode (P.89). Other search When you want to narrow the list down, there are other search ways.

This function is not available when music CD is the current source. Category search (USB device, SD card, and iPod only) Link search (USB device, SD card, and iPod only) 1 Touch the desired category from the left part of the screen. 1 Touch the desired item from the left part of the screen. You can select from artist, album, genre and composer. 1 Touch [ ] in the control screen.

The search type screen appears. List search You can search tracks, folders, and files according to hierarchy. 2 Touch desired search way. USB device and SD card 1 Touch illustrated area. 2 3 The list is sorted by selected category.

Touch desired item. Playback starts. The list corresponding to your selection appears. NOTE • The list is sorted by the way you selected. • artist: Displays the album list of the artist. • album: Displays all tunes of the current album. • genre: □ Displays the artists list in which artists belong to the same genre. • composer: □ Displays the album list of the composer of the current file. NOTE iPod • To narrow the search you can select a letter from the alphabet list in the center of the display. • For operations in the list screen, see Common Operations (P.

17). List Control screen appears. 2 Touch desired track/file. 2 Touch to select desired item in the list. Repeat this step until you find the desired file. The list sorted in the way you selected appears. See the following sections for each operation. • [Category List]: You can search a file by selecting category (P.37). Playback starts.

NOTE • For disc media, you can switch the file list and folder list by touching [ ]. • For disc media, you cannot display the list during random play and stop. NOTE • To narrow the search you can select a letter from the alphabet list in the center of the display. • For operations in the list screen, see Common Operations (P.17).

• [Link Search]: You can search a file of same artist/album/genre/composer as the current track (P.37). • [Folder List]: You can search a file according to hierarchy (P.38). • [Thumbnail Viewer]: You can search a picture file (P.

38). NOTE • For disc media, you can display the folder list directly by touching [ ]. 36 37 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card Folder search (USB device, SD card, and disc media only) Picture search (USB device and SD card only) 1 Touch the desired folder. 1 Touch the desired picture. Search from album artwork (USB device, SD card, and iPod only) You can search music files by selecting the album artwork. 4 Touch [ 3 ] on the selected artwork. The first song in the album is played. In addition, you can create your original playlist from this screen. For details, see Favorite list (P.40).

I 2 Contents of the folder are displayed in the right area of the screen. The selected picture appears in full screen. See number 9-10 in USB device, iPod, and SD card (P.32) for operation of picture screen. Touch [ ]. Sub function menu appears. Touch [ ]. NOTE • After all tracks in the album are played, the same album is played again from the first track. • The albums with no photo are not displayed. 2 Touch desired item from the content list.

Playback starts. NOTE • For operations in the list screen, see Common Operations (P.17). Favorite screen appears. 3 Touch desired artwork in the lower line.

NOTE • The key in the upper side of the screen functions differently depending on the status. When [Load Albums] appears: You have not yet loaded any artworks. Touch the key to start loading.



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)  
<http://yourpdfguides.com/dref/4380313>

When [Load More Albums] appears: Some artworks are not loaded. Touch the key to load all artworks.

If you touch the key, the track being played may stop and another track may start playback. When the key does not available: All artworks are already loaded. 38 39 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card Favorite list You can create an original playlist of your favorite 10 albums by selecting album artworks. 2 Touch the desired artwork in the favorite list. Movie Control You can adjust the movie playback from a disc media. USB/SD/iPod/DivX Setup You can perform setup when using USB/SD/ iPod/DivX. NOTE • Each operation in this section can be started from the Top Menu screen. For details, see Operating With The Top Menu Screen (P.16). 1 Touch and drag the desired album artwork in the lower line to the upper line.

1 In the playback screen, touch illustrated area. 1 Selected album is played and the control screen appears. NOTE Selected album is registered to the favorite list. NOTE • The added album is placed on the extreme right. • You cannot register the same album already registered to the favorite list. • Up to 10 albums can be registered to the list. • The favorite list is played to the right starting with the selected album. • To delete the album from the favorite list, touch and drag it to the lower line. • You can change the playing order of the favorite list by dragging the artwork in the list. • The favorite list mode is canceled in the following situations.

- Playing another album from other list (folder list, category list, etc.)
- Playing another album by touching the artwork in the lower line in the artwork list screen.
- The favorite list mode resumes after disconnecting/connecting the device or turning on/off. File being played, playing time code, favorite list contents, favorite list order, etc. resumes if file configuration of the device is not changed.

Touch [ ] in the control screen. Multi function menu appears. Touch [SETUP]. SETUP Menu screen appears. Touch [Source].

2 3 Movie Control screen appears. 2 Perform desired operation as follows. Source SETUP Menu screen appears. Touch [USB], [SD], [iPod] or [DivX] in the list. Each setup screen appears. See the following section for each setting. • USB/SD setup (P.42) • iPod setup (P.42) • DivX setup (P.43) 4 Changes subtitle language Touch [Subtitle].

Changes audio language Touch [Audio]. Exits the menu Touch [Exit]. 40 41 Return to the Top page CD, Disc, iPod, USB device, SD card Return to the Top page CD, Disc, iPod, USB device, SD card USB/SD setup NOTE • The screen shot below is for USB device. However, the setting items of USB and SD setup are quite the same. iPod setup DivX setup 1 Set each item as follows. 1 Set each item as follows. 1 Set each item as follows. AudioBook Speed Sets the audio book playback speed. Select from [Slow], [Normal] (default), and [Fast]. Wide Screen\* Sets Wide Screen.

Set [ON] or [OFF] (default). On Screen iPod Sets how to display the information of the iPod. Auto (Default):  Information appears for 5 seconds when updated. OFF:  Does not display any information. \*  This setting is not available when an iPod is connected.

DivX(R) Registration Code Checks the registration code. This code is needed when making a disc which has DRM (Digital Rights Management). DivX(R) Deactivation Deregisters the unit which is already registered. After you touch the key, a confirmation message appears. Follow the message and complete the operation.

NOTE • [DivX(R) Registration Code] is disabled when a DVD is being played. • When downloading a DivX VOD file controlled by DRM, register the code appeared on the screen. Otherwise the file may not be able to play with this unit. Remaining number of viewing is displayed when playing a DivX VOD file with the viewing restriction. When the remaining number of viewing reached 0, a warning message appears and the file cannot be played. Picture Display Time Selects length of time to display JPEG picture file in the screen. Select from [Short], [Middle], and [Long] (default). On Screen USB/On Screen SD Sets how to display the information of the USB device or SD card. Auto (Default):  Information appears for 5 seconds when updated. Does not display any information.

OFF:  42 43 Return to the Top page Radio, TV Return to the Top page Radio, TV 7 Sub function menu The following functions can be performed by using keys in this area. • Switches the band: Touch [AM] or [FM]. • Tunes in a station:  Touch [1] [i]. The method of frequency switching can be changed. See Multi function menu (P.45). The bar in center (tuner only) shows the current frequency location. 8 List switching key Touch to switch between the preset list and the information list. In tuner mode, radio text plus will be displayed. Radio and TV Operation Radio Basic Operation Most functions can be controlled from the source control screen.

NOTE • Set the remote controller mode switch to AUD mode before starting operation, see Switching the operation mode (P.89). Simple Control screen List Control screen Multi function menu 2 6 7 The functions of each key are as follows. [P1] - [P6] Selects the preset station. Touch for 2 seconds to store the current station into the preset memory.

[ ] [ Displays the list of preset stations or channels. [TI] (FM Tuner only) Sets the traffic information mode on. For details, see Traffic Information (P.53).

[SEEK] Switches the seek mode in the following sequence; [AUTO1], [AUTO2], [MANUAL].

- AUTO1: Tunes in a station with good reception automatically.
- AUTO2: Tunes in stations in memory one after another.
- MANUAL: Switches to the next frequency manually. [AME] Selects the auto memory mode. For details, see Auto memory (P.51). [PTY] (FM Tuner only) Searches a program by setting program type. For details, see Search by program type (P.53). [MONO] (FM Tuner only) Select the Monaural reception.

[LO.S] (FM Tuner only) Turns the Local Seek function on or off. [ SETUP] Touch to display the SETUP Menu screen. See Setting Up (P.70). [ AUDIO] Touch to display the Audio Control screen. See Controlling Audio (P.82). [ REAR ] Touch to mute the rear speaker. 1 2 3 4 5 3 4 8 1 PS/Station name display Displays the PS name.

2 Information display/Control switching area Displays the following information. • [FMI] etc.: Band display • MHz/kHz: Frequency display • Preset #: Preset number Touch to switch between the Simple Control and List Control screen. 3 Multi function key Touch to switch the multi function menu. For details on the menu, see Multi function menu (P.

45). 4 Preset key/Multi function menu Recalls the memorized station or channel. When touched for 2 seconds, stores the current receiving station or channel in memory. When switched, various functions can be performed by using keys in this area.



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)  
<http://yourpdfguides.com/dref/4380313>

For details on the menu, see Multi function menu (P.

45). 5 Sub function key Touch to display "Sub function menu" (7 in this table). 6 Preset list Displays the list of preset stations or channels and the information. 44 45 Return to the Top page Radio, TV Return to the Top page Radio, TV 7 Signal Strength indication Displays the received signal strength of the DAB station. DAB Basic Operation (DNX521DAB, DNX4210DAB only) Most functions can be controlled from the source control screen. NOTE • Set the remote controller mode switch to AUD mode before starting operation, see Switching the operation mode (P.89). Multi function menu The functions of each key are as follows. Control screen [ ] 1 7 6 5 Displays the list of preset stations or services. For details, see List select (P.

52). [P1] - [P5] Selects the preset ensemble. Touch for 2 seconds to store the current ensemble into the preset memory. [DLS] Touch to display the Dynamic Label Segment screen. [TI] Sets the traffic information mode on. For details, see Traffic Information (P.53). [SEEK] Switches the seek mode in the following sequence; [AUTO1], [AUTO2], [MANUAL]. •AUTO1: Tunes in a ensemble with good reception automatically. •AUTO2: Tunes in ensemble in memory one after another.

Switches to the next ensemble manually. •MANUAL: [ ] [PTY] Searches a program by setting program type. For details, see Search by program type (P.53). [ REAR ] Touch to mute the rear speaker.

[ [ SETUP] AUDIO] Touch to display the SETUP Menu screen. See Setting Up (P.70). Touch to display the Audio Control screen. See Controlling Audio (P.82). 2 1 Information display/Control switching area Displays the following information. •[DB1] etc.: Band display •MHz/kHz: Frequency display •Preset #: Preset number 3 4 2 Multi function key Touch to switch the multi function menu. For details on the menu, see Multi function menu (P.47). 3 Preset key/Multi function menu Recalls the memorized station or channel. When touched for 2 seconds, stores the current receiving station or channel in memory. When switched, various functions can be performed by using keys in this area. For details on the menu, see Multi function menu (P.

47). 4 List switching key Touch to switch between the preset list and the information list. 5 Sub function menu The following functions can be performed by using keys in this area. •Switches the band: Touch [DB]. •Tunes in an ensemble: [ ] Touch [4] [ε]. The method of ensemble switching can be changed. See Multi function menu (P.47). •Tunes in a ensemble, service, and component: Touch [ <<<< ] [ >>>> ]. The method of ensemble, service, and component switching can be changed.

See Multi function menu (P.47). 6 Label information Displays the list of preset service. Displays the information of the current service: Service Label, PTY Label, Ensemble Label, Audio Quality 46 47 Return to the Top page Radio, TV Return to the Top page Radio, TV TV screen TV Basic Operation Most functions can be controlled from the source control screen and TV screen. NOTE • Set the remote controller mode switch to TV mode before starting operation, see Switching the operation mode (P.

89). • You can only operate TV with the optional accessory TV tuner connected. For analog TV, KTC-V301E/V300E/V500E is necessary. For digital TV, KTC-D500E or KTC-D600E is necessary. • During playback, press the <MENU> button to display the source control screen.

6 6 7 8 Simple Control screen List Control screen 1 1 4 5 2 3 2 3 5 6 Switching channel area Touch to switch the channel. 7 Switching band area (analog TV) / Menu display area (digital TV) For analog TV tuner, touch to switch the band. For digital TV tuner, touch to display the menu. 8 Key display area Touch to display the last control screen. 1 Information display/Control switching area Displays the following information. •[TV1], [TV2] (analog TV only): Band display •Preset # (analog TV only): Preset number •Group (analog TV only): TV area group •#ch: Channel display Touching this area switches between the Simple Control and List Control screen. 2 Multi function key Touch to switch the multi function menu. For details on the menu, see Multi function menu (P.50). 3 Preset key (analog TV only)/Multi function menu Recalls the memorized channel.

When touched for 2 seconds, store the current receiving station or channel in memory. When switched, various functions can be performed by using keys in this area. For details on the menu, see Multi function menu (P.50). 4 Preset list (analog TV only) Displays the list of preset channels. 5 Sub function menu The following function can be performed by using keys in this area. •Hide all keys: Touch [ ]. •Switches the channel: Touch [4] [ε]. •Switches the band: Touch [BAND]. 48 49 Return to the Top page Radio, TV Return to the Top page Radio, TV Multi function menu Analog TV Digital TV Memory Operation Auto memory TV 1 Touch illustrated area during playback to switch the band you want to store in memory.

The functions of each key are as follows. [P1] - [P6] (analog TV only) Selects the preset channel. Touch for 2 seconds to store the current station into the preset memory. [ ] Displays the list of preset channels. [BAND] (analog TV only) Touch to switch the band.

[SEEK] (analog TV only) Switches the seek mode in the following sequence; [AUTO1], [AUTO2], [MANUAL]. •AUTO1: Tunes in channels with good reception automatically. •AUTO2: Tunes in channels in memory one after another. •MANUAL: Switches to the next channel manually. [AME] (analog TV only) Selects the auto memory mode.

For details, see Auto memory (P.51). [ SETUP] Touch to display the SETUP Menu screen. See Setting Up (P.70). [ AUDIO] Touch to display the Audio Control screen. See Controlling Audio (P.82). [ REAR ] Touch to mute the rear speaker. You can store stations with good reception in memory automatically.

This function is for tuner and analog TV only. NOTE • Auto memory terminates when 6 stations are stored or when all stations are tuned in. • The operation ends automatically if you do not operate within 10 seconds. Tuner 2 Touch illustrated area. 1 2 Touch [ ]. Sub function menu appears. Touch desired band key. Simple Control screen appears. 3 3 4 5 Touch [ ] in the control screen. The multi function menu appears.

Touch [AME] in the multi function menu. Touch [1] or [;] in the sub function menu. Auto memory starts. Touch [ ] in the control screen. The multi function menu appears.

Touch [AME] in the multi function menu. Touch [4] or [ε] in the function menu. Auto memory starts. 4 5 50 51 Return to the Top page Radio, TV Return to the Top page Radio, TV Manual memory You can store the current receiving station or channel in memory. List select You can select an ensemble from a list of memorized ensembles or select a service from a list of all services received.



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)  
<http://yourpdfguides.com/dref/4380313>

Search by program type (FM tuner and DAB only) You can tune to a station or ensemble with a specific program type. Traffic Information (FM tuner and DAB only) You can listen and watch the traffic information automatically when a traffic bulletin starts. However, this feature requires a Radio Data System and DAB that includes the TI information. 1 Select a station or channel you wish to store in memory. 1 2 3 NOTE • For TV, touch center bottom area of the screen if source control screen is not displayed. Touch [ ] in the control screen. The multi function menu appears. Touch [ ] in the multi function menu. The list type screen appears. Touch desired list way.

1 2 3 4 Touch [ ] in the control screen. The multi function menu appears. Touch [PTY] in the multi function menu. TUNER PTY Mode screen appears. Select a program type from the list. Touch [Search]. 1 2 2 Touch [P#] (#:1-6) in which you want to store the station or channel for 2 seconds until a beep sounds.

Touch [ ] in the control screen. The multi function menu appears. Touch [TI] in the multi function menu.

Traffic information mode is set. Selecting Operation Preset select You can list and select memorized station, ensemble, or channel. When the traffic bulletin starts The Traffic Information screen appears automatically. Selecting from the multi function menu List screen appears. 1 Touch the desired number from P1 to P6.

The unit will tune to the selected station or channel. 4 Select a service from the list. You can search a station of the selected program type. Selecting from the preset list (Tuner and TV only) 1 NOTE • It is necessary to have Traffic Information function set to on in order to have the Traffic Information screen appear automatically. • The volume setting during reception of traffic information is automatically stored.

The next time the traffic information is received, this unit recalls the volume setting automatically. Touch illustrated area. List Control screen appears. 2 Select a station or channel from the list. 52 53 Return to the Top page Radio, TV Return to the Top page Radio, TV Auto TP Seek When traffic information station reception is poor, automatically searches for a station that can be received better. Default is "ON". Language Select Selects a display language for the PTY function. Tuner Setup You can set tuner related parameters. DAB Setup You can set DAB related parameters. 1 2 3 Touch [ ] in the control screen.

Multi function menu appears. Touch [SETUP] in the multi function menu. SETUP Menu screen appears. Touch [Source]. 1 2 3 Touch [ ] in the control screen. Multi function menu appears. Touch [SETUP] in the multi function menu. SETUP Menu screen appears. Touch [Source]. Announcement Select Switches to the set Announcement service.

For details, see Announcement setup (P.56). Dynamic Range Control Adjusts the dynamic range of sound. (Ineffective if the program being received does not support Dynamic Range Control.) Default is "OFF".

Antenna Power\* Sets power supply to the DAB antenna. Set to "ON" when the DAB antenna in use is equipped with a booster. Default is "ON". L-Band Tuning\* Sets L-band reception. When set to "ON", also receives L-band ensembles.

This item can be set when in STANDBY \*  source. Source SETUP Menu screen appears. Source SETUP Menu screen appears. 4 5 Touch [TUNER SETUP] in the list. TUNER SETUP screen appears. Set each item as follows. 4 5 Touch [DAB SETUP] in the list. DAB SETUP screen appears. Set each item as follows. NEWS Sets a news bulletin interrupt time.

Default is "OFF". AF When station reception is poor, automatically switches to the station that is broadcasting the same program over the same Radio Data System network. Default is "ON". Regional Sets whether to switch to the station only in the specific region using the "AF" control. Default is "ON". Priority If the same service is provided by DAB during Radio Data System reception, automatically switches to DAB. If the same service is provided by Radio Data System when reception of the service being provided by DAB becomes poor, automatically switches to Radio Data System. PTY Watch If the service of the set program type begins with the ensemble being received, switches from any source to DAB for service reception. 54 55 Return to the Top page Radio, TV Return to the Top page Radio, TV Announcement setup When the service for which ON is selected starts, switches from any source to Announcement to receive it. TV Setup You can set the TV signal receiving areas.

NOTE • Each operation in this section can be started from the Top Menu screen. For details, see Operating With The Top Menu Screen (P.16). 5 Set each item as follows. 6 Touch [SET] of [Announcement Select] in the DAB SETUP screen.

The Announcement Select screen appears. @@ Multi function menu appears. Touch [SETUP] in the multi function menu. SETUP Menu screen appears. @@@@ On Screen TV Sets how to display the information of the TV.

Auto (Default):  Information appears for 5 seconds when updated. @@@@ Delete unnecessary registration. @@@@ Bluetooth SETUP screen appears. See the following section for each setting. • Registering the Bluetooth Unit (P.59) • Connecting the Bluetooth unit (P.60) 2 Touch [PIN Code Set]. PIN Code Set screen appears. NOTE • If the unit cannot be searched in step 1, you can search the unit again by touching [Search] in above screen. • Touch [Cancel] to cancel searching for the Bluetooth unit.

3 Hands Free screen appears. Enter PIN code and touch [Enter]. @@ Select the Bluetooth unit to register from the list. @@ In this operation, entering the PIN code is necessary. @@ Connection Device List screen appears. @@@@ Call by entering a phone number 1 Touch [Direct Number]. 2 Enter a phone number with number keys. J. @2 Select the phone number from the list. 3 Touch [ ].

Redial Touch [Redial] to display the previously 1  called number. J. 2 Touch [ Hands Free screen appears. Call using the phonebook 1 Touch [Phonebook]. @4 Touch [ ].

@@@@@ (50 is the number of alphabetical characters. @ @ • Characters in the phonebook are garbled. @ @ @ @ After you touch the key, a confirmation message appears. Follow the message and complete the operation. @ @ @ @ For details, see Setting up the Hands-Free phone (P. 65). @ @ @ @ • The status icons such as battery and antenna displayed may differ from those displayed on the cell-phone. • Setting the cell-phone in the private mode can disable the hands-free function. NOTE • While monitoring the camera view, this screen does not appear even if a call comes in. To display this screen, press the <TEL> button or return the shift knob of car to the driver position. Hands Free screen appears. Switch the voice output Touch [ ] to switch the voice output between phone and speaker. Output the dial tone Touch [DTMF] to display the tone input screen.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[DNX-4210DAB user guide](#)

<http://yourpdfguides.com/dref/4380313>



You can send tones by touching desired keys on the screen. Touch [BT SETUP].

Bluetooth SETUP screen appears. See the following section for each setting. • Register the PIN code (P.64) • Select the unit to connect (P.60) • Set up output (P.64) 62 63 Return to the Top page Bluetooth Operation Return to the Top page Bluetooth Operation Registering Bluetooth unit PIN code You can set the PIN code to the Bluetooth unit. The code is acquired when registering (pairing) from the cell-phone. Hands-Free Control You can perform various setup about handsfree function. Setting up the Hands-Free phone 1 2 1 2 1 2 Touch [SET] of [Receiver PIN Code] in the Bluetooth SETUP screen. Receiver PIN Code Set screen appears.

Enter a code number and touch [Enter]. Press the <TEL> button. Hands Free screen appears. Touch desired key in the Hands Free screen. Touch [TEL SETUP] in the Hands Free screen.

Hands Free SETUP screen appears. Set each item as follows. Sort Order Sets how to arrange the cell-phone phonebook. First: Arranges in the order of first name. Arranges in the order of last Last (Default): □ name.

Echo Cancel Level Adjusts the level of echo cancellation. Default is "0". Microphone Level Adjusts the sensitivity of the telephone microphone. Default is "20". Noise Reduction Level Reduces the noises generated by surrounding environment without changing the microphone volume. Use this setting when the voice of caller is not clear. Default is "0". NOTE • If you want to cancel the registration, touch [Cancel]. • If you want to clear the entered number, touch [Clear]. Bluetooth output setup You can select speakers to output the sound from cell-phone (such as phone call voice and ringing tone).

See the following section for each setting. • Set up the Hands-Free system (P.65) • Set up SMS (P.66) • Preset the phone number (P.68) [Restore] Resets the settings to the default settings. \*1 □ Either the time interval for automatic answer set on this unit or the time interval set on the cell-phone, whichever is shorter takes effect. Auto Response\*1 Sets an automatic response time to pick-up an incoming call. OFF (Default): □ Automatic response is not available. 0-99: Set calling ring time (second). SMS Receive Beep Select whether to beep at an incoming SMS.

ON (Default): Beeps. OFF: Not beeps. Phone Information Use Sets whether to download phonebook for outgoing, incoming and missed calls list. ON (Default): Yes. OFF: No.

SMS Use Select whether to use SMS. ON (Default): Uses SMS. OFF: Not uses SMS. 1 Touch [Front Only] or [All] of [Bluetooth HF] in the Bluetooth SETUP screen. Front Only Outputs from the front speakers.

All Outputs from all speakers. 64 65 Return to the Top page Bluetooth Operation Return to the Top page Bluetooth Operation SMS (Short Message Service) You can use SMS function. Operations in the message list screen Creating a new message 1 2 1 2 Touch [SMS] in the Hands Free screen. SMS Select screen appears. Select desired function from the list. Touch [Create Message] in the SMS Select screen. SMS Create Menu screen appears. @@To erase all the input characters, touch for 2 seconds. @@Displays message Touch [DISP] to display the selected message. [Create Message] Creates a message.

For details, see Creating a new message (P.67). [Received Message List] Displays the received message list. [Sent Message List] Displays the sent message list. [Draft] Displays the newest draft message. @@[Download] Retrieves message. Create a return message Touch [SMS]. Select from the phonebook Touch [ ]. Enter the phone number Touch [Direct Number]. 5 Touch [Send].

@@Touching [Delete] deletes the message. After you touch [Delete], a confirmation message appears. @@Create SMS Message screen appears.

@@Switches the keyboard layout Use [5] [∞]. @@@@SMS Create Menu screen appears.

Touch [Template]. See the table below for explanations for each key. Register from received SMS messages Touch [ ]. Template list screen appears. Register from sent SMS messages Touch [ ].

Register from phonebook Touch [ ]. Register from outgoing calls list Touch [ ]. Register from incoming call list Touch [ ]. Register from missed calls list Touch [ ]. Selected template is entered. @@@@After you touch [Delete], a confirmation message appears. @@Bright/Tint/Color/Contrast/Black/ Sharpness Adjusts each item. Dimmer Select dimmer mode. ON: The display and buttons dim. OFF: The display and buttons do not dim.

Turns the dimmer function on SYNC (Default): □ or off when the vehicle light control switch is turned on or off. NAV-SYNC: □ Turns the dimmer function on or off according to the Navigation Day/Night display setting. Mode (Playback screen only) Select screen mode. Full: Full picture mode System Setup NOTE •

Each operation in this section can be started from the multi function menu. 1 Press the button instructed in each diagram when the desired screen is displayed. 1 2 3 Touch [Menu] on any screen. TOP Menu screen appears. Touch [SETUP]. Touch [System]. Just: Justify picture mode System Menu screen appears.

See the following section for each setting. • Set up the user interface (P.72) • Adjust touch panel (P.73) • Set up security (P.74) Zoom: Zoom picture mode • Set up memory (P.

75) Normal: Normal picture mode Screen Control screen appears. NOTE • Adjusting items are different depending on the current source. • You can perform this function only when you have applied the parking brake. • The image quality can be set for each source. 2 Adjust each item as follows.

70 71 Return to the Top page Setting Up Return to the Top page Setting Up User interface You can setup user interface parameters. Language setup Touch panel adjustment 1 2 Drawer Close Sets whether to close the common menu (P.17) automatically. Default is "Auto". Animation Sets whether to display animation. Default is "ON". Secondary Sets whether to display the navigation information in the audio screen or vice versa. Default is "ON". Vehicle Information\*2 Displays the vehicle information. This function requires a commercial adaptor.

Consult your Kenwood dealer for details. Beep for Parking distance control\*2 Sets whether to generate a warning tone when the onboard proximity sensor detects a human or object. Consult your Kenwood dealer for details. USB Key Setting Sets the source to switch to when the <USB> button is pressed. USB (Default): □ Switches to the USB source. iPod: □ Switches to the iPod. \*2 □ This setting is available when a commercial adaptor is connected. 1 2 Touch [User Interface] in the list. User Interface screen appears. Set each item as follows.

Touch [SET] of [Language] in the User Interface screen. Language Setting screen appears. Set each item as follows. 1 2 Touch [Touch] in the System Menu screen. Touch Panel Adjustment screen appears.

Follow the instruction on the screen and touch the center of each . Beep Turns the key touch tone on or off.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[DNX-4210DAB user guide](#)

<http://yourpdfguides.com/dref/4380313>

Default is "ON". Remote Sensor\* Selects a remote control signal. Default is "ON".

*I Select Mode* Selects the mode to select a language. Easy (Default): Selects a language easily. Advanced:  Allows you to select languages for respective items.\* *Language Select* Selects a language. \*  If you select [Advanced] for Select Mode, the following screen appears. NOTE • To cancel the touch panel adjustment, touch [Cancel]. • To reset to the initial status, touch [Reset]. Language Select the language used for the control screen and setting items. See Language setup (P.73).

*Text Scroll* Allows scrolling of text display on the source control screen. Select from "Auto"/"Once"/"OFF". Auto (Default):  Scrolls the text automatically. Once:  Allows you to scroll the text only once automatically when updated. OFF: Does not scroll the text automatically. \*1  When turned off "Remote Sensor", the remote control of TV reception is rejected. GUI Language Select: Selects the display language used for the control screen and so forth.

*Navigation Language Select:* Selects the language used for navigation. Text Language Select: Selects the language used for tag text (song information). 3 Touch [Enter].

NOTE • To cancel the language setup, touch [Cancel]. 72 73 Return to the Top page Setting Up Return to the Top page Setting Up NOTE • If you enter a different security code, the screen returns to step 4 (for the first code entry). • If you have pressed <Reset> button or if you have disconnected the Receiver from battery, enter the correct security code as that you have entered in step 4 and touch [Enter]. You can use your Receiver. Security setup operation You can set up a security code to protect your receiver system against theft.

NOTE • When the Security Code function is activated, the code cannot be changed and the function cannot be released. Note the Security Code can be set as the 4 digit number of your choice. Setup memory Audio Control, AV-IN SETUP, Camera, and Audio SETUP settings can be memorized. The memorized settings can be recalled at any time. For example, even when the settings are cleared due to replacement of the battery, the settings can be restored. 3 Follow the instruction on the screen. 1 2 Touch [SETUP Memory] in the System Menu screen. SETUP Memory screen appears. Follow the instruction on the screen. Recall Recalls the memorized settings. Memory Memorizes the current settings. Clear Clears the currently memorized settings. Cancel Quits memorization/recalling of settings. 1 2 Touch [Security] in the System Menu screen. Security screen appears.

Touch [ON] of [SI]. [Lock]/[Unlock]\* Locks or unlocks the AV-IN SETUP, and Audio SETUP settings. NOTE • If "SI" is turned on, the SI indicator on the panel flashes when the panel is detached. Default is "ON". If "SI" is turned on, the SI indicator on the sub panel flashes when the vehicle ignition is off and the panel is detached. Default is "ON". Yes Memorizes or recalls the settings. No Cancels the function or memorization. The SETUP Menu screen appears again. \*  When [Lock] is selected, you cannot change the AV-IN SETUP, and Audio SETUP settings.

Also, the locked key mark is displayed under each setting icon in the setup menu. • 3 Touch [SET] of [Security Code Set]. NOTE • If you have already completed the code registration, [CLR] is displayed. 4 5 Enter a security code with four-digit number and touch [Enter]. Enter the same code again and touch [Enter].

Security code is registered. 74 75 Return to the Top page Setting Up Return to the Top page Setting Up Display Setup Panel color coordinate You can set the screen and button illumination color. The selectable items differ depending on the unit. Registering original color You can register your original color. Changing background image You can load an image from the connected USB device and set it for the background image.

Before operating this procedure, it is necessary to connect the device which has the image to load. 1 2 3 Touch [Menu] on any screen. Touch [SETUP]. SETUP Menu screen appears. Touch [Display]. 1 1 2 Touch [Adjust] in the Panel Color Coordinate screen. Panel Color RGB Coordinate screen appears. Use [2] and [3] to adjust each color value. Touch [Color] in the Display Menu screen. Color screen appears.

Touch [SET] of [Panel Color Coordinate]. 2 1 2 Touch [Background] in the Display Menu screen. Background screen appears. Touch [STANDBY]. Display Menu screen appears. See the following section for each setting. • Adjust panel color (P.76) • Changing background image (P.77) Panel Color Coordinate screen appears. NOTE • You can touch [SET] or [Initialize] when [Panel Color Scan] is set to off.

• Touch [Initialize] to reset the settings to the default settings. 3 Touch the desired preset key for 2 seconds. Panel color scan You can set the panel color to continuously scan through the color spectrum. 3 1 Touch [ON] of [Panel Color Scan] in the Color screen. Panel Color Scan is set to on.

Touch [Memory] of [User Background]. User Background File Select screen appears. Select the image to load. 4 3 Touch the desired color. Continued 76 77 Return to the Top page Setting Up Return to the Top page Setting Up 5 Touch [Enter].

Navigation Setup You can set navigation parameters. Camera Setup You can set camera parameters. Software Information Check the software version of this unit. 1 2 3 The selected image is loaded and the display returns to the Background screen. NOTE • Touching [ ] rotates counter clockwise. [ ] rotates clockwise. Touch [Menu] on any screen. Touch [SETUP]. SETUP Menu screen appears. Touch [Navigation].

1 2 3 Touch [Menu] on any screen. Touch [SETUP]. SETUP Menu screen appears. Touch [Camera]. 1 2 3 Touch [Menu] on any screen. Touch [SETUP]. SETUP Menu screen appears. Touch [Software]. 6 7 Touch [Change] of [Background Change] in the Background screen. Select an image for background and touch [Enter].

Navigation SETUP screen appears. Camera SETUP screen appears. Software Information screen appears. 4 Set each item as follows. 4 Set each item as follows.

4 Confirm the software version. Touch [Update] as necessary. NOTE • See Playable Media And Files (P.96) for readable image specifications. • Touching [Delete] in the Background screen deletes the background image.

After you touch [Delete], a confirmation message appears. Follow the message and complete the operation. NAV Interrupt Speaker Selects speakers used for voice guidance of the navigation system. Front L:  Uses the front left side speaker for voice guidance. Uses the front right side speaker for Front R:  voice guidance. Front All (Default):  Uses both front speakers for voice guidance. NAV Voice Volume Adjusts the volume for voice guidance of the navigation system.



[You're reading an excerpt. Click here to read official KENWOOD DNX-4210DAB user guide](http://yourpdfguides.com/dref/4380313)  
<http://yourpdfguides.com/dref/4380313>