



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD DNX520VBT. You'll find the answers to all your questions on the KENWOOD DNX520VBT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD DNX520VBT  
User guide KENWOOD DNX520VBT  
Operating instructions KENWOOD DNX520VBT  
Instructions for use KENWOOD DNX520VBT  
Instruction manual KENWOOD DNX520VBT

## KENWOOD

GPS NAVIGATION SYSTEM

### DNX520VBT

#### INSTRUCTION MANUAL

Kenwood Corporation



© 864-4644-0000 (EW)



[You're reading an excerpt. Click here to read official KENWOOD DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)  
<http://yourpdfguides.com/dref/3333221>

**Manual abstract:**

on the disc, or use a disc with tape stuck on it. · Do not use disc type accessories. · Clean from the center of the disc and move outward. @@ · If the disc center hole or outside rim has burrs, use the disc only after removing the burrs with a ballpoint pen etc. How to reset your unit · If the unit or the connected unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed. · Remove the USB device before pressing the Reset button. Pressing the Reset button with the USB device installed can damage the data contained in the USB device. For how to remove the USB device, see <How to Set a Medium / a Device> (page 13). @@@@ This unit may not correctly play discs which do not have the mark.

· You cannot play a disc that has not been finalized. @@@@ If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth. Other notes · If you experience problems during installation, consult your Kenwood dealer. · When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area. · Characters that conform to ISO 8859-1 can be displayed.

· The RDS or RBDS feature won't work where the service is not supported by any broadcasting station. ☒ · Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters. Lens fogging When you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, this condensation on the lens may not allow discs to play.

In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer. 4 DNX520VBT Protecting the monitor To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with the sharp tip. Notes List of playable discs Disc types DVD Standard DVD Video DVD Audio DVD-VR DVD-R DVD-RW DVD+R DVD+RW DVD-R DL (Dual layer) DVD+R DL (Double layer) DVD-RAM Music CD CD-ROM CD-R CD-RW DTS-CD Video CD (VCD) Super video CD Photo CD CD-EXTRA HDCD Others CCCD Dualdisc Super audio CD Support × × × × % × × % Remark About Audio files · Playable Audio file AAC-LC (.m4a), MP3 (.mp3), WMA (.wma), Linear PCM (WAV) (.wav) Not compatible with CPRM. MP3/WMA/AAC/WAV/ JPEG/MPEG/DivX Playback Multi-border/Multisession/ (Playback depends on authoring conditions) Compatible with 8-cm (3 inch) discs Only video format CD-TEXT/8-cm (3 inch) discs supported. MP3/WMA/AAC/WAV/ JPEG/DivX playback.

Multisession supported Packet write not supported. / · If music of normal CD and other playback systems are recorded in the same disc, only the playback system recorded at the first setout is played. CD · Acceptable media CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device, iPod with KCA-iP240V · Playable disc file format ISO 9660 Level 1/2, Joliet, Romeo, Long file name. · Playable USB device file system FAT16, FAT32 Although the audio files are complied with the standards listed above, the play maybe impossible depending on the types or conditions of media or device. · Playing order of the Audio file In the example of folder/file tree shown below, the files are played in the order from to . CD ( ) : Folder Folder : Audio file Audio fi Only music CD session can be played. Sound quality of normal CD music Only CD layer can be played. An online manual about audio files is put on the site, [www.kenwood.com/cs/ce/audiofile/](http://www.kenwood.com/cs/ce/audiofile/).

On this online manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well. : Playback is possible. % : Playback is partly possible. × : Playback is impossible.

/ · When buying DRM enabled contents, check the Registration Code in the <DivX Setup> (page 58). Registration Code changes each time a file with the displayed Registration Code is played to protect against copying. About Video files · Acceptable video files MPEG1, MPEG2, DivX · Extensions mpg, mpeg, m1v, m2v, divx, div, avi · Acceptable media CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device, iPod with KCA-iP240V Acceptable discs, disc formats, USB device file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>. Use of "DualDisc"

When playing a "DualDisc" on this unit, the surface of the disc that is not played may be scratched while the disc is inserted or ejected.

Since the music CD surface does not conform to the CD standard, playback may be impossible. (A "DualDisc" is a disc with one surface containing DVD standard signals and the other surface containing music CD signals.) Next page 3 English 5 Notes About Picture files · Acceptable picture files JPEG · Extensions jpg, jpeg · Acceptable media CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device Acceptable discs, disc formats, USB device file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>. About USB device · In this manual, the word "USB device" is used for flash memories and digital audio players which have USB terminals. · When the USB device is connected to this unit, it can be charged up provided that this unit is powered. · Install the USB device in the place where it will not prevent you from driving your vehicle properly. · You cannot connect a USB device via a USB hub and Multi Card Reader. · Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device.

We shall have no compensation for any damage arising out of erasure of the stored data. · No USB device comes with this unit. You need to purchase a commercially available USB device. · When connecting the USB device, usage of the CA-UIEX (option) is recommended. Normal playback is not guaranteed when a cable other than the USB compatible cable is used. Connecting a cable whose total length is longer than 5 m can result in abnormal playback. iPod/iPhone that can be connected to this unit Made for · iPod nano (1st generation) · iPod nano (3rd generation) · iPod nano (5th generation) · iPod with video · iPod touch (1st generation) Works with · iPod nano (2nd generation) · iPod nano (4th generation) · iPod classic · iPod touch (2nd generation) TV tuner that can be connected to this unit · KTC-D500E · Update iPod/iPhone software to the latest version.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[DNX520VBT user guide](#)

<http://yourpdfguides.com/dref/3333221>

· You can control an iPod/iPhone from this unit by connecting an iPod/iPhone (commercial product) with Dock connector using an optional accessory iPod connection cable (KCA-iP240V). The word "iPod" appearing in this manual indicates the iPod/iPhone connected with the KCA-iP240V (optional accessory).  
· By connecting your iPod/iPhone to this unit with an optional accessory iPod connection cable (KCAiP240V), you can supply power to your iPod/iPhone as well as charge it while playing music.

However, the power of this unit must be on. · KTC-V300E · KTC-V301E / · If you start playback after connecting the iPod, the music that has been played by the iPod is played first. In this case, "RESUMING" is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc. · When the iPod is connected to this unit, "KENWOOD" or "" is displayed on the iPod to indicate that you cannot operate the iPod.

6 DNX520VBT Region codes in the world The DVD players are given a region code according to the country or area it is marketed, as shown in the following map. 1 5 2 1 6 3 2 4 5 2 1 4 DVD disc marks Symbol Description Indicates a region number. The discs with this mark can be played with any DVD player.

Indicates the number of audio languages recorded. Up to 8 languages can be recorded in a movie.

You can select a favorite language. Indicates the number of subtitled language Ejects the disc. Displays the navigation screen. When the navigation screen has already been displayed, it switches to the currently selected source screen. C Turns the power On. Displays the Source Select screen. @ 1 sec. Turns the power Off. Hands Free control screen On/Off. 1 sec.

Switches the source that is output at the AV OUTPUT terminal. 7 While watching the playback screen of a visual source Displays the Easy Control screen. & 7 While watching the navigation screen Displays the Screen Control screen. q 7 While watching the screen other than the above Screen Switching function On/Off. ! 1 sec. Turns the display Off. \*1 D E / \*1 The function of the [FNC] button can be changed to the display off function. See <User Interface> (page 59). 10 DNX520VBT Functions of the buttons on the front panel F Volume adjustment. (Turn the knob either way.

) Attenuation of the volume On/Off. (Press the knob.) 1 sec. Displays Tone Control screen. \*2 T Switches to the selected source.

\*3 / \*2 The display may not switch to Tone Control screen in some conditions. \*3 [TV] button can be switched to [VIDEO1], and [USB] button to [iPod]. For how to assign the source to the button, refer to <User Interface> (page 59). G Screen Switching Function Switching between the navigation screen and the source control screen with one touch operation. Connecting an external device to AV-IN jack Use of the optional cable CA-C3AV is recommended for connecting an external player.

When connecting, make sure to attach the ferritic core supplied with this unit to prevent electromagnetic noise. If the ferritic core may scratch the vehicle, wrap it with the cushion sheet (Accessory of this unit). Approx. 10 cm (3-15/16 inch) iPod /AV-IN Ferritic core (Accessory of this unit) Lock Banding band (Accessory of this unit) English 11 Getting Started How to Display the Navigation Screen How to select the source by one-touch operation DVD NAV TUNER TV USB The navigation screen appears. / · [TV] button can be switched to [VIDEO1], and [USB] button to [iPod]. For how to assign the source to the button, refer to <User Interface> (page 59). · For how to set up and use the navigation function, see the Navigation Instruction Manual. For how to operate each source, see the following pages. How to Select the Source Sources can be selected from the Source Select screen. DVD-VIDEO/ DVD-VR/ Video CD disc CD Audio file/ Video file/ Picture file disc iPod USB TUNER TV \ Page 18 \ Page 23 \ Page 23 \ Page 29 \ Page 23 \ Page 32 \ Page 36 Source Select screen / · For Disc media, iPod, and USB, the input is switched to the source as the media or the device is set.

How to display the Source Select screen SRC The Source Select screen appears. Touch the icon of the source. Use or to turn the page. 12 DNX520VBT Getting Started How to Set a Medium / a Device 7 Disc media 7 USB device CA-UIEX (Optional accessory) If a disc is already inserted, it is ejected by pressing the [0] button. 7 iPod CA-UIEX (optional accessory) is required to connect a USB device. To disconnect the USB device, touch the [0] button on the source control screen, and then disconnect the USB device. See <Source Control Screen> (page 23). / · The playback starts automatically after setting the media or the deatically after approximately 5 seconds. 16 DNX520VBT Basic Operation How to Display the Easy Control Screen Basic operation buttons of the selected source can be displayed on the playback screen of visual sources so that you can control the source without switching the screen. Easy Control screen Buttons on the Easy Control screen [ ] Changes the function as follows by touching the [ ] button.

[SCRN] Displays Screen Control screen (page 41). [TEL] Switches to the Hands Free Main screen (page 44). [1], [j], [4], [e], [7], [£8] Buttons for source control. The buttons are different depending on the source. See the operation pages of each source.

While watching the visual source FNC V.OFF The Easy control screen appears. / · Easy Control screen is hidden when you touch the central part of the monitor. English 17 Watching DVD/Video CD You can play DVD/Video CD using various functions. Playback Screen Basic functions are available even when the playback screen is displayed.

1 Display the Playback Screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Operation on the Playback Screen 2 Easy Control Screen Displays the basic operation buttons on the screen. 1 Display the Easy Control Screen See <How to Display the Easy Control buttons> (page 17). 2 Operation on the Easy Control Screen 1 1 3 4 2 3 1, 3 DVD-VIDEO Searches for a chapter. DVD-VR Searches for a chapter. Video CD Selects a scene (when PBC is On) or a track (when PBC is Off). 2 DVD-VIDEO Displays the Menu Control 1 screen (page 20). DVD-VR Displays the Menu Control screen (page 21). Video CD Displays the Zoom Control screen (page 22). 4 Displays/ Clears Source Information screen.

/ · The information display is cleared automatically after approximately 5 seconds. 1, 2 Switches to the Playback screen. 3 Displays the Source Control screen. [1], [j] Fast Forwards or Fast Backwards. Changes the speed (2 times, 3 times, or off) each time the button is touched.



[You're reading an excerpt. Click here to read official KENWOOD DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)  
<http://yourpdfguides.com/dref/3333221>

[4], [¢] DVD-VIDEO Searches for a chapter. DVD-VR Searches for a chapter. Video CD Selects a scene (when PBC is On) or a track (when PBC is Off). [7] Stops playing. When touched twice, the disc is played from its beginning when you play it the next time.

[38] Plays or pauses. 18 DNX520VBT Source Control Screen Switches to the source control screen to use various playback functions. 1 Display the Source Control Screen See <How to Display the Source Control Screen> (page 14). 2 Operation on the Source Control Screen "3" Play Mode Display "T"/ "C"/ "R"/ "P" Play Time Display Use the [TIME] to change play time display. [ ] When appears, the text display is scrolled by touching it.

Multi Function DVD-VIDEO/DVD-VR 1 [ ] Closes the multi function bar. [ ] Opens the multi function bar. DVD-VIDEO [REP] Switches the Repeat Play operations in the following sequence. Title Repeat, Chapter Repeat, Repeat Off [TIME] Switches the play time display in the following sequence. Chapter ("C"), Title ("T"), remaining titles ("R") Video CD 1 DVD-VR [REP] Switches the Repeat Play operations in the following sequence. Title Repeat, Repeat Off [TIME] Switches the play time display in the following sequence. Title ("T"), remaining titles ("R") [PLST] Switches between the original mode and Play list mode. [38] Plays or pauses. [7] Stops playing. When touched twice, the disc is played from its beginning when you play it the next time. [0] Ejects a disc. [1], [j] Fast Forwards or Fast Backwards. Changes the speed (2 times, 3 times, or off) each time the button is touched. [4], [¢] DVD-VIDEO Searches for a chapter. DVD-VR Searches for a chapter.

Video CD Selects a scene (when PBC is On) or a track (when PBC is Off). [ ], [ ] DVD-VIDEO , DVD-VR Slow Forwards or Backwards. [ ] Switches to the playback screen. 1 Information display Title display. "Title" Title Number Display "Chap" Chapter Number Display "Scene"/ "Track" Scene/Track Number Display Video CD [REP] Switches the Repeat Play operations in the following sequence. Track Repeat, Repeat Off (Available when the PBC is off) [TIME] Switches the play time display in the following sequence. Track ("P"), remaining discs ("R") (Effective only when the PBC function is off) [PBC] Turns the PBC On or Off. (only when VCD Ver 2.0 is in use) English 19 Watching DVD/Video CD DVD-VIDEO Disc Menu Selects an option from the DVD-VIDEO Disc Menu. 1 Display the Playback Screen See <Operation on the Playback Screen of Visual Sources> (page 16).

2 Display the Menu Control 1 screen / · Touching the central part of the monitor also turns on the Highlight Control. · To cancel Highlight Control, press the [FNC] button. · The Highlight Control is cleared automatically after approximately 10 seconds. 5 Operation on the Menu Control 2 screen 3 Operation on the Menu Control 1 screen [Menu] Calls the Menu. [Next] Displays the Menu Control 2 screen.

[2], [3], [5], [ ] Selects a menu option. [Enter] Enters your menu selection. [Return] Returns to the previous menu screen. [Top] Displays the Top Menu. [Highlight] Highlight Control.

[Exit] Exits the Menu Control 1 screen. 4 Operation on the Highlight Control Highlight control lets you control DVD Menu by touching the menu button directly on the screen. [Previous] Displays the Menu Control 1 screen. [Angle] Switches the picture angle. [SUB] Switches the subtitle language. [Audio] Switches the voice language. [Zoom] Displays the Zoom Control screen. [Exit] Exits the Menu Control 2 screen. 6 Operation on the Zoom Control screen 20 DNX520VBT [Zoom] Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch. [2], [3], [5], [ ] Scrolls the screen in the direction you touch.

[Return] Returns to the Menu Control 2 screen. [Exit] Exits the Zoom Control screen. DVD-VR Menu Control Selects an option from the DVD-VR Disc Menu. 1 Display the playback screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Display the Menu Control screen 3 Operation on the Menu Control screen [Zoom] Displays the Zoom Control screen. [SUB] Switches the subtitle language. [Audio] Switches the voice language. [Exit] Exits the Menu Control screen. 4 Operation on the Zoom Control screen [Zoom] Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch. [2], [3], [5], [ ] Scrolls the screen in the direction you touch.

[Return] Returns to the Menu Control screen. [Exit] Exits the Zoom Control screen. English 21 Watching DVD/Video CD Video CD Zoom Control Displays an enlarged VCD screen. 1 Display the playback screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Display the Zoom Control screen 3 Operation on the Zoom Control screen [Zoom] Changes the zoom ratio at 2 levels (2 times or off) each time you touch.

[2], [3], [5], [ ] Scrolls the screen in the direction you touch. [Exit] Exits the Zoom Control screen. 22 DNX520VBT Music Disc/ Audio File Listening & Video File/ Picture File Watching You can recall various control screens during playback of CD, audio file, video file and picture file. · See <List of playable discs> (page 5) for playable discs. · See <About Audio file> (page 5), <About Video files> (page 5) or <About Picture files> (page 6) for playable files.

Source Control Screen Switches to the source control screen to use various playback functions. 1 Display the Source Control Screen See <How to Display the Source Control Screen> (page 14). 2 Operation on the Source Control Screen CD 1 Au Audio File 1 MPEG/DivX® JPEG [List] Audio File , MPEG/DivX®, JPEG Displays the folder list or play list. (page 24) [ ] Switches to the playback screen. 1 Information display CD Selects the Disc Text or Track Text. JPEG Audio File , MPEG/DivX®, Selects Folder Name, File Name, Title, Artist Name, or Album Name. "Track" Track Number Display " " Folder Number Display " " File Number Display "#### / ####" Total number of file in the folder and the file number display "3" Play Mode Display "P"/ "R" Play Time Display Use the [TIME] to change play time display. [ ] When appears, the text display is scrolled by touching it. Multi Function [38] Plays or pauses. [7] Disc Stops playing.

When touched twice, the disc is played from its beginning when you play it the next time. [0] Disc Ejects the disc. USB Disables the USB device. When "No Device" is shown, the USB device can be removed safely. If you wish to play it again while the USB device is connected, touch it again. [1], [j] CD , Audio File , MPEG/DivX® Fast Forwards or Fast Backwards. [4], [¢] Selects a track/file.



[You're reading an excerpt. Click here to read official KENWOOD DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)  
<http://yourpdfguides.com/dref/3333221>

[ ], [ ] Audio File , MPEG/DivX®, JPEG Selects a folder. [1/2] Switches the multi function display. [ ] Closes the multi function bar. [ ] Opens the multi function bar. CD [REP] Repeats the present track. [RDM] Starts or stops Random Play (to play music in random order). [TIME] Switches the play time display between Track ("P"), and Disc Remaining Time ("R"). Next page 3 English 23 Music Disc/ Audio File Listening & Video File/ Picture File Watching Au Audio File MPEG/DivX® JPEG List Select Folder list: Searches folders and Audio/ Video/ Picture files stored in media and devices according to hierarchy.

Play list: Lists and searches music contained in the USB device. 1 Display the Source Control Screen See <Source Control Screen> (page 23). 2 Start List Select [REP] Repeats the present file or data. [FREP] Repeats the music or data of the present folder. [RDM] Starts or stops Random Play (to play files of the present folder in random order).

Not available if there are only picture files. [4Line]/ [2Line] Switches the number of lines displayed in the Information Display. [FOLD]/ [FLIST] Displays the folder list. [PLIST] Audio File in USB Displays the play list. [SLIDE] Audio File , JPEG Displays images in the folder currently being played one after another. If there is no image in the folder currently being played, initial background is displayed. For information on setting the image display time, see <Disc Setup> (page 74) or <USB Setup> (page 75). [INFO] Audio File Displays music information (such as Tag and content property) of Audio file being played. MPEG/DivX®, JPEG Displays information of file being played. [LINK] Audio File in USB Searches for another song of the currently selected artist.

See <Link Search> (page 26). [Device] USB Selects the connected USB device (or a partition). See <USB Device Select> (page 25). Disc USB / · Touching [List] displays the previously used Folder list or Play list. 3 Select a file Folder list Disc/USB 1 1 Folder opens when touched, and the files in the folder are played. [ ] When appears, the text display is scrolled by touching it. [ ROOT] Moves to the top hierarchy level. [ UP] Moves up a hierarchy level. [ TOP] USB Moves to the top folder. [ CUR] Displays the currently playing folder.

[CTRL] Returns to the Source Control screen. 24 DNX520VBT Play list Au Audio File in USB USB device select Selects the connected USB device (or a partition). 1 Display the Source Control Screen See <Source Control Screen> (page 23). 2 Display the USB Device Select Screen 1 1 Switches to the lower level of the category. [ ] When appears, the text display is scrolled by touching it.

[ ALL] Lists all the music in the selected category. [ UP] Moves to the upper level of the category. [ TOP] Moves to the top category. [ CUR] Displays the currently playing category. [CTRL] Returns to the Source Control screen.

Scrolls to the position of the specified initial 3 Select a USB device 1 1 Selects a device or partition. [ UP] Returns to the Device Selection screen. [ ] When appears, the text display is scrolled by touching it. [CTRL] Returns to the Source Control screen. Scrolls to the selected initial. English 25 Music Disc/ Audio File Listening & Video File/ Picture File Watching Link search (Audio file in USB) Searches for another song of the currently selected artist. 1 Display the Source Control Screen See <Source Control Screen> (page 23). 2 Start Link search Playback Screen (Video file, Picture file) Basic functions are available even when the playback screen is displayed. 1 Display the Playback Screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Operation on the Playback Screen 2 1 3 3 Select a song 4 1 1 Plays the touched song.

[ ] When appears, the text display is scrolled by touching it. [ TOP] Moves to the top category. [ CUR] Displays the currently playing category. [CTRL] Returns to the Source Control screen. Scrolls to the position of the specified initial 1, 3 Searches for a file. 2 JPEG Displays the Picture Control screen (page 27). MPEG/DivX® Displays the Menu Control screen (page 28). 4 Displays/ Clears Source Information screen. / · The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated.

Scrolls to the selected initial. 26 DNX520VBT Easy Control Screen (Video file, Picture file) Displays the basic operation buttons on the screen. 1 Display the Easy Control Screen See <How to Display the Easy Control Screen> (page 17). 2 Operation on the Easy Control Screen Picture Control Adjusting the picture display. 1 Display the Playback Screen See <Operation on the Playback Screen of Visual Sources> (page 16).

2 Display the Picture Control Screen 1 2 3 3 Adjust the picture display 1, 2 Switches to the Playback screen. 3 Displays the Source Control screen. [1], [j] JPEG , MPEG/DivX® Fast Forwards or Fast Backwards. [4], [e] Searches for a file. During the slide show of picture files, touching the buttons searches the audio file.

[7] Disc Stops playing. When touched twice, the disc is played from its beginning when you play it the next time. [38] Plays or pauses. [ ] [ ] [ ] [Exit] Reverses the picture horizontally. Rotates counter clockwise. Rotates clockwise. Ends Picture Control. English 27 Music Disc/ Audio File Listening & Video File/ Picture File Watching Movie Menu Control Selects an option from the Movie Menu. 1 Display the playback screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Display the Menu Control screen 3 Operation on the Menu Control screen [SUB] Switches the subtitle language.

[Audio] Switches the voice language. [Exit] Exits the Menu Control screen. 28 DNX520VBT iPod Control You can control and listen to songs in your iPod by connecting an iPod to this unit with KCA-iP240V (optional accessory). You can also display video contents on this unit when connecting an iPod with video. Playback Screen Basic functions are available even when the playback screen is displayed. 1 Display the Playback Screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Operation on the Playback Screen 2 Easy Control Screen Displays the basic operation buttons on the screen. 1 Display the Easy Control Screen See <How to Display the Easy Control Screen> (page 17). 2 Operation on the Easy Control Screen 1 1 3 4 2 3 1, 3 Selects the music/video. 2 Not effective 4 Displays/ Clears Source Information screen.

/ · The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated. · Remove all accessories such as headphone before connecting an iPod.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/3333221)

[DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)

<http://yourpdfguides.com/dref/3333221>

You may not be able to control the iPod if you connect it with accessories attached. · When you connect an iPod to this unit, playback starts from the song you were playing on the iPod itself (Resume Function).

· If the played song is not a video content, "No Video Signal" is displayed on the video screen. 1, 2 Switches to the Playback screen. 3 Displays the Source Control screen. [1], [j] Fast Forwards or Fast Backwards. [4], [€] Music/Video Search.

[38] Plays or pauses. English 29 iPod Control Source Control Screen Switches to the source control screen to use various playback functions. 1 Display the Source Control Screen See <How to Display the Source Control Screen> (page 14). 2 Operation on the Source Control Screen 1 Multi Function [38] Plays or pauses. [1], [j] Fast Forwards or Fast Backwards. [4], [€] Selects Music/Video. [List] Displays the iPod list. (page 31) [ ] Switches to the playback screen. 1 Information display Selects the Title, Artist Name, Album Name or iPod Name. "####/#" Total number of music in the iPod and the music number display "3" Play Mode Display "P" Play Time Display [ ] When appears, the text display is scrolled by touching it.

[1/2] Switches the multi function display. [ ] Closes the multi function bar. [ ] Opens the multi function bar. [MUSIC] Displays the list of music category. [VIDEO] Displays the list of video category. [REP] Repeats the present file or data. [RDM]\* Starts or stops Random play. [ARDM]\* Starts or stops Album Random Play (plays randomly from current album). [INFO] Displays information screen of music/ video being played. [LINK]\* MUSIC Searches for another song of the currently selected artist.

See <Link Search> (page 31). / \* Disabled when VIDEO is being played. 30 DNX520VBT iPod List Lists and searches music/video contained in the iPod. 1 Display the Source Control Screen See <Source Control Screen> (page 30). 2 Display the iPod List Link Search (Music file) Searches for another song of the currently selected artist.

1 Display the Source Control Screen See <Source Control Screen> (page 30). 2 Start Link search 3 Select music/video 3 Select a song 1 1 1 Categories and music are listed. Touch a category name to move to its lower level. If music title is displayed, the music is played by touching it. When [38] is appeared, all the music in its category is played by touching the button.

[ ] When appears, the text display is scrolled by touching it. [ UP] Returns to previous category. [ TOP] Moves to the top category. [ CUR] Displays the currently playing category. [CTRL] Returns to the Source Control screen. Scrolls to the position of the specified initial 1 Plays the touched song. [ ] When appears, the text display is scrolled by touching it. [ TOP] Moves to the top category. [ CUR] Displays the currently playing category. [CTRL] Returns to the Source Control screen.

Scrolls to the position of the specified initial Scrolls to the selected initial. English 31 Radio Listening Various control screens appear in the Tuner Source mode. Source Control Screen Switches to the source control screen to use various functions. 1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 14). 2 Operation on the Source Control Screen 1 Multi Function [FM] Switches to the FM1/2/3 band. [AM] Switches to the AM band. [TI] Turns the Traffic Information function On or Off. See <Traffic Information>, (page 35). [4], [€] Tunes in a station.

Use the [SEEK] to change the frequency. [List] Display the Tuner Preset List screen. See <Preset Select> (page 33). 1 Information display Selects the Program Service Name, Title & Artist name, Station Name, Radio Text Plus, or Radio Text. "FM"/ "AM" Band display "Preset" Preset number "MHz"/ "kHz" Frequency display [ ] When appears, the text display is scrolled by touching it.

[1/3] Switches the multi function display. [ ] Closes the multi function bar. [ ] Opens the multi function bar. [P1] [P6] When [P1] to [P6] buttons appear, you can recall the stations on memory. For memory of broadcasting stations, see <Auto Memory> (page 33) or <Manual Memory> (page 34).

[SEEK] Switches the Seek mode. The mode is switched in the following order each time you touch the button. Display Setting "AUTO1" Tunes in a station with good reception automatically. "AUTO2" Tunes in stations in memory one after another. "MANU" Switches to the next frequency manually. [AME] Selects the Auto Memory mode. See <Auto Memory> (page 33). [PRE] Lists and selects memorized station. [4Line]/ [2Line] Switches the number of lines displayed in the Information Display. [PTY] FM Searches station by program type.

See <Search by Program Type> (page 35). [Mono] FM Selects the Monaural reception. [LO.S] Turns the Local Seek function ON or OFF. [TEXT] FM Displays Radio Text screen. See <Radio Text> (page 34). 32 DNX520VBT Preset Select Lists and selects memorized station. 1 Display the Source Control Screen See <Source Control Screen> (page 32). 2 Display the Tuner Preset List Screen Auto Memory Stores stations with good reception in memory automatically. 1 Display the Source Control Screen See <Source Control Screen> (page 32).

2 Select a band you wish to store in memory 3 Select a station 3 Select the Auto Memory mode 1 1 Memorized stations are displayed. Touch to tune in. [CTRL] Returns to the Source Control screen. 4 Start Auto Memory Auto Memory terminates when 6 stations are stored or when all stations are tuned in. / · The operation ends automatically if you do not operate within 10 seconds.

English 33 Radio Listening Manual Memory Stores the current receiving station in memory. 1 Display the Source Control Screen See <Source Control Screen> (page 32). 2 Select a station you wish to store in memory Radio Text You can display the radio text. (Only when receiving the FM broadcast) 1 Select a station See <Source Control Screen> (page 32). 2 Display the radio text 3 Store in memory 1 2 sec.

Continue to touch until the memory number appears. 1 Selects the Program Service Name, Title & Artist name, Station Name, Radio Text Plus, or Radio Text for text display. [ ] When appears, the text display is scrolled by touching it. [5], [ ] Scrolls the text display. 34 DNX520VBT Traffic Information When a traffic bulletin starts, any source is switched to the traffic information and it is displayed automatically. 1 Display the Source Control Screen See <Source Control Screen> (page 32). 2 Set the Traffic information mode Search by Program Type A program is tuned when you set its program type. (Only when receiving the FM broadcast) 1 Display the Source Control Screen See <Source Control Screen> (page 32).



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/3333221)

[DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)

<http://yourpdfguides.com/dref/3333221>

2 Enter Program Type Search mode When the traffic bulletin starts..

. The Traffic Information screen appears automatically. Traffic Information screen 3 Select a Program Type 1 / · It is necessary to have Traffic Information function set to On in order to have the Traffic Information screen appear automatically. · During the reception of traffic information the adjusted volume is automatically remembered, so that the next time it switches to traffic information the volume level is that from the previously adjusted and remembered level. 1 Program Type is displayed. Touch to select a Program Type. [Search] Searches for the program type. It is displayed when the Program type is selected. 4 Search a station of the selected Program Type English 35 TV Watching Various control screens appear in the TV source mode. You can only operate TV with the optional accessory TV Tuner connected.

Function During TV Screen Basic functions are available even when the TV screen is displayed. 1 Display the TV screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Operation on the TV screen 2 Easy Control Screen Displays the basic operation buttons on the screen. 1 Display the Easy Control Screen See <How to Display the Easy Control Screen> (page 17). 2 Operation on the Easy Control Screen 1 1 3 4 2 3 1, 3 Selects a channel. 2 Switches to TV1 or TV2. 2 Displays Menu Control screen (only with KTC-D500E (optional accessory) connected) (page 37). 4 Displays/ Clears Source Information screen. / · The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated.

1, 2 Switches to the TV screen. 3 Displays the Source Control screen. [BAND] Switches to TV1 or TV2. [4], [e] Selects a channel. Use the [SEEK] to change the channel tuning sequence. [SEEK] Switches the Seek mode. (page 37) 36 DNX520VBT Source Control Screen Switches to source control screen to use various functions. 1 Display the Source Control Screen See <How to Display the Source Control Screen> (page 14). 2 Operation on the Source Control Screen 1 [AME] Selects the Auto Memory mode. See <Auto Memory> (page 38).

[SEEK] Switches the Seek mode. The mode is switched in the following order each time you touch the button. Display Setting "AUTO1" Tunes in a station with good reception automatically. "AUTO2" Tunes in stations in memory one after another. "MANU" Switches to the next frequency manually. [PRE] Lists and selects memorized station. [NAME] Sets a name to the station. See <Set Station Name> (page 39). TV Menu (only with KTC-D500E (optional accessory) connected) [BAND] Switches to TV1 or TV2. [4], [e] Select a channel.

Use the [SEEK] to change the channel tuning sequence. [List] Display the TV Preset List screen. (page 39). [ ] Switches to the TV screen. 1 Information display Channel information display "TV" Band display "Group" TV Area Group Display.

See <TV Setup> (page 76). "Preset" Memory Number Display "ch" Channel display [ ] When appears, the text display is scrolled by touching it. Multi Function Menu Control screen appears by touching the area shown below. 1 Display the TV screen See <Operation on the Playback Screen of Visual Sources> (page 16). 2 Display the Menu Control screen 3 Operation on the Menu Control screen [1/2] Switches the multi function display.

[ ] Closes the multi function bar. [ ] Opens the multi function bar. [P1] [P6] When [P1] to [P6] buttons appear, you can recall channels on memory. For memory of broadcasting stations, see <Auto Memory> (page 38) or <Manual Memory> (page 38). [Menu] Shows Digital TV Broadcasting menu screen. [EPG] Shows EPG (Electric Program Guide) screen. [2], [3], [5], [ ] Moves highlight in Digital TV Broadcasting menu. Next page 3 English 37 TV Watching [Enter] Executes selected menu item. [Return] Returns to the previous screen. [Exit] Returns to Digital TV screen.

Manual Memory (only with KTC-V300E or KTC-V301E (optional accessory) connected) Stores the current receiving channel in memory. 1 Display the Source Control Screen See <Source Control Screen> (page 37). / · When using the remote control unit to operate the TV menu, use the one of KTC-D500E. Auto Memory (only with KTC-V300E or KTC-V301E (optional accessory) connected) Stores stations with good reception in memory automatically. 1 Display the Source Control Screen See <Source Control Screen> (page 37). 2 Select a band you wish to store in memory 2 Select a station you wish to store in memory 3 Store in memory 2 sec. Continue to touch until the memory number appears. 3 Select the Auto Memory mode 4 Start Auto Memory Auto Memory terminates when 6 stations are stored or when all stations are tuned in. / · The operation ends automatically if you do not operate within 10 seconds. 38 DNX520VBT Preset Select Lists and selects memorized station.

1 Display the Source Control Screen See <Source Control Screen> (page 37). 2 Start Preset Select Set Station Name Assigns a name to a station. 1 Tune in to the station to name See <Source Control Screen> (page 37). 2 Start Name set 3 Select a station 1 3 Enter the name See <Character Entry> (page 40) for information on how to enter a name. 1 Memorized stations are displayed.

Touch to tune in. [ ] Switches to the TV screen. [CTRL] Returns to the Source Control screen. 4 End Name set English 39 Other Functions Character Entry Character Entry screen 1 Muting Audio Volume upon Reception of Phone Call When a telephone call is received..

. The Phone Call ("CALL") screen appears, and system is paused. Phone Call ("CALL") screen 1 Enters characters. [2], [3] Shifts the cursor. [5], [ ] Scrolls up or down the character button display. [QWE]/[ABC] Sets the key layout of the character buttons. ABC : Alphabetical key layout. QWE : Qwerty key layout. [Clear] Clears the character. If you erase a character, locate the cursor on it and touch this button.

If touched more than 1 second, all the input characters are erased. [Space] Enters a space. When the call ends... Hang up the phone. The system resumes playing automatically. / · To use the TEL Mute feature, you need to hook up the MUTE wire to your telephone using a commercial telephone accessory. Refer to <INSTALLATION MANUAL>. · Playback of the source output at the AV OUTPUT port may not be paused even a call comes in.

/ · You can enter characters only after you have applied the parking brake. 40 DNX520VBT Screen Control Setting the monitor screen. Screen Control 1 Display the Easy Control Screen See <How to Display the Easy Control Screen> (page 17). 2 Display the Screen Control Screen "NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting.



[You're reading an excerpt. Click here to read official KENWOOD DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)  
<http://yourpdfguides.com/dref/3333221>





[Call Beep] Sets the beep of the incoming call.

("ON") "ON": Beep is heard. "OFF": Beep is canceled. 48 DNX520VBT Voice Registration Registers voice for voice recognition in Phonebook. Up to 35 voices can be recorded in one cell-phone. 1 Display the Phonebook Detail screen Go through the procedure of <Calling by Phonebook> (page 45). 2 Select the name to register 6 End voice registration / · A message is displayed if the voice is not recognized. Read the message for the further operation. · Repeat from 1st try if the voice is different from the 1st try. 1 1 Selects a name. [Record] Registers the voice for voice recognition to the selected Phonebook. If there are already 35 voice tag registered in the same cell-phone, [Record] button is deactivated. [Play] Plays the voice registered in the selected Phonebook data. [Delete] Deletes the voice registered in the selected Phonebook data. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel. 3 Display the voice registration screen 4 Say the name to register (1st try) Say within 2 seconds after the Beep. 5 Say the name to register (2nd try) Say within 2 seconds after the Beep. English 49 Hands-Free Phoning Key Word Voice Registration Registers the voice to select the Phone number category by Voice Recognition. 1 Display the Hands Free Setup screen See <Setting Up the Hands-Free Phone> (page 48). 2 Display the Key Word List screen 6 Say the phone category to register (2nd try) Say within 2 seconds after the Beep.

7 End voice registration / · A message is displayed if the voice is not recognized. Read the message for the further operation. @@@@[Record] Registers voice for the selected Phone number category. @@@@ @@@@ [ ] Registers from SMS sent message list. [ ] Registers from Phonebook. [ ] Registers from outgoing calls list. [ ] Registers from incoming calls list. [ ] Registers from missed calls list. [Direct Number] Registers by entering phone numbers. [Voice] Registers voice for voice recognition to preset number.

[Memory] Registers the currently displayed phone number. [Delete] Deletes the currently displayed phone number. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel. @@@@ @@@@ See <Create a message>.

[ ] Displays received message list. [ ] Displays sent message list. [ ] Displays the SMS Create Menu screen. See <Create a message>. @@[Download] Retrieves SMS messages from the cell-phone.

@@@@[Direct Number] Enter the phone number. [SET] Display the Create SMS Message screen. [Send] Sends the message. [Delete] Deletes the Draft message. Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No]. @@[2], [3] Moves the cursor. [5], [ ] Scrolls up or down the character button display. [QWE]/ [ABC] Sets the key layout of the character buttons.

ABC : Alphabetical key layout. QWE : Qwerty key layout. [Clear] Erases the entered character. If touched more than 1 second, all the input characters are erased. [Space] Enters a space. [SET] Saves the message and returns to the Create SMS Menu screen. Only one draft message can be saved / retained in memory at any one time. English 53 Audio Control Audio Control Menu Displays the Audio Control menu to set the sound effect function of this unit. 1 Display the Source Select Screen Audio Control You can adjust the front/rear and right/left audio balance. 1 Display the Audio Control screen Touch [ ]> [ ]> [Audio Control].

(page 54) SRC 2 Set each item 1 2 Display the Audio Control menu In this manual, the above selection is indicated as: Touch [ ]> [ ]> [ ]. 3 Select the Audio Control item 1 Adjusts the front/back and left/right balance of the volume by touching the Adjust screen. [2], [3] Adjusts the right and left volume balance. [5], [ ] Adjusts the front and rear volume balance. [VOL.

Offset] Finely adjust the volume of the current source to minimize the difference in volume between different sources. / · If you have increased the volume first, then reduced the volume using the "VOL. Offset", the sound generated if you suddenly switch to another source may be extremely loud. Item [Audio Control] [Equalizer] [Tone] [Zone Control] Page 54 55 55 56 [Subwoofer Level] Adjusts the subwoofer volume. The setting is available when subwoofer is set to "ON".

See <Speaker Setup> (page 71). [Loudness] Turns the loudness control function On or Off. If turned "ON", high and low tones are automatically enhanced during low volume. Settable only when zone function is set to Off. See <Zone Control> (page 56). [Stream Information] Displays the present source information. The stream (Dolby Digital, dts, Linear PCM, MPEG, MP3, WMA or AAC) is displayed. 54 DNX520VBT Equalizer Control You can set up the equalizer. 1 Display the Equalizer screen Touch [ ]> [ ]> [Equalizer]. (page 54) Tone Setup You can set a Tone curve.

1 Display the Equalizer screen Touch [ ]> [ ]> [Equalizer]. (page 54) 2 Set each item 2 Display the Tone Control screen 3 Set the Tone [SystemQ] Selects an equalizer curve type. You can select any of the following equalizer curves. "Natural"/ "Rock"/ "Pop"/ "Easy"/ "Top40"/ "Jazz"/ "User"/ · "User": Your own tone curve can be created. See <Tone Setup> (page 55). [SystemQ-EX] Selects items to be adjusted for tone curve setup. If selected "OFF", only Level can be set up for tone curves. [Tone] Displays the Tone curve setup screen. (page 55) [Bass] Bass adjustment items are displayed. [Middle] Middle adjustment items are displayed.

[Treble] Treble adjustment items are displayed. [Flat] Tone level becomes 0 (flat). [FREQ] Sets the Center frequency. [Level] Sets the level. [Q Factor] Sets the Q factor.

(Only [Bass] and [Middle] can be set) [Bass DC EXT] Bass DC Extend settings. (Only [Bass] can be set) If turned "ON", it extends the bass center frequency to the low register by approximately 20%. [SW Level] Adjusts the subwoofer volume. The setting is available when subwoofer is set to "ON". See <Speaker Setup> (page 71).

English 55 Audio Control Zone Control You can set the front and rear audio source. 1 Display the Zone Control screen Touch [ ]> [ ]> [Zone Control]. (page 54) 2 Set the Zone Control [Single Zone] Sets the unit to single zone. [Dual Zone] Sets the unit to dual zone. [Front Source] Sets the front audio source. [Rear Source] Sets the rear audio source. / · When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source. [Rear VOL.] Adjusts the volume of the rear channel. / · There are following limitations when zone function is set to "ON".

- There is no output from the subwoofer. - <Equalizer Control> (page 55) and <Speaker Setup> (page 71) are not available.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/3333221)

[DNX520VBT user guide](http://yourpdfguides.com/dref/3333221)

<http://yourpdfguides.com/dref/3333221>

56 DNX520VBT Setup Menu You can set up various receiver parameters. How to Display SETUP Menu Screen Displays the Setup menu to set various functions. 1 Display the Source Select Screen SRC 2 Display the Setup Menu Screen In this manual, the above selection is indicated as: Touch [ ] > [ ]. 3 Select the setup item Item [Information] [DivX(R)] [Software] [System] [User Interface] [Touch] [Clock] [Security] [SETUP Memory] [Display] [Background] [Color] [Screen Adjust] [Bluetooth SETUP] [TUNER SETUP] [DVD SETUP] [iPod SETUP] [USB SETUP] [TV SETUP] [AV-IN SETUP] [Navigation] [Audio SETUP] [Speaker Select] [AV Interface] Page 58 58 59 61 61 62 63 64 65 66 66 76 72 75 75 76 69 70 71 70 [5], [ ] Scrolls the setup menu. / · [AV-IN SETUP], [Navigation] and [Audio SETUP] options can be locked. The key mark ( ) is displayed in reverse video for the locked option. See <Setup Memory> (page 63). English 57 Setup Menu DivX Setup Checks the registration code.

This code is needed when making a disc which has DRM (Digital Rights Management). 1 Display the DivX Setup screen Touch [ ]>[ (page 57) ]> [Information] > [DivX]. Software Information Checks the software version of this unit. 1 Display the Software Information screen Touch [ ]>[ ]> [Information] > [Software]. (page 57) Displays the software version.

Displays the registration code. / · For how to update the software, refer to the relevant update procedure manual which comes with the software. / · When downloading a DivX VOD file controlled by DRM, register the code appeared on the screen such as the one above. Otherwise the file may not be able to play with this unit. Remaining number of viewing is displayed when playing a DivX VOD file with the viewing restriction.

When the remaining number of viewing reached 0, a warning message appears and the file cannot be played. 58 DNX520VBT User Interface You can setup user interface parameters. 1 Display the User Interface screen Touch [ ]>[ ]> [System] > [User Interface]. (page 57) 2 Set each item [FNC Key Longer than 1 Second] Sets the function of the [FNC] button. ( "V.OFF" ) "V.OFF" : Press the [FNC] button for more than 1 second to turn the display off. "R-CAM" : Press the [FNC] button for more than 1 second to switch to rear view. [Animation] Sets whether to display animation. ( "ON" ) [TV Key Setting] Assign the source to [TV] button on the front panel.

( "TV" ) "TV": The button is assigned as [TV]. "VIDEO1": The button is assigned as [VIDEO1]. [USB Key Setting] Assign the source to [USB] button on the front panel. ( "USB" ) "USB": The button is assigned as [USB]. "iPod": The button is assigned as [iPod]. [Beep] Turns the key touch tone On or Off. ( "ON" ) [Remote Sensor] Selects a remote control signal. ( "ON" ) When turned "OFF", the remote control of TV reception is rejected. [Language] Select the language used for the control screen and setting items. (page 60) [Scroll] Allows scrolling of text display on the Source Control screen.

( "Manual" ) "Auto": Scrolls the screen automatically. "Manual": Allows you to scroll the screen manually. [Marker] Sets whether to display the target when touching the panel. ( "OFF" ) [Drawer Close] Sets whether to close the function bar automatically. ( "Manual" ) English 59 Setup Menu Language Setting You can select the display language for the control screen and audio file tags.

1 Display the User Interface screen Touch [ ]>[ ]> [System] > [User Interface]. (page 57) 2 Display the Language Setting screen When [Select Mode] is set to "Advanced" [Navigation Language Select] Selects the language used for navigation. ( "British English" ) 3 Select a language [Select Mode] Selects language select mode. ( "Easy" ) "Easy" : Language to display text and tag information, and language for GUI can be selected. Navigation language is set to that selected in [Text Language Select].

"Advanced" : Language to display text and tag information, language for GUI, and language for navigation information can be selected. [Text Language Select] Selects the language to display text information of the selected source and tag information of the audio/video files. ( "British English" ) [GUI Language Select] Selects the language used for the control screen, setting menu and so forth. ( "Local" ) "Local" : Sets the language to that selected in [Text Language Select]. "English" : Sets the language to English. [Enter] Determines the selected language. [Cancel] Cancels the selected language. 60 DNX520VBT Touch Panel Adjustment You can adjust the touch panel operations. 1 Display the Touch panel Adjustment screen Touch [ ]>[ (page 57) ]> [System] > [Touch]. Clock Setup You can adjust the clock time.

1 Display the Clock Setup screen Touch [ ]>[ (page 57) ]> [System] > [Clock]. 2 Adjust the Touch panel Follow the instruction on the screen and touch the center of . [Cancel] Cancels the adjustment and returns to the Touch Panel Adjust screen. [Reset] Resets to the initial status. 1 Adjusts hours. 2 Adjusts minutes. [Reset] Sets "00" minute. Setup examples: 3:00 3:29 \ 3:00 3:30 3:59 \ 4:00 [Synchronize] Sets the clock time in synchronization with the time data sent from the navigation system or the RDS station. ( "Navigation" ) "OFF" / "RDS" / "Navigation" When the synchronized mode is set, the clock cannot be adjusted manually. 3 Adjust the clock time English 61 Setup Menu Security Setup You can set a security code to protect your receiver system against theft.

5 Register your security code / · When the Security Code function is activated, the code cannot be changed and the function cannot be released. Note the Security Code can be set as the 4 digit number of your choice. 6 Reenter the security code Reenter the same security code as that you have entered in Step 4 for confirmation. / · If you enter a different security code, the screen returns to Step 4 (for the first code entry). 1 Display the Security screen Touch [ ] > [ (page 57) ] > [System] > [Security].

7 Register the security code again 2 Setup the SI (Security Indicator) Now, your security code is registered. If you have pressed the Reset button or if you have disconnected the Receiver from battery... 1 Enter the correct security code [Security Code Set] Displays the Security code input screen. [SI] Turns the SI function on or off. If turned "ON", the Security indicator on the front panel flashes when the vehicle ignition is off. ( "ON" ) 3 Start Security Code setup You must enter the same security code as that you have entered in Step 4.



**You're reading an excerpt. Click here to read official KENWOOD  
DNX520VBT user guide**  
<http://yourpdfguides.com/dref/3333221>