



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD DPX500BT. You'll find the answers to all your questions on the KENWOOD DPX500BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD DPX500BT
User guide KENWOOD DPX500BT
Operating instructions KENWOOD DPX500BT
Instructions for use KENWOOD DPX500BT
Instruction manual KENWOOD DPX500BT

DPX500BT DPX300U

DUAL DIN SIZED CD RECEIVER
Quick Start Guide
RECEPTELE CD FORMAT DUAL DIN
Guide de démarrage rapide
RECEPTEUR DUAL DE CD TAMAÏO DIN
Guía de inicio rápido
JVC/KENWOOD Corporation



Take the time to read through this instruction manual. Familiarity with the features and operation procedures will help you obtain the best performance from your new Dual DIN sized CD receiver.

For your records
Record the serial number, found on the back of the unit, in the space designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call your Kenwood dealer for information or service on the product.
Model: DPX500BT/DPX300U Serial number: _____

US Residents Only

Register Online

Register your Kenwood product at www.Kenwoodusa.com

© 2012 JVC KENWOOD Corporation

BS9-2163-1Q/01 (03W)



[You're reading an excerpt. Click here to read official KENWOOD DPX500BT user guide](http://yourpdfguides.com/dref/5530672)
<http://yourpdfguides.com/dref/5530672>

Manual abstract:

8 Installing the Microphone unit . 14 About the Quick Start Guide This Quick Start Guide describes basic functions of this unit. For functions not described in this Guide, refer to the Instruction Manual on the following website: manual. ⚠ CAUTION • Keep battery out of reach of children and in original package until ready to use. □ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. □ Do not set the remote control in hot places such as on the dashboard. • The Lithium battery is in danger of explosion if replaced incorrectly. Replace it only with the same or equivalent type.

The illustrations of the display and panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the images on the display may be inapplicable.

2 \ Quick Start Guide B59-2162-10_01_13-2DIN_QSG_K_en. Indd 2 13/04/26 15:4 Before use 2 WARNING To prevent injury or fire, take the following precautions: • Stop the car before operating the unit. □ To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit. ⚠ CAUTION • Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident.

□ Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the monitor or unit. □ Handling discs • Do not touch the recording surface of the disc. • Do not stick tape etc. On the disc, or use a disc with tape stuck on it.

□ Do not use any accessories for the disc. □ Do not use any solvents to clean discs. Use a dry silicon or soft cloth. □ Clean from the center of the disc and move outward. □ When removing discs from this unit, pull them out horizontally. @@@@The unit returns to factory settings. @@This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate. @□ When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area. □ Characters that conform to ISO 8859-1 can be displayed.

Reset button About discs used with this unit • This unit can only play the CDs with . □ The following discs cannot be used: -- Discs that are not round -- Discs with coloring on the recording surface or discs that are dirty -- Recordable/Rewritable disc that has not been finalized (For the finalization process, refer to your disc writing software, and your disc recorder instruction manual.) -- 8 cm (3 inch) disc (Attempt to insert using an adapter can cause malfunction.)

English \ 3 B59-2162-10_01_13-2DIN_QSG_K_en. Indd 3 13/04/26 15:4 Preparations/ Basic Operations [Control knob] (Volume knob) Auxiliary input [SRC] USB terminal [iPod] [DISP] Canceling the Demonstration Mode Cancel the demonstration mode when you use it for the first time after installation. DPX300U Source selection 1 Press the [Control knob] to cancel the Demonstration mode when the message “CANCEL DEMO PRESS VOLUME KNOB” appears (approx. The demonstration mode can also be canceled in the Function setting mode. 2 Turn the [Control knob] to select “YES”, and then Adjusting the Clock 1 Press and hold the [Control knob]. 2 Turn the [Control knob] to adjust the hour, and then press the [Control knob]. Then press the [Control knob].

press the [SRC] button repeatedly to select a sources. Source Display Standby “STANDBY” SiriusXM (optional accessory)[1] “SIRIUS XM” Tuner “TUNER” USB or iPod[1] “USB” or “iPod” Pandora® Internet radio (Function of DPX500BT)[1] “PANDORA” iHeart Radio[1] “IHEARTRADIO” aha (Function of DPX500BT)[1] “AHA” Bluetooth audio (Function of DPX500BT) “BT AUDIO” CD[1] “CD” Auxiliary Input “AUX” [1] T □ his source can be selected only when it can be played. DPX300U 3 Turn the [Control knob] to adjust the minute, and Press the [iPod] button to switch the source to iPod. USB terminal Power Press the [SRC] button to turn on the power. Press and hold the [SRC] button to turn off the power.

Turn the [Control knob] to adjust the sound volume. press the [Control knob]. Turning the volume down quickly. Portable audio device can be connected with the stereo mini-plug (3. 5 mm φ).

Each time you press the [DISP] button, another display mode will be selected. refer to <12-4. Text Display Selection> of Instruction manual Press and hold the [DISP] button to scroll the CD or Audio file text display Auxiliary input Volume Display selection Attenuator Display scroll 4 \ Quick Start Guide B59-2162-10_01_13-2DIN_QSG_K_en. indd 4 13/04/26 15:4 Playing Music (CD/USB/iPod) [0] Disc slot [1] [2] [4] [€] [L] [] Control knob [SRC] USB terminal [] Playing Disc Insert a disc in the Disc slot. When it is inserted, the source is switched automatically and playback starts. connect a USB device or iPod to the USB terminal as shown above. When it is connected, the source is switched automatically and playback starts. @@@@Music Search Searching for the song you want to play. Playing USB device 1 Press the [] button. @@@@ english \ 5 B59-2162-10_01_13-2DIN_QSG_K_en.

@@@@@ press the [SRC] button to select “TUNER”. @@ 6 \ Quick Start Guide B59-2162-10_01_13-2DIN_QSG_K_en. @@Dialing a number in the phone book 1 Press the [SRC] to turn on the power. 2 Start registering this unit by operating the Bluetooth device. By operating the Bluetooth device, register the hands-free unit (pairing). Select “DPX5**BT” (for DPX500BT) from the list of found units. pRESS VOLUME KNOB” appears , proceed to step 5. Check that registration is complete on the Bluetooth device. You can change this code. Dial the phone number in the phone book of your cell-phone.

If the phone book has not been downloaded to this unit, operate the cell-phone to download it. 2 Turn the [Control knob] to select the name, and then press the [Control knob]. 4 Input the PIN code (“0000”) in the Bluetooth device. 3 Turn the [Control knob] to select a phone number. 4 Press the [Ú] button.

Answering a phone call Press the [Ú] button. Connection to your Bluetooth device starts, “PAIRING OK” appears a while later, and then the previous source appears. When registration of your cell-phone is completed, the phone book of the cell-phone is automatically downloaded to this unit. (If the phone book has not been downloaded to this unit, operate the cellphone to download it.) About automatic connection of the iPod touch or iPhone through Bluetooth

• This unit is compatible with an Apple Auto Pairing function.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[DPX500BT user guide](#)

<http://yourpdfguides.com/dref/5530672>

Connecting the iPod touch or iPhone to this unit with USB cable will automatically register it as a Bluetooth device. 1. The Bluetooth function of the iPod touch or iPhone is turned on first. 2. Connect an iPod touch or iPhone to the USB terminal. 3. Press the [Control knob] to pair once you have confirmed the passcode. 1 Before Installation 2WARNING If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box. CAUTION • Mounting and wiring this product requires skills and experience.

For safety's sake, leave the mounting and wiring work to professionals. □ Make sure to ground the unit to a negative 12V DC power supply. □ Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing. □ If the power is not turned ON ("PROTECT" is displayed), the speaker wire may have a shortcircuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked. □ If your car's ignition key switch does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wires to a constant-voltage power source, as with battery wires, the battery may die. □ If the console has a lid, make sure to install the unit so that the faceplate will not hit the lid when it is closed or opened. □ If the fuse blows, first make sure the wires are not touching other parts to cause a short circuit, and then replace the old fuse with one with a new the same rating.

□ On the car are working properly. □ Mount the unit so that the mounting angle is 30° or less. installation Procedure 1. □ 2. Make the proper input and output wire connections for each unit.

3. Connect the speaker wires of the wiring harness. 4. □ 5. Connect the wiring harness connector to the unit.

6. Install the unit in your car. □ (DPX500BT only) Installing the Milue/White (Power control wire) P. □ blue (Antenna control wire) ANT.

□ iPhone/iPod touch connected to this unit with a KCA-iP102. □ Com from the built in browser to download the Pandora application. □ Pandora® is currently available only in the U. s , Australia and New Zealand. □ Some functions of Pandora® cannot be operated from this unit. □ iPhone/iPod touch connected to this unit with a KCA-iP102.

• Internet connection by 3G , LTE , EDGE , or WiFi. □ Some Aha™ functionality cannot be operated from this unit. iPod/iPhone that can be connected to this unit Made for • iPod touch (4th generation) • iPod touch (3rd generation) • iPod touch (fically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. □ And other countries and is used under license. □ PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. □ Internet Explorer and Windows Media are registered trademark of Microsoft Corporation in the United States and other countries. □ In the United States and other countries. such marks are used under license. □ Used under license from Research In Motion Limited. □ "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

□ And other countries and is used under license. □ PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. □ Internet Explorer and Windows Media are registered trademark of Microsoft Corporation in the United States and other countries. □ In the United States and other countries. such marks are used under license.

□ Used under license from Research In Motion Limited. español \ 43 B59-2162-10_01. Indb 43 13/06/20 9:2 2CAUTION Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) □ his device must accept any interference, including t interference that may cause undesired operation of the device. The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specification were met. Location : Top Panel FCC WARNING This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. □ To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.) is not more than that necessary for successful communication. FCC NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. CALIFORNIA, USA This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply. .



[You're reading an excerpt. Click here to read official KENWOOD DPX500BT user guide](http://yourpdfguides.com/dref/5530672)
<http://yourpdfguides.com/dref/5530672>