



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-155U. You'll find the answers to all your questions on the KENWOOD KDC-155U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KDC-155U
User guide KENWOOD KDC-155U
Operating instructions KENWOOD KDC-155U
Instructions for use KENWOOD KDC-155U
Instruction manual KENWOOD KDC-155U

KENWOOD

KDC-X397
KDC-355U
KDC-255U
KDC-155U

KDC-MP255U
KDC-MP155U
KMR-355U

CD RECEIVER
INSTRUCTION MANUAL
AMPLI-TUNER LECTEUR DE CD
MODE D'EMPLOI
REPRODUCTOR DE DISCOS COMPACTOS RECEPTOR DE FM/AM
MANUAL DE INSTRUCCIONES
JVC KENWOOD Corporation



Take the time to read through this instruction manual.
For safety with installation and operation procedures will help you obtain the best performance from your new CD receiver.

For your records

Record the serial number, found on the back of the unit, in the space designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.

Model: KDC-X397/KDC-355U/KDC-255U/KDC-155U/KDC-MP255U/KDC-MP155U/KMR-355U Serial number: _____

US Residents Only

Register Online

Register your Kenwood product at www.Kenwoodusa.com

© 2012 JVC KENWOOD Corporation

GET0847-001A (KW/ND)



[You're reading an excerpt. Click here to read official KENWOOD KDC-155U user guide](http://yourpdfguides.com/dref/5533279)
<http://yourpdfguides.com/dref/5533279>

Manual abstract:

Indd 1 7/24/12 5:04:30 PM CONTENTS BEFORE USE BASICS GETTING STARTED RADIO CD / USB / iPod AUX PANDORA® (for KDC-X397 / KDC-355U / KDC-255U / KDC-155U / KMR-355U) BEFORE USE 2 3 4 5 6 7 Warning Do not operate any function that takes your attention away from safe driving. Caution Volume setting: • Adjust the volume so that you can hear sounds outside the car to prevent accident. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: • Avoid using the USB device or iPod/iPhone if it might hinder driving safety. • Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data. □ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. □ If a disc error occurs due to condensation on the laser lens, eject the disc and wait for the moisture to evaporate. Remote control (RC-406): • Do not leave the remote control in hot places such as on the dashboard. •

The Lithium battery is in danger of explosion if replaced incorrectly.

Replace it only with the same or equivalent type. □ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. □ Keep battery out of reach of children and in original package until ready to use. CALIFORNIA, USA ONLY This perchlorate WARNING applies only to the product sold or distributed in California USA "Perchlorate Material—special handling may apply. See www. □ 8 8 10 11 11 12 13 14 SiriusXM™ (for KDC-X397 / KDC-355U / KMR-355U) AUDIO SETTINGS DISPLAY SETTINGS MORE INFORMATION TROUBLESHOOTING SPECIFICATIONS

INSTALLATION / CONNECTION Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicon or soft cloth.

Cleaning the connector: Detach the faceplate and clean the connector with a cotton swab gently, being careful not to damage the connector. How to read this manual • Operations explained mainly using buttons on the faceplate. • [XX] indicates the selected items. □ (□ XX) indicates references are available on the stated page number. 2 EN_KDC-X397[KWK0]f.

Indd 2 Handling discs: • Do not touch the recording surface of the disc. • Do not stick tape etc. On the disc, or use a disc with tape stuck on it. □ Do not use any accessories for the disc. □ Clean from the center of the disc and move outward. □ Clean the disc with a dry silicon or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove burrs from the center hole and disc edge before inserting a disc. Connector (on the reverse side of the faceplate) 7/24/12 5:04:30 PM BASICS Faceplate KDC-X397 Remote control (RC-406) Display window Attach (not supplied for KMR-355U) Remote sensor (Do not expose to bright sunlight.

) Volume knob (turn/press) Loading slot Detach Pull out the insulation sheet when using for the first time. * Not used. How to reset Detach button KDC-X397 KDC-355U KDC-255U KDC-155U KMR-355U KDC-MP255U KDC-MP155U How to replace the battery Your preset adjustments will also be erased. Do this (on the remote control) Press and hold SRC to turn off the power. (Pressing SRC does not turn on the power.) Press VOL or VOL . To Turn on the power Adjust the volume Do this (on the faceplate) Press L SRC. □ Press and hold to turn off the power. *1 Turn the volume knob. Press ATT during playback to attenuate the sound.

(not available) *1 For KMR-355U : The power will automatically turn off after 20 minutes when in standby mode (Auto Power Off). *2 For KDC-MP255U / KDC-MP155U : You can also select to turn off the display information by pressing SCRL DISP repeatedly. eNGLISH \ EN_KDC-X397[KWK0]f. Indd 3 3 7/26/12 2:00:57 PM GETTING STARTED 3 1 2 3 4 Set the initial settings Press SRC to enter [STANDBY]. Press the volume knob to enter [FUNCTION]. Turn the volume knob to select [INITIAL SET], then press the knob. Turn the volume knob to make a selection (see the table below), then press the knob. 5 Press and hold to exit. □ To return to the previous hierarchy, press PRESET TYPE . Default: XX NORMAL/ NORM: Memorizes one station for each preset button in each band (FM1/ FM2/ FM3/ AM).

; MIX: Memorizes one station or SiriusXM channel for each preset button regardless of the selected band or SiriusXM channel. (□ 7) 1: Automatically distinguishes between audio file disc and music CD. ; 2: Forces to play as a music CD. No sound can be heard if an audio file disc is played. (Except for KDC-X397 / KDC-355U) REAR/ SUB-W: Selects whether rear speakers or a subwoofer are connected to the line out terminals on the rear (through an external amplifier). OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. 1 Cancel the demonstration When you turn on the power (or after you reset the unit), the display shows: "CANCEL DEMO" \ "PRESS" \ "VOLUME KNOB" 1 Press the volume knob. KEY BEEP PANDORA SRC BUILT-IN AUX/ BUILTIN AUX CD READ SWITCH PRE 2 1 2 3 4 5 6 Set the clock Press the volume knob to enter [FUNCTION]. Turn the volume knob to select [SETTINGS], then press the knob. Turn the volume knob to select [CLOCK], then press the knob.

press the volume knob to select [CLOCK ADJUST]/ [CLOCK ADJ]. Turn the volume knob to adjust the hour, then press the knob. Turn the volume knob to adjust the minute, then press the knob. Press 4 / € to move between the hour and minute adjustment. 7 Press and hold to exit. (or) Press and hold SCRL DISP to enter clock adjustment mode directly while in clock display screen. Then, perform steps 5 and 6 above to set the clock. For details on how to update the firmware, see: www. Indd 4 7/26/12 10:55:35 PM RADIO Default: XX SEEK MODE Selects the tuning method for the 4 / € buttons. YES: Automatically starts memorizing 6 stations with good reception.

; NO: Cancels. (Selectable only if [NORMAL] / [NORM] is selected for [PRESET TYPE].) (□ 4) ON: Improves the FM reception, but the stereo effect may be lost. For KDC-MP255U / KDC-MP155U : PTY SEARCH TI CLOCK TIME SYNC ON: Synchronizes the unit's time to the Radio Broadcast Data System station time. ; OFF: Cancels.

Selects the available Program Type (see below), then, press 4 / € to start. □ To select a stored station: Press one of the number buttons (1 to 6) Direct Access Tuning (using RC-406) (except for KMR-355U) 1 Press *AM- / #FM+ to select a band. 3 Press the number buttons to enter a frequency. □ If no operation is done for 10 seconds after step 3, Direct Access Tuning is automatically canceled. Other settings TUNER SET: Selectable only when the source is not TUNER. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [SETTINGS], then press the knob. 3 Turn the volume knob to make a selection (see the table on the right), 4 Press and hold then press the knob.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533279)

[KDC-155U user guide](http://yourpdfguides.com/dref/5533279)

<http://yourpdfguides.com/dref/5533279>

to exit. □ [MONO SET]/ [PTY SEARCH]/ [TI] is selectable only when the source is FM. □ Available Program Type: SPEECH: NEWS, INFORM (information), SPORTS, TALK, LANGUAGE, REL TALK (religious talk), PERSNLTY (personality), PUBLIC, COLLEGE, HABL ESP (spanish talk), MUSC ESP (spanish music), HIP HOP, WEATHER MUSIC: ROCK, CLS ROCK (classic rock), ADLT HIT (adult hits), SOFT RCK (softrock), TOP 40, COUNTRY, OLDIES, SOFT, NOSTALGA (nostalgia), JAZZ, CLASSICL (classical), R & B (rhythm and blues), SOFT R&B (soft rhythm and blues), REL MUSC (religious music) The unit will search for the Program Type categorized under [SPEECH] or [MUSIC] if selected. □ For KDC-MP255U / KDC-MP155U : If the volume is adjusted during reception of traffic information or alarm, the adjusted volume is memorized automatically. It will be applied the next time traffic information or alarm function is turned on. : 500 mA) (optional accessory) Pause or resume playback Select a track/file Select a folder Reverse/Fast-forward Select a track/file from a list The source changes to USB and playback starts. IPod/iPhone (except for KDC-MP155U) USB input terminal Do this Press 6 38 (or ENT 38 on RC-406).

2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA file: Select the desired folder, then a file. □ iPod or KENWOOD Music Editor Light (KME Light)/ KENWOOD Music Control (KMC) file*4: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS*5, GENRES, COMPOSERS*5). □ To return to the root folder (or first file), press number button 5. □ To return to the previous hierarchy, press . (□ 7) — *4 *3 *3 *3 Repeat play KCA-iP102 (optional accessory) The source changes to iPod and playback starts. Press and hold iPod to select the control mode while in iPod source. *1 You can still control play/pause, file selection, fast-forward or reverse files from the unit. □ *2 *4 Only for files registered in the database created with KME Light/ KMC. 8/22/12 10:06:00 AM CD / USB / iPod Direct Music Search (using RC-406) (except for KMR-355U) Set the skip ratio While listening to iPod (except for KDC-MP155U) or KME Light/ KMC file.

Press the volume knob to enter [FUNCTION]. Turn the volume knob to select [SETTINGS], then press the knob. Turn the volume knob to select [SKIP SEARCH], then press the knob. Turn the volume knob to make a selection, then press the knob. 0.

5% (default)/ 1%/ 5%/ 10%: Sets the skip ratio when searching for a song. 2 Press the number buttons to enter a track/file number. (□ 11) Select a song by name (except for KDC-MP155U) 1 2 3 4 1 Connect a portable audio player (commercially available). Turn the volume knob to select a category, then press the knob. press again.

Turn the volume knob to select the character to be searched for. Press 4 / € to move to the entry position. You can enter up to three characters. press the volume knob to start searching. Turn the volume knob to make a selection, then press the knob. Repeat step 7 until the desired item is selected. 3 Turn on the portable audio player and start playback. Set the AUX name While listening to AUX. Muting upon the reception of a phone call Connect the MUTE wire to your telephone using a commercial telephone accessory. □ To continue listening to the audio system during a call, press SRC.

“CALL” disappears and the audio system resumes. When the call ends, “CALL” disappears. • The audio system resumes. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [SETTINGS], then press the knob. 3 Turn the volume knob to select [AUX NAME SET]/ [AUX NAME], then press the knob. □ To search for a character other than A to Z and 0 to 9, enter only “ * ”. □ To return to the previous hierarchy, press . □ To return to the top menu, press number button 5. • To cancel , press and hold .

4 Turn the volume knob to make a selection, then press the knob. Indd 7 7/24/12 5:04:35 PM PANDORA® (for KDC-X397 / KDC-355U / KDC-255U / KDC-155U / KMR-355U) Preparation: Install the latest version of the Pandora® application into your device (iPhone/ iPod touch), then log in and create an account with Pandora®. • Select [ON] for [PANDORA SRC]. (□ 4) Start listening To Pause or resume playback Thumbs up or thumbs down Do this Press 6 38 (or press ENT 38 on RC-406). press 1 / 2 .

□ If thumbs down is selected, the current track is skipped. Antenna 1 Open the Pandora® application on your device. 2 Connect your device to the USB input terminal. USB input terminal Expansion port on the rear panel SiriusXM Connect Vehicle Tuner Skip a track Create a new station 1 Press and hold the volume knob. 2 Activate the subscription through www.

The Radio ID is required to activate the SiriusXM Connect Vehicle Tuner. The Radio ID is located on the label of the SiriusXM Connect Vehicle Tuner and can also be shown on the unit's display window S LEVEL MID LEVEL TRE LEVEL -15 to +15 (0): -8 to +8 (0): -8 to +8 (0): -8 to +8 (0): Adjusts the level to memorize for each source. (Before making an adjustment, select the source you want to adjust.) Adjusts the subwoofer output level. @@@@THROUGH: All signals are sent to the subwoofer. @@@@; OFF: Cancels. @@@@ (Before adjustment, select the source you want to adjust. @@@@ 2 Turn the volume knob to select [SETTINGS], then press the knob. @ Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit.

□ To return to the previous hierarchy, press . @@@@The color you have created can be selected when you select [USER]. @@ 2 Press 4 / € to select the color (R/ G/ B) to adjust. @@@@; DIMMER LV2: Dims the key illumination darker than DIMMER LV1. ; DIMMER OFF: Cancels. @@ kenwood.

@@@ Changing the browse item will display the correct title, etc. @@@@ □ • When you use an audio file with database information added using the “KENWOOD Music Editor Light” or “KENWOOD Music Control,” you can search for a file by title, album or artist name using Music Search. □ “KENWOOD Music Editor Light” and “KENWOOD Music Control” are available from the following web site: www. kenwood.

Com/cs/ce/ • Detailed information and notes about the playable audio files are stated in an online manual on the following site: www. □ Playable USB device file system: FAT16, FAT32 Although the audio files are complied with the standards listed above, playback maybe impossible depending on the types or conditions of media or device. unplayable discs • Discs that are not round. □ Discs with coloring on the recording surface or discs that are dirty. □ Recordable/ReWritable discs that have not been finalized.

• 8 cm CD. Attempting to insert using an adapter may cause malfunction. About USB devices • This unit can play MP3/WMA files stored on a USB mass storage class device. • You cannot connect a USB device via a USB hub and Multi Card Reader.



[You're reading an excerpt. Click here to read official KENWOOD KDC-155U user guide](http://yourpdfguides.com/dref/5533279)
<http://yourpdfguides.com/dref/5533279>

□ Connecting a cable whose total length is longer than 5 m may result in abnormal playback.

□ This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. □ The unit does not turn on. • Information shown on the display is incorrect. The unit does not work at all. For KMR-355U : The Auto Power Off function (that turns the power off after 20 minutes when in standby mode) does not work. • Radio reception is poor. □ Static noise while listening to the radio. Remedy • Adjust the volume to the optimum level. • Check the cords and connections. Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit.

If this does not solve the problem, consult your nearest service center. Tracks do not play back as you have intended them to play. "READING" keeps flashing. Elapsed playing time is not correct. The number of songs contained in the "SONGS" category of this unit is different from the iPod/iPhone. Correct characters are not displayed (e. Skip to another track or change the disc. Playback order is determined when files are recorded. Do not use too many hierarchical levels or folders. This is caused by how the tracks are recorded.

Podcast files are not counted on this unit as this unit does not support the playback of podcast files. This unit can only display uppercase letters, numbers, and a limited number of symbols. new station creation is unsuccessful. Check the Pandora® application on your device. Retry after deleting an unnecessary station on your device.

Make sure you have installed the latest version of the Pandora® application on your device. Check the antenna and its connection are in good condition. Make sure the SiriusXM Connect Vehicle Tuner is connected to the unit. Make sure the antenna is mounted outside the vehicle. Make sure you have entered the correct pass code.

(□ 9) Reset the unit. (□ 3) Make sure [OFF] is selected for [DEMO MODE]. (□ 4) • Connect the antenna firmly. □ Pull the antenna out all the way. Make sure the disc contains supported audio files. (□ 11) Insert a playable disc into the loading slot. Make sure the disc is clean and inserted properly. reset the unit. If this does not solve the problem, consult your nearest service center. press and hold 0 to forcibly eject the disc.

Be careful not to drop the disc when it is ejected. If this does not solve the problem, reset the unit. (□ 3) Copy the files and folders onto the USB device again.

If this does not solve the problem, reset the USB device or use another USB device. □ Remove the USB device, turn the unit off, then turn it on again. 01 % For KDC-X397 : 110 dB For KDC-355U / KDC-255U / KDC-155U / KDC-MP255U / KDC-MP155U / KMR-355U : 105 dB 90 dB Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio USB For KDC-X397 / KDC-355U / KDC-255U / KDC-155U / KMR-355U : 87.0 (Full speed) DC 5 V 1 A FAT16/32 Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio 50 W × 4 22 W × 4 (at less than 1 % THD) 4 Ω to 8 Ω Bass 100 Hz ±8 dB Middle 1 kHz ±8 dB Treble 12. Indd 13 13 7/24/12 5:04:38 PM INSTALLATION / CONNECTION Installing the unit (in-dash mounting) Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery's negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (red) to the car chassis or Ground wire (black) to prevent a short circuit.

□ Insulate unconnected wires with vinyl tape to prevent a short circuit. □ Be sure to ground this unit to the car's chassis again after installation. do the required wiring. (□ 15) Caution • For safety's sake, leave wiring and mounting to professionals. consult the car audio dealer.

□ Install this unit in the console of your vehicle. Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such as the heat sink and enclosure become hot. □ Do not connect the - wires of speaker to the car chassis , Ground wire (black) , or in parallel. □ Mount the unit with the angle of 30° or less.

□ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle's fuse box which provides 12 V DC power supply and is turned on and off by the ignition key. □ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car's chassis, then replace the old fuse with one that has the same rating.

Make sure the direction of the trim plate. The shape of the hooks on the top side is as illustrated. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place. When installing without the mounting sleeve 1 Remove the mounting sleeve and trim plate from the unit. 2 Align the holes in the unit (on both sides) with the vehicle mounting bracket and secure the unit with the supplied screws. Basic procedure 1 Remove the key from the ignition switch, then disconnect the - terminal of the car battery.

How to remove the unit 1 Detach the faceplate. 2 Fit the catch pin on the extraction keys into the holes on both sides of the trim plate, then pull it out. 3 Insert the extraction keys deeply into the slots on each side, then follow the arrows as shown on the right. (□ 15) 3 Install the unit to your car. See Installing the unit (in-dash mounting). Indd 14 7/24/12 5:04:38 PM Wiring connection KDC-255U KDC-155U R L REAR/SW Part list for installation KDC-MP255U KDC-MP155U KMR-355U R FRONT REAR/SW L Front output Rear/subwoofer output Fuse (10 A) KDC-X397 KDC-355U Subwoofer output Front output R L A

Faceplate SW FRONT REAR Rear/subwoofer output Rear output (×1) Antenna terminal B Mounting sleeve For KDC-X397 / KDC-355U / KMR-355U : To the optional SiriusXM Connect Vehicle Tuner (commercially available) (□ 8) If no connections are made, do not let the wire come out from the tab. To front speaker (left) White White/Black Gray Gray/Black Green Green/Black Purple Purple/Black Light blue/yellow (Steering remote control wire) STEERING WHEEL REMOTE INPUT (×1) C Trim plate REMOTE CONT For KDC-X397 / KDC-355U / KDC-MP255U / KDC-MP155U : To the steering wheel remote control adapter For KMR-355U : To Kenwood Wired Marine Remote Control unit (optional accessory) For the latest information on marine accessories please go to: http://www.kenwoodusa.com/CAR_Entertainment/Marine/ To the power control terminal when using the optional power amplifier, or to the antenna control terminal in the vehicle. to front speaker (right) (×1) D Wiring harness To rear speaker (left) Light blue/yellow (Marine remote control wire) MARINE REMOTE (×1) E Extraction key To rear speaker (right) Blue/White (Power control wire) P.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533279)

[KDC-155U user guide](http://yourpdfguides.com/dref/5533279)

<http://yourpdfguides.com/dref/5533279>

@@@ F Tornillo de cabeza plana Marrón (Silenciar cable del control) MUTE (×4) G Tornillo de cabeza esférica Azul (Cable de control de la antena) (×4) ANT CONT (Sin utilizar) ESPAÑOL \ 15 8/14/12 8:55:39 AM CAUTION Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety. jVC KENWOOD Corporation 2967-3 , ISHIKAWA-MACHI , HACHIOJI-SHI , TOKYO , JAPAN THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE. Location : Top Plate FCC WARNING
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual.

The user could lose the authority to operate this equipment if an unauthorized change or modification is made. FCC NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. □ "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. □ Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Information on Disposal of Old Electrical and Electronic Equipment (applicable for countries that have adopted separate waste collection systems) Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste. Old electrical and electronic equipment should be recycled at a facility capable of handling these items and their waste byproducts.

Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment. .



[You're reading an excerpt. Click here to read official KENWOOD KDC-155U user guide](http://yourpdfguides.com/dref/5533279)
<http://yourpdfguides.com/dref/5533279>