



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-358U. You'll find the answers to all your questions on the KENWOOD KDC-358U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KDC-358U  
User guide KENWOOD KDC-358U  
Operating instructions KENWOOD KDC-358U  
Instructions for use KENWOOD KDC-358U  
Instruction manual KENWOOD KDC-358U

## KENWOOD

**KDC-X398  
KDC-358U  
KMR-D358**

CD-RECEIVER  
**INSTRUCTION MANUAL**  
AMPLI-TUNER LECTEUR DE CD  
**MODE D'EMPLOI**  
REPRODUCTOR DE DISCOS COMPACTOS RECEPTOR DE FM/AM  
**MANUAL DE INSTRUCCIONES**

JVC KENWOOD Corporation

Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new CD-receiver.

**For your records**  
Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on this product.  
Model KDC-X398/ KDC-358U/ KMR-D358 Serial number \_\_\_\_\_

US Residents Only



Register Online

Register your Kenwood product at [www.kenwoodusa.com](http://www.kenwoodusa.com)

© 2013 JVC KENWOOD Corporation

GET0964-001B (KW/100)



[You're reading an excerpt. Click here to read official KENWOOD KDC-358U user guide](http://yourpdfguides.com/dref/5533190)  
<http://yourpdfguides.com/dref/5533190>

**Manual abstract:**

Indd 1 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 16/10/2013 10:37:25 AM CONTENTS BEFORE USE BASICS GETTING STARTED RADIO CD / USB / iPod AUX Pandora® iHeartRadio® SiriusXM® Radio AUDIO SETTINGS DISPLAY SETTINGS MORE INFORMATION TROUBLESHOOTING INSTALLATION / CONNECTION SPECIFICATIONS 2 3 4 5 6 8 8 9 10 12 13 13 14 16 i and ii BEFORE USE Warning Do not operate any function that takes your attention away from safe driving. Caution Volume setting: • Adjust the volume so that you can hear sounds outside the car to prevent accidents. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: • Avoid using the USB device or iPod/iPhone if it might hinder safe driving. • Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data. □ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. □ If a disc error occurs due to condensation on the laser lens, eject the disc and wait for the moisture to evaporate. Remote control (RC-406): • Do not leave the remote control in hot places such as on the dashboard. • The Lithium battery is in danger of explosion if replaced incorrectly. Replace it only with the same or equivalent type. □ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. □ Keep the battery out of reach of children and in its original packaging when not in used. Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicone or soft cloth. Cleaning the connector: Detach the faceplate and clean the connector gently with a cotton swab, being careful not to damage the connector. Handling discs: • Do not touch the recording surface of the disc. Connector (on the reverse • Do not stick tape etc. On the disc, or use a disc with tape stuck on it. Side of the faceplate) • Do not use any accessories for the disc. □ Clean from the center of the disc and move outward. □ Clean the disc with a dry silicone or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove burrs from the center hole and disc edge before inserting a disc. (at the end of the book) How to read this manual • Operations are explained mainly using buttons on the faceplate. • [XX] indicates the selected items. □ (B XX) indicates references are available on the stated page. 2 EN\_KDC-X398[KW\_K0]f. Indd 2 29/8/2013 5:04:25 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BASICS Faceplate Volume knob (turn/press) Display window Remote sensor (Do not expose to bright sunlight. How to replace the battery Pull out the insulation sheet when using for the first time. To Turn on the power Adjust the volume Do this (on the faceplate) Press L SRC. □ Press and hold to turn off the power. \* Turn the volume knob. Do this (on the remote control) Press and hold SRC to turn off the power. ( Pressing SRC does not turn on the power. ) Press VOL or VOL . Press ATT during playback to attenuate the sound. ( not available ) : The power will automatically turn off after 20 minutes when in standby mode (Auto Power Off). eNGLISH | EN\_KDC-X398[KW\_K0]f. Indd 3 3 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 29/8/2013 5:04:26 PM GETTING STARTED Set the initial settings 1 Press SRC to enter STANDBY. 2 Press the volume knob to enter [FUNCTION]. 3 Turn the volume knob to make a selection (see the following table), then press the knob. 3 4 Press and hold 1 to exit. To return to the previous setting item or hierarchy, press . Default: XX Cancel the demonstration When you turn on the power (or after you reset the unit), the display shows: "CANCEL DEMO" B "PRESS" B "VOLUME KNOB" 1 Press the volume knob. Set the clock 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [CLOCK], then press the knob. 3 Turn the volume knob to select [CLOCK ADJUST], then press the knob. 2 4 Turn the volume knob to make the settings, then press the knob. Day B Hour B Minute 5 Turn the volume knob to select [CLOCK FORMAT], then press the knob. 6 Turn the volume knob to select [12H] or [24H], then press the knob. To return to the previous setting item or hierarchy, press AUDIO CONTROL OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or SP SELECT 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. DISPLAY ON: Both display and button illumination change to white color when entering EASY MENU [FUNCTION]. ; OFF: Both display and button illumination remain as [COLOR SELECT] color. (B 13) TUNER SETTING NORMAL: Memorizes one station for each preset button in each band (FM1/ PRESET TYPE FM2/ FM3/ AM). ; MIX: Memorizes one station or SiriusXM channel for each preset button, regardless of the selected band or SiriusXM channel. (B 8) 1: Automatically distinguishes between audio file disc and music CD. ; 2: Forces CD READ to play as an music CD. No sound can be heard if an audio file disc is played. For details on how to update the firmware, see: www. Indd 4 16/10/2013 10:30:52 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) RADIO Other settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob. □ To change the searching method for S / T: Press K SEEK repeatedly. □ To select a stored station: Press one of the number buttons (1 to 6) (or press one of the number buttons (1 to 6) on RC-406). to exit. To return to the previous setting item or hierarchy, press TUNER SETTING AUTO MEMORY MONO SET TI PTY SEARCH CLOCK TIME SYNC . Default: XX YES: Automatically starts memorizing 6 stations with good reception. ; NO: Cancels. (Selectable only if [NORMAL] is selected for [PRESET TYPE]. ) (B 4) ON: Improves the FM reception, but the stereo effect may be lost. Selects the available Program Type (see below), then, press S / T to start. ON: Synchronizes the unit's time to the Radio Broadcast Data System station time. 2 Press the number buttons to enter a frequency. □ If no operation is done for 10 seconds after step 2, Direct Access Tuning is automatically canceled. □ [MONO SET]/ [TI]/ [PTY SEARCH] is selectable only when the band is FM1/ FM2/ FM3. □ Available Program Type: SPEECH: NEWS, INFORM (information), SPORTS, TALK, LANGUAGE, REL TALK (religious talk), PERSNLTY (personality), PUBLIC, COLLEGE, HABL ESP (spanish talk), WEATHER MUSIC: ROCK, CLS ROCK (classic rock), ADLT HIT (adult hits), SOFT RCK (softrock), TOP 40, COUNTRY, OLDIES, SOFT, NOSTALGA (nostalgia), JAZZ, CLASSICL (classical), R & B (rhythm and blues), SOFT R&B (soft rhythm and blues), REL MUSC (religious music), MUSC ESP (spanish music), HIP HOP The unit will search for the Program Type categorized under [SPEECH] or [MUSIC] if selected.



[You're reading an excerpt. Click here to read official KENWOOD KDC-358U user guide](http://yourpdfguides.com/dref/5533190)  
<http://yourpdfguides.com/dref/5533190>

□ If the volume is adjusted during reception of traffic information or alarm, the adjusted volume is memorized automatically. It will be applied the next time traffic information or alarm function is turned on. : 500 mA) (optional accessory) Select a track/file Select a folder \*2 Reverse/ Fast-forward Repeat play \*3 iPod/iPhone USB input terminal Random play \*3 KCA-iP102 (optional accessory) Press and hold iPod to select the control mode while in iPod source. \*1 \*2 \*3 \*4 You can still play/pause, file search, fast-forward or reverse files from the unit.

only for MP3/WMA/WAV files. This does not work for iPod. For iPod: Applicable only when [MODE OFF] is selected. For CD: Only for MP3/WMA files. If you connect the iPod/iPhone to the USB input terminal of the unit (while listening to TuneIn, TuneIn Radio Pro or Aupeo), the unit will output the sound from these apps. 6 EN\_KDC-X398[KW\_K0]f. Indd 6 4/9/2013 2:34:35 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) CD / USB / iPod Select a track/file from a list For iPod: Applicable only when [MODE OFF] is selected. (B 6) 1 Press . 2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA/WAV file: Select the desired folder, then a file.

□ iPod or KME Light/ KMC file: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS\*, GENRES, COMPOSERS\*). \* Only for iPod. □ To return to the root folder (or first file), press number button 5. □ To return to the previous setting item or hierarchy, press . • To cancel , press and hold . If you have many files. You can search through them quickly (on step 2 above) at a preset skip search ratio by pressing S/ T. □ See also "Set the skip search ratio. □ • Pressing and holding S/ T skip songs at the maximum ratio (10%) regardless of the setting made. □ For USB: Only for files registered in the database created with KME Light/ KMC.

• Not applicable for audio CD. Direct Music Search (using RC-406) (except for KMR-D358 ) Set the skip search ratio While listening to iPod or KME Light/ KMC file. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [SKIP SEARCH], then press the knob.

4 Turn the volume knob to make a selection, then press the knob. 0. 5% (default)/ 1%/ 5%/ 10%: Skip search ratio over the total files. 2 Press the number buttons to enter a track/ file number. Select a song by name While listening to iPod. 1 Press . 2 Turn the volume knob to select a category, then press the knob. 3 Turn the volume knob quickly to enter character search. 4 Turn the volume knob to select the character to be searched for. 5 Press S/ T to move to the entry position. You can enter up to 3 characters. 6 Press the volume knob to start searching. 7 Turn the volume knob to make a selection, then press the knob. Repeat step 7 until the desired item is selected. □ To search for a character other than A to Z and 0 to 9, enter only " ".

□ To return to the previous hierarchy, press . □ To return to the top menu, press number button 5. • To cancel , press and hold . Change the USB drive When a smartphone (Mass Storage Class) is connected to the USB input terminal, you can select its internal memory or external memory (such as an SD card) to playback the stored songs. You can also select the desired drive to playback when a multiple drives device is connected. Press number button 5 repeatedly to select the desired drive. (or) 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [MUSIC DRIVE], then press the knob. Repeat steps 1 to 4 to select the following drives.

(B 4) Pandora® Preparation: Install the latest version of the Pandora application onto your device (iPhone/ iPod touch), then create an account and log in to Pandora. • Select [ON] for [PANDORA SRC]. (B 4) To Pause or resume playback Thumbs up or thumbs down Skip a track Create a new station Do this Press 6 IW (or press ENT IW on RC-406). press J / K . □ If thumbs down is selected, the current track is skipped.

Auxiliary input jack Start listening 1 Open the Pandora application on your device. 2 Connect your device to the USB input terminal. 5 mm (1/8") stereo mini plug with "L" shaped connector (commercially available) Portable audio player 2 Turn the volume knob to select [FROM TRACK] or [FROM ARTIST], then press the knob. A new station is created based on the current song or artist. Save a station Press and hold one of the number buttons (1 to 5) to store. 3 Turn on the portable audio player and start playback. KCA-iP102 (optional accessory) Set the AUX name While listening to a portable the live position and " " lights up. □ To skip the current song backward/forward, press S/ T (or S/ T (+) on RC-406). SiriusXM Vehicle Tuner automatically buffered their broadcasting content in the background. • Smart Favorite channel is available with SXV200 or later SiriusXM tuner models. When you select a Smart Favorite channel, you can rewind and replay up to 30 minutes of any of the missed news, talk, sports or music content. 1 Press one of the number buttons (1 to 6) to select a channel. 2 For operation (B 10, SiriusXM Replay™) SiriusXM settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [SIRIUS XM], then press the knob. @ @ 4 Press and hold to exit.

Default: XX There are two types of lock functions available: • SiriusXM-defined: When [MATURE CH] is set to [ON] • User-defined: Using [CHANNEL EDIT] when [MATURE CH] is set to [OFF] CHANNEL LOCK To unlock settings: 1 Turn the volume knob to select a number. 2 Press S/ T to move to the entry position. 2 Press S/ T to move to the entry position. 3 Repeat steps 1 and 2 to enter a new 4-digit pass code. □ Make a note of the new pass code to enter channel lock settings from next time. 1 Turn the volume knob to select a category, then press the knob. @ @ [L] appears in front of the channel number. 3 Press and hold to exit. ON: Turns on the SiriusXM-defined lock setting (mature channel). @ @ @ @ @ 1 Press the volume knob to enter [FUNCTION]. @ @ @ @ Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. (or using RC-406) 1 Press AUD to enter [AUDIO CONTROL]. 2 Press J/K to make a selection, then press ENT IW. To return to the previous setting item or hierarchy, press .

@ @ @ @ @ @ @ @) [DRIVE EQ] is a preset equalizer that reduces noise from the road. @ @ THROUGH: All signals are sent to the subwoofer. @ @ @ @ @ @ THROUGH: All signals are sent to the speakers. @ @ @ @ @ @ @ @ (Before adjustment, select the source you want to adjust. @ @ @ @ 2 Turn the volume knob to select [DISPLAY], then press the knob.

@ @ @ @ □ KENWOOD Music Editor Light and KENWOOD Music Control are available on the following web site: www.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533190)

[KDC-358U user guide](http://yourpdfguides.com/dref/5533190)

<http://yourpdfguides.com/dref/5533190>

kenwood. Com/cs/ce/ 3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . Default: XX COLOR SELECT VARIABLE SCAN/ COLOR 01 — COLOR 24/ USER: Selects your preferred key illumination color. You can create your own color (when [COLOR 01] — [COLOR 24] or [USER] is selected). The color you have created can be selected when you select [USER]. 1 Press and hold the volume knob to enter the detailed color adjustment.

2 Press S / T to select the color (R/ G/ B) to adjust. 3 Turn the volume knob to adjust the level (0 — 9), then press the knob. DIMMER ON: Dims the display and button illumination. ; OFF: Illuminates according to the [BRIGHTNESS] settings. 0 — 31: Selects your preferred brightness level for display and button illumination. AUTO/ ONCE: Selects whether to scroll the display information automatically, or scroll only once. ; OFF: Cancels. □ Detailed information and notes about the playable audio files are stated in an online manual on the following web site: www. □ Playable USB device file system: FAT12, FAT16, FAT32 Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device. About iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th, and 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th, and 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5 • For the latest compatible list and software versions of iPhone/iPod, see: www.

kenwood. Com/cs/ce/ipod • To connect devices featuring Lightning connector, both KCA-iP102 (optional accessory) and Apple Lightning to 30-pin Adapter (accessory of the iPod/iPhone) are required. Do not leave the Apple Lightning to 30-pin Adapter inside the car to prevent damages caused by the hot temperature. □ Discs with coloring on the recording surface or discs that are dirty. □ Recordable/ReWritable discs that have not been finalized. • 8 cm CD. Attempting to insert using an adapter may cause malfunction. About USB devices • This unit can play MP3/WMA/WAV files stored on a USB mass storage class device. • You cannot connect a USB device via a USB hub. □ Connecting a cable whose total length is longer than 5 m may result in abnormal playback.

□ This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. BRIGHTNESS TEXT SCROLL ENGLISH \ EN\_KDC-X398[KW\_K0]f. Indd 13 13 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 5/9/2013 4:28:49 PM MORE INFORMATION About Pandora • Pandora is available only in the U. □ Because Pandora is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired, or some or all of the services may become unavailable. □ Some functions of Pandora cannot be operated from this unit. □ If the version of the OS of the connected iPhone is earlier than 4. 0, start the Pandora application before selecting the PANDORA source. □ The unit does not turn on. • Information shown on the display is incorrect.

The unit does not work at all. For KMR-D358 : The Auto Power Off function (that turns the power off after 20 minutes when in standby mode) does not work. • Radio reception is poor. □ Static noise while listening to the radio. Remedy • Adjust the volume to the optimum level. • Check the cords and connections. Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit. If this does not solve the problem, consult your nearest service center. (B 3) Make sure [OFF] is selected for [DEMO MODE]. (B 4) About iHeartRadio • iHeartRadio® is a third-party service, therefore the specifications are subject to change without prior notice.

Accordingly, compatibility may be impaired or some or all of the services may become unavailable. □ Some iHeartRadio® functionality cannot be operated from this unit. • Connect the antenna firmly. □ Pull the antenna out all the way. Make sure the disc contains supported audio files. (B 13) Insert a playable disc into the loading slot. Make sure the disc is clean and inserted properly. reset the unit. If this does not solve the problem, consult your nearest service center. press and hold M to forcibly eject the disc.

Be careful not to drop the disc when it is ejected. If this does not solve the problem, reset the unit. (B 3) Copy the files and folders onto the USB device again. If this does not solve the problem, reset the USB device or use another USB device. Muting upon the reception of a phone call Connect the MUTE wire to your telephone using a commercial telephone accessory. ) • To continue listening to the audio system during a call, press SRC. “CALL” disappears and the audio system resumes. When the call ends, “CALL” disappears. Tracks do not play back as you intended them to play. “READING” keeps flashing.

Elapsed playing time is not correct. Correct characters are not displayed (e. □ CANNOT CREATE” “CANNOT SAVE” “DISCONNECTED” Remedy Skip to another track or change the disc. Playback order is determined when files are recorded. Do not use too many hierarchical levels or folders. Make sure you have installed the latest version of the iHeart Link for KENWOOD application on your device. Check the antenna and its connection are in good condition. Make sure the SiriusXM Vehicle Tuner is connected to the unit. Make sure the antenna is mounted outside the vehicle. Make sure you have entered the correct pass code.

(B 11) This is caused by how the tracks are recorded. This unit can only display uppercase letters, numbers, and a limited number of symbols. new station creation is unsuccessful. Check the Pandora application on your device. The number of registered stations has reached its limit.

Retry after deleting unnecessary stations from your device. Make sure you have installed the latest version of the Pandora application on your device. registration of thumbs up/thumbs down has failed. You try to access from a country which Pandora is not deliverable. If “Explicit Content” in [Account Settings] is checked in the web version of iHeartRADIO, custom stations become unavailable.

Check the connection to the device. Indd 15 15 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 29/8/2013 5:04:28 PM INSTALLATION / CONNECTION Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery's negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (red) to the car chassis or Ground wire (black) to prevent a short circuit. □ Insulate unconnected wires with vinyl tape to prevent a short circuit. □ Be sure to ground this unit to the car's chassis again after installation.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533190)

[KDC-358U user guide](http://yourpdfguides.com/dref/5533190)

<http://yourpdfguides.com/dref/5533190>

*Installing the unit (in-dash mounting) Do the required wiring. (B 17) Caution • For safety's sake, leave wiring and mounting to professionals. consult the car audio dealer. □ Install this unit in the console of your vehicle.*

*Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such as the heat sink and enclosure become hot. □ Do not connect the s wires of speakers to the car chassis or Ground wire (black), or connect them in parallel. □ Mount the unit at an angle of less than 30°. □ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle's fuse box which provides 12 V DC power supply and is turned on and off by the ignition key. □ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car's chassis, then replace the old fuse with one that has the same rating. Hook on the top side Orientate the trim plate as illustrated before fitting. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place. When installing without the mounting sleeve 1 Remove the mounting sleeve and trim plate from the unit. 2 Align the holes in the unit (on both sides) with the vehicle mounting bracket and secure the unit with screws (commercially available). Use only the specified screws. Using wrong screws might damage the unit. Basic procedure 1 Remove the key from the ignition switch, then 2 3 4 5 16 EN\_KDC-X398[KW\_K0]f.*

*Indd 16 disconnect the s terminal of the car battery. (B 17) Install the unit to your car. See Installing the unit (in-dash mounting). Connect the s terminal of the car battery. reset the unit.*

*(B 3) How to remove the unit 1 Detach the faceplate. @@@@ kenwoodusa. @@To the terminal that is grounded when the telephone rings or during conversation. (To connect the Kenwood navigation system, refer your navigations manual. ) (C) Mounting sleeve If no connections are made, do not let the wire come out from the tab. Indd ii ii Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 4/9/2013 3:21:43 PM CAUTION Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety. jVC KENWOOD Corporation 2967-3 , ISHIKAWA-MACHI , HACHIOJI-SHI , TOKYO , JAPAN THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE. Location : Top Plate FCC WARNING This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual.*

*The user could lose the authority to operate this equipment if an unauthorized change or modification is made. FCC NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. □ "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. □ Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. In the United States and other countries. CALIFORNIA, USA ONLY This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material—special handling may apply.*



[You're reading an excerpt. Click here to read official KENWOOD KDC-358U user guide](http://yourpdfguides.com/dref/5533190)  
<http://yourpdfguides.com/dref/5533190>