



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-BT318U. You'll find the answers to all your questions on the KENWOOD KDC-BT318U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KDC-BT318U  
User guide KENWOOD KDC-BT318U  
Operating instructions KENWOOD KDC-BT318U  
Instructions for use KENWOOD KDC-BT318U  
Instruction manual KENWOOD KDC-BT318U

## KENWOOD

### KDC-BT358U KDC-BT318U

CD-RECEIVER  
**INSTRUCTION MANUAL**  
AMPLI-TUNER LECTEUR DE CD  
**MODE D'EMPLOI**  
REPRODUCTOR DE DISCOS COMPACTOS RECEPTOR DE FM/AM  
**MANUAL DE INSTRUCCIONES**

JVCKENWOOD Corporation

Take the time to read through this instruction manual.  
Familiarity with installation and operation procedures will help you obtain the best performance from your new CD-receiver.

**For your records**

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below.  
Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.  
Model KDC-BT358U/KDC-BT318U Serial number \_\_\_\_\_

US Residents Only

Register Online

Register your Kenwood product at [www.kenwoodusa.com](http://www.kenwoodusa.com)

© 2013 JVC KENWOOD Corporation

GETD996-001A (00N)



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)  
<http://yourpdfguides.com/dref/5533057>

**Manual abstract:**

*Indd 1 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 11/11/2013 9:12:35 AM CONTENTS BEFORE USE BASICS GETTING STARTED RADIO CD / USB / iPod AUX Pandora® (for KDC-BT318U BEFORE USE 2 3 4 5 6 8 ) Warning Do not operate any function that takes your attention away from safe driving. Caution Volume setting: •Adjust the volume so that you can hear sounds outside the car to prevent accidents. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: •Avoid using the USB device or iPod/iPhone if it might hinder safe driving. •Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data. □ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. □ If a disc error occurs due to condensation on the laser lens, eject the disc and wait for the moisture to evaporate. Remote control (RC-406): •Do not leave the remote control in hot places such as on the dashboard. •The Lithium battery is in danger of explosion if replaced incorrectly.*

*Replace it only with the same or equivalent type. □ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. □ Keep the battery out of reach of children and in its original packaging when not in used. 8 )9 iHeartRadio® (for BLUETOOTH® AUDIO SETTINGS KDC-BT318U 10 15 16 16 17 19 20 DISPLAY SETTINGS MORE INFORMATION TROUBLESHOOTING SPECIFICATIONS INSTALLATION / CONNECTION Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicone or soft cloth. Cleaning the connector: Detach the faceplate and clean the connector gently with a cotton swab, being careful not to damage the connector.*

*Handling discs: •Do not touch the recording surface of the disc. Connector (on the reverse •Do not stick tape etc. On the disc, or use a disc with tape stuck on it. Side of the faceplate) •Do not use any accessories for the disc. □ Clean from the center of the disc and move outward.*

*□ Clean the disc with a dry silicone or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove burrs from the center hole and disc edge before inserting a disc. How to read this manual •Operations are explained mainly using buttons on the faceplate. •[XX] indicates the selected items. □ ( XX) indicates references are available on the stated page. 2 JS\_KWD\_KDC\_BT358U\_KN\_01\_EN. Indd 2 11/11/2013 9:12:36*

*AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BASICS Faceplate Volume knob (turn/press) Attach Loading slot Display window Remote control (RC-406) Remote sensor (Do not expose to bright sunlight. ) Detach How to reset Detach button KDC-BT318U Pull out the insulation sheet when using for the first time.*

*How to replace the battery Your preset adjustments will also be erased. To Turn on the power Adjust the volume Do this (on the faceplate) Press B SRC. □ Press and hold to turn off the power. turn the volume knob. Do this (on the remote control) Press and hold SRC to turn off the power. ( Pressing SRC does not turn on the power. ) Press VOL or VOL . Press ATT during playback to attenuate the sound. ( not available ) : You can also select to turn off the display information by pressing DISP SCRL repeatedly. eNGLISH \ JS\_KWD\_KDC\_BT358U\_KN\_01\_EN.*

*Indd 3 3 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 11/11/2013 9:12:36 AM GETTING STARTED 3 1 2 3 4 Set the initial settings Press B SRC to enter STANDBY. Press the volume knob to enter [FUNCTION]. Turn the volume knob to make a selection (see the following table), then press the knob. press and hold to exit. To return to the previous setting item or hierarchy, press .*

*Default: XX 1 Cancel the demonstration When you turn on the power (or after you reset the unit), the display shows: "CANCEL DEMO" "PRESS" "VOLUME KNOB" 1 Press the volume knob. Set the clock 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [CLOCK], then press the knob. 3 Turn the volume knob to select [CLOCK ADJUST], then press the knob. 2 4 Turn the volume knob to make the settings, then press the knob. Day Hour Minute 5 Turn the volume knob to select [CLOCK FORMAT], then press the knob. 6 Turn the volume knob to select [12H] or [24H], then press the knob. To return to the previous setting item or hierarchy, press While in clock display screen. press and hold DISP SCRL to enter clock adjustment mode directly. Then, perform step 4 to set the clock. AUDIO CONTROL REAR/ SUB-W: Selects whether rear speakers or a subwoofer are connected to the line out SWITCH terminals on the rear (through an external amplifier). PREOUT SP SELECT OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. DISPLAY ON: Both display and button illumination change to white color when entering [FUNCTION]. ; EASY MENU\*1 OFF: Both display and button illumination remain as [COLOR SELECT] color. ( 16) TUNER SETTING NORMAL: Memorizes one station for each preset button in each band (FM1/ FM2/ FM3/ AM).*

*; PRESET TYPE MIX: Memorizes one station for each preset button, regardless of the selected band. ( 8) 1: Automatically distinguishes between audio file disc and music CD. ; 2: Forces to play as an CD READ music CD. No sound can be heard if an audio file disc is played. For details on how to update the firmware, see: www. Indd 4 11/11/2013 9:12:37 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) RADIO Other settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob. To return to the previous setting item or hierarchy, press TUNER SETTING . □ To change the searching method for S / T : Press K SEEK repeatedly. □ To select a stored station: Press one of the number buttons (1 to 6) (or press one of the number buttons (1 to 6) on RC-406).*

*AUTO MEMORY YES: Automatically starts memorizing 6 stations with good reception. ; NO: Cancels. (Selectable only if [NORMAL] is selected for [PRESET TYPE]. ) ( 4) MONO SET For TI PTY SEARCH CLOCK TIME SYNC ON: Synchronizes the unit's time to the Radio Broadcast Data System station time. ; OFF: Cancels.*

*ON: Improves the FM reception, but the stereo effect may be lost. Selects the available Program Type (see below), then, press S / T to start. kDC-BT358U : Direct Access Tuning (using RC-406) 1 Press DIRECT to enter Direct Access Tuning. 2 Press the number buttons to enter a frequency. □ If no operation is done for 10 seconds after step 2, Direct Access Tuning is automatically canceled.*



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)  
<http://yourpdfguides.com/dref/5533057>

[MONO SET]/[TI]/[PTY SEARCH] is selectable only when the band is FM1/FM2/FM3.  Available Program Type: SPEECH: NEWS, INFORM (information), SPORTS, TALK, LANGUAGE, REL TALK (religious talk), PERSONLTY (personality), PUBLIC, COLLEGE, HABL ESP (spanish talk), WEATHER MUSIC: ROCK, CLS ROCK (classic rock), ADLT HIT (adult hits), SOFT RCK (softrock), TOP 40, COUNTRY, OLDIES, SOFT, NOSTALGA (nostalgia), JAZZ, CLASSICL (classical), R & B (rhythm and blues), SOFT R&B (soft rhythm and blues), REL MUSC (religious music), MUSC ESP (spanish music), HIP HOP The unit will search for the Program Type categorized under [SPEECH] or [MUSIC] if selected.  For KDC-BT358U : If the volume is adjusted during reception of traffic information or alarm, the adjusted volume is memorized automatically. It will be applied the next time traffic information or alarm function is turned on. : 500 mA) (optional accessory) Select a folder \*3 Reverse/ Fast-forward Repeat play \*4 iPod/iPhone USB input terminal Random play \*4 KCA-iP102 (optional accessory) or accessory cable of the iPod/iPhone\*1 Press 5 iPod to select the control mode while in iPod source. \*1 \*2 \*3 \*4 \*5 Do not leave the cable inside the car when not using. You can still play/pause, file skip, fast-forward or reverse files from the unit. only for MP3/WMA/WAV files. This does not work for iPod. For iPod: Applicable only when [MODE OFF] is selected.

For CD: Only for MP3/WMA files. If you connect the iPod/iPhone to the USB input terminal of the unit (while listening to TuneIn Radio, TuneIn Radio Pro or Aupeo), the unit will output the sound from these apps. 6 JS\_KWD\_KDC\_BT358U\_KN\_02\_EN. Indd 6 19/11/2013 10:37:40 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) CD / USB / iPod Select a track/file from a list For iPod: Applicable only when [MODE OFF] is selected. ( 6 ) 1 Press . 2 Turn the volume knob to make a selection, then press the knob.  MP3/WMA/WAV file: Select the desired folder, then a file.  iPod or KME Light/KMC file: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS\*, GENRES, COMPOSERS\*). \* Only for iPod.  To return to the root folder (or first file), press number button 5 iPod.

To return to the previous setting item or hierarchy, press . •To cancel , press and hold . If you have many files. You can search through them quickly (on step 2 above) at a preset skip search ratio by pressing S / T.  See also "Set the skip search ratio."  
 • Pressing and holding S / T skip songs at the maximum ratio (10%) regardless of the setting made.  For USB: Only for files registered in the database created with KME Light/ KMC. 2 Press the number buttons to enter a track/ file number. Set the skip search ratio While listening to iPod or KME Light/ KMC file. 1 Press the volume knob to enter [FUNCTION].

2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [SKIP SEARCH], then press the knob. 4 Turn the volume knob to make a selection, then press the knob. 0. 5% (default)/ 1%/ 5%/ 10%: Skip search ratio over the total files. Select a song by name While listening to iPod. 1 Press . 2 Turn the volume knob to select a category, then press the knob. 3 Turn the volume knob quickly to enter character search. 4 Turn the volume knob to select the character to be searched for.

5 Press S / T to move to the entry position. You can enter up to 3 characters. 6 Press the volume knob to start searching. 7 Turn the volume knob to make a selection, then press the knob. Repeat step 7 until the desired item is selected.  To search for a character other than A to Z and 0 to 9, enter only " ".  To return to the previous hierarchy, press .  To return to the top menu, press number button 5 iPod. •To cancel , press and hold . Change the USB drive When a smartphone (Mass Storage Class) is connected to the USB input terminal, you can select its internal memory or external memory (such as an SD card) to playback the stored songs.

You can also select the desired drive to playback when a multiple drives device is connected. press 5 iPod repeatedly to select the desired drive. (or) 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [MUSIC DRIVE], then press the knob.

Repeat steps 1 to 4 to select the following drives. ( 4 ) Pandora® (for KDC-BT318U ) Preparation: Install the latest version of the Pandora application onto your device (iPhone/ iPod touch), then create an account and log in to Pandora. •Select [ON] for [PANDORA SRC]. ( 4 ) To Pause or resume playback Thumbs up or thumbs down Skip a track Create a new station Do this Press 6 IW (or press ENT IW on RC-406). press J / K .

If thumbs down is selected, the current track is skipped. Auxiliary input jack Start listening 1 Open the Pandora application on your device. 2 Connect your device to the USB input terminal. 5 mm (1/8") stereo mini plug with "L" shaped connector (commercially awill light up when the Bluetooth connection is established.  For some Bluetooth devices, you may need to enter the Personal Identification Number (PIN) code immediately after searching.  Pairing request (via Bluetooth) is automatically activated if an iPhone/iPod touch is connected through the USB input terminal. (Applicable only if [AUTO PAIRING] is set to [ON]. ) ( 14 ) Press the volume knob to pair once you have confirm the device name. Connect the microphone Rear panel Microphone (supplied) Microphone input jack Adjust the microphone angle Secure using cord clamps (not supplied) if necessary. If you turn off the unit or detach the control panel during a phone call conversation, the Bluetooth connection is disconnected.

Continue the conversation using your mobile phone. Supported Bluetooth profiles – Hands-Free Profile (HFP) – Serial Port Profile (SPP) – Phonebook Access Profile (PBAP) – Object Push Profile (OPP) – Advanced Audio Distribution Profile (A2DP) – Audio/Video Remote Control Profile (AVRCP) Bluetooth test mode You can check the connectivity of the supported profile between the Bluetooth device and the unit. 2 Search and select this unit model name (KDC-BT3\*\*U) on the Bluetooth device. PAIRING: Pairing status HF CNT: Hands-Free Profile (HFP) compatibility AUD CNT: Advanced Audio Distribution Profile (A2DP) compatibility PB DL: Phonebook Access profile (PBAP) compatibility •To cancel check mode, press and hold B SRC to turn off the unit. Improve the sound quality during a call While talking on the phone. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit. To return to the previous setting item or hierarchy, press . Default: XX MIC GAIN NR LEVEL ECHO CANCEL -20 — +8 (0): The sensitivity of the microphone increases as the number increased.



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)  
<http://yourpdfguides.com/dref/5533057>

□5 — -20 (-10): Adjust the noise reduction level until the least noise is being heard during a phone conversation. 1 — 10 (4): Adjust the echo cancellation delay time until the least echo is being heard during a phone conversation. Bluetooth mobile phone To Receive a call Do this Press or the volume knob or one of the number buttons (1 to 6) (or press on RC-406). □ All the button illumination flash when there is an incoming call. □ When [AUTO ANSWER] is set to the selected time, the unit answers incoming call automatically.

( 11) Press B SRC (or press on RC-406). On Text message notification When the phone receives a text message, the unit rings and “SMS RECEIVED” appears. □ You cannot read, edit, or send a message through the unit. □ To clear the message, press any button. Reject an incoming call End a call Switch between hands-free and private talk modes Adjust the phone volume Press or B SRC (or press RC-406). press 6 IW during a call. □ Operations may vary according to the connected Bluetooth device. Turn the volume knob during a call. Phone volume: [00] to [35] (Default: [15]) • This adjustment will not affect the volume of the other sources. The connected phone (which has been paired the earliest) is activated. However, if priority device is connected, pressing and holding activate the priority device. ( 13, DVC PRIORITY) 2 Speak the name of the contact you want to call or the voice command to control the phone functions. • Supported Voice Recognition features vary for each phone. Refer to the instruction manual of the connected phone for details. □ This unit also supports the intelligent personal assistant function of iPhone.

2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit. To return to the previous setting item or hierarchy, press CALL HISTORY VOICE BATT SIGNAL . SETTINGS AUTO ANSWER RING MODE Speak the name of the contact you want to call or use the voice command to control the phone functions. ( 11) LOW/ MID/ FULL: Shows the strength of the battery. NO SIGNAL/ LOW/ MID/ MAX: Shows the strength of the current received signal. Default: XX 1 — 30: The unit answer incoming call automatically in the selected time. ; OFF: Cancels. SYSTEM: The unit rings to notify you when a call/text message comes in. (Default ring tone is different according to the paired device.

) • CALL: Selects your preferred ring tone (TONE 1 — 5) for incoming calls. □ MESSAGE: Selects your preferred ring tone (TONE 1 — 5) for incoming text messages. PHONE: The unit uses the connected phones’ ring tone to notify you when a call/text message comes in. (The connected phone will ring if it does not support this feature. ) ON: The unit rings and “SMS RECEIVED” appears to notify you of an incoming text message.

; OFF: Cancels. 1 Press the volume knob to select a name or a phone number. □ “I” indicates call received, “O” indicates call made, “M” indicates call missed. • Press DISP SCRL to change the display category (NUMBER or NAME). □ “NO DATA” appears if there is no recorded call history.

2 Press the volume knob to call. 1 Turn the volume knob to select a name, then press the knob. 2 Turn the volume knob to select a phone number, then press the knob to call. □ If the phone supports PBAP, the phonebook of the connected phone is automatically transferred to the unit when pairing. If the phone does not support PBAP, “TRANSFER PB” appears. transfer the phonebook manually. ( 14, TRANSFER PB) • Contacts are categorized as: MO (mobile), HM (home), OF (office), OT (others), GE (general) • This unit can display only non-accent letters. (Accent letters such as “Ú” is shown as “U”. ) • If the phonebook contains many contacts, ( Select a contact by name). 1 Turn the volume knob to select a number (0 to 9) or character ( , #, +).

2 Press S / T to move the entry position. Repeat steps 1 and 2 until you finish entering the phone number. 3 Press the volume knob to call. (or using RC-406) 1 Press the number buttons (0 to 9) to enter the phone number. 2 Press to call. @@@@ 1 Press to enter Bluetooth mode. 2 Turn the volume knob to select [PHONE BOOK], then press the knob. 3 Turn the volume knob quickly to enter alphabet search mode. @@5 Turn the volume knob to select a name, then press the knob. @@To return to the previous hierarchy, press .

Delete a contact Not applicable for mobile phone that supports PBAP. 1 Press to enter Bluetooth mode. @@ 3 Turn the volume knob to select a contact. @@4 Press and hold the volume knob to enter delete mode. @@DELETE ONE: Selected name or phone number in step 3 is deleted.

@@6 Turn the volume knob to select [YES] or [NO], then press the knob. @@3 Turn the volume knob to select a contact or enter a phone number. @@@@Bluetooth mode settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [BT MODE], then press the knob.

@@@2 Turn the volume knob to select [YES] or [NO], then press the knob. selects a device to be connected as priority device. □ ” appears in front of the device name set as priority. eNGLISH \ JS\_KWD\_KDC\_BT358U\_KN\_03\_EN.

@@\* Selectable only when the connected phone supports OPP. Repeat steps 1 and 2 until you finish entering the PIN code. 3 Press the volume knob to confirm. @@ ; OFF: Cancels. @@@@ ; OFF: Cancels. FRONT: Outputs audio from the front left and right speakers. ; ALL: Outputs audio from all the speakers.

@@ ) Listen to Pandora Preparation: Select [ON] for [PANDORA SRC]. ( 4) You can listen to Pandora on your smart phone (Android OS) through Bluetooth on this unit. 1 Open the Pandora application on your device. The source switches and broadcast starts automatically. □ You can operate Pandora in the same way as Pandora for iPod/iPhone. ( 8) PIN CODE EDIT (0000) To Playback Do this 1 Press B SRC (or press SRC on RC-406) to select BT AUDIO. 2 Operate the Bluetooth audio player to start playback. ( 4) You can listen to iHeartRadio on your smart phone (Android OS) through Bluetooth on this unit. 1 Open the iHeart Link application on your smart phone. 2 Connect your smart phone via Bluetooth connection.

( 10) 3 Press B SRC to select IHEARTRADIO. The source switches and broadcast starts automatically. □ You can operate iHeartRadio in the same way as iHeartRadio for iPod/iPhone. ( 9) BT HF/AUDIO INITIALIZE Random play 14 JS\_KWD\_KDC\_BT358U\_KN\_03\_EN. Indd 14 29/11/2013 10:19:21 AM Data

Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) AUDIO SETTINGS While listening to any source.

1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [AUDIO CONTROL], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533057)

[KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)

<http://yourpdfguides.com/dref/5533057>

Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit.

(or using RC-406) 1 Press AUD to enter [AUDIO CONTROL]. 2 Press J / K to make a selection, then press ENT IW. To return to the previous setting item or hierarchy, press . default: XX SUB-W LEVEL BASS LEVEL MID LEVEL TRE LEVEL PRESET EQ -15 to +15 (0): Adjusts the subwoofer output level. □8 to +8 (+6): -8 to +8 (+5): -8 to +8 (0): Adjusts the level to memorize for each source. (Before making an adjustment, select the source you want to adjust. ) SUB-W PHASE REVERSE (180°)/NORMAL (0°): Selects the phase of the subwoofer output to be in line with the speaker output for optimum performance. (Selectable only if a setting other than [THROUGH] is selected for [LPF SUBWOOFER]. ) R15 to F15 (0): Adjusts the rear and front speaker output balance. I15 to R15 (0): Adjusts the left and right speaker output balance.

□8 to +8 (for AUX) ; -8 to 0 (for other sources): Presets the volume adjustment level of each source. (Before adjustment, select the source you want to adjust. ) ON: Creates realistic sound by compensating the high-frequency components and restoring the rise-time of the waveform that are lost in audio data compression. (Select [USER] to use the customized bass, middle, and treble settings. ) [DRIVE EQ] is a preset equalizer that reduces noise from the road.

LVI/ LV2: Selects your preferred low and high frequencies boost to produce a well-balanced sound at a low volume level. LPF SUBWOOFER THROUGH: All signals are sent to the subwoofer. ; 85HZ/ 120HZ/ 160HZ: Audio signals with frequencies lower than 85 Hz/ 120 Hz/ 160 Hz are sent to the subwoofer. eNGLISH | JS\_KWD\_KDC\_BT358U\_KN\_01\_EN. Indd 15 15 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 11/11/2013 9:12:39 AM DISPLAY SETTINGS 1 Press the volume knob to enter [FUNCTION].

2 Turn the volume knob to select [DISPLAY], then press the knob. MORE INFORMATION General • This unit can only play the following CDs: About KENWOOD Music Editor Light and KENWOOD Music Control • This unit supports the PC application KENWOOD Music Editor Light and Android™ application KENWOOD Music Control. □ When you play audio files with song data added using the KENWOOD Music Editor Light or KENWOOD Music Control, you can search for audio files by Genres, Artists, Albums, Playlists, and Songs. □ KENWOOD Music Editor Light and KENWOOD Music Control are available on the following web site: www.kenwood.

Com/cs/ce/ 3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . default: XX COLOR SELECT\* VARIABLE SCAN/ COLOR 01 — COLOR 24/ USER: Selects your preferred button illumination color.

You can create your own color (when [COLOR 01] — [COLOR 24] or [USER] is selected). The color you have created can be selected when you select [USER]. 1 Press and hold the volume knob to enter the detailed color adjustment. 2 Press S / T to select the color (R/ G/ B) to adjust. 3 Turn the volume knob to adjust the level (0 — 9), then press the knob. oN: Dims the display illumination (and button illumination\*). ; OFF: Illuminates according to the [BRIGHTNESS] settings. LVL 0 — LVL 31: Selects your preferred brightness level for display illumination (and button illumination\*). AUTO/ ONCE: Selects whether to scroll the display information automatically, or scroll only once. ; OFF: Cancels.

□ Detailed information and notes about the playable audio files are stated in an online manual on the following web site: www. □ Playable USB device file system: FAT12, FAT16, FAT32 Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device. About iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th, and 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th, and 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5 • For the latest compatible list and software versions of iPhone/iPod, see: www. About Pandora • Pandora is available only in the U. □ Because Pandora is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired, or some or all of the services may become unavailable. □ Some functions of Pandora cannot be operated from this unit. □

Discs with coloring on the recording surface or discs that are dirty. □ Recordable/ReWritable discs that have not been finalized. • 8 cm CD. Attempting to insert using an adapter may cause malfunction. About iHeartRadio • iHeartRadio® is a third-party service, therefore the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable. □ Some iHeartRadio® functionality cannot be operated from this unit. DIMMER About USB devices • This unit can play MP3/WMA/WAV files stored on a USB mass storage class device.

• You cannot connect a USB device via a USB hub. □ Connecting a cable whose total length is longer than 5 m may result in abnormal playback. □ This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. BRIGHTNESS About Bluetooth • Depending on the Bluetooth version of the device, some Bluetooth devices may not be able to connect to this unit. □ This unit may not work with some Bluetooth devices. • Signal conditions vary, depending on the surroundings. □ For more information about Bluetooth, visit the following website: www. □ The unit does not turn on. • Information shown on the display is incorrect. The unit does not work at all. • Radio reception is poor. □ Static noise while listening to the radio. Remedy • Adjust the volume to the optimum level. • Check the cords and connections. Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit.

If this does not solve the problem, consult your nearest service center. Tracks do not play back as you intended them to play. “READING” keeps flashing. Elapsed playing time is not correct. Skip to another track or change the disc. Playback order is determined when files are recorded. Do not use too many hierarchical levels or folders. This is caused by how the tracks are recorded. This unit can only display uppercase letters, numbers, and a limited number of symbols. new station creation is unsuccessful.

Check the Pandora application on your device. The number of registered stations has reached its limit. Retry after deleting unnecessary stations from your device. Make sure you have installed the latest version of the Pandora application on your device. You try to access from a country which Pandora is not deliverable.



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)  
<http://yourpdfguides.com/dref/5533057>

If "Explicit Content" in [Account Settings] is checked in the web version of iHeartRADIO, custom stations become unavailable. □ Pull the antenna out all the way. Make sure the disc contains supported audio files. ( 16) Insert a playable disc into the loading slot. Make sure the disc is clean and inserted properly. reset the unit. If this does not solve the problem, consult your nearest service center. press and hold M to forcibly eject the disc. Be careful not to drop the disc when it is ejected. If this does not solve the problem, reset the unit. ( 3) Copy the files and folders onto the USB device again. If this does not solve the problem, reset the USB device or use another USB device. Correct characters are not displayed (e. Remedy Check the connection to the device. Make sure you have installed the latest version of the iHeart Link for KENWOOD application on your device.

Symptom • Voice calling method is not successful. Bluetooth® Remedy • Use voice calling method in a more quiet environment. □ Reduce the distance from the microphone when you speak the name. □ Make sure the same voice as the registered voice tag is used. The connected phone does not support Voice Recognition feature. If "ERROR" appears again, check if the device supports the function you have tried. Bluetooth device cannot get the contact information. □ Reduce the distance between the unit and the Bluetooth audio player. □ Turn off, then turn on the unit and try to connect again. □ Other Bluetooth devices might be trying to connect to the unit.

□ Check whether the connected Bluetooth audio player supports Audio/Video Remote Control Profile (AVRCP). (Refer to the instructions of your audio player. ) • Disconnect and connect the Bluetooth player again. Reset the unit and try the operation again. If this does not solve the problem, consult your nearest service center.  
( 3) • Make sure you have entered the same PIN code to both the unit and Bluetooth device. □ Delete pairing information from both the unit and the Bluetooth device, then perform pairing again. ( 10) The number of registered devices has reached its limit. ( 11) • Reduce the distance between the unit and the Bluetooth device. □ Move the car to a place where you can get a better signal reception.

"NO INFO" appears. Sound is being interrupted or skipped during playback of a Bluetooth audio player. The connected Bluetooth audio player cannot be controlled. 01 % 105 dB 90 dB 85 dB Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio USB 1. 1 , USB 2. 0 (Full speed) FAT12/ 16/ 32 DC 5 V 1 A Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio Linear-PCM Audio Bluetooth Version Frequency Range Output Power Maximum Communication Range Profile Bluetooth Ver. Indd 19 19 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 11/11/2013 9:12:39 AM INSTALLATION / CONNECTION Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery's negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (red) to the car chassis or Ground wire (black) to prevent a short circuit. □ Insulate unconnected wires with vinyl tape to prevent a short circuit.

□ Be sure to ground this unit to the car's chassis again after installation. Installing the unit (in-dash mounting) Do the required wiring. ( 21) Caution • For safety's sake, leave wiring and mounting to professionals. consult the car audio dealer. □ Install this unit in the console of your vehicle. Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such as the heat sink and enclosure become hot. □ Do not connect the Wires of speakers to the car chassis or Ground wire (black), or connect them in parallel. □ Mount the unit at an angle of less than 30°. □ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle's fuse box which provides 12 V DC power supply and is turned on and off by the ignition key.

□ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car's chassis, then replace the old fuse with one that has the same rating. Hook on the top side Orientate the trim plate as illustrated before fitting. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place.  
When installing without the mounting sleeve 1 Remove the mounting sleeve and trim plate from the unit. 2 Align the holes in the unit (on both sides) with the vehicle mounting bracket and secure the unit with screws (commercially available). Use only the specified screws. Using wrong screws might damage the unit. Basic procedure 1 Remove the key from the ignition switch, then 2 3 4 5 20 JS\_KWD\_KDC\_BT358U\_KN\_01\_EN.

( 21) Install the unit to your car. See Installing the unit (in-dash mounting). ( 3) How to remove the unit 1 Detach the faceplate. 2 Fit the catch pin on the extraction keys into the holes on both sides of the trim plate, then pull it out. 3 Insert the extraction keys deeply into the slots on each side, then follow the arrows as shown on the right. Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 11/11/2013 9:12:39 AM Wiring connection Front output, Rear/ subwoofer output Fuse (10 A) Antenna terminal Microphone input jack ( 10) If no connections are made, do not let the wire come out from the tab. White To front speaker (left) White/Black Gray To front speaker (right) Gray/Black Green To rear speaker (left) Green/Black Purple To rear speaker (right) Ignition switch Car fuse box Red (Ignition wire) Yellow Car fuse box (Battery wire) Black (Ground wire) Battery To the metallic body or chassis of the car Blue (Antenna control wire) (Not used) Purple/Black Brown (Mute control wire) To connect the Kenwood navigation system, refer your navigations manual. Blue/White (Power control wire) To the power control terminal when using the optional power amplifier, or to the antenna control terminal in the vehicle. Light blue/yellow (Steering remote control wire) To the steering wheel remote control adapter Part list for installation (A) Faceplate (B) Trim plate (C) Mounting sleeve (D) Wiring harness (E) Extraction key ENGLISH \ JS\_KWD\_KDC\_BT358U\_KN\_01\_EN. @@@@ Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e. ) is not more than that necessary for successful communication. Indd i 11/11/2013 9:12:39 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) CAUTION Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)  
<http://yourpdfguides.com/dref/5533057>

*In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety. jVC KENWOOD Corporation 2967-3, ISHIKAWA-MACHI, HACHIOJI-SHI, TOKYO, JAPAN THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE. Location : Top Plate FCC WARNING This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. FCC NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.*

*This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

□ Consult the dealer or an experienced radio/TV technician for help. CALIFORNIA, USA ONLY This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material— special handling may apply. Indd ii 11/11/2013 9:12:39 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) • “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

□ Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. In the United States and other countries. Other trademarks and trade names are those of their respective owners. .



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT318U user guide](http://yourpdfguides.com/dref/5533057)  
<http://yourpdfguides.com/dref/5533057>