



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-BT44U. You'll find the answers to all your questions on the KENWOOD KDC-BT44U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KDC-BT44U
User guide KENWOOD KDC-BT44U
Operating instructions KENWOOD KDC-BT44U
Instructions for use KENWOOD KDC-BT44U
Instruction manual KENWOOD KDC-BT44U

KENWOOD

KDC-BT44U

CD-RECEIVER
INSTRUCTION MANUAL
CD-RECEIVER
BEDIENUNGSANLEITUNG
CD-РЕСІВЕР
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
JVC KENWOOD Corporation



© 2013 JVC KENWOOD Corporation

GET0974-001A (BW/E0)



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT44U user guide](http://yourpdfguides.com/dref/5533038)
<http://yourpdfguides.com/dref/5533038>

Manual abstract:

Indd i 19/11/2013 4:55:34 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) The marking of products using lasers The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit. □ “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. □ Aha, the Aha logo, and the Aha trade dress are trademarks or registered trademarks of HARMAN International Industries, used with permission. Other trademarks and trade names are those of their respective owners. ii

JS_KWD_KDC_BT44U_EWE0_01_S001A. Indd ii 19/11/2013 4:55:35 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm)
CONTENTS BEFORE USE BASICS GETTING STARTED RADIO CD / USB / iPod AUX Aha™ RADIO BLUETOOTH® AUDIO SETTINGS DISPLAY
SETTINGS MORE INFORMATION TROUBLESHOOTING SPECIFICATIONS INSTALLATION / CONNECTION 2 3 3 5 6 8 8 9 14 15 15 16 18 20 BEFORE
USE Warning Do not operate any function that takes your attention away from safe driving.

Caution Volume setting: • Adjust the volume so that you can hear sounds outside the car to prevent accidents. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: • Avoid using the USB device or iPod/iPhone if it might hinder safe driving. • Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data.

□ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. □ If a disc error occurs due to condensation on the laser lens, eject the disc and wait for the moisture to evaporate. Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicone or soft cloth. Cleaning the connector: Detach the faceplate and clean the connector gently with a cotton swab, being careful not to damage the connector.

Handling discs: • Do not touch the recording surface of the disc.

Connector (on the reverse) • Do not stick tape etc. On the disc, or use a disc with tape stuck on it. Side of the faceplate) • Do not use any accessories for the disc. □ Clean from the center of the disc and move outward. □ Clean the disc with a dry silicone or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove burrs from the center hole and disc edge before inserting a disc. How to read this manual •

Operations are explained mainly using buttons on the faceplate. • [XX] indicates the selected items.

□ (XX) indicates references are available on the stated page. When you turn on the power (or after you reset the unit), the display shows: “SEL LANGUAGE” “PRESS” “VOLUME KNOB” 1 Turn the volume knob to select [ENG] (English) or [RUS] (Russian), then press the knob. [ENG] is selected for the initial setup. Then, the display shows: “CANCEL DEMO” “PRESS” “VOLUME KNOB” 2 Press the volume knob. To Turn on the power Adjust the volume Select a source Change the display information Do this (on the faceplate) Press B SRC. □ Press and hold to turn off the power. Set the clock 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [CLOCK], then press the knob. 2 3 Turn the volume knob to select [CLOCK ADJUST], then press the knob. 4 Turn the volume knob to make the settings, then press the knob.

day Hour Minute ENGLISH \ JS_KWD_KDC_BT44U_EWE0_01_EN. Indd 3 3 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm)
20/11/2013 4:08:07 PM GETTING STARTED 5 Turn the volume knob to select [CLOCK FORMAT], then press the knob. 6 Turn the volume knob to select [12H] or [24H], then press the knob. 7 Press and hold to exit. To return to the previous setting item or hierarchy, press .

(8) Selects the display language for [FUNCTION] menu and Tag information (folder name, file name, song title, artist name, album name) if applicable. Applicable only when the demonstration mode is turned off. Sets the duration when the unit will automatically turn off (while in standby mode) to save the battery. 20M: 20 minutes ; 40M: 40 minutes ; 60M: 60 minutes ; WAIT TIME ---: Cancels 1: Automatically distinguishes between audio file disc and music CD. ; 2: Forces to play as an music CD.

No sound can be heard if an audio file disc is played. 3 Set the initial settings 1 Press B SRC to enter STANDBY. 2 Press the volume knob to enter [FUNCTION]. 3 Turn the volume knob to make a selection (see the following table), then press the knob. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press P-OFF WAIT . Default: XX AUDIO CONTROL SWITCH PREOUT SP SELECT REAR/ SUBWOOFER: Selects whether rear speakers or a subwoofer are connected to the line out terminals on the rear (through an external amplifier). OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. ON: Both display and button illumination change to white color when entering [FUNCTION]. ; OFF: Both display and button illumination remain as [COLOR SELECT] color.

(15) NORMAL: Memorizes one station for each preset button in each band (FM1/ FM2/ FM3/ MW/ LW). ; MIX: Memorizes one station for each preset button, regardless of the selected band. For details on how to update the firmware, see: www. Indd 4 20/11/2013 4:08:08 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) RADIO MONO SET NEWS SET REGIONAL AF SET ON: Improves the FM reception, but the stereo effect may be lost. ON: Switches to another station only in the specific region using the “AF” control. ; OFF: Cancels. ON: Automatically searches for another station broadcasting the same program in the same Radio Data System network with better reception when the current reception is poor. Press the volume knob to enter PTY language selection. Turn the volume knob to select the PTY language (ENGLISH/ FRENCH/ GERMAN), then press the knob. Selects the available Program Type (see the following), then, press S / T to start.

ON: Synchronizes the unit's time to the Radio Data System station time. □ To change the searching method for S / T: Press K SEEK repeatedly.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[KDC-BT44U user guide](#)

<http://yourpdfguides.com/dref/5533038>

TI PTY SEARCH CLOCK TIME SYNC Other settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following 3 Press and hold table), then press the knob. to exit.

To return to the previous setting item or hierarchy, press TUNER SETTING LOCAL SEEK AUTO MEMORY ON: Searches only FM stations with good reception. ; OFF: Cancels. YES: Automatically starts memorizing 6 stations with good reception. ; NO: Cancels. (Selectable only if [NORMAL] is selected for [PRESET TYPE].

) (4) . Default: XX • [LOCAL SEEK]/ [MONO SET]/ [NEWS SET]/ [REGIONAL]/ [AF SET]/ [TI]/ [PTY SEARCH] is selectable only when the band is FM1/ FM2/ FM3. □ Available Program Type: SPEECH: NEWS, AFFAIRS, INFO (information), SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, DOCUMENT MUSIC: POP M (music), ROCK M (music), EASY M (music), LIGHT M (music), CLASSICS, OTHER M (music), JAZZ, COUNTRY, NATION M (music), OLDIES, FOLK M (music) The unit will search for the Program Type categorized under [SPEECH] or [MUSIC] if selected. □ If the volume is adjusted during reception of traffic information, alarm or news bulletin, the adjusted volume is memorized automatically. It will be applied the next time traffic information, alarm or news bulletin function is turned on. : 500 mA) (optional accessory) and/ or USB cable from the rear of the unit Reverse/Fast-forward Repeat play *4 Do this Press 6 IW. *5 USB input terminal iPod/iPhone USB input terminal KCA-iP102 (optional accessory) or accessory cable of the iPod/iPhone*1 Random play *4 and/ or USB cable from the rear of the unit Press 5 iPod to select the control mode while in iPod source. *1 *2 *3 *4 *5 Do not leave the cable inside the car when not using. You can still play/pause, file skip, fast-forward or reverse files from the unit. only for MP3/WMA/AAC/WAV files.

This does not work for iPod. For iPod: Applicable only when [MODE OFF] is selected. For CD: Only for MP3/WMA/AAC files. If you connect the iPod/iPhone to the USB input terminal of the unit (while listening to TuneIn Radio, TuneIn Radio Pro or Aupeo), the unit will output the sound from these apps. 6 JS_KWD_KDC_BT44U_EWE0_02_EN. Indd 6 29/11/2013 11:53:51 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) CD / USB / iPod Select a track/file from a list For iPod: Applicable only when [MODE OFF] is selected. (6) 1 Press . 2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA/AAC/WAV file: Select the desired folder, then a file. □ iPod or KME Light/ KMC file: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS*, GENRES, COMPOSERS*).

* Only for iPod. □ To return to the root folder (or first file), press number button 5 iPod. □ To return to the previous setting item or hierarchy, press . • To cancel , press and hold . If you have many files.

You can search through them quickly (on step 2 above) at a preset skip search ratio by pressing S / T. □ See also “Set the skip search ratio. □ • Pressing and holding S / T skip songs at the maximum ratio (10%) regardless of the setting made. □ For USB: Only for files registered in the database created with KME Light/ KMC. • Not applicable for audio CD.

Select a song by name While listening to iPod. 1 Press . 2 Turn the volume knob to select a category, then press the knob. 3 Turn the volume knob quickly to enter character search. 4 Turn the volume knob to select the character to be searched for. 5 Press S / T to move to the entry position. You can enter up to 3 characters. 6 Press the volume knob to start searching. 7 Turn the volume knob to make a selection, then press the knob. Repeat step 7 until the desired item is selected.

□ To search for a character other than A to Z and 0 to 9, enter only “ ”. □ To return to the previous hierarchy, press . □ To return to the top menu, press number button 5 iPod. • To cancel , press and hold . Set the skip search ratio While listening to iPod or KME Light/ KMC file. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [SKIP SEARCH], then press the knob. 4 Turn the volume knob to make a selection, then press the knob. 0.

5% (default)/ 1%/ 5%/ 10%: Skip search ratio over the total files. 5 Press and hold to exit. Change the USB drive When a smartphone (Mass Storage Class) is connected to the USB input terminal, you can select its internal memory or external memory (such as an SD card) to playback the stored songs. You can also select the desired drive to playback when a multiple drives device is connected. press 5 iPod repeatedly to select the desired drive.

(or) 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [MUSIC DRIVE], then press Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 20/11/2013 4:08:09 PM BLUETOOTH® Bluetooth mobile phone To Receive a call Improve the sound quality during a call While talking on the phone. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob.

3 Press and hold to exit. To return to the previous setting item or hierarchy, press . Default: XX MIC GAIN NR LEVEL ECHO CANCEL -20 — +8 (0): The sensitivity of the microphone increases as the number increased. □ 5 — -20 (-10): Adjust the noise reduction level until the least noise is being heard during a phone conversation. 1 — 10 (4): Adjust the echo cancellation delay time until the least echo is being heard during a phone conversation. Do this Press or the volume knob or one of the number buttons (1 to 6). □ All the buttons and display flash when there is an incoming call. During a call, the buttons and display illuminate according to the settings made for [DISPLAY]. (15) • When [AUTO ANSWER] is set to the selected time, the unit answers incoming call automatically. Reject an incoming call End a call Switch between hands-free and private talk modes Adjust the phone volume Text message notification When the phone receives a text message, the unit rings and “SMS RECEIVED” appears.

□ You cannot read, edit, or send a message through the unit. □ To clear the message, press any button. press 6 IW during a call. □ Operations may vary according to the connected Bluetooth device. Turn the volume knob during a call. Phone volume: [00] to [35] (Default: [15]) • This adjustment will not affect the volume of the other sources. The connected phone (which has been paired the earliest) is activated. However, if priority device is connected, pressing and holding activate the priority device. (12, DVC PRIORITY) 2 Speak the name of the contact you want to call or the voice command to control the phone functions.



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT44U user guide](http://yourpdfguides.com/dref/5533038)
<http://yourpdfguides.com/dref/5533038>

•Supported Voice Recognition features vary for each phone.

Refer to the instruction manual of the connected phone for details. □ This unit also supports the intelligent personal assistant function of iPhone. 2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit. To return to the previous setting item or hierarchy, press CALL HISTORY VOICE BATT* SIGNAL*.

SETTINGS AUTO ANSWER RING MODE Speak the name of the contact you want to call or use the voice command to control the phone functions. (10, Use Voice Recognition) LOW/ MID/ FULL: Shows the strength of the battery. NO SIGNAL/ LOW/ MID/ MAX: Shows the strength of the current received signal.

Default: XX 1 — 30: The unit answer incoming call automatically in the selected time. ; OFF: Cancels.

SYSTEM: The unit rings to notify you when a call/text message comes in. (Default ring tone is different according to the paired device.) •CALL: Selects your preferred ring tone (TONE 1 — 5) for incoming calls. □ MESSAGE: Selects your preferred ring tone (TONE 1 — 5) for incoming text messages. PHONE:

The unit uses the connected phones' ring tone to notify you when a call/text message comes in. (The connected phone will ring if it does not support this feature. @@ ; OFF: Cancels. 1 Press the volume knob to select a name or a phone number. @@@@ 2 Press the volume knob to call. 1 Turn the volume knob to select a name, then press the knob.

@@@@ transfer the phonebook manually. @@@@ 2 Press S/T to move the entry position. Repeat steps 1 and 2 until you finish entering the phone number. 3 Press the volume knob to call. @@@@ 1 Press to enter Bluetooth mode. 2 Turn the volume knob to select [PHONE BOOK], then press the knob. 3 Turn the volume knob quickly to enter alphabet search mode. @5 Turn the volume knob to select a name, then press the knob. @@To return to the previous hierarchy, press . Delete a contact Not applicable for mobile phone that supports PBAP.

1 Press to enter Bluetooth mode. @3 Turn the volume knob to select a contact. @4 Press and hold the volume knob to enter delete mode. @DELETE ONE: Selected name or phone number in step 3 is deleted. @6 Turn the volume knob to select [YES] or [NO], then press the knob.

@3 Turn the volume knob to select a contact or enter a phone number. @@To erase a contact from the preset memory, select [NUMBER DIAL] in step 2 and store a blank number. Bluetooth mode settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [BT MODE], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob.

4 Press and hold Make a call from memory 1 Press to enter Bluetooth mode. To return to the previous setting item or hierarchy, press PHONE SELECT AUDIO SELECT DEVICE DELETE . default: XX Selects the phone or audio device to connect or disconnect. □ " appears in front of the device name. 1 Turn the volume knob to select a device to delete, then press the knob. 2 Turn the volume knob to select [YES] or [NO], then press the knob. selects a device to be connected as priority device. □ " appears in front of the device name set as priority. dVC PRIORITY 12 JS_KWD_KDC_BT44U_EWE0_04_EN. Indd 12 26/12/2013 1:44:31 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BLUETOOTH® TRANSFER PB* "DL PB " appears and transfer the phonebook of the connected phone to this unit manually.

* Selectable only when the connected phone supports OPP. Repeat steps 1 and 2 until you finish entering the PIN code. 3 Press the volume knob to confirm.

ON: The unit automatically reconnect when the Bluetooth device is within range. ; OFF: Cancels. ON: The unit automatically pair supported Bluetooth device (iPhone/ iPod touch) when it is connected through USB input terminal. Depending on the iOS version of the connected iPhone/iPod touch, this function may not work. ; OFF: Cancels. FRONT: Outputs audio from the front left and right speakers. ; ALL: Outputs audio from all the speakers.

(4) You can listen to AhaTM Radio on your smart phone (Android OS) through Bluetooth on this unit. 1 Open the AhaTM application on your smart phone. 2 Connect your smart phone via Bluetooth connection. (9) 3 Press B SRC to select AHA. The source switches and broadcast starts automatically.

□ You can operate AhaTM Radio in the same way as AhaTM Radio for iPod/iPhone. (8) • To call a number in the content*: Press 1, then press the volume knob to call. Bluetooth audio player Operations and display indications may differ according to their availability on the connected device. Pause or resume playback Select group or folder Reverse/fastforward skip Reverse/fastforward Repeat play Press 6 IW. Indd 13 13 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 26/12/2013 1:44:31 PM AUDIO SETTINGS While listening to any source.

1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [AUDIO CONTROL], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . Adjusts the level to memorize for each source. (Before making an adjustment, select the source you want to adjust.) PRESET EQ DRIVE EQ/ TOP40/ POWERFUL/ ROCK/ POPS/ EASY/ JAZZ/ NATURAL/ USER: Selects a preset equalizer suitable to the music genre. (Select [USER] to use the customized bass, middle, and treble settings.

) [DRIVE EQ] is a preset equalizer that reduces noise from the road. LEVEL1/ LEVEL2: Selects your preferred low and high frequencies boost to produce a well-balanced sound at a low volume level. THROUGH: All signals are sent to the subwoofer. ; 85HZ/ 120HZ/ 160HZ: Audio signals with frequencies lower than 85 Hz/ 120 Hz/ 160 Hz are sent to the subwoofer. REVERSE (180°)/ NORMAL (0°): Selects the phase of the subwoofer output to be in line with the speaker output for optimum performance. (Selectable only if a setting other than [THROUGH] is selected for [LPF SUBWOOFER].) R15 to F15 (0): Adjusts the rear and front speaker output balance. L15 to R15 (0): Adjusts the left and right speaker output balance. □8 to +8 (for AUX) ; -8 to 0 (for other sources): Presets the volume adjustment level of each source. (Before adjustment, select the source you want to adjust.

) ON: Creates realistic sound by compensating the high-frequency components and restoring the rise-time of the waveform that are lost in audio data compression. Indd 14 20/11/2013 4:15:18 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) DISPLAY SETTINGS 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [DISPLAY], then press the knob.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5533038)

[KDC-BT44U user guide](http://yourpdfguides.com/dref/5533038)

<http://yourpdfguides.com/dref/5533038>

3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated.
4 Press and hold to exit. To return to the previous setting item or hierarchy, press . Default: XX COLOR SELECT VARIABLE SCAN/ COLOR 01 — COLOR 24/ USER: Selects your preferred key and display illumination color. You can create your own color (when [COLOR 01] — [COLOR 24] or [USER] is selected). The color you have created can be selected when you select [USER].

1 Press and hold the volume knob to enter the detailed color adjustment. 2 Press S/T to select the color (R/ G/ B) to adjust. 3 Turn the volume knob to adjust the level (0 — 9), then press the knob. DIMMER BRIGHTNESS TEXT SCROLL ON: Dims the display and button illumination. ; OFF: Illuminates according to the [BRIGHTNESS] settings. 0 — 31: Selects your preferred brightness level for display and button illumination. AUTO/ ONCE: Selects whether to scroll the display information automatically, or scroll only once. ; OFF: Cancels. MORE INFORMATION General • This unit can only play the following CDs: • Detailed information and notes about the playable audio files are stated in an online manual on the following web site: www. □ Playable USB device file system: FAT12, FAT16, FAT32 Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device.

unplayable discs •••• Discs that are not round. Discs with coloring on the recording surface or discs that are dirty. Recordable/ReWritable discs that have not been finalized. 8 cm CD. Attempting to insert using an adapter may cause malfunction. About USB devices •••• This unit can play MP3/WMA/AAC/WAV files stored on a USB mass storage class device. you cannot connect a USB device via a USB hub. Connecting a cable whose total length is longer than 5 m may result in abnormal playback. This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. eNGLISH |

JS_KWD_KDC_BT44U_EWE0_01_EN.

Indd 15 15 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 20/11/2013 4:08:09 PM MORE INFORMATION About KENWOOD Music Editor Light and KENWOOD Music Control • This unit supports the PC application KENWOOD Music Editor Light and Android™ application KENWOOD Music Control. □ When you play audio files with song data added using the KENWOOD Music Editor Light or KENWOOD Music Control, you can search for audio files by Genres, Artists, Albums, Playlists, and Songs. □ KENWOOD Music Editor Light and KENWOOD Music Control are available on the following web site: www. □ The unit does not turn on. • Information shown on the display is incorrect.

The unit does not work at all. • Radio reception is poor. □ Static noise while listening to the radio. Remedy • Adjust the volume to the optimum level. • Check the cords and connections.

Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit. If this does not solve the problem, consult your nearest service center. clean the connectors. (2) About iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th, and 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th, and 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5, 5s, 5c • For the latest compatible list and software versions of iPhone/iPod, see: www. □ Pull the antenna out all the way. Make sure the disc contains supported audio files. (15) Insert a playable disc into the loading slot. Make sure the disc is clean and inserted properly. reset the unit. If this does not solve the problem, consult your nearest service center.

press and hold M to forcibly eject the disc. Be careful not to drop the disc when it is ejected. If this does not solve the problem, reset the unit. (3) Copy the files and folders onto the USB device again. If this does not solve the problem, reset the USB device or use another USB device. About Aha™ Radio • Aha™ is a third-party service, therefore the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable. □ Some Aha™ functionality cannot be operated from this unit. About Bluetooth • Depending on the Bluetooth version of the device, some Bluetooth devices may not be able to connect to this unit. □ This unit may not work with some Bluetooth devices.

• Signal conditions vary, depending on the surroundings. □ For more information about Bluetooth, visit the following website: www. Tracks do not play back as you intended them to play. "READING" keeps flashing. Elapsed playing time is not correct.

Correct characters are not displayed (e. Skip to another track or change the disc. Playback order is determined when files are recorded. Do not use too many hierarchical levels or folders. This is caused by how the tracks are recorded.

This unit can only display uppercase letters, numbers, and a limited number of symbols. Make sure you have installed the latest version of the Aha™ application for KENWOOD application on your device. Your device cannot be connected to Aha Radio server. There is no response from Aha server. Check the Aha application on your device. Connect your device to the unit. The GPS reception condition of your smartphone is poor. (3) • Make sure you have entered the same PIN code to both the unit and Bluetooth device. □ Delete pairing information from both the unit and the Bluetooth device, then perform pairing again. (9) The number of registered devices has reached its limit.

(10) • Reduce the distance between the unit and the Bluetooth device. □ Move the car to a place where you can get a better signal reception. □ Use voice calling method in a more quiet environment. □ Reduce the distance from the microphone when you speak the name. □ Make sure the same voice as the registered voice tag is used. The connected phone does not support Voice Recognition feature. If "ERROR" appears again, check if the device supports the function you have tried. Bluetooth device cannot get the contact information. Bluetooth® • Voice calling method is not successful. Indd 17 17 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 10/12/2013 12:00:58 PM TROUBLESHOOTING Sound is being interrupted or skipped during

playback of a Bluetooth audio player.

□ Reduce the distance between the unit and the Bluetooth audio player. □ Turn off, then turn on the unit and try to connect again. □ Other Bluetooth devices might be trying to connect to the unit. □ Check whether the connected Bluetooth audio player supports Audio/Video Remote Control Profile (AVRCP). (Refer to the instructions of your audio player.

) • Disconnect and connect the Bluetooth player again. Reset the unit and try the operation again. If this does not solve the problem, consult your nearest service center.



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT44U user guide](http://yourpdfguides.com/dref/5533038)
<http://yourpdfguides.com/dref/5533038>

01 % 105 dB 90 dB 85 dB Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio AAC-LC “. 5 kHz ±8 dB General Compliant with Windows Media Audio Frequency Response (±3 dB) Input Maximum Voltage Input Impedance Operating Voltage Maximum Current Consumption Operational Temperature Range Installation Size (W × H × D) Weight Subject to change without notice.

@@@ Be sure to ground this unit to the car's chassis again after installation. Installing the unit (in-dash mounting) Do the required wiring. (21) Caution • For safety's sake, leave wiring and mounting to professionals. consult the car audio dealer. □ Install this unit in the console of your vehicle. Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such as the heat sink and enclosure become hot. □ Do not connect the [wires of speakers to the car chassis or Ground wire (black), or connect them in parallel. □ Mount the unit at an angle of less than 30°. □ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle's fuse box which provides 12 V DC power supply and is turned on and off by the ignition key.

□ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car's chassis, then replace the old fuse with one that has the same rating. Hook on the top side Orientate the trim plate as illustrated before fitting. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place. Basic procedure 1 Remove the key from the ignition switch, then disconnect the [terminal of the car battery. How to remove the unit 1 Detach the faceplate. 2 Fit the catch pin on the extraction keys into the holes on both sides of the trim plate, then pull it out. 3 Insert the extraction keys deeply into the slots on each side, then follow the arrows as shown on the right. (21) 3 Install the unit to your car.

See Installing the unit (in-dash mounting). 4 Connect the [terminal of the car battery. Indd 20 20/11/2013 4:08:10 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) Wiring connection Rear/subwoofer output Antenna terminal MIC (Microphone input terminal) (9) USB cable Fuse (10 A) Part list for installation (A) Faceplate Connecting the ISO connectors on some VW/Audi or Opel (Vauxhall) automobiles You may need to modify the wiring of the supplied wiring harness as illustrated below. Ignition wire A7 (Red) (Red) Vehicle A4 (Yellow) Default wiring Pin A4 A5 A7 A8 B1 B2 B3 B4 B5 B6 B7 B8 Color and function : Battery : Power control : Ignition (ACC) : Earth (ground) connection : Rear speaker (right) : Front speaker (right) : Front speaker (left) Unit Battery wire (Yellow) If no connections are made, do not let the wire come out from the tab. Yellow (Battery wire) Red (Ignition wire) Light blue/yellow (Steering remote control wire) STEERING WHEEL REMOTE INPUT (B) Trim plate REMOTE CONT To the steering wheel remote control adapter (C) Mounting sleeve Red (A7) Yellow (A4) Blue/White (Power control wire/ Antenna control wire) Brown (Mute control wire) ANT.

cONT P. CONT To the power control terminal when using the optional power amplifier, or to the antenna control terminal in the vehicle. (D) Wiring harness Yellow Blue/White Red Black Purple] Purple/black [Gray] Gray/black [White] White/black [Green] Green/black [MUTE To connect the Kenwood navigation system, consult your navigation manual. (2) 06 iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th u 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th u 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5, 5s, 5c • Сведения о последнем списке совместимости и версиях программного обеспечения iPhone/iPod с.м. Indd 21 21 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 30/12/2013 11:12:43 AM Declaration of Conformity with regard to the R&TTE Directive 1999/5/EC Declaration of Conformity with regard to the EMC Directive 2004/108/EC Declaration of Conformity with regard to the RoHS Directive 2011/65/EU Manufacturer: JVC KENWOOD Corporation 3-12, Moriya-cho, Kanagawa-ku, Yokohama-shi, Kanagawa, 221-0022, Japan EU Representative: JVCKENWOOD NEDERLAND B.

v. Amsterdamseweg 37, 1422 AC UITHOORN, The Netherlands English Hereby, JVC KENWOOD declares that this unit KDC-BT44U is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. .



[You're reading an excerpt. Click here to read official KENWOOD KDC-BT44U user guide](http://yourpdfguides.com/dref/5533038)
<http://yourpdfguides.com/dref/5533038>