



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-HD458U. You'll find the answers to all your questions on the KENWOOD KDC-HD458U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KDC-HD458U  
User guide KENWOOD KDC-HD458U  
Operating instructions KENWOOD KDC-HD458U  
Instructions for use KENWOOD KDC-HD458U  
Instruction manual KENWOOD KDC-HD458U

**KENWOOD**

**KDC-X498  
KDC-HD458U**

---

CD-RECEIVER  
**INSTRUCTION MANUAL**  
AMPLI-TUNER LECTEUR DE CD  
**MODE D'EMPLOI**  
REPRODUCTOR DE DISCOS COMPACTOS RECEPTOR DE FM/AM  
**MANUAL DE INSTRUCCIONES**

JVC/KENWOOD Corporation


Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new CD-receiver.


**For your records**  
Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on this product.  
Model KDC-X498/ KDC-HD458U Serial number \_\_\_\_\_


US Residents Only


Register Online  
Register your Kenwood product at [www.kenwoodusa.com](http://www.kenwoodusa.com)


© 2013 JVC KENWOOD Corporation GET0970-001A (KW/100)







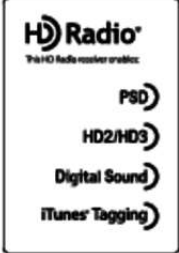





[You're reading an excerpt. Click here to read official KENWOOD KDC-HD458U user guide](http://yourpdfguides.com/dref/5532937)  
<http://yourpdfguides.com/dref/5532937>

**Manual abstract:**

Indd 1 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 26/9/2013 2:39:01 PM CONTENTS BEFORE USE BASICS GETTING STARTED HD Radio™ tuner CD / USB / iPod AUX Pandora® iHeartRadio® AUDIO SETTINGS DISPLAY SETTINGS MORE INFORMATION TROUBLESHOOTING SPECIFICATIONS INSTALLATION / CONNECTION 2 3 4 5 7 9 9 10 11 12 12 13 15 16 BEFORE USE Warning Do not operate any function that takes your attention away from safe driving. Caution Volume setting: • Adjust the volume so that you can hear sounds outside the car to prevent accidents. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: • Avoid using the USB device or iPod/iPhone if it might hinder safe driving. • Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data. □ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. □ If a disc error occurs due to condensation on the laser lens, eject the disc and wait for the moisture to evaporate. Remote control (RC-406): • Do not leave the remote control in hot places such as on the dashboard. • The Lithium battery is in danger of explosion if replaced incorrectly.

Replace it only with the same or equivalent type. □ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. □ Keep the battery out of reach of children and in its original packaging when not in used. Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicone or soft cloth. Cleaning the connector: Detach the faceplate and clean the connector gently with a cotton swab, being careful not to damage the connector.

Handling discs: • Do not touch the recording surface of the disc. Connector (on the reverse • Do not stick tape etc. On the disc, or use a disc with tape stuck on it. Side of the faceplate) • Do not use any accessories for the disc. □ Clean from the center of the disc and move outward.

□ Clean the disc with a dry silicone or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove burrs from the center hole and disc edge before inserting a disc. How to read this manual • Operations are explained mainly using buttons on the faceplate. • [XX] indicates the selected items. □ ( XX) indicates references are available on the stated page. 2 EN\_KDC\_X498\_KWK0\_2. Indd 2 26/9/2013 2:39:02 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BASICS Faceplate Volume knob (turn/press) Display window Remote control (RC-406) Remote sensor (Do not expose to bright sunlight. How to replace the battery Pull out the insulation sheet when using for the first time.

To Turn on the power Adjust the volume Do this (on the faceplate) Press B SRC. □ Press and hold to turn off the power. turn the volume knob. Do this (on the remote control) Press and hold SRC to turn off the power. ( Pressing SRC does not turn on the power. ) Press VOL or VOL . Press ATT during playback to attenuate the sound. Indd 3 3 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 26/9/2013 2:39:02 PM GETTING STARTED Set the initial settings 1 Press B SRC to enter STANDBY. 2 Press the volume knob to enter [FUNCTION]. 3 Turn the volume knob to make a selection (see the following table), then press the knob.

3 4 Press and hold 1 Cancel the demonstration to exit. To return to the previous setting item or hierarchy, press . Default: XX When you turn on the power (or after you reset the unit), the display shows: “CANCEL DEMO” “PRESS” “VOLUME KNOB” 1 Press the volume knob. Set the clock 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [CLOCK], then press the knob.

2 3 Turn the volume knob to select [CLOCK ADJUST], then press the knob. 4 Turn the volume knob to make the settings, then press the knob. Day Hour Minute 5 Turn the volume knob to select [CLOCK FORMAT], then press the knob. 6 Turn the volume knob to select [12H] or [24H], then press the knob. 7 Press and hold to exit.

To return to the previous setting item or hierarchy, press . AUDIO CONTROL SP SELECT OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. DISPLAY EASY MENU ON: Both display and button illumination change to white color when entering [FUNCTION]. ; OFF: Both display and button illumination remain as [COLOR SELECT] color. ( 12) TUNER SETTING PRESET TYPE NORMAL: Memorizes one station for each preset button in each band (FM1/ FM2/ FM3/ AM). ; MIX: Memorizes one station for each preset button, regardless of the selected band. ( 9) CD READ 1: Automatically distinguishes between audio file disc and music CD. ; 2: Forces to play as an music CD. No sound can be heard if an audio file disc is played. Xx For details on how to update the firmware, see: www.

Indd 4 10/10/2013 2:54:06 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) HD Radio™ tuner You can tune in to both conventional and HD Radio broadcasts. □ To find HD Radio stations in your area, visit <http://www. 2 Press the number buttons to enter a frequency or channel. □ If no operation is done for 10 seconds after step 2, Direct Access Tuning is automatically canceled. □ To change the searching method for S / T: Press K SEEK repeatedly. □ To select a stored station or channel: Press one of the number buttons (1 to 6) (or press one of the number buttons (1 to 6) on RC-406). search for a station or channel 1 Press B SRC to select HD RADIO. 2 Press J BAND repeatedly (or press \*AM- / #FM+ on RC-406) Other settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit.

To return to the previous setting item or hierarchy, press . default: XX Select an HD Radio multicast channel Many HD Radio stations offer more than one channel programming. This service is called multicasting. TUNER SETTING IF BAND AUTO: Increases the tuner selectivity to reduce interference noises from adjacent FM stations. (Stereo effect may be lost.

) ; WIDE: Subjects to interference noises from adjacent FM stations, but sound quality will not be degraded and the stereo effect will remain. AUTO YES: Automatically starts memorizing 6 stations with good reception. ; NO: Cancels. MEMORY (Selectable only if [NORMAL] is selected for [PRESET TYPE]. ) ( 4) RECEIVE Sets the receive mode of the HD Radio receiver.

TAG MEMORY Displays the shared tag memory usage of the HD Radio receiver. 00 — 50: Up to 50 tags can be registered to this unit. CLOCK TIME SYNC ON: Synchronizes the unit's time to the Radio Broadcast Data System station time.



[You're reading an excerpt. Click here to read official KENWOOD KDC-HD458U user guide](http://yourpdfguides.com/dref/5532937)  
<http://yourpdfguides.com/dref/5532937>

Indd 5 5 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 11/11/2013 8:37:29 AM HD Radio™ tuner Tag and purchase your favorite songs from iTunes Store Some HD Radio broadcasts provide Program Service Data (PSD) for songs. You can tag the song while listening to an HD Radio broadcast and easily purchase the song from iTunes store. this unit memorizes up to 50 tags. □ To check the number of the tag memory used, (B 5). □ For the best compatibility of iTunes Tagging, use the latest software versions with the iPod/iPhone that can be connected to this unit. □ For details about iPod/iPhone and iTunes, refer also to the instructions supplied with the iPod/iPhone or visit <http://www. □ When the connected iPod/iPhone is not compatible with iTunes Tagging you cannot transfer the tagged PSDs.

Purchase songs from iTunes Store 1 Connect the iPod/iPhone to the PC. 2 Synchronize the iPod/iPhone on the iTunes. The tagged PSDs are transferred to the PC and iTunes displays the list of the tagged songs. After the data transfer is completed, the stored PSDs are automatically deleted from the iPod/iPhone. 3 1 Tag the song While receiving a song with PSD (“TAG” lights up). press and hold . □TAG STORED” “MEMORY XX/50” appears when the song is stored on the unit. □ When pressing and holding within 10 seconds before or after the PSD changes, the tags for two songs are stored. 2 Transfer the tagged PSD to your iPod/iPhone Connect the iPod/iPhone to the unit. The source changes to “USB,” and starts transferring the tagged PSDs to the iPod/iPhone automatically.

• While transferring, “TAG” flashes and “TAG STORING” appears. When all the tagged PSDs are transferred, “TAG TRANSFERD” appears. □ Your iPod/iPhone must have 50 MB free space which is required for transferring a tagged PSD. □ During the transferring process: – Do not change the source. □ Do not disconnect the iPod/iPhone.

: 500 mA) (optional accessory) Select a track/file Select a folder \*3 Reverse/ Fast-forward Repeat play \*4 iPod/iPhone USB input terminal Random play \*4 KCA-iP102 (optional accessory) or accessory cable of the iPod/iPhone\*1 Press 5 iPod to select the control mode while in iPod source. \*1 \*2 \*3 \*4 \*5 Do not leave the cable inside the car when not using. You can still play/pause, file skip, fast-forward or reverse files from the unit. only for MP3/WMA/WAV files. This does not work for iPod.

For iPod: Applicable only when [MODE OFF] is selected. For CD: Only for MP3/WMA files. If you connect the iPod/iPhone to the USB input terminal of the unit (while listening to TuneIn Radio, TuneIn Radio Pro or Aupeo), the unit will output the sound from these apps. eNGLISH \ EN\_KDC\_X498\_KWK0\_f. Indd 7 7 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 1/11/2013 11:39:04 AM CD / USB / iPod Select a track/file from a list For iPod: Applicable only when [MODE OFF] is selected. ( 7) 1 Press . 2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA/WAV file: Select the desired folder, then a file. □ iPod or KME Light/ KMC file: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS\*, GENRES, COMPOSERS\*). \* Only for iPod.

□ To return to the root folder (or first file), press number button 5 iPod. □ To return to the previous setting item or hierarchy, press . • To cancel , press and hold . If you have many files. You can search through them quickly (on step 2 above) at a preset skip search ratio by pressing S / T. □ See also “Set the skip search ratio. □ • Pressing and holding S / T skip songs at the maximum ratio (10%) regardless of the setting made. □ For USB: Only for files registered in the database created with KME Light/ KMC. 2 Press the number buttons to enter a track/ file number. Set the skip search ratio While listening to iPod or KME Light/ KMC file.

1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [SKIP SEARCH], then press the knob. 4 Turn the volume knob to make a selection, then press the knob. 0. 5% (default)/ 1%/ 5%/ 10%: Skip search ratio over the total files. Select a song by name While listening to iPod. 1 Press . 2 Turn the volume knob to select a category, then press the knob. 3 Turn the volume knob quickly to enter character search. 4 Turn the volume knob to select the character to be searched for. 5 Press S / T to move to the entry position. You can enter up to 3 characters. 6 Press the volume knob to start searching. 7 Turn the volume knob to make a selection, then press the knob. Repeat step 7 until the desired item is selected. @@ □ To return to the previous hierarchy, press . □ To return to the top menu, press number button 5 iPod. • To cancel , press and hold . Change the Un the volume knob to the desired station, then press the knob.

When a city list appears, you can skip cities in alphabetical order. (or using RC-406) Press J / K to search for a station. @@1 Press the volume knob to enter [FUNCTION]. @@@@Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. (or using RC-406) 1 Press AUD to enter [AUDIO CONTROL]. 2 Press J / K to make a selection, then press ENT IW. To return to the previous setting item or hierarchy, press . @@@) [DRIVE EQ] is a preset equalizer that reduces noise from the road. @@THROUGH: All signals are sent to the subwoofer.

@@@@@@) THROUGH: All signals are sent to the speakers. @@@@@@@@) (Before adjustment, select the source you want to adjust. @@ ; OFF: Cancels. @@(Before making an adjustment, select the source you want to adjust. @@2 Turn the volume knob to select [DISPLAY], then press the knob.

@@@@@@@ kenwood. @@Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . @@@@The color you have created can be selected when you select [USER].

1 Press and hold the volume knob to enter the detailed color adjustment. 2 Press S / T to select the color (R/ G/ B) to adjust. 3 Turn the volume knob to adjust the level (0 — 9), then press the knob. DIMMER ON: Dims the display and button illumination. ; OFF: Illuminates according to the [BRIGHTNESS] settings.

0 — 31: Selects your preferred brightness level for display and button illumination. AUTO/ ONCE: Selects whether to scroll the display information automatically, or scroll only once. ; OFF: Cancels. □ Detailed information and notes about the playable audio files are stated in an online manual on the following web site: www. □ Playable USB device file system: FAT12, FAT16, FAT32 Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device.

About iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th, and 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th, and 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5 • For the latest compatible list and software versions of iPhone/iPod, see: www.



[You're reading an excerpt. Click here to read official KENWOOD KDC-HD458U user guide](http://yourpdfguides.com/dref/5532937)  
<http://yourpdfguides.com/dref/5532937>

□ Discs with coloring on the recording surface or discs that are dirty. □ Recordable/ReWritable discs that have not been finalized. • 8 cm CD. Attempting to insert using an adapter may cause malfunction. About USB devices • This unit can play MP3/WMA/WAV files stored on a USB mass storage class device. • You cannot connect a USB device via a USB hub. □ Connecting a cable whose total length is longer than 5 m may result in abnormal playback. □ This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. bRIGHTNESS TEXT SCROLL 12 EN\_KDC\_X498\_KWK0\_f. Indd 12 1/11/2013 11:39:15 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) MORE INFORMATION About HD Radio™ Technology • Program Service Data provides song name, artist, station ID, and other relevant data streams. □ Adjacent to traditional main stations are HD2/HD3 Channels, providing new original formats on the FM dial. □ HD Radio broadcasts deliver crystal clear, CD-like digital audio quality to consumers. □ iTunes® Tagging provides users the means to “tag” broadcast radio content for later review and purchase from the iTunes® Store. □ The unit does not turn on.

• Information shown on the display is incorrect. The unit does not work at all. • Radio reception is poor. □ Static noise while listening to the radio. Remedy • Adjust the volume to the optimum level.

• Check the cords and connections. Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit. If this does not solve the problem, consult your nearest service center. □ Pull the antenna out all the way. The tag memory of HD Radio receiver is full. The connected iPod/iPhone memory is full. The connected iPod does not support iTunes tagging function. The unit is unable to complete transferring the tagged information to the iPod. Make sure the disc contains supported audio files. ( 12) Insert a playable disc into the loading slot.

Make sure the disc is clean and inserted properly. reset the unit. If this does not solve the problem, consult your nearest service center. press and hold M to forcibly eject the disc. Be careful not to drop the disc when it is ejected. If this does not solve the problem, reset the unit. ( 3) Copy the files and folders onto the USB device again. If this does not solve the problem, reset the USB device or use another USB device. connect a USB device, and change the source to USB again. About Pandora • Pandora is available only in the U.

□ Because Pandora is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired, or some or all of the services may become unavailable. □ Some functions of Pandora cannot be operated from this unit. About iHeartRadio • iHeartRadio® is a third-party service, therefore the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.

□ Some iHeartRadio® functionality cannot be operated from this unit. Tracks do not play back as you intended them to play. “READING” keeps flashing. Elapsed playing time is not correct. Correct characters are not displayed (e.

Skip to another track or change the disc. Playback order is determined when files are recorded. symptom Station cannot be selected. □CANNOT CREATE” “CANNOT SAVE” “DISCONNECTED” “NO SKIPS” “NO STATIONS” iHeartRadio “NOT CONNECTED” “IHEARTLINK UP” “PLEASE LOGIN” “STATION NOT AVAILABLE” “STATION NOT SELECTED” “STREAM ERROR” “THUMB FAILED” “TIMED OUT” Remedy If “Explicit Content” in [Account Settings] is checked in the web version of iHeartRADIO, custom stations become unavailable. Check the connection to the device. Make sure you have installed the latest version of the iHeart Link for KENWOOD application on your device. Do not use too many hierarchical levels or folders. This is caused by how the tracks are recorded. This unit can only display uppercase letters, numbers, and a limited number of symbols. new station creation is unsuccessful.

Check the Pandora application on your device. The number of registered stations has reached its limit. Retry after deleting unnecessary stations from your device. Make sure you have installed the latest version of the Pandora application on your device. You try to access from a country which Pandora is not deliverable. Muting upon the reception of a phone call Connect the MUTE wire to your telephone using a commercial telephone accessory. ) • To continue listening to the audio system during a call, press B SRC. “CALL” disappears and the audio system resumes. When the call ends, “CALL” disappears. 0 (Full speed) FAT12/ 16/ 32 DC 5 V 1 A Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio Linear-PCM 50 W × 4 22 W × 4 (at less than 1 % THD) 4 Ω — 8 Ω Bass 200 Hz ±8 dB Middle 2.

70 dB (HD Radio broadcast) 90 dB 85 dB Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio ENGLISH \ EN\_KDC\_X498\_KWK0\_f. Indd 15 15 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 24/10/2013 11:27:34 AM INSTALLATION / CONNECTION Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery’s negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (red) to the car chassis or Ground wire (black) to prevent a short circuit. □ Insulate unconnected wires with vinyl tape to prevent a short circuit.

□ Be sure to ground this unit to the car’s chassis again after installation. Installing the unit (in-dash mounting) Do the required wiring. ( 17) Caution • For safety’s sake, leave wiring and mounting to professionals. consult the car audio dealer. □ Install this unit in the console of your vehicle.

Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such as the heat sink and enclosure become hot. □ Do not connect the [ wires of speakers to the car chassis or Ground wire (black), or connect them in parallel. □ Mount the unit at an angle of less than 30°. □ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle’s fuse box which provides 12 V DC power supply and is turned on and off by the ignition key. □ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car’s chassis, then replace the old fuse with one that has the same rating.



[You're reading an excerpt. Click here to read official KENWOOD KDC-HD458U user guide](http://yourpdfguides.com/dref/5532937)  
<http://yourpdfguides.com/dref/5532937>

Hook on the top side Orientate the trim plate as illustrated before fitting. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place.

When installing without the mounting sleeve 1 Remove the mounting sleeve and trim plate from the unit. 2 Align the holes in the unit (on both sides) with the vehicle mounting bracket and secure the unit with screws (commercially available). Use only the specified screws. Using wrong screws might damage the unit. Basic procedure 1 Remove the key from the ignition switch, then 2 3 4 5 16 EN\_KDC\_X498\_KWK0\_2. Indd 16 disconnect the [ terminal of the car battery. ( 17) Install the unit to your car. See Installing the unit (in-dash mounting). Connect the [ terminal of the car battery. reset the unit.

( 3) How to remove the unit 1 Detach the faceplate. @@@@ (E) Extraction key (Not used) Blue/White (Power control wire) To the power control terminal when using the optional power amplifier, or to the antenna control terminal in the vehicle. (D) Wiring harness (Steering remote control wire) To the steering wheel remote control adapter (C) Mounting sleeve If no connections are made, do not let the wire come out from the tab. Indd 17 17 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 7/11/2013 6:19:42 PM CAUTION Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

JVC KENWOOD Corporation 2967-3 , ISHIKAWA-MACHI , HACHIOJI-SHI , TOKYO , JAPAN THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE. Location : Top Plate FCC WARNING This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. FCC NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp. □ "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance. □ Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. In the United States and other countries. CALIFORNIA, USA ONLY This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material—special handling may apply. .



[You're reading an excerpt. Click here to read official KENWOOD KDC-HD458U user guide](http://yourpdfguides.com/dref/5532937)  
<http://yourpdfguides.com/dref/5532937>