



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KDC-W313. You'll find the answers to all your questions on the KENWOOD KDC-W313 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KENWOOD KDC-W313**  
**User guide KENWOOD KDC-W313**  
**Operating instructions KENWOOD KDC-W313**  
**Instructions for use KENWOOD KDC-W313**  
**Instruction manual KENWOOD KDC-W313**

# KENWOOD

CD-RECEIVER

**KDC-W3544W**  
**KDC-W3044**  
**KDC-W313**

**INSTRUCTION MANUAL**

Kenwood Corporation



**Declaration of Conformity with regard to the EMC Directive  
2004/108/EC**

**Manufacturer:**

Kenwood Corporation  
2567-3 Shikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

**EU Representative's:**

Kenwood Electronics Europe BV  
Amsterdamweg 37, 1422 AC UITHOORN, The Netherlands



© 864-4214-00/00 (EWE2WE0E20)



A E 8 6



[You're reading an excerpt. Click here to read official KENWOOD  
KDC-W313 user guide](http://yourpdfguides.com/dref/2346755)  
<http://yourpdfguides.com/dref/2346755>

### Manual abstract:

· The RDS feature won't work where the service is not supported by any broadcasting station. · The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may be inapplicable. Before using this unit for the first time This unit is initially set on the Demonstration mode. When using this unit for the first time, cancel the <Demonstration mode Setting> (page 12). How to reset your unit · If the unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed. · Press the reset button if the disc auto changer fails to operate correctly. Normal operation should be restored. Handling CDs · Do not touch the recording surface of the CD. · Do not stick tape etc. on the CD, or use a CD with tape stuck on it. · Do not use disc type accessories. · Clean from the center of the disc and move outward.

When removing CDs from this unit, pull them out horizontally.

· If the CD center hole or outside rim has burrs, use the CD only after removing the burrs with a ballpoint pen etc. Reset button Cleaning the Unit If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth. CDs that cannot be used · CDs that are not round cannot be used. ❏ · Applying spray cleaner directly to the unit may affect its mechanical parts.

Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erases characters. Cleaning the Faceplate Terminals If the terminals on the unit or faceplate get dirty, wipe them with a clean soft dry cloth. Lens Fogging When you turn on the car heater in cold weather, dew or condensation may form on the lens in the CD player of the unit. Called lens fogging, this condensation on the lens may not allow CDs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer. · This unit may not correctly play discs which do not have the mark. · You cannot play a CD-R or CD-RW that has not been finalized. (For the finalization process refer to your CD-R/CD-RW writing software, and your CD-R/CD-RW recorder instruction manual.

) · CDs with coloring on the recording surface or CDs that are dirty cannot be used. · This unit can only play the CDs with English | 3 Basic Operation [SRC] Release [FM+] [AM] Disc slot Display [ ] Auxiliary input Search [DISP] [AUD] knob button [ ] [ ] [1] [2] [3] [4] [5] [6] Auxiliary input Connect a portable audio device with mini-plug cable (3.5 φ). General functions Power/Source select button : [SRC] Turns on the power. When the power is on, the source switches between Tuner ("TUNER"), CD ("CD"), Auxiliary input ("AUX"), and Standby ("STANDBY") each time this button is pressed. Press at least 1 second to turn off the power. / · Use the mini-plug cable which is stereo type and does not have any resistance. / · When an optional accessory is connected, the source name for each device appears (KDC-W3544W only). Volume control : [AUD] knob Turn the knob to adjust the volume. Faceplate release : Release Releases the faceplate lock so that it can be removed.

Refer to the following diagram when reattaching the faceplate. Muting volume upon reception of phone call When there is a call, "CALL" is displayed and the audio system is paused. When the call ends, "CALL" disappears and the audio system comes back on. The audio system comes back on when [SRC] is pressed during a call. Subwoofer output : [AM] Switches between ON ("SW ON") and OFF ("SW OFF") each time this button is pressed for at least 2 seconds. Switching display : [DISP] Changing the information displayed. Refer to page 6 for the details of the display setting. ❏ · The faceplate is a precision piece of equipment and can be damaged by shocks or jolts. · Keep the faceplate in its faceplate case while detached. · Do not place the faceplate (and the faceplate case) in areas exposed to direct sunlight, excessive heat or humidity.

Also avoid places with too much dust or the possibility of water splashing. · To prevent deterioration, do not touch the terminals of the unit or faceplate with your fingers. 4) KDC-W3544W/KDC-W3044/KDC-W313 Tuner functions FM Band : [FM+] Switches between FM1, FM2, and FM3 each time the [FM+] button is pressed. AM Band : [AM] Switches to AM. Tuning : [4]/[ε] Changes the frequency. Disc ejection : [0] / · You can eject the disc for 10 minutes after switching off the engine. Music search : [4]/[ε] Changes the music when this button is pressed. Fast reverses or forwards the music while pressing. Folder/Disc search : [FM+]/[AM] Switches the folder containing the audio file or the disc in the disc changer. Track/ File/ Disc/ Folder repeat play : [4] Switches between Track Repeat ("TRAC REP"), Disc Repeat ("DISC REP") (In Disc Changer), and OFF ("REP OFF") when pressed while playing a CD.

Switches between File Repeat ("FILE REP"), Folder Repeat ("FOLD REP"), and OFF ("REP OFF") when pressed while playing an audio file. Scan play : [2] Successively plays the intro of the music in the disc or folder. "TRAC SCN"/ "FILE SCN" is displayed during Scan Play. Random play : [3] Randomly plays the music in the disc or folder. "DISC RDM"/ "FOLD RDM" is displayed during Random Play. Magazine random play (KDC-W3544W) : [5] Randomly plays the music in the disc changer. "MGZN RDM" is displayed during Magazine Random Play. Text/Title scroll : [DISP] / · During reception of stereo stations the "ST" indicator is ON. Traffic information : [FM+] Turns ON or OFF the Traffic Information function when pressing for at least 2 seconds. When the function is turned ON, "TI" indicator is ON.

If traffic bulletin starts when the function is ON, "TRAFFIC" is displayed and traffic information is received. / · If the volume is adjusted during reception of traffic information, the adjusted volume is memorized automatically. The memorized volume will be applied next time the Traffic Information function is turned ON. Preset memory : [1] - [6] Memorize the station selected when pressing for at least 2 seconds.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/2346755)

[KDC-W313 user guide](http://yourpdfguides.com/dref/2346755)

<http://yourpdfguides.com/dref/2346755>

Preset tuning : [1] - [6] Recalls the memorized station.

Disc play functions Disc play : Disc slot Starts playing when a disc is inserted. When a CD is inserted, the "IN" indicator is ON. Scrolls the tuner, CD and audio file text display when pressed for at least 1 second. / · 3 inch (8 cm) CD cannot be used. Attempt to insert using an adapter can cause malfunction.

· Refer to <About Audio file> (page 13) for the Audio file by models you can play. Pause and play : [6] Switches between pause and play each time this button is pressed. English \ 5 General Operation Audio Control 1 Select the source to adjust Press the [SRC] button. / · Volume offset: Sets each source's volume as a difference from the basic volume. 2 Enter Audio Control mode Press the [AUD] knob. 4 Adjust the Audio setup item Turn the [AUD] knob. 3 Select the Audio item to adjust Press the [AUD] knob. Adjustment Item Display Subwoofer level "SW L" Bass Boost "B.BOOST"/"B.B" Range 15 -- +15 "1"/"2"/"OFF" (The indicator turns on according to the setting.

) Natural/Rock/Pops/Easy/ Top 40/Jazz/Game/User setting 5 Exit Audio Setup mode Press the [AUD] knob for at least 1 second. Speaker Setting Fine-tuning so that the System Q value is optimal when setting the speaker type. System Q "NATURAL/ "ROCK"/ "POPS"/ "EASY"/ "TOP40/ "JAZZ"/ "GAME"/ "USER" Bass level "BAS L" 8 -- +8 Middle level "MID L" 8 -- +8 Treble level "TRE L" 8 -- +8 Balance "BAL" Left 15 -- Right 15 Fader "FAD" Rear 15 -- Front 15 Exit Audio Control mode (Volume control mode) 1 Enter Standby Press the [SRC] button. Select the "STANDBY" display. 2 Enter Speaker Setting mode Press the [AUD] knob. 3 Select the Speaker type Turn the [AUD] knob. Speaker type OFF For 5 & 4 in. speaker For 6 & 6x9 in. speaker For the OEM speaker Display "SP OFF" "SP 5/4" "SP 6\*9/6" "SP OEM" / · "USER": This appears when Bass level, Middle level, and Treble level are adjusted. When "USER" is selected, these levels are recalled.

4 Adjust the Audio item Turn the [AUD] knob. 4 Exit Speaker Setting mode Press the [AUD] knob. 5 Exit Audio Control mode Press any button. Press a button other than the [AUD] knob. Switching Display Changes displayed information on each source following; Audio Setup Setting the Sound system. In Tuner source Information Program Service name or Frequency Radio text, Program Service name or Frequency Clock Display "FREQ"/ "FREQ/PS" "R-TEXT" "CLOCK" 1 Select the source to adjust Press the [SRC] button. 2 Enter Audio Setup mode Press the [AUD] knob for at least 1 second. 3 Select the Audio Setup item to adjust Press the [AUD] knob. Adjustment Item Display Low Pass Filter "LPF" Volume offset "V-OFF" Range 80/120/160/Through(OFF) Hz 8 -- ±0 (AUX: -8 -- +8) In CD & External disc source Information Disc title Track title Play time & Track number Clock Display "D-TITLE" "T-TITLE" "P-TIME" "CLOCK" 6) KDC-W3544W/KDC-W3044/KDC-W313 In Audio file source Information Music title & Artist name Album name & Artist name Folder name File name Play time & Music number Clock Display "TITLE" "ALBUM" "FOLDER" "FILE" "P-TIME" "CLOCK" In Standby/ Auxiliary input source Information Source name Clock Display "SRC NAME" "CLOCK" / · When you select the clock display, the display setting of each source will be changed to the clock display. · Album name cannot be displayed in WMA file.

· If the selected display item does not have any information, alternative information is discent;] button. Press the [4] button. Press the [4] button for at least 1 second. 2 Select the music Turn the [AUD] knob. 3 Play the selected song Press the [AUD] knob. The Music Search mode is canceled and the selected song is played. (ON) : Indicates that a folder exists above the currently selected folder. (OFF) : Indicates that no folder exists above the currently selected folder. (ON) : Indicates that a folder exists under the currently selected folder. (Blinking) : Indicates that your selection is a file.

Returning to the first song Press the [4] button for at least 1 second. Cancelling the Music Search mode Press the Search button. / · Music Search is available only during playing of the builtin CD player. · Music Search cannot be performed during Random play or scan play. Cancelling the Music Search mode Press the Search button. / · Music Search cannot be performed during Random play or scan play. English \ 9 Menu Operation Menu System Setting various functions. Display "SCL" "AUX" "OFF" Setting AUTO/ MANU\* OFF/ON1\*/ ON2 OFF 60M Setting overview Specifies whether the text is scrolled automatically. Sets whether to display AUX during source selection. Turns off the power when the preset time has lapsed in the Standby mode. Sets the CD read mode. Specifies whether to enable demonstration. Source -- 1 Enter Menu mode Press the Search button for at least 1 second. "MENU" is displayed. 2 Select the Menu item Press the [FM+] or [AM] button.

Display Setting Setting overview Source "CODE SET"/ Refer to Sets/Resets security code. "CODE CLR" page 11 (Function of KDC-W3544W) "SYNC" ON\*/OFF Synchronizing the RDS station time data and this unit's clock. -- "DIM" ON/OFF\* Adjusts the brightness of the display according to the surrounding illumination. "ICON" ON1/ON2\*/ Sets the Graphics mode of the OFF display. "SWPRE" R\*/ SW Sets the preout output. "SPRM" ON\*/OFF Turns ON/OFF the Supreme function. "NEWS" OFF\* Turns ON/OFF the News Bulletin 90M Automatic Reception function and sets the news bulletin interrupt disabled time. "LO.S" ON/OFF\* Only stations whose reception is good are searched in auto seek tuning. "AUTO1"/ AUTO1\*/ Selects the tuning mode of "AUTO2"/ AUTO2/ the radio. "MANUAL" MANUAL "A-MEMORY" Refer to Memorizes six stations with good page 12 reception automatically. "AF" ON\*/OFF When station reception is poor, automatically switches to the station that is broadcasting the same program over the same RDS network. "REG" ON\*/OFF Sets whether to switch to the station only in the specific region using the "AF" control. "ATPS" ON\*/OFF When traffic information station reception is poor, automatically searches for a station that can be received better.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/2346755)

[KDC-W313 user guide](http://yourpdfguides.com/dref/2346755)

<http://yourpdfguides.com/dref/2346755>

"MONO" ON/OFF\* Receives a stereo broadcast in the mono mode.

"NAME SET" Refer to Sets the display when switched page 12 to AUX source. "RUS"\*1 ON\*/OFF Selects Russian as the display language. "CD READ" "DEMO" 1\*/2 Refer to page 12 -- \* Factory setting \*1 Function of Russian sales model. Displayed item is depending on currently selected source. The mark in Source column shows the source to which the item is displayed. : Can be set in other than standby state. : Can be set in standby state. : Can be set while Audio file source. : Can be set while Tuner source. : Can be set during FM reception.

: Can be set while accessing AUX source. -- : Can be set during all sources. / - Refer to the respective page for information on how to set the items with reference page number. · Refer to the <Appendix> (page 13) for the details of the menu items. 3 Set the Menu item Press the [4] or [¢] button. 4 Exit Menu mode Press the Search button. 10 \ KDC-W3544W/KDC-W3044/KDC-W313 Function of KDC-W3544W 2 Do the step 4 through 7 operation, and enter the Security Code. "APPROVED" is displayed. Now, you can use the unit. Activating Security Code When Security Code is set, possibility of theft is reduced because input of Security Code is prompted to turn on the unit once it is turned off.

/ · When the Security Code function is activated, "CODE SET" changes to "CODE CLR". · To deactivate the Security Code function, see the next section <Deactivating Security Code>. / · You can set the Security Code with a 4 digit number of your choice. · The Security Code cannot be displayed or referenced. Make a note of the Security Code and treasure it up. 1 Enter Standby Press the [SRC] button. Select the "STANDBY" display. Function of KDC-W3544W Deactivating Security Code To deactivate the Security Code function. 2 Enter Menu mode Press the Search button for at least 1 second. When "MENU" is displayed, "CODE SET" is also displayed.

1 Enter Standby Press the [SRC] button. @@@@@"APPROVED" is displayed. @@@@@"Press the [FM+] or [AM] button. @@@@@"Each time you push the knob, the display alternates as listed below. @@Although the audio files are complied with the standards listed above, the play maybe impossible depending on the types or conditions of media or device. · Playing order of the Audio file In the example of folder/file tree shown below, the files are played in the order from to. CD ( ) : Folder Folder : Audio file Audio fi 2 : Forces playing as music CD. · AUX When this is set to ON, AUX source can be selected. ON1: Outputs the sound of external unit connected to the AUX terminal when switched to AUX source. ON2: Activates the attenuator function when switched to AUX source.

Turn off the attenuator function when listening to output from external unit. This prevents the noise when no external unit is connected to AUX terminal. OFF: Disables the selection of AUX source. Set to OFF when not using the AUX terminal. · NEWS (News Bulletin with Timeout Setting) Automatically receives news bulletin when it starts.

Set the time during which interrupt is to be disabled after start of another news bulletin. Changing "NEWS 00M" to "NEWS 90M" turns this function ON. If news bulletin starts when this function is ON, "TRAFFIC" is displayed and news is received. If "20M" is has been set, reception of another news bulletin will not start for 20 minutes. · AUTO1, AUTO2, MANUAL (Tuning mode select) Select a tuning mode of the radio.

Tuning mode Display Auto seek "AUTO1" Preset station seek "AUTO2" Manual Operation Automatic search for a station. Search in order of the stations in the Preset memory. "MANUAL" Normal manual tuning control. An online manual about audio files is put on the site, [www.kenwood.com/audiofile/](http://www.kenwood.com/audiofile/). On this online manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well. Menu Glossary · SWPRE (Switching Preout) Switches the preout between rear output ("R") and subwoofer output ("SW"). · SPRM (Supreme Technology) to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding at low bit rate.

Supplementing is optimized by compression format (MP3 or WMA) and processed according to bit rate. The effect is negligible with music that is encoded at high bit rate, variable bit rate or has minimal high frequency range. · CD READ Sets the method for reading CD. When unable to play special format CD, set this function to "2" to force playing. Note that some music CD may be unplayable even when set to "2". In addition, audio files cannot be played when set to "2". Normally, keep this set to "1". 1 : Automatically distinguishes between audio file disc and music CD when playing disc. · AF (Alternative Frequency)

When the reception is poor, automatically alternate to another frequency broadcasting the same program in the same RDS network with better reception. · RUS (Russian language setting) When this is set to ON, the following character strings are displayed in Russian: Folder name/ File name/ Song title/ Artist name/ Album name/ KCA-BT200/BT100 (optional accessory) English \ 13 Appendix · OFF (Power OFF Timer) Setting the timer to turn this unit's power OFF automatically when Standby mode continues.

Using this setting can save the vehicle's battery power. : Power OFF Timer function is OFF. 20M: Turns the power OFF after 20 minutes. (Factory setting) 40M: Turns the power OFF after 40 minutes. 60M: Turns the power OFF after 60 minutes.

· ICON Sets the Graphics mode of the display during normal playback condition. ON1: Turns on. ON2: Displays an animation. OFF: Turns off. This Product is not installed by the manufacturer of a vehicle on the production line, nor by the professional importer of a vehicle into an EU Member State.

Information on Disposal of Old Electrical and Electronic Equipment and Batteries (applicable for EU countries that have adopted separate waste collection systems) Products and batteries with the symbol (crossed-out wheeled bin) cannot be disposed as household waste. Old electrical and electronic equipment and batteries should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment. Notice: The sign "Pb" below the symbol for batteries indicates that this battery contains lead.



[You're reading an excerpt. Click here to read official KENWOOD KDC-W313 user guide](http://yourpdfguides.com/dref/2346755)  
<http://yourpdfguides.com/dref/2346755>



For operating KCA-BT200 (optional) For operation refer to Model-A-1 in the Instruction Manual of KCA-BT200, and the table below. The [AUTO]/[TI] button should be replaced with [SRC] button for <Answering the Waiting Call after Terminating the Current Call>. Notation used in the KCA-BT200 Instruction Manual [38] button Control knob [AUTO]/[TI] button Control knob towards up or down Control knob towards left or right Operation [AUD] knob [AUD] knob [DISP] button [FM+] or [AM] button [4] or [ç] button The marking of products using lasers (Except for some areas) CLASS 1 LASER PRODUCT The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

For operating KCA-BT100 (optional) To control KCA-BT100, operate as follows; To make setting for <Selecting the Dialing Mode>, select <Menu System> (page 10). Pressing the [AUD] knob for at least 1 second after selecting the "D.MODE" item allows you to enter the dialing method selection mode. To exit from dialing method selection mode, press Search button. To make <Disconnecting a Call>, <Clearing the Disconnection Message>, and <Rejecting an Incoming call>, press [DISP] button for at least 1 second. Moreover, some displays are different from the description of KCA-BT100 Instruction Manual. Displays of KCA-BT100 Instruction Manual "DISCONCT" "CONNECT" "PHN-DEL" "P-STATUS" "BT-CON Y" "BT-CON N" Actual displays on this unit "HF D-CON" "HF CON" "DVC-DEL" "D-STATUS" "HF-CON Y" "HF-CON N" 14 \ KDC-W3544W/KDC-W3044/KDC-W313 Accessories/ Installation Procedure Accessories · with the ignition, connect the ignition wire to a power source that can be turned on and off with the ignition key. Use a commercially available conversion connector if the connector does not fit in the vehicle connector. Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.

If the console has a lid, make sure to install the unit so that the faceplate will not hit the lid when closing and opening. If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating. Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the - wires or ground them to any metal part in the car. After the unit is installed, check whether the brake lamps, blinkers, wipers, etc.

on the car are working properly. Mount the unit so that the mounting angle is 30° or less. 1 ...

.....1 · 2 ...

.....2 Installation Procedure 1. To prevent short circuits, remove the key from the ignition and disconnect the - terminal of the battery. 2.

Make the proper input and output wire connections for each unit. 3. Connect the wire on the wiring harness. 4. Take Connector B on the wiring harness and connect it to the speaker connector in your vehicle.

5. Take Connector A on the wiring harness and connect it to the external power connector on your vehicle. 6. Connect the wiring harness connector to the unit. 7.

Install the unit in your car. 8. Reconnect the - terminal of the battery. 9. Press the reset button. · · · · About CD players/disc changers connected to this unit If the CD player/ disc changer has the "O-N" switch, set it to the "N" position. The functions you can use and the information that can be displayed may differ depending on the models being connected. ☒ · Mounting and wiring this product requires skills and experience. For safety's sake, leave the mounting and wiring work to professionals. · Make sure to ground the unit to a negative 12V DC power supply.

· Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing. · Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit. · If the power is not turned ON ("PROTECT" is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked. · Make sure that all wire connections are securely made by inserting jacks until they lock completely. · If your vehicle's ignition does not have an ACC position, or if the ignition wire is connected to a power source with constant voltage such as a battery wire, the power will not be linked with the ignition (i.e.

it will not turn on and off along with the ignition). If you want to link the unit's power English \ 15 Connecting Wires to Terminals To Kenwood disc changer/ External optional accessory (KDC-W3544W only) Fuse (10A) Rear preout/ Subwoofer preout FM/AM antenna input Antenna Cord (JASO) Wiring harness (Accessory1) TEL mute wire (Brown) MUTE Connect to the terminal that is grounded when either the telephone rings or during conversation. / To connect the Kenwood navigation system, consult your navigation manual. @@@@ @@@@ If the ISO connector pins are set as described in 2, make the connection as illustrated. Please be sure to reconnect the cable as shown 2 below to install this unit to the Volkswagen vehicles etc.

Yellow Blue/White Red Black Battery Power Control Ignition (ACC) Earth (Ground) Connection Purple Purple/Black Gray Gray/Black White White/Black Green Green/Black Rear Right (+) Rear Right () Front Right (+) Front Right () Front Left (+) Front Left () Rear Left (+) Rear Left () 1 (Default setting) The A-7 pin (red) of the vehicle's ISO connector is linked with the ignition, and the A4 pin (yellow) is connected to the constant power supply. Ignition cable (Red)

Unit Battery cable (Yellow) A-7 Pin (Red) Vehicle A-4 Pin (Yellow) 2 The A-7 pin (red) of the vehicle's ISO connector is connected to the constant power supply, and the A-4 pin (yellow) is linked to the ignition. Ignition cable (Red) Unit Battery cable (Yellow) A-7 Pin (Red) Vehicle A-4 Pin (Yellow) English \ 17

Installation/Removing the Unit Installation Removing the hard rubber frame 1 Engage the catch pins on the removal tool and remove the two locks on the upper level. Upper the frame and pull it forward as shown in the figure. Lock Catch Bend the tabs of the mounting sleeve with a screwdriver or similar utensil and attach it in place.

Accessory2 Removal tool / · Make sure that the unit is installed securely in place.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[KDC-W313 user guide](#)

<http://yourpdfguides.com/dref/2346755>

If the unit is unstable, it may malfunction (for example, the sound may skip). 2 When the upper level is removed, remove the lower two locations. / · The frame can be removed from the bottom side in the same manner. Removing the Unit 1 Refer to the section <Removing the hard rubber frame> and then remove the hard rubber frame. 2 Insert the two removal tools deeply into the slots on each side, as shown. 3 Lower the removal tool toward the bottom, and pull out the unit halfway while pressing towards the inside. Accessory 2 ⌘ · Be careful to avoid injury from the catch pins on the removal tool. 4 Pull the unit all the way out with your hands, being careful not to drop it. 18 | KDC-W3544W/KDC-W3044/KDC-W313 Troubleshooting Guide Some functions of this unit may be disabled by some settings made on this unit.

The messages shown below display your systems condition. TOC ERR: · No disc has been loaded in the disc magazine. · The CD is quite dirty. The CD is upsidetdown. The CD is scratched a lot. The disc is unreadable. Media was played that doesn't have data recorded that the unit can play. The unit is malfunctioning for some reason. Press the reset button on the unit. If the "E77" code does not disappear, consult your nearest service center. Something is wrong with the disc magazine. Or the unit is malfunctioning for some reason. Check the disc magazine. And then press the reset button on the unit. If the "E-99" code does not disappear, consult your nearest service center.

The CD player section is not operating properly. Reinsert the CD. If the CD cannot be ejected or the display continues to flash even when the CD has been properly reinserted, please switch off the power and consult your nearest service center. The speaker wire has a short-circuit or touches the chassis of the vehicle, and then the protection function is activated. Wire or insulate the speaker cable properly and press the reset button.

If the "PROTECT" code does not disappear, consult your nearest service center. An Audio file is played with a format that this unit can't support. ---A copy-protected file is played. ---- !! Cannot display the user of System Q. <Audio Control> (page 6) is not set. · Cannot set up the subwoofer. · No output from the subwoofer. · Cannot set up the low pass filter. · Preout is not set to subwoofer. "SWPRE" of <Menu System> (page 10) · <Subwoofer output> (page 4) is not set to On.

· Cannot register a security code. · Cannot set up Display. · Power OFF Timer does not function. <Demonstration mode Setting> (page 12) is not turned off. E-05: E-15: E-77: ! E-99: What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems. IN (Blink): Tuner source ? Radio reception is poor. The car antenna is not extended. Pull the antenna out all the way. PROTECT: Disc source ? The specified disc does not play, but another one plays instead.

The specified CD is quite dirty. Clean the CD referring to the CD cleaning of the section on <Handling CDs> (page 3). The disc is loaded in a different slot from that specified. Eject the disc magazine and check the number for the specified disc. The disc is severely scratched.

Try another disc instead. NA FILE: COPY PRO: Audio file source ? The sound skips when an Audio file is being played. The media is scratched or dirty. Clean the media, referring to the CD cleaning of the section on <Handling CDs> (page 3). The recording condition is bad.

Record the media again or use another media. English \ 19 Specifications FM tuner section Frequency range (50 kHz space) : 87.5 MHz 108.0 MHz Usable sensitivity (S/N = 26dB) : 0.7 V/75 Quieting Sensitivity (S/N = 46dB) : 1.6 V/75 Frequency response ( $\pm 3.0$  dB) : 30 Hz 15 kHz Signal to Noise ratio (MONO) : 65 dB Selectivity (DIN) ( $\pm 400$  kHz) : 80 dB Stereo separation (1 kHz) : 35 dB Audio section Maximum output power : 50 W x 4 Output power (DIN 45324, +B=14.4V) : 30 W x 4 Speaker Impedance : 48 Tone action Bass : 100 Hz  $\pm 8$  dB Middle : 1 kHz  $\pm 8$  dB Treble : 10 kHz  $\pm 8$  dB Preout level / Load (CD) : 2000 mV/10 k Preout impedance : 600 MW tuner section Frequency range (9 kHz space) : 531 kHz 1611 kHz Usable sensitivity (S/N = 20dB) : 25 V Auxiliary input Frequency response ( $\pm 3$  dB) : 20 Hz 20 kHz Input Maximum Voltage : 1200 mV Input Impedance : 10 k LW tuner section Frequency range : 153 kHz 281 kHz Usable sensitivity (S/N = 20dB) : 45 V General Operating voltage (11 16V allowable) : 14.4 V Current consumption : 10 A Installation Size (W x H x D) : 182 x 53 x 155 mm Weight : 1.30 kg CD player section Laser diode : GaAlAs Digital filter (D/A) : 8 Times Over Sampling D/A Converter : 24 Bit Spindle speed : 500 200 rpm (CLV) Wow & Flutter : Below Measurable Limit Frequency response ( $\pm 1$  dB) : 20 Hz 20 kHz Total harmonic distortion (1 kHz) : 0.

01 % Signal to Noise ratio (1 kHz) : 105 dB Dynamic range : 93 dB MP3 decode : Compliant with MPEG-1/2 Audio Layer-3 WMA decode : Compliant with Windows Media Audio Specifications subject to change without notice. 20 | KDC-W3544W/KDC-W3044/KDC-W313 .



[You're reading an excerpt. Click here to read official KENWOOD](#)

[KDC-W313 user guide](#)

<http://yourpdfguides.com/dref/2346755>