



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KMM-BT34. You'll find the answers to all your questions on the KENWOOD KMM-BT34 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KMM-BT34
User guide KENWOOD KMM-BT34
Operating instructions KENWOOD KMM-BT34
Instructions for use KENWOOD KMM-BT34
Instruction manual KENWOOD KMM-BT34

KENWOOD

KMM-BT34
KMM-302BT
KMR-M308BTE

DIGITAL MEDIA RECEIVER
INSTRUCTION MANUAL
DIGITAL MEDIA RECEIVER
BEDIENUNGSANLEITUNG
ЦИФРОВОЙ МЕДИА-РЕСИВЕР
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

JVC KENWOOD Corporation



© 2013 JVC KENWOOD Corporation

GET0994-001B (EN)



[You're reading an excerpt. Click here to read official KENWOOD KMM-BT34 user guide](http://yourpdfguides.com/dref/5532044)
<http://yourpdfguides.com/dref/5532044>

Manual abstract:

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. - Neither the name of the Xiph. Org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. □ "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. Other trademarks and trade names are those of their respective owners. ii JS_KWD_KMM_BT34_EWE0_01_S001A. Indd ii 7/11/2013 10:34:13 AM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) CONTENTS BEFORE USE BASICS GETTING STARTED RADIO USB/ iPod AUX BLUETOOTH® DISPLAY SETTINGS AUDIO SETTINGS MORE INFORMATION TROUBLESHOOTING INSTALLATION / CONNECTION SPECIFICATIONS 2 3 3 5 6 8 8 12 13 14 14 16 19 BEFORE USE

Warning Do not operate any function that takes your attention away from safe driving.

Caution Volume setting: • Adjust the volume so that you can hear sounds outside the car to prevent accidents. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: • Avoid using the external devices if it might hinder safe driving. Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data.

□ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. How to read this manual • Operations are explained mainly using buttons on the faceplate. • [XX] indicates the selected items. □ (XX) indicates references are available on the stated page.

Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicone or soft cloth.

Cleaning the connector: Detach the faceplate and clean the connector gently with a cotton swab, being careful not to damage the connector. Connector (on the reverse side of the faceplate) 2 JS_KWD_KMM_BT34_EN_01_EN. Indd 2 8/11/2013 4:09:07 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BASICS Faceplate Volume knob (turn/press) Display window GETTING STARTED 1 Detach button Attach Detach Select the display language and cancel the demonstration How to reset Your preset adjustments will also be erased. To Turn on the power Adjust the volume Select a source Change the display information Do this (on the faceplate) Press B SRC. □ Press and hold to turn off the power. When you turn on the power (or after you reset the unit), the display shows: "SEL LANGUAGE" "PRESS" "VOLUME KNOB" 1 Turn the volume knob to select [ENG] (English) or [RUS] (Russian), then press the knob. [ENG] is selected for the initial setup. Then, the display shows: "CANCEL DEMO" "PRESS" "VOLUME KNOB" 2 Press the volume knob. Indd 3 3 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 7/11/2013 12:54:59 PM GETTING STARTED 2 Default: XX Set the clock AUDIO CONTROL SWITCH PREOUT SP SELECT DISPLAY EASY MENU (For KMM-302BT) ON: Both display and button illumination change to white color when entering [FUNCTION]. ; OFF: Both display and button illumination remain as [COLOR SELECT] color.

(12) NORMAL: Memorizes one station for each preset button in each band (FM1/ FM2/ FM3/ MW/ LW). ; MIX: Memorizes one station for each preset button, regardless of the selected band. (8) Selects the display language for [FUNCTION] menu and Tag information (folder name, file name, song title, artist name, album name) if applicable. Applicable only when the demonstration mode is turned off. Sets the duration when the unit will automatically turns off (while in standby mode) to save the battery. 20M: 20 minutes ; 40M: 40 minutes ; 60M: 60 minutes ; OFF -- -: Cancels REAR/ SUB-W: Selects whether rear speakers or a subwoofer are connected to the line out terminals on the rear (through an external amplifier). OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. 1 Press the volume knob to enter [FUNCTION].

2 Turn the volume knob to select [CLOCK], then press the knob. 3 Turn the volume knob to select [CLOCK ADJUST], then press the knob.

4 Turn the volume knob to make the settings, then press the knob. Day Hour Minute 5 Turn the volume knob to select [CLOCK FORMAT], then press the knob. 6 Turn the volume knob to select [12H] or [24H], then press the knob. 7 Press and hold to exit. To return to the previous setting item or hierarchy, press .

Then, perform step 4 to set the clock. TUNER SETTING PRESET TYPE SYSTEM KEY BEEP SOURCE SELECT BUILT-IN AUX RUSSIAN SET Set the initial settings 1 Press B SRC to enter STANDBY. 2 Press the volume knob to enter [FUNCTION]. 3 Turn the volume knob to make a selection (see the 4 Press and hold following table), then press the knob. to exit.

To return to the previous setting item or hierarchy, press . For details on how to update the firmware, see: www. Indd 4 8/11/2013 4:09:40 PM Data Size:

Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) RADIO Default: XX TUNER SETTING LOCAL SEEK AUTO MEMORY MONO SET ON: Searches only FM stations with good reception. ; OFF: Cancels. YES: Automatically starts memorizing 6 stations with good reception. ; NO: Cancels. (Selectable only if [NORMAL] is selected for [PRESET TYPE].) (4) ON: Improves the FM reception, but the stereo effect may be lost. ON: Switches to another station only in the specific region using the "AF" control. ; OFF: Cancels.

ON: Automatically searches for another station broadcasting the same program in the same Radio Data System network with better reception when the current reception is poor. Press the volume knob to enter PTY language selection. Turn the volume knob to select the PTY language (ENGLISH/ FRENCH/ GERMAN), then press the knob. Selects the available Program Type (see the following), then, press S / T to start. ON: Synchronizes the unit's time to the Radio Data System station time.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5532044)

[KMM-BT34 user guide](http://yourpdfguides.com/dref/5532044)

<http://yourpdfguides.com/dref/5532044>

□ To change the searching method for S / T : Press SEEK repeatedly. CLOCK TIME SYNC Other settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see 3 Press and hold the following table), then press the knob. to exit. To return to the previous setting item or hierarchy, press .

□ [LOCAL SEEK]/ [MONO SET]/ [NEWS SET]/ [REGIONAL]/ [AF SET]/ [TI]/ [PTY SEARCH] is selectable only when the band is FM1/ FM2/ FM3. □ Available Program Type: SPEECH: NEWS, AFFAIRS, INFO (information), SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, DOCUMENT MUSIC: POP M (music), ROCK M (music), EASY M (music), LIGHT M (music), CLASSICS, OTHER M (music), JAZZ, COUNTRY, NATION M (music), OLDIES, FOLK M (music) The unit will search for the Program Type categorized under [SPEECH] or [MUSIC] if selected. □ If the volume is adjusted during reception of traffic information, alarm or news bulletin, the adjusted volume is memorized automatically. It will be applied the next time traffic information, alarm or news bulletin function is turned on. iPod/iPhone USB input terminal Select a folder *3 Reverse/ Fast-forward Repeat play *4 KCA-iP102 (optional accessory) or accessory cable of the iPod/iPhone*1 Press 5 iPod to select the control mode while in iPod source.

Random play *4 *1 *2 *3 *4 Do not leave the cable inside the car when not using. You can still play/pause, file skip, fast-forward or reverse files from the unit. only for MP3/WMA/WAV/FLAC files. This does not work for iPod. For iPod: Applicable only when [MODE OFF] is selected.

If you connect the iPod/iPhone to the USB input terminal of the unit (while listening to TuneIn Radio, TuneIn Radio Pro or Aupeo), the unit will output the sound from these apps. 6 JS_KWD_KMM_BT34_EWE0_01_EN. Indd 6 7/11/2013 12:55:00 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) USB/ iPod Select a file from a list For iPod: Applicable only when [MODE OFF] is selected. (6) 1 Press . 2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA/WAV/FLAC file: Select the desired folder, then a file. □ iPod or KME Light/ KMC file: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS*, GENRES, COMPOSERS*). * Only for iPod. □ To return to the root folder (or first file), press number button 5 iPod. □ To return to the previous setting item or hierarchy, press .

• To cancel , press and hold . If you have many files. You can search through them quickly (on step 2 above) at a preset skip search ratio by pressing S / T. □ See also “Set the skip search ratio. □ • Pressing and holding S / T skip songs at the maximum ratio (10%) regardless of the setting made. □ For USB: Only for files registered in the database created with KME Light/ KMC. Select a song by name While listening to iPod. 1 Press . 2 Turn the volume knob to select a category, then press the knob. 3 Turn the volume knob quickly to enter character search.

4 Turn the volume knob to select the character to be searched for. 5 Press S / T to move to the entry position. You can enter up to 3 characters. 6 Press the volume knob to start searching. 7 Turn the volume knob to make a selection, then press the knob.

Repeat step 7 until the desired item is selected. □ To search for a character other than A to Z and 0 to 9, enter only “ ”. □ To return to the previous hierarchy, press . □ To return to the top menu, press number button 5 iPod. • To cancel , press and hold .

Set the skip search ratio While listening to iPod or KME Light/ KMC file. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [SKIP SEARCH], then press the knob. 4 Turn the volume knob to make a selection, then press the knob. 0. 5% (default)/ 1%/ 5%/ 10%: Skip search ratio over the total files. 5 Press and hold to exit. Change the USB drive When a smartphone (Mass Storage Class) is connected to the USB input terminal, you can select its internal memory or external memory (such as an SD card) to playback the stored songs. You can also select the desired drive to playback when a multiple drives device is connected.

press 5 iPod repeatedly to select the desired drive. (or) 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [MUSIC DRIVE], then press the knob. Repeat steps 1 to 4 to select the following drives. (4) BLUETOOTH® You can operate Bluetooth devices using this unit. Pair a Bluetooth device When connecting a Bluetooth device to the unit for the first time, perform pairing between the unit and the device. Once the pairing is completed, the Bluetooth device will remain registered in the unit even if you reset the unit. □ Up to five devices can be registered (patons (1 to 6). □ All the button illumination flash when there is an incoming call.

□ When [AUTO ANSWER] is set to the selected time, the unit answers incoming call automatically. (10) ENGLISH \ JS_KWD_KMM_BT34_EWE0_01_EN. Indd 9 9 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 8/11/2013 12:11:53 PM BLUETOOTH® Text message notification When the phone receives a text message, the unit rings and “SMS RECEIVED” appears. □ You cannot read, edit, or send a message through the unit. □ To clear the message, press any button.

PHONE BOOK 1 Turn the volume knob to select a name, then press the knob. 2 Turn the volume knob to select a phone number, then press the knob to call. □ If the phone supports PBAP, the phonebook of the connected phone is automatically transferred to the unit when pairing. If the phone does not support PBAP, “TRANSFER PB” appears. transfer the phonebook manually.

(12, TRANSFER PB) • Contacts are categorized as: MO (mobile), HM (home), OF (office), OT (others), GE (general) • This unit can display only non-accent letters. (Accent letters such as “Ú” is shown as “U”). • If the phonebook contains many contacts, (11, Select a contact by name). 1 Turn the volume knob to select a number (0 to 9) or character (, #, +). 2 Press S / T to move the entry position. Repeat steps 1 and 2 until you finish entering the phone number. 3 Press the volume knob to call. Speak the name of the contact you want to call or the voice command to control the phone functions. LOW/ MID/ FULL: Shows the strength of the battery. NO SIGNAL/ LOW/ MID/ MAX: Shows the strength of the current received signal.

Default: XX 1 — 30: The unit answer incoming call automatically in the selected time. ; OFF: Cancels. SYSTEM: The unit rings to notify you when a call/text message comes in. (Default ring tone is different according to the paired device.) • CALL: Selects your preferred ring tone (TONE 1 — 5) for incoming calls.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5532044)

[KMM-BT34 user guide](http://yourpdfguides.com/dref/5532044)

<http://yourpdfguides.com/dref/5532044>

□ MESSAGE: Selects your preferred ring tone (TONE 1 — 5) for incoming text messages. PHONE: The unit uses the connected phones' ring tone to notify you when a call/text message comes in. (The connected phone will ring if it does not support this feature. @@@@ @@@@ • Supported Voice Recognition features vary for each phone. Refer to the instruction manual of the connected phone for details.

@@@@@ 3 Press and hold to exit. To return to the previous setting item or hierarchy, press . rING MODE . @@@@ @@@@ 2 Press the volume knob to call. SMS NOTIFY* * Functionality depends on the type of the phone used.

10 JS_KWD_KMM_BT34_EN_001B_EN. @@@@ 1 Press to enter Bluetooth mode. 2 Turn the volume knob to select [PHONE BOOK], then press the knob. 3 Turn the volume knob quickly to enter alphabet search mode. @@@@ 5 Turn the volume knob to select a name, then press the knob.

@@@ To return to the previous hierarchy, press . Make a call from memory 1 Press to enter Bluetooth mode. Delete a contact Not applicable for mobile phone that supports PBAP. 1 Press to enter Bluetooth mode. @@@@ 3 Turn the volume knob to select a contact. @@@@ 4 Press and hold the volume knob to enter delete mode. @@@@ DELETE ONE: Selected name or phone number in step 3 is deleted. @@@@ 6 Turn the volume knob to select [YES] or [NO], then press the knob.

@@@ 3 Turn the volume knob to select a contact or enter a phone number. @@@@ To erase a contact from the preset memory, select [NUMBER DIAL] in step 2 and store a blank number.

Bluetooth mode settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [BT MODE], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press PHONE SELECT AUDIO SELECT DEVICE DELETE Selects the phone or audio device to connect or disconnect. □ " appears in front of the device name. . Default: XX 1 Turn the volume knob to select a device to delete, then press the knob. 2 Turn the volume knob to select [YES] or [NO], then press the knob. □ " appears in front of the device name set as priority.

□ DL PB " appear and transfer the phonebook of the connected phone to this unit manually. * Selectable only when the connected phone supports OPP. Repeat steps 1 and 2 until you finish entering the PIN code. 3 Press the volume knob to confirm. ON: The unit automatically reconnect when the Bluetooth device is within range.

; OFF: Cancels. ON: The unit automatically pair supported Bluetooth device (iPhone/ iPod touch) when it is connected through USB input terminal. Depending on the iOS version of the connected iPhone/iPod touch, this function may not work. ; OFF: Cancels. FRONT: Outputs audio from the front left and right speakers.

; ALL: Outputs audio from all the speakers. DISPLAY SETTINGS Bluetooth audio player Operations and display indications may differ according to their availability on the connected device. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [DISPLAY], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . default: XX VARIABLE SCAN/ COLOR 01 — COLOR 24/ USER: Selects your preferred button illumination color. You can create your own color (when [COLOR 01] — [COLOR 24] or [USER] is selected). The color you have created can be selected when you select [USER].

1 Press and hold the volume knob to enter the detailed color adjustment. 2 Press S / T to select the color (R/ G/ B) to adjust. 3 Turn the volume knob to adjust the level (0 — 9), then press the knob. DIMMER ON: Dims the display illumination (and button illumination*). ; OFF: Illuminates according to the [BRIGHTNESS] settings. BRIGHTNESS LVL 0 — LVL 31: Selects your preferred brightness level for display illumination (and button illumination*). TEXT SCROLL AUTO/ ONCE: Selects whether to scroll the display information automatically, or scroll only once. 2 Operate the Bluetooth audio player to start playback. Pause or resume playback Select group or folder Reverse/ forward skip Reverse/fastforward Repeat play Press 6 IW. Indd 12 26/12/2013 3:27:00 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) AUDIO SETTINGS While listening to any source.

1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [AUDIO CONTROL], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . Adjusts the level to memorize for each source. (Before making an adjustment, select the source you want to adjust.) PRESET EQ DRIVE EQ/ TOP40/ POWERFUL/ ROCK/ POPS/ EASY/ JAZZ/ NATURAL/ USER: Selects a preset equalizer suitable to the music genre. (Select [USER] to use the customized bass, middle, and treble settings.

) [DRIVE EQ] is a preset equalizer that reduces noise from the road. LV1/ LV2: Selects your preferred low and high frequencies boost to produce a well-balanced sound at a low volume level. THROUGH: All signals are sent to the subwoofer. ; 85HZ/ 120HZ/ 160HZ: Audio signals with frequencies lower than 85 Hz/ 120 Hz/ 160 Hz are sent to the subwoofer. REVERSE (180°)/ NORMAL (0°): Selects the phase of the subwoofer output to be in line with the speaker output for optimum performance. (Selectable only if a setting other than [THROUGH] is selected for [LPF SUBWOOFER].) R15 to F15 (0): Adjusts the rear and front speaker output balance. 115 to R15 (0): Adjusts the left and right speaker output balance. □8 to +8 (for AUX); -8 to 0 (for other sources): Presets the volume adjustment level of each source. (Before adjustment, select the source you want to adjust.

) ON: Creates realistic sound by compensating the high-frequency components and restoring the rise-time of the waveform that are lost in audio data compression. Indd 13 13 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 7/11/2013 12:55:02 PM MORE INFORMATION General Detailed information and notes about the playable audio files are stated in an online manual on the following web site: www.kenwood. Com/cs/ce/audiophile/TROUBLESHOOTING About iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th, and 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th, and 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5 • For the latest compatible list and software versions of iPhone/iPod, see: www. Remedy • Adjust the volume to the optimum level. • Check the cords and connections. Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit.



[You're reading an excerpt. Click here to read official KENWOOD KMM-BT34 user guide](http://yourpdfguides.com/dref/5532044)
<http://yourpdfguides.com/dref/5532044>

If this does not solve the problem, consult your nearest service center. Flac) • Playable USB device file system: FAT12, FAT16, FAT32 Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device. About Bluetooth • Depending on the Bluetooth version of the device, some Bluetooth devices may not be able to connect to this unit.

□ This unit may not work with some Bluetooth devices. • Signal conditions vary, depending on the surroundings. □ For more information about Bluetooth, visit the following website: www. □ The unit does not turn on. • Information shown on the display is incorrect.

The unit does not work at all. About USB devices • This unit can play MP3/WMA/WAV/FLAC files stored on a USB mass storage class device. • You cannot connect a USB device via a USB hub. □ Connecting a cable whose total length is longer than 5 m may result in abnormal playback. □ This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A.

□ Static noise while listening to • Pull the antenna out all the way. Make sure the media contains supported audio files. Copy the files and folders onto the USB device again. If this does not solve the problem, reset the USB device or use another USB device. About KENWOOD Music Editor Light and KENWOOD Music Control • This unit supports the PC application KENWOOD Music Editor Light and Android™ application KENWOOD Music Control. □ When you play audio files with song data added using the KENWOOD Music Editor Light or KENWOOD Music Control, you can search for audio files by Genres, Artists, Albums, Playlists, and Songs. □ KENWOOD Music Editor Light and KENWOOD Music Control are available on the following web site: www. Elapsed playing time is not correct. Correct characters are not displayed (e. Do not use too many hierarchical levels or folders.

This is caused by how the tracks are recorded. This unit can only display uppercase letters, numbers, and a limited number of symbols. (3) • Make sure you have entered the same PIN code to both the unit and Bluetooth device. □ Delete pairing information from both the unit and the Bluetooth device, then perform pairing again. (8) The number of registered devices has reached its limit. (9) • Reduce the distance between the unit and the Bluetooth device. □ Move the car to a place where you can get a better signal reception. □ Use voice calling method in a more quiet environment. □ Reduce the distance from the microphone when you speak the name. □ Make sure the same voice as the registered voice tag is used.

Remedy The connected phone does not support Voice Recognition feature. If “ERROR” appears again, check if the device supports the function you have tried. Bluetooth device cannot get the contact information. □ Reduce the distance between the unit and the Bluetooth audio player. □ Turn off, then turn on the unit and try to connect again.

□ Other Bluetooth devices might be trying to connect to the unit. □ Check whether the connected Bluetooth audio player supports Audio/Video Remote Control Profile (AVRCP). (Refer to the instructions of your audio player.) • Disconnect and connect the Bluetooth player again. Reset the unit and try the operation again.

If this does not solve the problem, consult your nearest service center. “NO INFO” appears. Bluetooth® Sound is being interrupted or skipped during playback of a Bluetooth audio player. The connected Bluetooth audio player cannot be controlled. □ Voice calling method is not successful. Indd 15 15 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 16/12/2013 2:12:30 PM INSTALLATION / CONNECTION Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery’s negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (red) to the car chassis or Ground wire (black) to prevent a short circuit. □ Insulate unconnected wires with vinyl tape to prevent a short circuit. @@@@ consult the car audio dealer.

□ Install this unit in the console of your vehicle. @@Metal parts such as the heat sink and enclosure become hot. @@□ Mount the unit at an angle of less than 30°. □ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle’s fuse box which provides 12 V DC power supply and is turned on and off by the ignition key. □ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car’s chassis, then replace the old fuse with one that has the same rating, do the required wiring. (17, 18) Hook on the top side Orientate the trim plate as illustrated before fitting. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place.

Basic procedure 1 Remove the key from the ignition switch, then disconnect the [terminal of the car battery. (17, 18) 3 Install the unit to your car. See Installing the unit (in-dash mounting). 4 Connect the [terminal of the car battery. 5 Reset the unit.

(3) How to remove the unit 1 Detach the faceplate. 2 Fit the catch pin on the extraction keys into the holes on both sides of the trim plate, then pull it out. 3 Insert the extraction keys deeply into the slots on each side, then follow the arrows as shown on the right. 16 JS_KWD_KMM_BT34_EWE0_01_EN. Indd 16 7/11/2013 12:55:02 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) Wiring connection (for KMM-BT34 / KMM-302BT) Fuse (10 A) Rear/subwoofer output Antenna terminal Microphone input jack (8) Connecting the ISO connectors on some VW/Audi or Opel (Vauxhall) automobiles You may need to modify the wiring of the supplied wiring harness as illustrated below.

a7 (Red) Vehicle A4 (Yellow) Default wiring Pin A4 A5 A7 A8 B1 B2 B3 B4 B5 B6 B7 B8 Color and function : Battery : Power control : Ignition (ACC) : Earth (ground) connection : Rear speaker (right) : Front speaker (right) : Front speaker (left) : Rear speaker (left) ISO connectors Ignition wire (Red) Unit Battery wire (Yellow) Red (A7) Yellow (A4) Blue/White (Power control wire/Antenna control wire) ANT CONT P. CONT If no connections are made, do not let the wire come out from the tab. Yellow (Battery wire) Red (Ignition wire) Light blue/yellow (Steering remote control wire) STEERING WHEEL REMOTE INPUT REMOTE CONT To the steering wheel remote control adapter To the power control terminal when using the optional power amplifier, or to the antenna control terminal in the vehicle. Yellow Blue/White Red Black Purple [Purple/black [Gray] Gray/black [White] White/black [Green] Green/black [Brown (Mute control wire) MUTE To connect the Kenwood navigation system, consult your navigation manual.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[KMM-BT34 user guide](#)

<http://yourpdfguides.com/dref/5532044>

eNGLISH \ JS_KWD_KMM_BT34_EN_01_EN. Indd 17 17 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 8/11/2013 4:12:42 PM
Wiring connection (for KMR-M308BTE) Rear/ subwoofer output Part list for installation (A) Faceplate Fuse (10 A) Antenna terminal Microphone input jack
(8) If no connections are made, do not let the wire come out from the tab. White To front speaker (left) White/Black Gray To front speaker (right) Gray/Black
Green To rear speaker (left) Green/Black Purple To rear speaker (right) Ignition switch Car fuse box Red (Ignition wire) Yellow Car fuse box (Battery wire)
Black (Ground wire) Battery To the metallic body or chassis of the car Blue (Antenna control wire) (Not used) (E) Extraction key Brown (Mute control wire)
To connect the Kenwood navigation system, refer your navigations manual. (for KMR-M308BTE) (B) Trim plate Light blue/yellow (Steering remote control
wire) To the steering wheel remote control adapter (C) Mounting sleeve Blue/White (Power control wire) To the power control terminal when using the
optional power amplifier, or to the antenna control terminal in the vehicle. 0 (Full speed) FAT 12/ 16/ 32 DC 5 V 105 dB 88 dB Compliant with MPEG-1/2
Audio Layer-3 Compliant with Windows Media Audio RIFF waveform Audio Format (Linear PCM only) General FLAC files Auxiliary 90 dB 1 A Preout
Level/Load Preout Impedance Frequency Response (± 3 dB) Input Maximum Voltage Input Impedance Operating Voltage Maximum Current Consumption
Operational Temperature Range Installation Size (W x H x D) Weight 20 Hz — 20 kHz Maximum Output Power Output Power (DIN 45324, +B = 14. Об
iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th u 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th u 7th generation) - iPhone, iPhone 3G,
3GS, 4, 4S, 5 • Сведения о последнем списке совместимости и версиях программного обеспечения iPhone/iPod см.

Indd 19 19 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 19/11/2013 2:00:03 PM Declaration of Conformity with regard to the
R&TTE Directive 1999/5/EC Declaration of Conformity with regard to the EMC Directive 2004/108/EC Declaration of Conformity with regard to the RoHS
Directive 2011/65/EU Manufacturer: JVC KENWOOD Corporation 3-12, Moriya-cho, Kanagawa-ku, Yokohama-shi, Kanagawa, 221-0022, Japan EU
Representative: JVCKENWOOD NEDERLAND B. v. Amsterdamseweg 37, 1422 AC UITHOORN, The Netherlands English Hereby, JVC KENWOOD
declares that this unit KMM-BT34/ KMM-302BT/ KMR-M308BTE is in compliance with the essential requirements and other relevant provisions of Directive
1999/5/EC. .



[You're reading an excerpt. Click here to read official KENWOOD
KMM-BT34 user guide
http://yourpdfguides.com/dref/5532044](http://yourpdfguides.com/dref/5532044)