



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KMR-M308BT. You'll find the answers to all your questions on the KENWOOD KMR-M308BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KMR-M308BT
User guide KENWOOD KMR-M308BT
Operating instructions KENWOOD KMR-M308BT
Instructions for use KENWOOD KMR-M308BT
Instruction manual KENWOOD KMR-M308BT

KENWOOD

KMM-BT308U
KMM-BT308
KMR-M308BT

DIGITAL MEDIA RECEIVER
INSTRUCTION MANUAL
RECEPTEUR MULTIMÉDIA NUMÉRIQUE
MODE D'EMPLOI
RECEPTOR DE MEDIOS DIGITALES
MANUAL DE INSTRUCCIONES

JVCKENWOOD Corporation

Take the time to read through this instruction manual.
Familiarity with installation and operation procedures will help you obtain the best performance from your new Digital Media Receiver.

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below.
Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.
Model KMM-BT308U/KMM-BT308/KMR-M308BT Serial number _____

US Residents Only

Register Online

Register your Kenwood product at www.kenwoodusa.com

© 2013 JVC KENWOOD Corporation

GET0992-001B (00)



[You're reading an excerpt. Click here to read official KENWOOD KMR-M308BT user guide](http://yourpdfguides.com/dref/5532067)
<http://yourpdfguides.com/dref/5532067>

Manual abstract:

Indd 1 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 16/12/2013 12:25:57 PM CONTENTS BEFORE USE BASICS GETTING STARTED RADIO USB / iPod AUX Pandora® (for (for (for KMM-BT308U / KMR-M308BT) BEFORE USE 2 3 4 5 6 8 8 9 Warning Do not operate any function that takes your attention away from safe driving. Caution Volume setting: • Adjust the volume so that you can hear sounds outside the car to prevent accidents. □ Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of the output level. General: • Avoid using the USB device or iPod/iPhone if it might hinder safe driving. • Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data. □ Never put or leave any metallic objects (such as coins or metal tools) inside the unit, to prevent a short circuit. Remote control (RC-406): • Do not leave the remote control in hot places such as on the dashboard. • The Lithium battery is in danger of explosion if replaced incorrectly.

Replace it only with the same or equivalent type.

□ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. □ Keep the battery out of reach of children and in its original packaging when not in used. IHeartRadio® KMM-BT308U / KMR-M308BT) SiriusXM® Radio KMR-M308BT) 10 11 16 17 18 19 21 22 BLUETOOTH® DISPLAY SETTINGS AUDIO SETTINGS MORE INFORMATION TROUBLESHOOTING SPECIFICATIONS INSTALLATION / CONNECTION Maintenance Cleaning the unit: Wipe off dirt on the faceplate with a dry silicone or soft cloth. Cleaning the connector: Detach the faceplate and clean the connector gently with a cotton swab, being careful not to damage the connector. Connector (on the reverse side of the faceplate) How to read this manual • Operations are explained mainly using buttons on the faceplate.

• [XX] indicates the selected items. □ (XX) indicates references are available on the stated page. 2 EN_KMM_BT308U_KN_2. Indd 2 8/11/2013 3:46:53 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BASICS Faceplate Volume knob (turn/press) Attach Display window Remote control (RC-406) (for KMM-BT308U / KMM-BT308) Remote sensor (Do not expose to bright sunlight.) Detach Detach button KMM-BT308 How to reset Pull out the insulation sheet when using for the first time.

How to replace the battery Your preset adjustments will also be erased. To Turn on the power Adjust the volume Do this (on the faceplate) Press B SRC. □ Press and hold to turn off the power. turn the volume knob. Do this (on the remote control) Press and hold SRC to turn off the power. (Pressing SRC does not turn on the power.) Press VOL or VOL . Press ATT during playback to attenuate the sound. (not available) : You can also select to turn off the display information by pressing DISP SCRL repeatedly. eNGLISH \ EN_KMM_BT308U_KN_f.

Indd 3 3 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 29/11/2013 3:01:53 PM GETTING STARTED Set the initial settings 1 Press B SRC to enter STANDBY. 2 Press the volume knob to enter [FUNCTION]. 3 Turn the volume knob to make a selection (see the following table), then press the knob. 3 4 Press and hold 1 Cancel the demonstration to exit. To return to the previous setting item or hierarchy, press AUDIO CONTROL SWITCH PREOUT SP SELECT TUNER SETTING . Default: XX When you turn on the power (or after you reset the unit), the display shows: "CANCEL DEMO" "PRESS" "VOLUME KNOB" 1 Press the volume knob. REAR/SUB-W: Selects whether rear speakers or a subwoofer are connected to the line out terminals on the rear (through an external amplifier). OFF/ 5/4/ 6 × 9/6/ OEM: Selects according to the speaker size (5 inches or 4 inches, 6×9 inches or 6 inches) or OEM speakers for optimum performance. NORMAL: Memorizes one station for each preset button in each band (FM1/ FM2/ FM3/ AM). ; MIX: Memorizes one station for each preset button, regardless of the selected band.

2 1 2 3 4 Set the clock PRESET TYPE Press the volume knob to enter [FUNCTION]. Turn the volume knob to select [CLOCK], then press the knob. Turn the volume knob to select [CLOCK ADJUST], then press the knob. Turn the volume knob to make the settings, then press the knob. Day Hour Minute 5 Turn the volume knob to select [CLOCK FORMAT], then press the knob.

6 Turn the volume knob to select [12H] or [24H], then press the knob. 7 Press and hold to exit. To return to the previous setting item or hierarchy, press . Then, perform step 4 above to set the clock. For details on how to update the firmware, see: www.

Indd 4 8/11/2013 3:46:54 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) RADIO Other settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit. To return to the previous setting item or hierarchy, press TUNER SETTING . AUTO MEMORY YES: Automatically starts memorizing 6 stations with good reception. ; NO: Cancels. (Selectable only if [NORMAL] is selected for [PRESET TYPE].) (4) MONO SET TI PTY SEARCH CLOCK TIME SYNC ON: Synchronizes the unit's time to the Radio Broadcast Data System station time. ; OFF: Cancels. ON: Improves the FM reception, but the stereo effect may be lost.

Selects the available Program Type (see below), then, press S / T to start. 3 Press S / T (or press S / T (+) on RC-406) to search for a station. □ To change the searching method for S / T : Press SEEK repeatedly. □ To select a stored station: Press one of the number buttons (1 to 6) (or press one of the number buttons (1 to 6) on RC-406). direct Access Tuning (using RC-406) 1 Press DIRECT to enter Direct Access Tuning. 2 Press the number buttons to enter a frequency. □ If no operation is done for 10 seconds after step 2, Direct Access Tuning is automatically canceled. □ [MONO SET]/ [TI]/ [PTY SEARCH] is selectable only when the band is FM1/ FM2/ FM3. □ Available Program Type: SPEECH: NEWS, INFORM (information), SPORTS, TALK, LANGUAGE, REL TALK (religious talk), PERSNLTY (personality), PUBLIC, COLLEGE, HABL ESP (spanish talk), WEATHER MUSIC: ROCK, CLS ROCK (classic rock), ADLT HIT (adult hits), SOFT RCK (softrock), TOP 40, COUNTRY, OLDIES, SOFT, NOSTALGA (nostalgia), JAZZ, CLASSICL (classical), R & B (rhythm and blues), SOFT R&B (soft rhythm and blues), REL MUSC (religious music), MUSC ESP (spanish music), HIP HOP The unit will search for the Program Type categorized under [SPEECH] or [MUSIC] if selected. □ If the volume is adjusted during reception of traffic information or alarm, the adjusted volume is memorized automatically.

It will be applied the next time traffic information or alarm function is turned on.



[You're reading an excerpt. Click here to read official KENWOOD KMR-M308BT user guide](http://yourpdfguides.com/dref/5532067)
<http://yourpdfguides.com/dref/5532067>

KCA-iP102 (optional accessory) or accessory cable of the iPod/iPhone*1 Press 5 iPod to select the control mode while in iPod source. Random play *4 *1 *2 *3 *4 Do not leave the cable inside the car when not using. You can still play/pause, file skip, fast-forward or reverse files from the unit. only for MP3/WMA/AAC/WAV/FLAC files.

This does not work for iPod. For iPod: Applicable only when [MODE OFF] is selected. If you connect the iPod/iPhone to the USB input terminal of the unit (while listening to TuneIn Radio, TuneIn Radio Pro or Aupeo), the unit will output the sound from these apps. 6 EN_KMM_BT308U_KN_2. Indd 6 8/11/2013 3:46:54 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) USB / iPod Select a file from a list For iPod: Applicable only when [MODE OFF] is selected.

(6) 1 Press . 2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA/AAC/WAV/FLAC file: Select the desired folder, then a file. □ iPod or KME Light/ KMC file: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS*, GENRES, COMPOSERS*). * Only for iPod. □ To return to the root folder (or first file), press number button 5 iPod. □ To return to the previous setting item or hierarchy, press . • To cancel , press and hold . If you have many files. You can search through them quickly (on step 2 above) at a preset skip search ratio by pressing S / T.

□ See also "Set the skip search ratio. □ • Pressing and holding S / T skip songs at the maximum ratio (10%) regardless of the setting made. □ For USB: Only for files registered in the database created with KME Light/ KMC. direct Music Search (using RC-406) 1 Press DIRECT. 2 Press the number buttons to enter a file number. Set the skip search ratio While listening to iPod or KME Light/ KMC file. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [SKIP SEARCH], then press the knob. 4 Turn the volume knob to make a selection, then press the knob.

0. 5% (default)/ 1%/ 5%/ 10%: Skip search ratio over the total files. Select a song by name While listening to iPod. 1 Press . 2 Turn the volume knob to select a category, then press the knob.

3 Turn the volume knob quickly to enter character search. 4 Turn the volume knob to select the character to be searched for. 5 Press S / T to move to the entry position. You can enter up to 3 characters. 6 Press the volume knob to start searching.

7 Turn the volume knob to make a selection, then press the knob. Repeat step 7 until the desired item is selected. □ To search for a character other than A to Z and 0 to 9, enter only " ". □ To return to the previous hierarchy, press . □ To return to the top menu, press number button 5 iPod. • To cancel , press and hold .

. Change the USB drive When a smartphone (Mass Storage Class) is connected to the USB input terminal, you can select its internal memory or external memory (such as an SD card) to playback the stored songs. You can also select the desired drive to playback when a multiple drives device is connected. press 5 iPod repeatedly to select the desired drive. (or) 1 Press the volume knob to enter [FUNCTION].

2 Turn the volume knob to select [USB], then press the knob. 3 Turn the volume knob to select [MUSIC DRIVE], then press the knob. Repeat steps 1 to 4 to select the following drives. (4) Pandora® (for KMM-BT308U / KMR-M308BT) Preparation: Install the latest version of the Pandora application onto your device (iPhone/ iPod touch), then create an account and log in to Pandora. • Select [ON] for [PANDORA SRC]. (4) To Pause or resume playback Thumbs up or thumbs down Skip a track Create a new station Do this Press 6 IW (or press ENT IW on RC-406). press /. □ If thumbs down is selected, the current track is skipped. Auxiliary input jack Start listening 1 Open the Pandora application on Portable audio player your device. 2 Connect your device to the USB input terminal.

3 Turn on the portable audio player and start playback. 2 Turn the volume knob to select [FROM TRACK] or [FROM ARTIST], then press the knob. A new station is created based on the current song or artist. Save a station Press and hold one of the number buttons (1 to 5) to store. • To select a stored station , press one of the number buttons (1 to 5).

Set the AUX name While listening to a portable audio player connected to the unit. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [SYSTEM], then press the knob. 3 Turn the volume knob to select [AUX NAME SET], then press the knob. 4 Turn the volume knob to make a selection, then press the knob.

aUX (default)/ DVD/ PORTABLE/ GAME/ VIDEO/ TV 5 Press and hold to exit. KCA-iP102 (optional accessory) or accessory cable of the iPod/iPhone* The source changes to PANDORA and broadcast starts. * Do not leave the cable inside the car when not using. search for a registered station 1 Press . 2 Turn the volume knob to make ize: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) SiriusXM® Radio SiriusXM settings 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [SIRIUS XM], then press the knob. CHANNEL EDIT * 1 Turn the volume knob to select a category, then press the knob. 2 Turn the volume knob to select a channel you want to lock, then press the knob. □L" appears in front of the channel number. ON: Turns on the SiriusXM-defined lock setting (mature channel).

WEAK/ GOOD/ STRONG: Shows the strength of the current received signal. 0% — 100% (0): Shows the memory usage for Replay buffer. BLUETOOTH® You can operate Bluetooth devices using this unit. Connect the microphone Rear panel Microphone input jack Microphone (supplied) 3 Turn the volume knob to make a selection (see the following table), then press the knob. 4 Press and hold to exit. To return to the previous setting item or hierarchy, press . Default: XX There are two types of lock functions available: • SiriusXM-defined: When [MATURE CH] is set to [ON] • User-defined: Using [CHANNEL EDIT] when [MATURE CH] is set to [OFF] CHANNEL To unlock settings: LOCK 1 Turn the volume knob to select a number. 2 Press S / T to move to the entry position. 2 Press S / T to move to the entry position. 3 Repeat steps 1 and 2 to enter a new 4-digit pass code.

□ Make a note of the new pass code to enter channel lock settings from next time. SIGNAL LEVEL BUFFER USAGE SXM RESET Adjust the microphone angle Secure using cord clamps (not supplied) if necessary. * Displayed only when [MATURE CH] is set to [OFF]. If you turn off the unit or detach the control panel during a phone call conversation, the Bluetooth connection is disconnected. Continue the conversation using your mobile phone. supported Bluetooth profiles – Hands-Free Profile (HFP) – Serial Port Profile (SPP) – Phonebook Access Profile (PBAP) – Object Push Profile (OPP) – Advanced Audio Distribution Profile (A2DP) – Audio/Video Remote Control Profile (AVRCP) ENGLISH \ EN_KMM_BT308U_KN_2.



[You're reading an excerpt. Click here to read official KENWOOD](#)

[KMR-M308BT user guide](#)

<http://yourpdfguides.com/dref/5532067>

Indd 11 11 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 8/11/2013 3:46:55 PM BLUETOOTH® Pair a Bluetooth device When connecting a Bluetooth device to the unit for the first time, perform pairing between the unit and the device. Once the pairing is completed, the Bluetooth device will remain registered in the unit even if you reset the unit. □ Up to five devices can be registered (paired) in total. □ A maximum of two Bluetooth phones and one Bluetooth audio device can be connected at any time.

• This unit supports Secure Simple Pairing (SSP). □ Some Bluetooth devices may not automatically connect to the unit after pairing. Connect the device to the unit manually. Refer to the instruction manual of the Bluetooth device for more information. 1 Press B SRC to turn on the unit. 2 Search and select this unit model name (KMM-BT3**U/ KMM-BT3***/ KMR-M3**BT) on the Bluetooth device. □ PAIRING OK” appears when pairing is completed and “BT” will light up when the Bluetooth connection is established. □ For some Bluetooth devices, you may need to enter the Personal Identification Number (PIN) code immediately after searching. □ Pairing request (via Bluetooth) is automatically activated if an iPhone/ iPod touch is connected through the USB input terminal. (Applicable only if [AUTO PAIRING] is set to [ON].

) (15) Press the volume knob to pair once you have confirm the device name. Bluetooth test mode You can check the connectivity of the supported profile between the Bluetooth device and the unit. 2 Search and select this unit model name (KMM-BT3**U/ KMM-BT3***/ KMR-M3**BT) on the Bluetooth device. The connectivity result (OK or NG) appears after the test. PAIRING: Pairing status HF CNT: Hands-Free Profile (HFP) compatibility AUD CNT: Advanced Audio Distribution Profile (A2DP) compatibility PB DL: Phonebook Access profile (PBAP) compatibility • To cancel check mode, press and hold B SRC to turn off the unit. Bluetooth mobile phone To Receive a call Do this Press or the volume knob or one of the number buttons (1 to 6) (or press on RC-406). □ All the button illumination flash when there is an incoming call. □ When [AUTO ANSWER] is set to the selected time, the unit answers incoming call automatically. Indd 12 8/11/2013 3:46:56 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) BLUETOOTH® To Switch between hands-free and private talk modes Adjust the phone volume Do this Press 6 IW during a call. □ Operations may vary according to the connected Bluetooth device.

Turn the volume knob during a call. Phone volume: [00] to [35] (Default: [15]) • This adjustment will not affect the volume of the other sources. Text message notification When the phone receives a text message, the unit rings and “SMS RECEIVED” appears. □ You cannot read, edit, or send a message through the unit. □ To clear the message, press any button.

use Voice Recognition to activate Voice Recognition. 1 Press and hold The connected phone (which has been paired the earliest) is activated. However, if priority device is connected, pressing and holding activate the priority device. (15, DVC PRIORITY) 2 @@ • Supported Voice Recognition features vary for each phone. Refer to the instruction manual of the connected phone for details.

□ This unit also supports the intelligent personal assistant function of iPhone. Switch between two connected phones Improve the sound quality during a call While talking on the phone. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit. To return to the previous setting item or hierarchy, press . Default: XX MIC GAIN NR LEVEL ECHO CANCEL -20 — +8 (0): The sensitivity of the microphone increases as the number increased. □5 — -20 (-10): Adjust the noise reduction level until the least noise is being heard during a phone conversation. 1 — 10 (4): Adjust the echo cancellation delay time until the least echo is being heard during a phone conversation. bluetooth mode operations 1 Press to enter Bluetooth mode.

2 Turn the volume knob to make a selection (see the following table), then press the knob. 3 Press and hold to exit. To return to the previous setting item or hierarchy, press . (14, PHONE BOOK) To enter [PHONE BOOK] directly, press Press again to switch between the phonebooks of the connected phones.

CALL HISTORY 1 Press the volume knob to select a name or a phone number. □ “I” indicates call received, “O” indicates call made, “M” indicates call missed. • Press DISP SCRL to change the display category (NUMBER or NAME). □ “NO DATA” appears if there is no recorded call history. Indd 13 13 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 14/11/2013 2:17:08 PM BLUETOOTH® PHONE BOOK 1 Turn the volume knob to select a name, then press the knob.

2 Turn the volume knob to select a phone number, then press the knob to call. □ If the phone supports PBAP, the phonebook of the connected phone is automatically transferred to the unit when pairing. @@ transfer the phonebook manually. @@@@ 2 Press S / T to move the entry position. Repeat steps 1 and 2 until you finish entering the phone number.

3 Press the volume knob to call. @@ 2 Press to call. @@ (13) LOW/ MID/ FULL: Shows the strength of the battery. @@@@ ; OFF: Cancels. @@ (Default) ring tone is different according to the paired device.

@@@@ (The connected phone will ring if it does not support this feature. @@ ; OFF: Cancels. SMS NOTIFY* * Functionality depends on the type of the phone used. @@@@ 1 Press to enter Bluetooth mode. 2 Turn the volume knob to select [PHONE BOOK], then press the knob. 3 Turn the volume knob quickly to enter alphabet search mode. @@5 Turn the volume knob to select a name, then press the knob. @@ To return to the previous hierarchy, press . @@3 Turn the volume knob to select a contact or enter a phone number. @@@@ Bluetooth mode settings 1 Press the volume knob to enter [FUNCTION].

2 Turn the volume knob to select [BT MODE], then press the knob. @@ 4 Press and hold to exit. To return to the previous setting item or hierarchy, press PHONE SELECT AUDIO SELECT DEVICE DELETE DVC PRIORITY TRANSFER PB* Selects the phone or audio device to connect or disconnect. □ ” appears in front of the device name. . Default: XX Make a call from memory 1 Press to enter Bluetooth mode. Delete a contact Not applicable for mobile phone that supports PBAP. 1 Press to enter Bluetooth mode. 2 Turn the volume knob to select [CALL HISTORY] or [PHONE BOOK], then press the knob. 3 Turn the volume knob to select a contact.

@@@@4 Press and hold the volume knob to enter delete mode. 5 Turn the volume knob to select [DELETE ONE] or [DELETE ALL], then press the knob. DELETE ONE: Selected name or phone number in step 3 is deleted.



[You're reading an excerpt. Click here to read official KENWOOD KMR-M308BT user guide](http://yourpdfguides.com/dref/5532067)
<http://yourpdfguides.com/dref/5532067>

DELETE ALL: All names or phone numbers from the selected menu in step 2 is deleted. 6 Turn the volume knob to select [YES] or [NO], then press the knob. **PIN CODE EDIT (0000) RECONNECT AUTO PAIRING BT HF/AUDIO INITIALIZE 1** Turn the volume knob to select a device to delete, then press the knob. 2 Turn the volume knob to select [YES] or [NO], then press the knob. selects a device to be connected as priority device. □ " " appears in front of the device name set as priority. □DL PB " appear and transfer the phonebook of the connected phone to this unit manually.

* Selectable only when the connected phone supports OPP. Repeat steps 1 and 2 until you finish entering the PIN code. 3 Press the volume knob to confirm. **ON:** The unit automatically reconnect when the Bluetooth device is within range. ; **OFF:** Cancels. **ON:** The unit automatically pair supported Bluetooth device (iPhone/iPod touch) when it is connected through USB input terminal. Depending on the iOS version of the connected iPhone/iPod touch, this function may not work. ; **OFF:** Cancels. **FRONT:** Outputs audio from the front left and right speakers. ; **ALL:** Outputs audio from all the speakers.

(4) You can listen to Pandora on your smart phone (Android OS) through Bluetooth on this unit. 1 Open the Pandora application on your device. The source switches and broadcast starts automatically. □ You can operate Pandora in the same way as Pandora for iPod/iPhone. (8) **DISPLAY SETTINGS** Bluetooth audio player Operations and display indications may differ according to their availability on the connected device. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [DISPLAY], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit.

To return to the previous setting item or hierarchy, press . default: XX **DIMMER ON:** Dims the display illumination. ; **OFF:** Illuminates according to the [BRIGHTNESS] settings. **BRIGHTNESS LVL 0 — LVL 31:** Selects your preferred brightness level for display illumination. **TEXT SCROLL AUTO/ ONCE:** Selects whether to scroll the display information automatically, or scroll only once.

2 Operate the Bluetooth audio player to start playback. (4) You can listen to iHeartRadio on your smart phone (Android OS) through Bluetooth on this unit. 1 Open the iHeart Link application on your smart phone. 2 Connect your smart phone via Bluetooth connection. (11) 3 Press B SRC to select IHEARTRADIO. The source switches and broadcast starts automatically. □ You can operate iHeartRadio in the same way as iHeartRadio for iPod/iPhone. (9) Random play 16 EN_KMM_BT308U_KN_2. Indd 16 8/11/2013 3:46:56 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) **AUDIO SETTINGS** While listening to any source. 1 Press the volume knob to enter [FUNCTION]. 2 Turn the volume knob to select [AUDIO CONTROL], then press the knob. 3 Turn the volume knob to make a selection (see the following table), then press the knob. Repeat step 3 until the desired item is selected or activated. 4 Press and hold to exit. (or using RC-406) 1 Press AUD to enter [AUDIO CONTROL].

2 Press J / K to make a selection, then press ENT IW. To return to the previous setting item or hierarchy, press . default: XX **SUB-W LEVEL BASS LEVEL MID LEVEL TRE LEVEL PRESET EQ -15 to +15 (0):** Adjusts the subwoofer output level. □8 to +8 (+6): -8 to +8 (+5): -8 to +8 (0): Adjusts the level to memorize for each source. (Before making an adjustment, select the source you want to adjust.) **SUB-W PHASE REVERSE (180°)/ NORMAL (0°):** Selects the phase of the subwoofer output to be in line with the speaker output for optimum performance. (Selectable only if a setting other than [THROUGH] is selected for [LPF SUBWOOFER].) **R15 to F15 (0):** Adjusts the rear and front speaker output balance. 115 to R15 (0): Adjusts the left and right speaker output balance. □8 to +8 (for AUX) ; -8 to 0 (for other sources): Presets the volume adjustment level of each source.

(Before adjustment, select the source you want to adjust.) **ON:** Creates realistic sound by compensating the high-frequency components and restoring the rise-time of the waveform that are lost in audio data compression. (Select [USER] to use the customized bass, middle, and treble settings.) [DRIVE EQ] is a preset equalizer that reduces noise from the road. **LV1/ LV2:** Selects your preferred low and high frequencies boost to produce a well-balanced sound at a low volume level.

LPF SUBWOOFER THROUGH: All signals are sent to the subwoofer. ; **85HZ/ 120HZ/ 160HZ:** Audio signals with frequencies lower than 85 Hz/ 120 Hz/ 160 Hz are sent to the subwoofer. e**GLISH \ EN_KMM_BT308U_KN_2. Indd 17 17 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 8/11/2013 3:46:56 PM MORE INFORMATION** General Detailed information and notes about the playable audio files are stated in an online manual on the following web site: www.kenwood.com.

Com/cs/ce/audiofile/ About iPod/iPhone Made for - iPod touch (1st, 2nd, 3rd, 4th, and 5th generation) - iPod classic - iPod nano (3rd, 4th, 5th, 6th, and 7th generation) - iPhone, iPhone 3G, 3GS, 4, 4S, 5 • For the latest compatible list and software versions of iPhone/iPod, see: www.kenwood.com. About Bluetooth • Depending on the Bluetooth version of the device, some Bluetooth devices may not be able to connect to this unit. □ This unit may not work with some Bluetooth devices. • Signal conditions vary , depending on the surroundings. □ For more information about Bluetooth, visit the following website: [www. Flac](http://www.flac.org) • Playable USB device file system: FAT12, FAT16, FAT32 Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device. About Pandora • Pandora is available only in the U. □ Because Pandora is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired, or some or all of the services may become unavailable. □ Some functions of Pandora cannot be operated from this unit.

About USB devices • This unit can play MP3/WMA/AAC/WAV/FLAC files stored on a USB mass storage class device. • You cannot connect a USB device via a USB hub. □ Connecting a cable whose total length is longer than 5 m may result in abnormal playback. □ This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. About KENWOOD Music Editor Light and KENWOOD Music Control • This unit supports the PC application KENWOOD Music Editor Light and Android™ application KENWOOD Music Control. □ When you play audio files with song data added using the KENWOOD Music Editor Light or KENWOOD Music Control, you can search for audio files by Genres, Artists, Albums, Playlists, and Songs.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5532067)

[KMR-M308BT user guide](http://yourpdfguides.com/dref/5532067)

<http://yourpdfguides.com/dref/5532067>

□ KENWOOD Music Editor Light and KENWOOD Music Control are available on the following web site: [www.kenwood.com/cs/ce/About iHeartRadio](http://www.kenwood.com/cs/ce/About%20iHeartRadio) • iHeartRadio® is a third-party service, therefore the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.

□ Some iHeartRadio® functionality cannot be operated from this unit. □ The unit does not turn on. • Information shown on the display is incorrect. The unit does not work at all. Remedy • Adjust the volume to the optimum level.

• Check the cords and connections. Check to be sure the terminals of the speaker wires are insulated properly, then reset the unit. If this does not solve the problem, consult your nearest service center. Elapsed playing time is not correct. Correct characters are not displayed (e.

□ CANNOT CREATE” “CANNOT SAVE” “DISCONNECTED” “NO SKIPS” “NO STATIONS” “NOT CONNECTED” “IHEARTLINK UP” Remedy Do not use too many hierarchical levels or folders. This is caused by how the tracks are recorded. This unit can only display uppercase letters, numbers, and a limited number of symbols. new station creation is unsuccessful. Check the Pandora application on your device. The number of registered stations has reached its limit. Retry after deleting unnecessary stations from your device. Make sure you have installed the latest version of the Pandora application on your device. You try to access from a country which Pandora is not deliverable. If “Explicit Content” in [Account Settings] is checked in the web version of iHeartRADIO, custom stations become unavailable.

Check the connection to the device. Make sure you have installed the latest version of the iHeart Link for KENWOOD application on your device. For KMR-M308BT : The Auto Power Off function (that turns the power off after 20 minutes when in standby mode) does not work. □ Static noise while listening to • Pull the antenna out all the way. Make sure the media contains supported audio files. (18) “READ ERROR” appears. Copy the files and folders onto the USB device again. If this does not solve the problem, reset the USB device or use another USB device. (3) Make sure [OFF] is selected for [DEMO MODE].

Check the antenna and its connection are in good condition.

Make sure the SiriusXM Vehicle Tuner is connected to the unit. Make sure the antenna is mounted outside the vehicle. (13) • Reduce the distance between the unit and the Bluetooth device. □ Move the car to a place where you can get a better signal reception. □ Use voice calling method in a more quiet environment.

□ Reduce the distance from the microphone when you speak the name. □ Make sure the same voice as the registered voice tag is used. The connected phone does not support Voice Recognition feature. If “ERROR” appears again, check if the device supports the function you have tried. Bluetooth device cannot get the contact information.

□ Reduce the distance between the unit and the Bluetooth audio player. □ Turn off, then turn on the unit and try to connect again. □ Other Bluetooth devices might be trying to connect to the unit. □ Check whether the connected Bluetooth audio player supports Audio/Video Remote Control Profile (AVRCP). (Refer to the instructions of your audio player.) • Disconnect and connect the Bluetooth player again. Reset the unit and try the operation again. If this does not solve the problem, consult your nearest service center. IHeartRadio • Voice calling method is not successful. Sound is being interrupted or skipped during playback of a Bluetooth audio player.

The connected Bluetooth audio player cannot be controlled. Make sure you have entered the correct pass code. (3) • Make sure you have entered the same PIN code to both the unit and Bluetooth device. □ Delete pairing information from both the unit and the Bluetooth device, then perform pairing again. (12)

The number of registered devices has reached its limit. 0 (Full speed) FAT12/ 16/ 32 DC 5 V 1 A 20 Hz — 20 kHz 105 dB 88 dB 90 dB Compliant with MPEG-1/2 Audio Layer-3 Compliant with Windows Media Audio AAC-LC “. Indd 21 21 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 25/11/2013 3:56:32 PM INSTALLATION / CONNECTION Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery’s negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (red) to the car chassis or Ground wire (black) to prevent a short circuit. □ Insulate unconnected wires with vinyl tape to prevent a short circuit.

□ Be sure to ground this unit to the car’s chassis again after installation. Installing the unit (in-dash mounting) Do the required wiring. (23) Caution • For safety’s sake, leave wiring and mounting to professionals. consult the car audio dealer. □ Install this unit in the console of your vehicle.

Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such as the heat sink and enclosure become hot. □ Do not connect the [wires of speakers to the car chassis or Ground wire (black), or connect them in parallel. □ Mount the unit at an angle of less than 30°. □ If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle’s fuse box which provides 12 V DC power supply and is turned on and off by the ignition key.

□ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. On the car are working properly. □ If the fuse blows, first make sure the wires are not touching car’s chassis, then replace the old fuse with one that has the same rating. Hook on the top side Orientate the trim plate as illustrated before fitting. Dashboard of your car Bend the appropriate tabs to hold the mounting sleeve firmly in place. When installing without the mounting sleeve 1 Remove the mounting sleeve and trim plate from the unit. 2 Align the holes in the unit (on both sides) with the vehicle mounting bracket and secure the unit with screws (commercially available). Use only the specified screws. Using wrong screws might damage the unit. Basic procedure 1 Remove the key from the ignition switch, then 2 3 4 5 22 EN_KMM_BT308U_KN_2.

Indd 22 disconnect the [terminal of the car battery. (23) Install the unit to your car. See Installing the unit (in-dash mounting). Connect the [terminal of the car battery. reset the unit. (3) How to remove the unit 1 Detach the faceplate. 2 Fit the catch pin on the extraction keys into the holes on both sides of the trim plate, then pull it out. 3 Insert the extraction keys deeply into the slots on each side, then follow the arrows as shown on the right.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/5532067)

[KMR-M308BT user guide](http://yourpdfguides.com/dref/5532067)

<http://yourpdfguides.com/dref/5532067>

Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 8/11/2013 3:46:57 PM Wiring connection Fuse (10 A) For KMR-M308BT : To the optional SiriusXM Vehicle Tuner (commercially available) (10) Rear/ subwoofer output Microphone input jack (11) Antenna terminal Part list for installation (A) Faceplate If no connections are made, do not let the wire come out from the tab. White To front speaker (left) White/Black Gray To front speaker (right) Gray/Black Green To rear speaker (left) Green/Black Purple To rear speaker (right) Ignition switch Car fuse box Red (Ignition wire) Yellow Car fuse box (Battery wire) Black (Ground wire) Battery To the metallic body or chassis of the car Blue (Antenna control wire) (Not used) Brown (Mute control wire) Purple/Black Blue/White (Power control wire) Light blue/yellow (Marine remote control wire) Light blue/yellow (Steering remote control wire) To the steering wheel remote control adapter (B) Trim plate (C) Mounting sleeve For KMR-M308BT : To Kenwood Wired Marine Remote Control unit (optional accessory) For the latest information on marine accessories please go to: <http://www.kenwoodusa.com>.

Com/Car_ Entertainment/Marine/ To the power control terminal when using the optional power amplifier, or to the antenna control terminal in the vehicle. To connect the Kenwood navigation system, refer your navigations manual. Indd 23 23 Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) 25/11/2013 2:36:23 PM FCC WARNING This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual.

@@@ However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help.

LibFLAC Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. - Neither the name of the Xiph. Org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. CALIFORNIA, USA ONLY This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material—special handling may apply. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The term "IC: " before the certification/ registration number only signifies that the Industry Canada technical specification were met. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles). Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.) is not more than that necessary for successful communication. Indd ii 8/11/2013 3:46:57 PM Data Size: Book Size: B6L (182 mm x 128 mm) B6L (182 mm x 128 mm) • "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. □ Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. In the United States and other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.



[You're reading an excerpt. Click here to read official KENWOOD KMR-M308BT user guide](http://yourpdfguides.com/dref/5532067)
<http://yourpdfguides.com/dref/5532067>