



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD KVT-526DVD. You'll find the answers to all your questions on the KENWOOD KVT-526DVD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD KVT-526DVD
User guide KENWOOD KVT-526DVD
Operating instructions KENWOOD KVT-526DVD
Instructions for use KENWOOD KVT-526DVD
Instruction manual KENWOOD KVT-526DVD

KENWOOD

MONITOR WITH DVD RECEIVER

KVT-526DVD
KVT-556DVD

INSTRUCTION MANUAL

Kenwood Corporation

CE Declaration of Conformity with regard to the EMC
Directive 2004/108/EC

Manufacturer:
Kenwood Corporation
2187-3, Inaba-awa-machi, Hachioji-shi, Tokyo, 110-8525 Japan
EU Representative's:
Kenwood Electronics Europe BV
Amstelsdamseweg 37, 1422 AC UITHOORN, The Netherlands



© B64-4551-00/00 (E/W/Q/W)



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)
<http://yourpdfguides.com/dref/3333235>

Manual abstract:

on the disc, or use a disc with tape stuck on it. · Do not use disc type accessories. · Clean from the center of the disc and move outward. @@ · If the disc center hole or outside rim has burrs, use the disc only after removing the burrs with a ballpoint pen etc. How to reset your unit · If the unit or the connected unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed. · Remove the USB device before pressing the Reset button. Pressing the Reset button with the USB device installed can damage the data contained in the USB device. For how to remove the USB device, see <Playing a USB device> (page 12). Discs that cannot be used · Discs that are not round cannot be used.

Reset button Cleaning the Unit If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. @@ This unit may not correctly play discs which do not have the mark. · You cannot play a CD-R or CD-RW that has not been finalized. @@@@ · When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area. · The characters conforming to ISO 8859-1 character set can be displayed.

· The RDS or RBDS feature won't work where the service is not supported by any broadcasting station. Lens Fogging When you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, this condensation on the lens may not allow discs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer.

4 KVT-526DVD/KVT-556DVD Notes Navigation units that can be connected to this unit · KNA-G620T Update the navigation software to the latest version.

For how to update the software, refer to the instruction manual of the navigation unit. For the latest information on connectable navigation units, access www.kenwood.com/cs/ce/. List of playable discs Disc types DVD Standard DVD Video DVD Audio DVD-R DVD-RW DVD+R Support × × × × % × × %

Remark iPod/iPhone models that can be connected to this unit Made for · iPod nano (1st generation) · iPod nano (2nd generation) · iPod nano (3rd generation) · iPod nano (4th generation) · iPod nano (5th generation) · iPod with video · iPod classic · iPod touch (1st generation) · iPod touch (2nd generation) Works with DVD+RW DVD-R DL (Dual layer) DVD+R DL (Double layer) DVD-RAM Music CD CD-ROM CD-R CD-RW DTS-CD Video CD (VCD) Super video CD Photo CD CD-EXTRA HDCD Others CCCD Dualdisc Super audio CD MP3/WMA/AAC/JPEG/ MPEG/DivX Playback Multi-border/Multisession/ (Playback depends on authoring conditions) Compatible with 8-cm (3 inch) discs Only video format CD-TEXT/8-cm (3 inch) discs supported. MP3/WMA/AAC/JPEG/ DivX playback Multisession supported Packet write not supported. CD Only music CD session can be played. Sound quality of normal CD music Only CD layer can be played. · Update iPod/iPhone software to the latest version.

· You can control an iPod/iPhone from this unit by connecting an iPod/iPhone (commercial product) with Dock connector using an optional accessory iPod connection cable (KCA-iP301V). The word "iPod" appearing in this manual indicates the iPod/ iPhone connected with the KCA-iP301V (optional accessory). · By connecting your iPod/iPhone to this unit with an optional accessory iPod connection cable (KCAiP301V), you can supply power to your iPod/iPhone as well as charge it while playing music. However, the power of this unit must be on. : Playback is possible. % : Playback is partly possible. × : Playback is impossible. / · When buying DRM enabled contents, check the Registration Code in the <DivX Setup> (page 62). Registration Code changes each time a file with the displayed Registration Code is played to protect against copying. Use of "DualDisc" When playing a "DualDisc" on this unit, the surface of the disc that is not played may be scratched while the disc is inserted or ejected.

Since the music CD surface does not conform to the CD standard, playback may be impossible. (A "DualDisc" is a disc with one surface containing DVD standard signals and the other surface containing music CD signals.) Bluetooth unit that can be connected to this unit · KCA-BT200 TV tuner that can be connected to this unit · KTC-D500E · KTC-V300E · KTC-V301E English 5 Notes About Audio files · Playable Audio file AAC-LC (.m4a), MP3 (.mp3), WMA (.wma) About Picture files · Acceptable picture files JPEG · Extensions jpg, jpeg · Acceptable media CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device Acceptable discs, disc formats, USB device file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>. / · If music of normal CD and other playback systems are recorded in the same disc, only the playback system recorded at the first setout is played. · Playable disc media CD-R/RW/ROM, DVD±R/RW · Playable disc file format ISO 9660 Level 1/2, Joliet, Romeo, Long file name. · Playable USB device USB mass storage class, iPod with KCA-iP301V · Playable USB device file system FAT16, FAT32 Although the audio files are complied with the standards listed above, the play maybe impossible depending on the types or conditions of media or device.

· Playing order of the Audio file In the example of folder/file tree shown below, the files are played in the order from to . CD (About USB device · In this manual, the word "USB device" is used for flash memories and digital audio players which have USB terminals. · When the USB device is connected to this unit, it can be charged up provided that this unit is powered. · Install the USB device in the place where it will not prevent you from driving your vehicle properly. · You cannot connect a USB device via a USB hub and Multi Card Reader. · Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device. We shall have no compensation for any damage arising out of erasure of the stored data. · No USB device comes with this unit. You need to purchase a commercially available USB device.

· When connecting the USB device, usage of the CAUIEX (option) is recommended. Normal playback is not guaranteed when a cable other than the USB compatible cable is used. Connecting a cable whose total length is longer than 5 m can result in abnormal playback.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)
<http://yourpdfguides.com/dref/3333235>

) : Folder Folder : Audio file Audio fi An online manual about audio files is put on the site, www.kenwood.com/audiofile/. On this online manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well. About Video files · Acceptable video files MPEG1, MPEG2, DivX · Extensions mpg, mpeg, divx, div, avi · Acceptable media CD-R/RW/ROM, DVD±R/RW, VCD, mass-storageclass USB device, iPod with KCA-iP301V Acceptable discs, disc formats, USB device file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>.

6 KVT-526DVD/ff the ignition key (<Monitor Setup> page 70). · If the monitor movement is stopped by the shift lever or another obstacle when the monitor is opened, this movement is canceled by the safety function. If an obstacle is pinched by the monitor when closed, the monitor movement is also canceled by the safety function. If it has occurred, remove the obstacle and press the [OPEN/CLOSE] button again. 10 KVT-526DVD/KVT-556DVD B Turns power ON/OFF Press the button to turn on the power.

When the button is pressed and held down for 1 second or more, the power is turned off. A Adjusts the volume F Attenuates the volume Press it to attenuate the volume. Press it again to cancel muting. F Listening Traffic Information Press it for more than 1 second to turn the Traffic Information function on or off. (page 31) C Playing a disc When you load a disc into disc loading slot, the disc starts playing.

If a menu appears, when playing a video disc, select the desired item. / · See <List of playable discs> (page 5) for a list of supported discs and formats. Removing a disc Press [0] (Eject) button. D Play/ Pause Press [38] button once to pause. Press again to resume playing. H Selects a band/folder Press [FM] button to change to the radio bands to FM1/2/3 or next folder/disc. Press [AM] button to change the radio band to AM or previous folder/disc. DE Stop/ play Press [7] button to stop playing. Press [38] button I to resume playing from the previous interrupted position. I Selects a chapter/scene/track/ frequency Press [4] or [ç] button.

Selects a music or chapter, track, or frequency. G Switches Seek Mode Press the button to select the Seek mode. (See page 29, 41 for the <Seek Mode>.) English 11 Basic Operations A Playing a USB device When connecting a USB device, playback starts automatically. / · If the USB source is selected when a USB device is not connected, "No Device" is displayed. · When the playback is stopped and then restarted, the playback will start from the point where it was stopped at the last time. Even if the USB is removed and connected again, the playback will start from the last stopped point unless the contents in the USB device is changed. · Make sure that the USB device is connected firmly. Removing the USB device Press on the USB control screen to enter the USB suspend mode, and then remove the USB device. Refer to <USB Device Control> (page 36).

⌘ · Removing the USB device before entering the USB suspend mode may result in damaging the data in the USB device. 12 KVT-526DVD/KVT-556DVD A Selecting a source Press it to display the source select screen. Touch the source button to select the source. Full Source Select screen 2 8 3 1 4 1 5 6 7 7 1 Scrolls the source display. / · The displayed source depends on the type of device connected.

In addition, you cannot press the button of currently unavailable source. Favorite Source Select screen 9 The following buttons are always displayed on the source select screen and source control screen. 2 Press for at least 2 seconds to erase the buttons. Touch the screen to redisplay the buttons. 3 Displays the Source Select screen.

The display switches between Favorite Source Select screen and Full Source Select screen by touching the button. 4 Displays Source Control screen. 5 Displays the Audio Control Menu screen. (page 80) 6 Displays the Setup Menu screen. (page 58) 7 Adjusts the volume. 8 Clock display 9 Displays the Full Source Select screen. / · For how to register the frequently used source buttons to Favorite Source Select screen see <Direct Source Button Setup> (page 67). English 13 Basic Operations A B C A Screen Setup Press the button. Displays the Screen Control Screen (page 46). C Switches to the Navigation system Press the button to switch the display to the navigation system screen.

B Switches to the Hands Free control Press it for more than 1 second to the Hands Free control screen. Press it again for more than 1 second to resume the normal display. C Turns the display OFF Press it for more than 1 back screen 5 Backward Chapter Search Area Selects the previous chapter. 6 DVD Disc Menu Control Buttons Area Displays the Disc Menu Control buttons (page 20). 7 Information Display Button Area VCD playback screen DVD VCD Mode:Full AVOUT:AVIN 11 12 10 13 or DVD VCD PBC 8 Scene VER2 ST 9 3 IN P AF 0:05 [DVD] button on the "Source Select" screen 8 Scene/Track Number Display 9 Play time Display p Forward Scene/Track Search Area Selects the next scene (when PBC is On) or track (when PBC is Off). q Backward Scene/Track Search Area Selects the previous scene (when PBC is On) or track (when PBC is Off). w Zoom Control Button Area Displays the Zoom Control buttons (page 22). e Information Display Button Area / DVD playback screen DVD VIDEO Mode:Full AVOUT:AVIN · The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated. 5 6 4 7 1 DVD VIDEO Title 2 1 Chap 3 1 T 0:00:05 1 2 3 4 Title Number Display Chapter Number Display Play Time Display Forward Chapter Search Area Selects the next chapter.

18 KVT-526DVD/KVT-556DVD Functions When Displaying the Easy Control Panel Displays the basic operation buttons on the screen. 1 While the source is playing, press the [FNC] button Functions While Displaying the Control Screen Switches to the source control screen to use various playback functions. 1 While the source is playing, press the [FNC] button DVD VIDEO Mode:Full AVOUT:AVIN DVD VIDEO Mode:Full AVOUT:AVIN SCRN SCRN TI TI 1 DVD VIDEO 1 Title 2 1 Chap 3 1 IN DVD VIDEO Title 1 Chap 1 IN T 0:00:05 T 0:00:05 1 Chapter Search (during DVD play) Searches for a chapter. Scene/Track Search (during VCD play) Selects a scene (when PBC is On) or a track (when PBC is Off). 2 Stops playing.

When pressed twice, the disc is played from its beginning when you play it the next time.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)
<http://yourpdfguides.com/dref/3333235>

3 Plays or pauses. When playing a DVD 1 2 3 4 5 6 7 10 12 13 15 16 8 11 12 14 8 10 9 / · When the navigation screen is displayed, press the [NAV] button to switch to the source playback screen. · The Easy Control Panel is hidden when you touch a central part of the monitor. When playing a VCD 17 18 19 1 2 3 4 5 6 Switches to the playback screen.

Title Number Display (during DVD play) Chapter/Scene/Track Number Display Play Mode Display Play Time Display Volume Label Display When appears, the text display is scrolled by pressing it. 7 Ejects the disc. 8 Fast Forwards or Fast Backwards. Next page 3 English 19 Watching DVD/VCD 9 Stops playing. When pressed twice, the disc is played from its beginning when you play it in the next time. p Selects a chapter, a scene or a track. When the VCD is paused, touch this button to start single-frame stepping. q Plays or pauses. w Slow Forwards or Backwards. (during DVD play) e Switches the Repeat Play operations in the following sequence.

DVD: Title Repeat, Chapter Repeat, Repeat Off VCD: Track Repeat, Repeat Off (Available when the PBC is off) r Switches the play time display in the following sequence. DVD: Chapter, Title, remaining titles VCD: Track, disc, remaining discs (Effective only when the PBC function is off) t Function Indicator y Appears when a disc is inserted. u Turns the PBC function of VCD On or Off. (only when VCD Ver 2.0 is in use) i Appears when PBC is On. o VCD version indicator DVD Disc Menu Selects an option from the DVD Disc Menu. 1 Display the Disc Menu Control screen DVD VIDEO Mode:Full AV-OUT:AVIN DVD VIDEO Title 1 Chap 1 T 0:00:05 3 Me n u Ctrl Top 6 Menu 1 Return 5 3 3 4 En t e r Highlight 7 3 Canc e l 2 8 Ex i t 1 2 3 4 5 6 7 8 Calls the Menu. Returns to the Disc Menu screen. Selects a menu option. Enters your menu selection.

Returns to the previous menu screen. Displays the Top Menu. Highlight Control. Clears the Disc Menu Control. 20 KVT-526DVD/KVT-556DVD Highlight Control You can select a chapter and title for the DVD Menu screen.

When you touch the screen, you can select the DVD menu. Me n u Ctrl Top Menu Return 9 Calls the Menu Control. p Switches the picture angle. (during program playback only) q Switches the subtitle language. (during program playback only) w Switches the voice language.

(during program playback only) e Displays the Zoom Control screen. r Clears the Disc Menu Control. Zoom Control En t e r Highlight Canc e l Ex i t Me n u Ctrl SUB 3/3 Audio 1/2 H i g h l i g h t On Z o m Angle 1/1 Ex i t 16 Z o m C t r l / · Touching the central part of the monitor also turns on the Highlight Control. · To cancel Highlight Control, press [FNC] button. 15 16 16 Z o m x2 16 Canc e l 17 Ex i t 18 2 Select Disc Menu options Disc Menu Me n u Ctrl Top Menu Return t Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch. y Scrolls the screen in the direction you touch. u Returns to the Disc Menu Control screen. i Clears the Disc Menu Control. En t e r Highlight Canc e l Ex i t Me n u Ctrl SUB 3/3 Audio 1/2 9 11 12 13 Z o m 10 Angle 1/1 14 Ex i t English 21 Watching DVD/VCD VCD Zoom Control Displays an enlarged VCD screen. 1 Display the Zoom Control screen DVD VCD Mode:Full AVOUT:AVIN DVD VCD PBC Scene VER2 ST 3 IN P AF 0:05 Z o m C t r l 2 2 2 1 Z o m x2 2 3 Ex i t 1 Changes the zoom ratio at 2 levels (2 times or off) each time you touch.

2 Scrolls the screen in the direction you touch. 3 Clears the Zoom Control button. 22 KVT-526DVD/KVT-556DVD Music Disc & Audio File Listening You can recall various control screens during CD/Audio file playback. · For the basic method of how to play a music disc/audio file, see <Basic Operations> (page 10). · See <List of playable discs> (page 5) for playable discs. · See <About Audio files> (page 6) for playable files. Functions While Displaying the Control Screen Switches to the source control screen to use various playback functions. or [DVD] button on the "Source Select" screen 5 Music information display Selects the Disc Text or Track Text. appears, the text display is When scrolled by pressing it. 6 Ejects the disc.

7 Fast Forwards or Fast Backwards. 8 Stops playing the built-in disc player. When pressed twice, the disc is played from its beginning when you play it the next time. 9 Selects a track. p Plays or pauses.

q Starts or stops Scan Play (that plays the beginning of each music one after the other). w Repeats to play (the present track). e Starts or stops Random Play (to play music in random order). r Switches the number of lines displayed in the Information Display. t Switches the play time display between Track and Disc Remaining Time.

y Function Indicator u Appears when a disc is inserted. During CD playback 1 2 3 4 5 6 9 11 16 12 7 10 13 14 17 7 9 15 8 1 2 3 4 Switches to the wallpaper. Track (Music) Number Display Play Mode Display Play Time Display Next page 3 English 23 Music Disc & Audio File Listening During Audio file playback 18 19 20 21 22 23 26 28 29 30 34 31 32 35 36 33 24 27 28 24 26 25 37 b MUSIC, MOVIE or PICTURE indicator n Appears when a disc is inserted. m Repeats to play the music or data of the present folder. · Displays images in the folder currently being played one after another. If there is no image in the folder currently being played, initial background is displayed. For information on setting the image display time, see <System Setup> (page 62). · You can search for folders and Audio files through a hierarchy. P Displays music information (such as Tag and content property) of Audio file being played.

38 39 40 i Switches to the playback screen. If there is no playback screen, wallpaper is displayed. o Folder and File Number Display ; Play Mode Display a Play Time Display s Music information display Selects Folder Name, File Name, Title, Artist Name, or Album Name. When appears, the text display is scrolled by pressing it. d Ejects the disc. f Fast Forwards or Fast Backwards. (Disabled when a JPEG is being played.) g Stops playing. When pressed twice, the disc is played back from its beginning in the next time. h Selects a file.

j Plays or pauses. k Selects a folder. l Switches the button display. / Starts or stops Scan Play (that plays the beginning of each music or data one after the other). z Repeats to play (the preset files or data).

x Starts or stops Random Play (to play files of the present folder in random order). c Switches the number of lines displayed in the Information Display. v Function Indicator 24 KVT-526DVD/KVT-556DVD 42 41 43 44 42 45 Q Lists folders and Audio files. Folder opens when touched, and the Audio file is played.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)

<http://yourpdfguides.com/dref/3333235>

When appears, the text display is scrolled by pressing it.

W Scrolls the list. E Moves to the top hierarchy level. R Moves up a hierarchy level. T Displays the currently playing file. Video File/Picture File Watching
You can recall various control screens during playback of video file (MPEG 1, MPEG 2 and DivX file) and picture file (JPEG file). Function During
Playback Screen Basic functions are available even when the playback screen is displayed. 1 Display the playback screen 5 JPEG: Picture Control Button
Area (page 27) DivX: Sub=Off; Audio 1/1 MPEG: Switches to the screen with subtitle language selection option and voice language selection option. 6
Information Display Button Area / · The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed
automatically when it is updated. or [DVD] button on the "Source Select" screen DVD MEDIA Mode:Full AVOUT:AVIN 4 5 3 6 1 DVD MEDIA 2 1 IN 2 P
0:00:05 1 Folder/File Number Display 2 Play Time Display 3 Forward File Search Area Selects the next file.

4 Backward File Search Area Selects the previous file. English 25 Video File/Picture File Watching Functions When Displaying the Easy Control Panel
Displays the basic operation buttons on the screen. 1 While the source is playing, press the [FNC] button Functions While Displaying the Control Screen
Switches to the source control screen to use various playback functions. 1 While the source is playing, press the [FNC] button DVD MEDIA Mode:Full AV-
OUT:AVIN DVD MEDIA Mode:Full AVOUT:AVIN SCRNI TI SCRNI TI 1 DVD MEDIA 1 2 2 1 PICTURE 3 P IN 0:00:05 DVD MEDIA 2 1 PICTURE IN P
0:00:05 1 Selects a file. 2 Stops playing. 3 Plays or pauses. / · When the navigation screen is displayed, press the [NAV] button to switch to the source
playback screen. · The Easy Control Panel is hidden when you touch a central part of the monitor. 6 1 2 3 4 5 7 9 11 12 13 17 14 15 18 19 16 10 7 9 11 8 20
21 22 23 1 2 3 4 Switches to the playback screen. Folder and File Number Display Play Mode Display Play Time Display 26 KVT-526DVD/KVT-556DVD 5
Video/Picture information display Selects Folder Name, File Name, Title, Artist Name, or Album Name.

appears, the text display is When scrolled by pressing it. 6 Ejects a disc. 7 Fast Forwards or Fast Backwards. (Disabled when a JPEG is being played.) 8
Stops playing.

When pressed twice, the disc is played back from its beginning in the next time. 9 Selects a file. p Plays or pauses. q Selects a folder. w Switches the button
display.

e Starts or stops Scan Play (that plays the beginning of each song or data one after the other). r Repeats to play (the preset files or data). t Starts or stops
Random Play (to play files of the present folder in random order). y Switches the number of lines displayed in the Information Display. u Function Indicator i
PICTURE, MOVIE or MUSIC indicator o Appears when a disc is inserted. ; Repeats to play the file of the present folder. a Displays images in the folder
currently being played one after another. If there is no image in the folder currently being played, initial background is displayed. For information on setting
the image display time, see <System Setup> (page 62). s You can search for folders and files through a hierarchy.

d Displays information of file being played. g h j k Scrolls the list. Moves to the top hierarchy level. Moves up a hierarchy level. Displays the currently playing
file. Picture Control Adjusting the video display. 1 Start Picture Control DVD MEDIA Mode:Full AVOUT:AVIN DVD MEDIA 2 1 IN P 0:00:05 2 Adjust the
video display Picture Ctrl 2 3 1 4 Exit 1 2 3 4 Reverses the picture horizontally. Rotates counter clockwise. Rotates clockwise. Ends Picture Control.

25 24 26 27 25 28 f Lists folders and Video files/Picture files. Folder opens when touched, and the Video/ Picture file is played. English 27 Radio Listening
Various control screens appear in the Tuner Source mode. · For the basic method of receiver button operations, see <Basic Operations> (page 10). · Set the
remote controller mode switch to "AUD" mode before starting operation, see <Remote Controller Mode Switch> (page 84).

Functions While Displaying the Control Screen Switches to the source control screen to use various functions. [TUNER] button on the "Source Select" screen
1 2 3 4 14 7 5 7 6 9 10 11 12 13 8 15 4 Radio station information display. Selects the Program Service Name, Title & Artist name, Station Name, Radio Text
Plus 1/2, or Radio Text. 5 Switches to the FM1/2/3 band. 6 Switches to the AM band.

7 Tunes in a station. Use the <Seek Mode> (page 29) to change the frequency switching. 8 Switches the button display. 9 Selects the Monaural reception
mode. (Only when receiving the FM broadcast) p Selects the Auto Memory mode. (See page 30 for the <Auto Memory>) q Switches the Seek mode. (See page
29 for the <Seek Mode>) w Switches the number of lines displayed in the Information Display. e Turns the Local Seek function On or Off. r Turns the Traffic
Information function On or Off. See <Traffic Information> (page 31).

t When to buttons appear, you can recall the stations on memory. For memory of broadcasting stations, see <Auto Memory> (page 30) or <Manual
Memory> (page 30). y Searches station by program type. See <Search by Program Type> (page 32). u Lists and selects memorized station. i Displays Radio
Text screen. See <Radio Text> (page 31). 16 17 18 1 Band display 2 Preset number 3 Frequency display 28 KVT-526DVD/KVT-556DVD Seek Mode 19 20
Sets a station selection. 20 o Memorized stations are displayed. Touch to tune in.

; Scrolls the list. The mode is switched in following order each time you touch the button. Display "AUTO1" "AUTO2" "MANU" Setting Tunes in a station
with good reception automatically. Tunes in stations in memory one after another. Switches to the next frequency manually.

English 29 Radio Listening Auto Memory Stores stations with good reception in memory automatically. 1 Select a band you wish to store in memory Manual
Memory Stores the current receiving station in memory. 1 Select a station you wish to store in memory 2 Select the Auto Memory mode 2 Store in memory 3
Start Auto Memory Continue to touch until the memory number appears. Touch or . Auto Memory terminates when 6 stations are stored or when all stations
are tuned in.

/ · The operation ends automatically if you do not operate within 10 seconds. 30 KVT-526DVD/KVT-556DVD : Press for # seconds. Radio Text You can
display the radio text. (Only when receiving the FM broadcast) 1 Select a station Traffic Information When a traffic bulletin starts, any source is switched to
the traffic information and it is displayed automatically.



[You're reading an excerpt. Click here to read official KENWOOD](http://yourpdfguides.com/dref/3333235)

[KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)

<http://yourpdfguides.com/dref/3333235>

1 Set the Traffic information mode 2 Display the radio text When the traffic bulletin starts... The Traffic Information screen appears automatically. Traffic Information screen 1 2 2 3 1 Selects the Program Service Name, Title & Artist name, Station Name, Radio Text Plus, or Radio Text for text display. When appears, the text display is scrolled by pressing it.

2 Scrolls the text display. 3 Returns to the previous screen. / · It is necessary to have Traffic Information function set to On in order to have the Traffic Information screen appear automatically. · During reception of traffic information the adjusted volume is automatically remembered, so that the next time it switches to traffic information the level is that from the previously adjusted and remembered level. English 31 Radio Listening Search by Program Type A program is tuned when you set its program type. (Only when receiving the FM broadcast) 1 Enter Program Type mode 2 Select a Program Type 1 2 3 2 4 1 Program Type is displayed. Touch to select a Program Type. 2 Scrolls the Program Type list. 3 Searches for the program type. It is displayed when the Program type is selected.

4 Returns to the previous screen. 3 Search a station of the selected Program Type 32 KVT-526DVD/KVT-556DVD iPod Control You can control and listen to songs in your iPod by connecting an iPod to this unit with KCA-iP301V (optional accessory). You can also display video contents on this unit when connecting an iPod with video. Connecting an iPod Connect an iPod to this unit. Functions When Displaying the Easy Control Panel Displays the basic operation buttons on the screen.

1 While the source is playing, press the [FNC] button iPod Mode:Full AVOUT:AVIN 2 1 iPod Mode:Full AVOUT:AVIN 3 SCRN iPod 00002/00006 IN P 0:00:05 TI 1 Forward music/video search area Selects the next music/video. 2 Backward music/video search area Selects the previous music/video. 3 Information display button area The information is displayed for 5 seconds. 1 iPod 1 00002/00006 2 P IN 0:00:05 1 Music/Video Search. 2 Plays or pauses. / · When the navigation screen is displayed, press the [NAV] button to switch to the source playback screen. · The Easy Control Panel is hidden when you touch a central part of the monitor. / · Remove all accessories such as headphone before connecting an iPod. You may not be able to control the iPod if you connect it with accessories attached. · When you connect an iPod to this unit, playback starts from the song you were playing on the iPod itself (Resume Function). · If you start playback after connecting the iPod, the music that has been played by the iPod is played first. In this case, "RESUMING" is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc. · When the iPod is connected to this unit, "KENWOOD" or "" is displayed on the iPod to indicate that you cannot operate the iPod. · If the played song is not a video content, "No iPod Video Signal" is displayed on the video screen.

English 33 iPod Control Functions While Displaying the Control Screen Switches to the source control screen to use various playback functions. When Video or picture is playing, press the [FNC] button. 15 16 14 17 18 iPod Mode:Full AVOUT:AVIN SCRN TI iPod 00002/00006 IN P 0:00:05 or [iPod] button on the "Source Select" screen 1 Image picture Switches to the playback screen. If there is no playback screen, wallpaper is displayed. 2 Total number of music in the iPod and the music number display 3 Play Mode Display 4 Play Time Display 5 Music/Video Information Display Selects the Title, Artist Name, Album Name or iPod Name. When appears, the text display is scrolled by pressing it. 6 Fast Forwards or Fast Backwards. 7 Selects Music/Video. 8 Plays or pauses. 9 Switches the button display.

p Starts or stops Scan Play (that plays the beginning of each music or video one after the other). q Repeats to play (the preset files or data). w Starts or stops Random play.* e MUSIC or VIDEO indicator r Starts or stops Album Random Play (plays randomly from current album).* t Displays the list of music category.

y Displays the list of video category. u Displays the previous music/video list screen. i Displays information screen of music/video being played. 1 2 3 4 5 / * Disabled when VIDEO is being played. 6 9 10 11 12 13 7 8 34 KVT-526DVD/KVT-556DVD 1 19 20 21 22 20 23 o Categories and music are listed.

Touch a category name to move to its lower level. If music title is displayed, the music is played by touching it. When appears, the text display is scrolled by pressing it. When appears, all the music in its category is played by touching the button. ; Switches list page. a Returns to previous category. s Moves to the top category. d Displays the currently playing category. English 35 USB Device Control You can control and listen to songs in your USB device by simply connecting it to the USB connector of this unit. · For the connection of a USB device, see <Basic Operations> (page 10).

Functions When Displaying the Easy Control Panel Displays the basic operation buttons on the screen. 1 While the source is playing, press the [FNC] button Functions While displaying the Control Screen Switches to the source control screen to use various playback functions. When Video or picture is playing, press the [FNC] button. USB USB Mode:Full AVOUT:AVIN Mode:Full AVOUT:AVIN SCRN SCRN TI TI 1 USB 1 0002/0006 2 P IN USB 0002/0006 IN P 0:00:05 0:00:05 . 1 Selects a file. 2 Plays or pauses. or / · The Easy Control Panel is hidden when you touch a central part of the monitor. [USB] button on the "Source Select" screen 36 KVT-526DVD/KVT-556DVD 1 2 3 4 5 6 10 11 7 12 13 14 15 8 9 16 y Repeats to play the music or data of the present folder.* (Only in Folder Select Mode) u Displays images in the folder currently being played one after another.* If there is no image in the folder currently being played, initial background is displayed.

For information on setting the image display time, see <System Setup> (page 62). i Displays the folder list. See <Folder Select> (page 38). o Displays the list of category. ; Displays information screen of music being played.

/ * Disabled during play list mode. 17 18 19 20 1 Image picture Switches to the playback screen. If there is no playback screen, wallpaper is displayed. 2 Track Number Display 3 Play Mode Display 4 Play Time Display 5 Music information display Selects the Folder Name, File Name, Title, Artist Name, or Album Name. When appears, the text display is scrolled by pressing it.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)

<http://yourpdfguides.com/dref/3333235>

6 Removes the USB device. When "No Device" is shown, the USB device can be removed safely. If you wish to play it again while the USB device is connected, press it again. 7 Selects a folder. (Only in Folder Select Mode)* 8 Selects a file. 9 Plays or pauses. p Switches the button display. q Starts or stops Scan Play (that plays the beginning of each music one after the other). w Repeats to play (the present music). e Starts or stops Random Play (to play music in random order).

r Switches the number of lines displayed in the Information Display. t MUSIC, VIDEO or PICTURE indicator 1 21 22 23 24 22 25 26 The display above can also be the folder list display. See <Folder Select> (page 38). a Switches to the lower level of the category. If the file is displayed, the music is played by touching it. s Scrolls the list. d Lists all the music in the selected category. f Moves to the upper level of the category. g Moves to the top category. h Displays the currently playing category.

(Only in Category Mode) English 37 USB Device Control Folder Select Searches folders and Audio files stored in the USB device according to hierarchy. 1 Start Folder Select 2 Select music 1 2 3 4 2 5 6 1 Lists folders and Audio files Folder opens when touched, and the Audio file is played. 2 Scrolls the list. 3 Moves to the top hierarchy level. 4 Moves up a hierarchy level.

5 Moves to the top page of the list. 6 Displays the currently playing file. 38 KVT-526DVD/KVT-556DVD TV Watching Various control screens appear in the TV source mode. You can only operate TV with the optional accessory TV Tuner connected. Function During TV Screen Basic functions are available even when the TV screen is displayed.

1 Display the TV screen Functions When Displaying the Easy Control Panel Displays the basic operation buttons on the screen. 1 While the source is playing, press the [FNC] button [TV] button on the "Source Select" screen TV Mode:Full AVOUT:AVIN SCRNI 1 TV Mode:Full AVOUT:AVIN TV TV1 1 2 BAND SEEK 3 2ch Preset 1 6 7 5 8 1 TV AUTO1 TV1 2 Group 1 3 Preset 1 IN 4 AF 2ch 1 Selects a channel. Use the <Seek Mode> (page 41) to change the channel tuning sequence. 2 Switches to TV1 or TV2.*1 3 Switches the Seek mode.*1 1 TV Band Number Display 2 TV Area Group Display. See <TV Setup> (page 74). 3 Memory Number Display 4 Channel Number Display 5 Channel Up Area Increases the channel. 6 Channel Down Area Decreases the channel. 7 Band Switch Area Switches to TV1 or TV2.

8 Information Display Button Area / · When the navigation screen is displayed, press the [NAV] button to switch to the source playback screen. · The Easy Control Panel is hidden when you touch a central part of the monitor. · *1 Not available for the optional digital TV Tuner KTC-D500E. / · The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated. English 39 TV Watching Functions While Displaying the Control Screen Switches to source control screen to use various functions. 1 While the source is playing, press the [FNC] button TV Mode:Full AVOUT:AVIN 7 Select a channel. Use the <Seek Mode> (page 41) to change the channel tuning sequence. 8 Switches to TV1 or TV2. 9 Switches the button display.

p Selects the Auto Memory mode. See <Auto Memory> (page 41). q Switches the Seek mode. See <Seek Mode> (page 41). w Indicates current Seek mode. to buttons, you can e When recall channels on memory. For memory of broadcasting stations, see <Auto Memory> (page 41) or <Manual Memory> (page 42). r Sets a name to the tuned station. (page 42) t Lists and selects memorized station.*1 SCRNI BAND SEEK TV TV1 Preset 1 2ch 16 1 2 3 4 5 6 8 7 9 10 11 12 7 y Memorized stations are displayed.

Touch to tune in.*1 / *1 Not available for the optional digital TV Tuner KTC-D500E. 13 14 15 1 Switches to the TV screen. 2 Band display 3 TV Area Group Display See <TV Setup> (page 74). 4 Memory Number Display 5 Channel display 6 Channel information display 40 KVT-526DVD/KVT-556DVD TV Menu (only with KTC-D500E (optional accessory) connected) Menu Control screen appears by touching the area shown below. TV Mode:Full AVOUT:AVIN Auto Memory (only with KTC-D500E or KTC-V301E (optional accessory) connected) Stores stations with good reception in memory automatically. 1 Select a band you wish to store in memory TV AUTO1 TV1 Group 1 Preset 1 IN AF 2ch 1 Me n u Ctrl EPG 6 2 Menu 3 Return 2 Select the Auto Memory mode 6 6 4 En t e r 6 5 Ex i t 1 Shows EPG (Electric Program Guide) screen. 2 Shows Digital TV Broadcasting menu screen. 3 Returns to the previous screen. 4 Executes selected menu item.

5 Returns to Digital TV screen. 6 Moves highlight in Digital TV Broadcasting menu. 3 Start Auto Memory Seek Mode Sets a station selection. Auto Memory terminates when 6 stations are stored or when all stations are tuned in. / · The operation ends automatically if you do not operate within 10 seconds. The mode is switched in following order each time you touch the button. Display "AUTO1" "AUTO2" "MANU" Setting Tunes in a station with good reception automatically. Tunes in stations in memory one after another. Switches to the next frequency manually. English 41 TV Watching : Press for # seconds. Manual Memory (only with KTC-D500E or KTC-V301E (optional accessory) connected) Stores the current receiving channel in memory. 1 Select a station you wish to store in memory Set Station Name Assigns a name to a station. 1 Select a station you wish to name 2 Start Name set 2 Store in memory 3 Enter the name See <Character Entry> (page 45) for information on how to enter a name. 4 End Name set Continue to touch until the memory number appears. 42 KVT-526DVD/KVT-556DVD Bluetooth Audio Control When KCA-BT200 (optional accessory) is connected, you can listen to audio files stored in Bluetooth audio player and cell-phone.

· You need to register your audio player and cell-phone to your Bluetooth Unit beforehand. Make sure to read the instruction manual of the Bluetooth Unit as well. Functions While Displaying the Control Screen Switches to control screen to use various functions. [Bluetooth] button on the "Source Select" screen 1 4 2 4 3 1 2 3 4 Plays. Pauses.

Stops playing. Selects a file. / · If the Bluetooth Audio player does not support AVRCP profile, buttons 1 to 4 are not displayed. Operate from the Audio player. English 43 Muting Audio Volume upon Reception of Phone call When the telephone is called, the system is paused automatically. Muting Audio Volume upon Reception of Phone Call When a telephone call is received.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)
<http://yourpdfguides.com/dref/3333235>

.. The Phone Call ("CALL") screen appears, and system is paused. Phone Call ("CALL") screen When the call ends.

.. Hang up the phone. The system resumes playing automatically. / · To use the TEL Mute feature, you need to hook up the MUTE wire to your telephone using a commercial telephone accessory. Refer to <INSTALLATION MANUAL>. 44 KVT-526DVD/KVT-556DVD Character Entry When you select the Set Station Name mode or others, the following screen appears for character entry. How To Use the Character Entry Screen Character Entry screen 1 3 1 2 3 4 5 6 7 1 Shifts the cursor. 2 Enters characters. 3 Scrolls up or down the character button display.

4 Sets the key layout of the character buttons. abc : Alphabetical key layout. qwe : Qwerty key layout. 5 Enters a space. If you erase a character, locate the cursor on it and touch this button.

6 Clears the character. 7 Exits the Character Entry mode and returns to the previous screen. / · You can enter characters only after you have applied the parking brake. English 45 Screen Control Setting the monitor screen. Screen Control 1 Display Easy Control panel / · The Screen Control screen is displayed only when you have applied the parking brake.

· The picture quality can be set for each source. · You can set image quality of screens such as menu from <Monitor Setup> (page 70) of the <Setup Menu>. 2 Display the Screen Control screen DVD VIDEO Mode:Full AVOUT:AVIN SCRNI DVD VIDEO Title 1 Chap 1 IN T 0:00:05 3 Adjust the picture quality DIM 6 OFF 1 2 3 4 5 1 2 3 4 5 ON SYNC 7 Return 1 Brightness Control 2 Tint Control Displayed for an NTSC system image on TV, Video, iPod or Rear View Camera. 3 Color Control Displayed on the TV, Video, iPod or Rear View Camera screen only. 4 Contrast Control 5 Black Level Adjustment 6 Dimmer Mode Setup "ON": The display dims. "OFF": The display doesn't dim. "SYNC": Turning the Dimmer function On or Off when the vehicle light control switch is turned On or Off. 7 Returns to the previous screen. 46 KVT-526DVD/KVT-556DVD Hands Free Unit Control Various functions can be used in the Hands Free control mode. (only with the optional accessory Bluetooth unit connected) · You need to register your cell-phone to your Bluetooth Unit beforehand.

Make sure to read the instruction manual of the Bluetooth Unit as well. · To use the Phonebook, it must have been downloaded from the cell-phone. Control Screen Function Displaying the control screen and using various functions. 1 Display the Hands-Free Control screen Press the [FNC] button for more than 1 second. 2 3 4 1 8 9 5 6 7 10 11 12 1 Displays the various conditions. : Displays short message status. If a cellphone which supports SMS function is not connected, this mark does not appear. : There is unread short message. : There is no unread short message. : Downloading Phonebook.

: Indicates there is a call on hold. : Displays the signal strength.* The more the number of bar segments, the stronger the signal. : Displays the present Auto Answering status : When Auto Answering is on : When Auto Answering is off : Displays the battery drain of the cellphone.* The more the number of bar segments, the higher the battery level.

2 Displays the called phone numbers. If you have registered a phone number in the Phonebook, the destination person name is displayed. 3 Calls the displayed preset phone number. 4 Displays the SMS Select screen. See <SMS (Short Message Service)> (page 57).

5 Displays the Search for Phonebook screen. See <Calling by Phonebook> (page 50). 6 Displays the Outgoing Calls screen. See <Making a Call Using Call Records> (page 51). 7 Displays the Incoming Calls screen. See <Making a Call Using Call Records> (page 51). 8 Calls the preset phone number. For information on how to preset a phone number, see <Phone Number Preset> (page 56). 9 Displays the Hands-Free Set Up screen. See <Setting Up the Hands-Free Phone> (page 53).

p Displays the Dialing Display screen. See <Calling by Entering a Phone Number> (page 48). q Starts voice recognition. See <Calling by Voice Recognition> (page 52). w Returns to the previous screen. / · While your car is moving, some functions are disabled for safety's sake. The buttons associated with the disabled functions become ineffective if pressed. · When the Hands-Free Control screen appears, the name of the connected cell-phone is displayed for 5 seconds. · * Since the number of steps of the control unit is different from that of the cell-phone, the statuses displayed on the control unit may discord from those displayed on the cell-phone. No status is displayed if information about it cannot be obtained.

· Setting the cell-phone in the private mode can disable the hands-free function. English 47 Hands Free Unit Control When Received a Call When you receive a call, you can use the handsfree phone. 1 Respond to a call Calling by Entering a Phone Number Makes a call by entering a phone number. 1 Display the number input screen 1 2 3 4 When a call arrives, the Talking screen appears automatically. 1 Starts conversation with a person called.

Switches the call destination if you hear a tone of call-waiting. Resumes conversation with the person on hold after completed conversation with the other party. 2 Disconnects the phone. 3 Switches the voice output between phone and speaker. 4 Outputs dial tone.

See <Controlling Tone-based Services> (page 49). 2 Enter a phone number 1 2 3 4 1 Calls the entered phone number. 2 Creates an SMS for the entered phone number. See <SMS (Short Message Service)> (page 57). 3 Clears the number. 4 Returns to the previous screen. 3 Make a call Press the phone icon to dial the entered phone number. 4 End the call The Hand Free screen reappears. / · You can input max 32 digits. 48 KVT-526DVD/KVT-556DVD Quick Dialing You can register up to 6 phone numbers for quick dialing.

Controlling Tone-based Services Uses tone base service using DTMF (Dual Tone Multi Frequency). 1 Display the DTMF input screen Display the Talking screen. See <Calling by Entering a Phone Number> (page 48). / · Phone numbers must be registered in advance. See <Phone Number Preset> (page 56). 1 Recall the phone number 2 You can send tones during a call 2 Make a call 1 1 Returns to the previous screen. English 49 Hands Free Unit Control Calling by Phonebook You can call a person using his/her phone number that you have registered in the Phonebook. 1 Display the Phonebook screen Cyrillic alphabet search screen 5 2 2 3 5 Displays the Phonebook beginning with the name whose first character you have touched. 3 Select the name to call The Initial Input screen appears.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)

<http://yourpdfguides.com/dref/3333235>

2 Select the Phonebook search method You can search by the initial of the Phonebook data.

Initial alphabet screen 1 2 7 6 8 9 10 11 12 7 13 2 3 1 Displays the Phonebook beginning with the name whose first character you have touched. 2 Scrolls the character array display. 3 Returns to the Hands-Free Control screen. Initial number screen 4 2 6 Phonebook data list. @@7 Scrolls the Phonebook data list. 8 Scrolls the name. 9 Registers the voice for voice recognition to the selected Phonebook. If there are already 35 voice tag registered in the same cell-phone, [Record] button is deactivated. See <Voice Registration> (page 54). p Plays the voice registered in the selected Phonebook data.

q Deletes the voice registered in the selected Phonebook data. Touch to display the confirmation screen. Touch [YES] to delete or [NO] to cancel. w Displays the detail of the selected Phonebook data. e Returns to the Hands-Free Control screen. 2 3 4 Displays a list of numbers in the Phonebook starting with the selected number. 50 KVT-526DVD/KVT-556DVD 4 Select the phone number to call 14 16 15 17 Making a Call Using Call Records Calls by selecting a phone number from the outgoing or incoming calls list. 1 Display the Outgoing Calls or Incoming Calls screen 18 r Calls the selected phone number. t Creates an SMS for the displayed phone number. See <SMS (Short Message Service)> (page 57).

y Scrolls the phone number. u Displays the Phonebook data list. i Returns to the Hands-Free Control screen. 5 Make a call : Outgoing Calls : Incoming Calls The Outgoing Calls or Incoming Calls list screen appears. @@@@Scrolls the list. Makes a call to the selected number. Creates an SMS for the selected phone number. See <SMS (Short Message Service)> (page 57). 5 Displays the detail of the selected phone number. 6 Returns to the Hands-Free Control screen.

@@@@See <Voice Registration> (page 54). @@@@@@1 Cancels voice recognition. 3 Calls the displayed phone number. 4 Creates an SMS to the displayed address. See <SMS (Short Message Service)> (page 57).

5 Selects the Phone number category. 6 Scrolls the phone number. 7 Displays the Phonebook data list. 8 Returns to the Hands-Free Control screen. @@Read the message for the further operation.

2 Make a call. 2 Displays the phonebook list. 52 KVT-526DVD/KVT-556DVD Setting Up the Hands-Free Phone The Hands-Free system can be set as follows. @@("ON") "ON": Yes. "OFF": No. 8 Sets the SMS function. ("ON") "ON": Use SMS function. "OFF": SMS not available. @@See <Key Word Voice Registration> (page 55). @@See <Phone Number Preset> (page 56).

@@@@@2 Sets an automatic response time to pick-up an incoming call. ("8") "Off": This function is disabled. @@@3 Sets the beep of the incoming call. ("ON") "ON": Beep is heard. "OFF": Beep is canceled. 4 Sets the beep of the incoming SMS. ("ON") "ON": Beep is heard. "OFF": Beep is canceled. 5 Returns to the Hands-Free Control screen. @@Up to 35 voices can be recorded for one cell-phone.

@@Read the message for the further operation. @@@@@@3 Cancels voice registration. Say within 2 seconds after the Beep. @@@@@@7 Cancels voice registration. Say within 2 seconds after the Beep.

@@@@@2 Registers voice for the selected Phone number category. 3 Plays voice registered for the selected Phone number category. 4 Deletes voice registered for the selected Phone number category. Touch to display the confirmation screen. Touch [YES] to delete or [NO] to cancel.

5 Returns to the Hands-Free Setup screen. @@Read the message for the further operation. @@@@@@q Returns to the previous screen. @@@@@Registers from SMS outgoing calls list. Registers from Phonebook. Registers from outgoing calls list. Registers from incoming calls list. Registers by entering phone numbers. Registers voice for voice recognition to preset number. 9 Registers the currently displayed phone number.

@@@1 Display the SMS Select screen SMS Message screen 10 11 12 13 12 2 Select a function 1 p Calls the number in the selected message. q Creates a new message for the selected message. w Scrolls the message. e Returns to the previous screen. 4 Create a message 15 2 3 4 5 14 17 14 17 18 19 20 21 22 16 1 Displays received message list. 2 Displays sent message list. 3 Displays the Message screen. If there is an unfinished message, the button will be active. 4 Retrieves SMS messages from the cellphone. 5 Returns to the Hands-Free Control screen.

3 Select message to display 6 7 8 9 r Moves the cursor. t Displays remaining number of characters allowed. y Enters character. u Changes keyboard character type. i Sends the message.

o Sets the key layout of the character buttons. abc : Alphabetical key layout. qwe : Qwerty key layout. ; Enters space. a Erases the entered character. If pressed more than 1 second, all the input characters are erased. s Returns to the previous screen. 8 6 Calls the number in the selected message. 7 Creates a new message for the selected message. 8 Scrolls the list. 9 Displays the selected message. English 57 Setup Menu You can set up various receiver parameters. Setup Menu Displays the Setup menu to set various functions. 1 Display the control screen of any source Audio Setup You can setup a speaker network, etc. 1 Display the Audio SETUP screen Touch Menu" screen (page 58).

in the "Setup / [Audio Setup] cannot be selected under the following conditions: When no source is selected. When dual zone function is set to on. See <Zone Control> (page 82) Touch any source button on the "Source Select" screen. 2 Display the Setup Menu 2 Setup each item 1 2 3 4 3 Select the setup item 1 2 2 1 The selected setup screen appears. 2 Scrolls the setup menu. / [Audio Setup] and [AV Interface] options can be locked. The key mark () is displayed in reverse video for the locked option. See <Setup Memory> (page 79). 1 Selects the speaker to set the crossover. See <Crossover Network Setup> (page 59).

2 Sets the availability of subwoofers. This can be selected only when Preout is set to "Sub". See <System Setup> (page 62). 3 Selects the type of front speakers. "Standard": Setup for general diameter speakers "Narrow": Setup for small diameter speakers "Middle": Setup for middle diameter speakers "Wide": Setup for large diameter speakers 4 Switches to the crossover setup screen.

See <Crossover Network Setup> (page 59). 58 KVT-526DVD/KVT-556DVD Crossover Network Setup You can set a crossover frequency of speakers. 1 Select the speaker to set the crossover DVD Setup You can set up the DVD play. 1 Display the DVD Setup screen Touch Menu" screen (page 58). in the "Setup 1 1 2 Setup each item 2 2 4 3 2 3 4 5 1 1 2 3 4 Sets the High Pass Filter of the front speaker.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)
<http://yourpdfguides.com/dref/3333235>

Sets the High Pass Filter of the rear speaker. Sets the Low Pass Filter of the sub woofer. Switches to the crossover setup screen. 2 Display the Crossover setup screen 3 Set the crossover 5 6 7 5 Sets the cross over frequency. When front speaker or rear speaker is selected in step 1: High Pass Filter adjustment When Subwoofer is selected in step 1: Low Pass Filter adjustment 6 Sets the sub woofer phase. (Only when "Subwoofer" is set to "ON" in Audio Setup and "LPF SUB FREQ" is set to other than "Through") 7 Returns to the "Audio Setup" screen. 1 Moves to the "DVD Setup 2" screen. 2 Selects a disc menu language.*1 (See <Language Setup>, page 60) 3 Selects a subtitle language.*1 (See <Language Setup>, page 60) 4 Selects an audio language.

*1 (See <Language Setup>, page 60) 5 Sets the dynamic range.*1 ("Wide") The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Dialog". "Dialog" makes the total sound volume becomes larger as compared with "Wide" and "Normal", allowing you to listen to the movie's dialog more clearly. This is effective only when you are using a Dolby Digital software. The operation is available during the play stop mode. Next page 3 English 59 Setup Menu 6 7 8 9 Language Setup Selects a language you use for the speech and menus. 1 Select the language item to set See <DVD Setup> (page 59) and select [Menu Language], [Subtitle Language] or [Audio Language]. 6 Returns to the "DVD Setup 1" screen. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ 3 Sets the original audio language. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ . The parental lock level varies depending on a loaded disc.

· If a disc has no parental lock, anybody can play it back even when you have set the parental lock. 1 2 3 4 5 1 Enters a code number. 2 Cancels the current setup and returns to the "DVD Setup 2" screen. 3 Indicates the present parental lock level. 4 Determines the code number and displays the Parental Level setup screen.

5 Clears the code number. / · The number you enter first is set as your code number. · You can clear the code number by pressing the Reset button. 3 Display the Parental Level Setup screen English 61 Setup Menu DivX Setup Checks the registration code. This code is needed when making a disc which has DRM (Digital Rights Management).

1 Display the DivX Setup screen Touch Menu" screen (page 58). in the "Setup System Setup You can set up the system parameters. 1 Display the System Setup screen Touch Menu" screen (page 58). 2 Setup each item 1 2 3 4 1 5 in the "Setup 1 Displays the registration code. / · When downloading a DivX VOD file controlled by DRM, register the code appeared on the screen such as the one above. Otherwise the file may not be able to play with this unit. Remaining number of viewing is displayed when playing a DivX VOD file with the viewing restriction. When the remaining number of viewing reached 0, a warning message appears and the file cannot be played. 1 Moves to the "System Setup 2" screen. 2 Turns the key touch tone On or Off.

("ON") 3 Allows scrolling of text display on the Source Control screen. ("Auto") "Auto": Scrolls the screen automatically. "Manual": Allows you to scroll the screen manually. 4 Selects a remote control signal. ("ON") When turned "OFF", the remote control of TV reception is rejected. 5 Sets a music CD playback. ("1") "1": Automatically recognizes and plays back an Audio file disc, a DVD or a music CD. "2": Forcibly plays back a disc as a music CD. Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position. / · You cannot play an Audio file/VCD disc in the "2" position.

Also, you may not play some music CDs in the "2" position. · Your setup is disabled when the disc is being played. 62 KVT-526DVD/KVT-556DVD 6 8 9 10 7 16 15 6 Returns to the "System Setup 1" screen. 7 Moves to the "System Setup 3" screen. 8 Sets the button illumination color.

See <Panel Color Coordinate> (page 63). 9 When set to "ON", the illumination color of the screen and buttons changes one after another. p Select an illumination color of receiver buttons. ("Red") "Green": Green "Red": Red 1 Returns to the "System Setup 3" screen. y Selects a picture display time. ("Long") The Display of a JPEG picture is changed. ("Short", "Middle", "Long") Panel Color Coordinate Sets the screen and button illumination color. 1 Display the Panel Color Coordinate screen 11 13 14 12 See <System Setup> (page 62). q Returns to the "System Setup 2" screen. w Moves to the "System Setup 4" screen. e Sets the Preout output. (Settable only when in Standby mode) "Rear" : Rear sound is output. "Sub" : Subwoofer sound is output. r Sets the function of the [NAV] button. "V.

OFF" : Press the [NAV] button for more than 1 second to turn the display off. "R-CAM" : Press the [NAV] button for more than 1 second to switch to rear view. 2 Select a color 1 2 3 1 Sets to the touched color. 2 Sets and registers favorite color. 3 Returns to the "System Setup 2" screen. Next page 3 English 63 Setup Menu To register your original color 1 Start the RGB coordinate AV Interface Setup You can set audio and visual (AV) interface parameters. 1 Display the AV Interface screen 2 Adjust each color value 2 3 4 1 Touch Menu" screen (page 58). 2 Setup each item in the "Setup 1 2 3 4 5 1 2 3 4 5 Selects a preset number to register. Adjusts the Red value. Adjusts the Green value.

Adjusts the Blue value. Returns to the "Panel Color Coordinate" screen. 3 Select a Preset number to register Adjusted color is registered to the selected Preset button. 4 Complete the color coordination 1 Moves to the "AV Interface 2" screen. 2 Sets a name to be displayed when you select a system that is connected via the AV INPUT port.

("VIDEO") When using the rear view camera, set it to "R-CAM". 3 Sets an image display of the system that is connected via the AV INPUT port. ("OFF") "OFF": When the image source is switched, an image entered via the AV INPUT port is displayed. "ON": When an image signal is entered via the AV INPUT port, this image is displayed. 4 Selects a navigation system connection.

("RGB") "RGB": Allows the Kenwood's Navigation System to connect via the AV INPUT port. "AV-IN": Allows a third-party navigation system to connect via the AV INPUT port.



[You're reading an excerpt. Click here to read official KENWOOD KVT-526DVD user guide](http://yourpdfguides.com/dref/3333235)
<http://yourpdfguides.com/dref/3333235>