



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KENWOOD TT720. You'll find the answers to all your questions on the KENWOOD TT720 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENWOOD TT720
User guide KENWOOD TT720
Operating instructions KENWOOD TT720
Instructions for use KENWOOD TT720
Instruction manual KENWOOD TT720

KENWOOD



TT720 series

English	2 - 4
Nederlands	5 - 8
Français	9 - 12
Deutsch	13 - 16
Italiano	17 - 20
Português	21 - 24
Español	25 - 28
Dansk	29 - 31
Svenska	32 - 34
Norsk	35 - 37
Suomi	38 - 40
Türkçe	41 - 44
Česky	45 - 47
Magyar	48 - 51
Polski	52 - 55
Русский	56 - 59
Ελληνικά	60 - 63
عربي	٦٤ - ٦٦



Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK
www.kenwoodworld.com 57777/1



[You're reading an excerpt. Click here to read official KENWOOD TT720 user guide](http://yourpdfguides.com/dref/5543808)
<http://yourpdfguides.com/dref/5543808>

Manual abstract:

Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions. Before plugging in Make sure your electricity supply is the same as the one shown on the underside of your toaster. This toaster complies with European Economic Community Directive 89/336/EEC. Safety Burnt food can catch fire, so: never leave your toaster on unattended; keep your toaster away from anything (eg curtains) that could catch fire; set the browning control lower for thin or dry bread; never warm food with a topping or filling (eg pizza): if it drips into the toaster, it could catch fire. Clean the crumb tray regularly: crumbs can smoke or burn. Never let the cord hang down where a child could grab it. Do not move the toaster whilst it is in operation. Never touch hot surfaces especially the metal top area. Get it checked or repaired: see 'Service'. Do not let infirm people use the appliance without supervision. Do not let children use or play with the appliance. As with all new heating elements, your toaster may emit a slight burning smell when it is first switched on. This is normal and not a cause for concern. Key features: removable warming rack warming rack button bagel button defrost button browning indicator lights carriage/cancel button +/- buttons cord storage crumb tray to use your toaster 1 Plug the toaster into the power supply and an audible bleep will be heard. Setting 3 will automatically be selected and the corresponding indicator light will glow. The indicator light will show which setting has been selected.



[You're reading an excerpt. Click here to read official KENWOOD TT720 user guide](#)
<http://yourpdfguides.com/dref/5543808>