

Manual abstract:

@@@ □ prevent short-circuit, keep all wiring away from moving parts, sharp edges, cut metal, To etc. □ □ When removing or installing the grille, be careful not to brush the unit with the edge of the grille. □ Do not switch ON power until wiring is completed. Note : For mounting location, do not select the following places. N Door panel • When the door window glass is lowered (opened), the unit is damaged. □ When the window crank handle is rotated, it comes into contact with the unit. N Rear deck • □ When the unit comes into contact with the boot lid spring (trunk lid spring) or shock absorbers (shock towers). □ When the unit damages the gas tank or fuel hose. □ When the unit comes into contact with the rear window glass, car wall, etc. @@ Have a specialist install and connect the speaker.

□ Make sure that the speaker will not rattle or displace. Otherwise, a displaced speaker may cause injury. Do not modify the speaker. □ Otherwise, smoke or fire may result. Do not touch the speaker.

@@ In case of abnormality, stop the use and disconnect the speaker. □ If operation is continued, smoke or fire may result. Disconnect the speaker and ask servicing. @@@@ Obtain the audio speaker cords with the required length. @@ 12 AWG speaker wire is recommended.

@@N Example / Example / Ejemplo / Exemplo Tweeter attenuator switching / Réglage d'atténuateur du hautparleur d'aigus / Conmutación del atenuador del altavoz de agudos / Comutador do atenuador do altifalante de agudos When changing the setting, change the jumper position as follows. □ □ do not touch the electronic parts inside the crossover network. 5-2 / Figura 5-2 Note: • □ he tweeter level is selectable by changing the tweeter T attenuator to the desired level. □ □ arge power input will cause the protection circuit for the L tweeter to operate, which will decrease output level. In this case, turn the volume of the receiver to "0", then eventually the tweeter will automatically start working again. @@@.



[You're reading an excerpt. Click here to read official KENWOOD XR-1800P user guide](http://yourpdfguides.com/dref/5534377)
<http://yourpdfguides.com/dref/5534377>