

Manual abstract:

Insert the MMC or SD card into the reader. Continue to push the media into the reader until you hear a click. The media is now inserted. Close the media door for protection. In order to remove the media, open the media door and push the card until you hear a click again. The media will then release and partially eject. You can now remove the media. @@@@ @ 0 interface). @@@@ In order to access this page, go to kingston.com/support/install and select Flash Media Readers.

@@ To view or print out the user manual (. Pdf), Adobe Reader must be first be installed. This program can be downloaded free of charge at adobe. .*



[You're reading an excerpt. Click here to read official KINGSTON](#)

[FCR-HS2MMC user guide](#)

<http://yourpdfguides.com/dref/4533940>