




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KINGSTON KVR133X64SC3L512. You'll find the answers to all your questions on the KINGSTON KVR133X64SC3L512 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KINGSTON KVR133X64SC3L512
User guide KINGSTON KVR133X64SC3L512
Operating instructions KINGSTON KVR133X64SC3L512
Instructions for use KINGSTON KVR133X64SC3L512
Instruction manual KINGSTON KVR133X64SC3L512

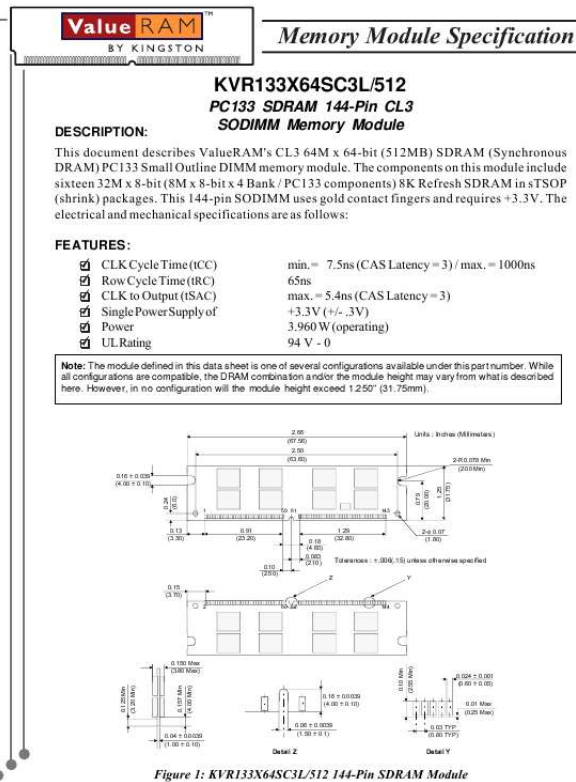

[You're reading an excerpt. Click here to read official KINGSTON KVR133X64SC3L512 user guide](http://yourpdfguides.com/dref/2453553)
<http://yourpdfguides.com/dref/2453553>

Manual abstract:

The components on this module include sixteen 32M x 8-bit (8M x 8-bit x 4 Bank / PC133 components) 8K Refresh SDRAM in STSOP (shrink) packages. This 144-pin SODIMM uses gold contact fingers and requires +3.3V. @ @ = 7.5ns (CAS Latency = 3) / max. = 1000ns 65ns max.

@ @ @ @ @ VALUERAM0204-001.B00 03/05/02 .



[You're reading an excerpt. Click here to read official KINGSTON
KVR133X64SC3L512 user guide
<http://yourpdfguides.com/dref/2453553>](#)