



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK BATTERY CHARGER K4500. You'll find the answers to all your questions on the KODAK BATTERY CHARGER K4500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual KODAK BATTERY CHARGER K4500 User guide KODAK BATTERY CHARGER K4500 Operating instructions KODAK BATTERY CHARGER K4500 Instructions for use KODAK BATTERY CHARGER K4500 Instruction manual KODAK BATTERY CHARGER K4500

### KODAK Rapid Charger User's Guide

Charge your KODAK KAA2HR/KAA2HR-PC/Ni-MH Rechargeable Battery Pack

Approximate charging time: 2-1/2 hours.

Refresh your KODAK KAA2HR Ni-MH Rechargeable Battery Pack

If you are getting fewer than 20 pictures per charge, you may need to refresh your Battery Pack as follows:

1. Place Battery Pack in charger.

2. Press the refresh button for 3 seconds.

A full refresh cycle can take up to 8 hours. For best results, refresh the Battery Pack overnight; do not interrupt the discharge/refresh cycle.

A full refresh cycle can take up to 8 hours. For best results, refresh the Battery Pack overnight; do not interrupt the discharge/refresh cycle.

Additional KODAK KAA2HR Ni-MH Rechargeable Battery Packs are available from your local Kodak dealer, or visit our website at [www.kodak.com/go/batteries](http://www.kodak.com/go/batteries).

**Important Charging Information for Ni-MH Batteries**

Ni-MH batteries may not charge to full capacity the first time they are charged or after a long period of in-use.

The first-time charge of the KODAK KAA2HR Ni-MH Rechargeable Battery Pack should take approximately 2-1/2 hours. If the blinking green light stops, indicating a full charge, in less than 2-1/2 hours, follow the refresh instructions above.

A refresh cycle may also need to be performed if your Battery Pack is left uncharged for longer than 2 months.

#### Safety Tips

- Unplug the charger from the power outlet when not in use.
- Use only the type of power source indicated on the charger.
- Unplug the charger before cleaning with a damp cloth.
- Do not push sharp or conductive objects into the charger.
- Do not use the charger as a DC power supply.
- Do not use the charger if the power plug is loose or damaged.
- Charger and batteries can become warm while charging. Do not cover or block airflow.
- Do not use the batteries if they are damaged or leaking fluid.
- Do not solder to the battery.

**IMPORTANT SAFETY INSTRUCTIONS—See These Instructions**

**DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet. This battery charger is intended to be correctly oriented in a vertical or flip-mount position.

The charger is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the charger safely.

Young children should be supervised to ensure that they do not play with the charger.

**Waste Electrical and Electronic Equipment Labeling**  
In Europe, for better environmental protection, if in your responsibility, to dispose of this equipment at an authorized collection facility for waste electrical and electronic equipment. For more information, contact your retailer, collection facility, or appropriate local authorities, or visit [www.kodak.com/go/peee](http://www.kodak.com/go/peee) (Product length: 90%)



Authorized representative established within the EU: Kodak GmbH  
Hedelfingerstrasse 60  
70372 Stuttgart  
Germany

**Kodak**

BASTMAN KODAK COMPANY  
Rochester, NY 14650 U.S.A.

© Eastman Kodak Company, 2008. MC/AR/TAI Kodak 48859

### Charge the Battery Pack

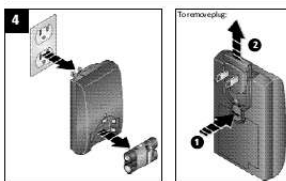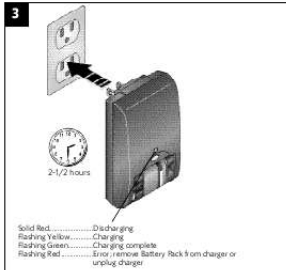

[You're reading an excerpt. Click here to read official KODAK BATTERY CHARGER K4500 user guide](http://yourpdfguides.com/dref/1083581)  
<http://yourpdfguides.com/dref/1083581>

**Manual abstract:**

Place Battery Pack in charger. 2. Press the refresh button for 3 seconds. A full refresh cycle can take up to 8 hours. For best results, refresh the Battery Pack overnight; do not interrupt the discharge/recharge cycle. Additional KODAK KAA2HR Ni-MH Rechargeable Battery Packs are available from your local Kodak dealer, or visit our website at [www.kodak.com/go/batteries](http://www.kodak.com/go/batteries). Important Charging Information for Ni-MH Batteries Ni-MH batteries may not charge to full capacity the first time they are charged, or after a long period of non-use. @@@@Safety Tips Unplug the charger from the power outlet when not in use.

Use only the type of power source indicated on the charger. Unplug the charger before cleaning with a damp cloth. Do not push sharp or conductive objects into the charger. Do not use the charger as a DC power supply. Do not use the charger if the power plug is loose or damaged. Charger and batteries can become warm while charging. Do not cover or block airflow. @@ · Do not solder to the battery. @@@@ · Young children should be supervised to ensure that they do not play with the charger. Waste Electrical and Electronic Equipment Labeling In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste).

For more information, contact your retailer, collection facility, or appropriate local authorities; or visit [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle). (Product weight: 101 g.) Charge the Battery Pack 1 2 Some Battery Chargers are supplied with separate power plugs; use the appropriate plug for your power outlet. CAUTION: Use the removeable power plugs ONLY with THIS charger. @@© Eastman Kodak Company, 2008. MC/MR/TM: Kodak 4F8359 .



**[You're reading an excerpt. Click here to read official KODAK BATTERY CHARGER K4500 user guide](http://yourpdfguides.com/dref/1083581)**  
**<http://yourpdfguides.com/dref/1083581>**