



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK CD82. You'll find the answers to all your questions on the KODAK CD82 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK CD82  
User guide KODAK CD82  
Operating instructions KODAK CD82  
Instructions for use KODAK CD82  
Instruction manual KODAK CD82

## 1 Installing the software

Before connecting any cables, download KODAK EASYSHARE Software from [www.kodak.com/go/easysharesw](http://www.kodak.com/go/easysharesw). Then install it on your computer.

## 2 Loading the batteries

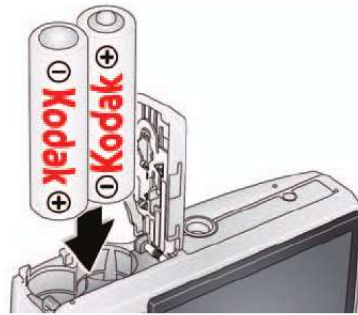

See the Extended user guide [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support)

[www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support)

1

ENGLISH



[You're reading an excerpt. Click here to read official KODAK CD82 user guide](#)

<http://yourpdfguides.com/dref/2702040>

**Manual abstract:**

[www.kodak.com/go/easysharesw](http://www.kodak.com/go/easysharesw). Then install it on your computer. Loading the batteries See the Extended user guide [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) 1 ENGLISH ENGLISH 2 Turning on the camera Setting the language and date/time Language: to change. to accept. OK Date/Time: At the prompt, press OK.

to change current field. for previous/next field. OK to accept. See the Extended user guide [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support)

[www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter) Taking a picture 1 Turn the Mode dial to Smart Capture . 2 Press the Shutter button halfway to focus and set exposure. When the framing marks turn green, press the Shutter button completely down.

Mode dial Framing marks See the Extended user guide [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) 3 ENGLISH ENGLISH 4 Reviewing pictures/videos Press the Review button to enter/exit Review. View previous/next picture/video. OK Play a video. Review See the Extended user guide [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support)

[www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter) Transferring pictures/videos 1 Turn off the camera. 2 Connect the KODAK USB Cable, Model U-8 (may be included). 3 Turn on the camera. See the Extended user guide [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) 5 ENGLISH ENGLISH Getting help from your camera You want the most from your camera. You want to understand: What it can do for you And how to take the best possible pictures and videos Great news! Your camera offers a built-in Help system.

It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help. Because the more you know your camera, the more confident you become. 1 Press the Menu button then highlight a menu choice. @@@@The scene is analyzed for other content and for lighting.

Close range. Use available light instead of flash, if possible. Subjects that are in motion. Point-and-shoot simplicity in practically any situation. Capturing video with sound.

NOTE: Sound cannot be played on the camera. Sound is heard after the video is transferred to your computer. Blur Reducing blur caused by camera shake or subject motion. Reduction P 10 Program Access to more manual settings than Smart Capture mode. [www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter) Doing more with your camera Taking a video 1 Turn the Mode dial to Video . 2 Press the Shutter button completely down, then release it. To stop recording, press and release the Shutter button again. NOTE: Sound cannot be played on the camera.

Sound is heard after the video is transferred to your computer. Using Scene (SCN) modes Choose a Scene mode--for great pictures in practically any situation! 1 Turn the Mode dial to SCN. 2 Press to view scene mode descriptions. If the mode description turns off before you finish reading it, press OK. 3 Press OK to choose a Scene mode. SCN mode Portrait Landscape Flower For Full-frame portraits of people. Distant scenes. Close-ups of flowers or other small subjects in bright light. [www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support)

11 Doing more with your camera SCN mode Sunset Backlight Candle Light Children Manner/ Museum Text Beach Snow Fireworks SelfPortrait Night Portrait High ISO Panorama (R-L, L-R) Panning Shot For Subjects at dusk. Subjects that are in shadow or "backlit." Subjects illuminated by candle light. Action pictures of children in bright light. Quiet occasions, like a wedding or lecture.

Flash and sound are disabled. Place the camera on a steady surface or tripod. Documents. Place the camera on a steady surface or tripod. Bright beach scenes.

Bright snow scenes. Fireworks. Place the camera on a steady surface or tripod. Close-ups of yourself. Assures proper focus and minimizes red eye. Reduces red eye of people in night scenes or low-light conditions. People indoors, in low-light scenes. "Stitching" 2 or 3 pictures into 1 panoramic scene. Emphasizing horizontal motion, keeping the subject sharp. Night Landscape Distant scenery at night.

Flash does not fire. 12 [www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter) Doing more with your camera Using the optical zoom 1 Use the LCD to frame your subject. 2 To zoom in, press Telephoto (T). To zoom out, press Wide Angle (W). 3 Take the picture. Using digital zoom Use digital zoom to get up to 5X magnification beyond optical zoom when taking pictures/videos. Press Telephoto (T) until the slider on the LCD is at the end of the optical zoom range. Release Telephoto (T), then press it again.

NOTE: You may notice decreased image quality when using digital zoom. The slider pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. @@@@Every time you take a picture, regardless of the lighting conditions. @@In low light, hold the camera steady or use a tripod.

@@Digital A preflash does not fire; the camera corrects red eye.

To choose a red Correction eye setting, see the Setup tab. @@@@The shortcuts appear. @@@@To get the most from your camera, see page 6. You can change settings to get the best results from your camera. @@(Some options let you use .

) NOTE: Some modes offer limited settings. @@and each begins with a picture. How do you tell yours? @@1 Load KODAK EASYSHARE Software.

@@@@ Take another picture. Continue taking pictures. @@@@Refer servicing to qualified service personnel. @@@@If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support. The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories).

[www.kodak.com/go/accessories](http://www.kodak.com/go/accessories). Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions. If using this product in an airplane, observe all instructions of the airline. When removing the battery, allow it to cool; it may be hot. Follow all warnings and instructions supplied by the battery manufacturer. Use only batteries approved for this product to avoid risk of explosion. Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins.

Otherwise, a battery may short circuit, discharge energy, become hot, or leak. Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature. Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support. In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider.

For additional health-related information, contact your local Kodak customer support. Dispose of batteries according to local and national regulations. Visit [www.kodak.com/go/kes](http://www.kodak.com/go/kes).

Do not charge non-rechargeable batteries. For more information on batteries, see [www.kodak.com/go/batterytypes](http://www.kodak.com/go/batterytypes). 22 ranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

[You're reading an excerpt. Click here to read official KODAK CD82](#)



[user guide](#)

<http://yourpdfguides.com/dref/2702040>

@@@ @@@@ If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. Canadian DOC statement DOC Class B Compliance--This Class B digital apparatus complies with Canadian ICES-003. Observation des normes-Classe B--Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

VCCI Class B ITE 24 [www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter) Appendix Australian C-Tick N137 Korean Class B ITE China RoHS  
[www.kodak.com/go/cd82support](http://www.kodak.com/go/cd82support) 25 Appendix Eastman Kodak Company Rochester, New York 14650 © Kodak, 2009 Kodak and EasyShare are trademarks of Eastman Kodak Company. 26 [www.kodak.com/go/easysharecenter](http://www.kodak.com/go/easysharecenter).



[You're reading an excerpt. Click here to read official KODAK CD82 user guide](#)  
<http://yourpdfguides.com/dref/2702040>