



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE 5300. You'll find the answers to all your questions on the KODAK EASYSHARE 5300 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KODAK EASYSHARE 5300**  
**User guide KODAK EASYSHARE 5300**  
**Operating instructions KODAK EASYSHARE 5300**  
**Instructions for use KODAK EASYSHARE 5300**  
**Instruction manual KODAK EASYSHARE 5300**

## **Kodak** EasyShare 5300

All-in-One Printer



User's Guide



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)  
<http://yourpdfguides.com/dref/2702069>

**Manual abstract:**

©1989-2007 I.R.I.S. @@@@1 Control Panel Layout.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 2 Status Lights.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 3 LCD Display Screen.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 8 Memory Card Slots and USB Port ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 9 AiO Home Center (Windows) .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 10 AiO Home Center (Macintosh) .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 11 Getting Started ..*

.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*.15 Install the Duplexer ....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *16 Startup ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....  
.....

.....17 Menus .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

18 Demo Sheet.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..21 Transfer Photos .....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*..22 Configuring Settings....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*..22 Handling and Loading Paper.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*... 27 The Scanner Glass .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
*..27 Load Main Tray ...*  
.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*.....28 Load Photo Tray ....*  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
*..... 30 Load Envelopes..*  
.....

.....  
.....  
.....  
.....

.....  
.....







.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*..36 Tagged Photos (DPOF) ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....36 Bluetooth Printing ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*..37 Panoramic photos...*

.....  
.....  
.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....38 *Layouts* ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.38 *Setting Print Options...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....



.....57 *User's Guide i Table of Contents Scan .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*. 65 Scan with Control Panel.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*65 Maintenance .....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 69 General Care...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 69 Clean the Scanner Glass...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

....70 Clean the Scanner Lid.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....





.....  
.....  
.....  
.....

*. 71 Ink Cartridges .....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 71 Printhead .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 73 Support .....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*77 Contact Kodak.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 77 Limited Warranty ....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*. 77 Telephone Customer Support....*

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... *91 Computer Requirements ..*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....

*. 91 Paper Types ....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....

*. 92 Safety....*

.....

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *94 Regulatory Compliance.*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *95 Glossary ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 99 Index.....

... 101 ii Kodak EasyShare 5300 AiO 1 Product Overview Product Overview The Kodak EasyShare 5300 All-in-One (AiO) Printer allows you to print, copy, and scan photos or documents. Many functions can be operated directly from the Control Panel. You can buy optional accessories to enhance your Kodak EasyShare AiO experience. Main Components 1 Scanner lid 2 LCD display 3 Control panel 4 Printer access door 5 Memory card indicator 6 Memory card slots 7 USB port 8 Photo tray Light 9 Photo tray 10 Paper-length guide 11 Main tray 12 Output tray extender 13 Paper-width guide 14 Output tray 15 Rear access door 16 Power connector 17 USB port User's Guide 1 Chapter 1 Control Panel Layout Number 1 2 3 4 5 6 7 8 9 10 Name LCD display Zoom + button Proofsheet button Transfer button Copy button Photo button Help button OK button On/Off button On/Off Light Description Displays photos, messages, status, and menus. When in Photo Preview mode, magnifies the photo to 1.5X. Subsequent presses zoom in 0.5X increments to a maximum of 5X. When in Multiview, displays the current photo in preview mode. When there are pictures on an inserted memory card or connected USB host device, pressing Proofsheet displays the Proofsheet menu. Transfers images from device connected to a USB host port, PictBridge, or Picture Transfer Protocol (PTP). Press to enter Copy mode.

Lit when in Copy mode. Press to enter Print mode. Lit when in Print mode. Displays the Help menu. Used for selection in conjunction with the 4-way Navigation button. Turns your EasyShare AiO on or off. Green when Starting Up, Ready, or in Standby mode. Flashes red when in an error state. Is not lit when in Sleep mode. 2 Kodak EasyShare 5300 AiO Product Overview Number 11 12 13 14 15 16 17 Name Attention Light Start button Cancel button Description On or flashing for an error or warning condition. Starts a copy, print, or scan operation. Cancels the current operation. , Down , Left , and Right . 4-way Navigation Used to navigate Up button Menu button Scan button Rotate button Displays the main menu screen. Press to enter Scan mode.

Lit when in Scan mode. Rotates picture on the display, clockwise, 90 degrees. When the EasyShare AiO is in Photo Preview mode, pressing enters Multiview. When a photo has been magnified with the Zoom + button, pressing decreases the magnification in 0.5X increments. 18 Zoom button Status Lights The following tables contain information on the EasyShare AiO lights. All Lights on Control Panel Light Status All lights are off. Cause The printer is turned off. The Printer does not have power applied. The On/Off Light is flashing and the Display has the following mrier stall during pick. Media size mismatch. Media type mismatch. Paper jam during pick. Carrier stall while printing. Change color ink cartridge. Change black ink cartridge. Color ink cartridge not readable. Black ink cartridge not readable. Change both ink cartridges. Printhead not calibrated. Calibration sheet needs scanning. Calibration sheet not detected. Calibration sheet read error. Back cover removed when idle. Back cover removed while printing. Unit opened when idle. Unit opened during printing. Too many picture sources. Proofsheet not detected. Proofsheet read error.

Color ink cartridge inserted incorrectly. Black ink cartridge inserted incorrectly. Color ink cartridge not installed. Black ink cartridge not installed. Ink cartridges not installed. Printhead not installed. Media sensor failure. Printhead failure. Scanner failure. Light is blinking rapidly. Warning Light is on. Non-Recoverable Error User's Guide 7 Chapter 1 Card Slot Light Light Status Light is off. Cause An SD/MMC card is not inserted or is improperly inserted in the card slot. An SD/MMC card is properly inserted in the card slot. Slow blink: The internal card reader is initializing or communicating with the printer. Fast blink: There is a card or communication error. Action/Solution Remove and reinsert the SD/MMC card. None None Light is on. Light blinks green. Remove the card and make sure the card is not "write" protected or damaged.

Reinsert the card or replace with a new card if necessary. LCD Display Screen The LCD screen displays photos, messages, instructions, and menu parameters. Menu navigation is accomplished with the 4-way Navigation buttons. The screen is hinged at the back edge and can be positioned from flat on the control panel surface to vertical. Instructions displayed on photos appear up to four seconds and then disappear, or disappear immediately after you start interacting with the screen. The instructions will return after fifteen seconds of inactivity. When a second page of display text is present, it is indicated by the down arrow symbol, positioned in the lower right corner of the menu area. When the second or subsequent page of text is in view, the presence of a previous page is indicated by the up arrow symbol in the top of right corner of the menu area. Each time you press Navigate Down ( ), you advance the highlight down 1 row. When the last row is highlighted, pressing causes page 1 to be replaced with page 2.

*When page 2 appears, the highlight is on the top row. The up arrow symbol appears at the right edge. If a third page of menu parameters is available, the down arrow symbol appears in the lower right corner. Until the highlight is advanced, pressing Navigate Up ( ) returns you to the previous page. Holding down any of the 4-way Navigation buttons causes them to repeat (scroll). 8 Kodak EasyShare 5300 AiO Product Overview Default Display Settings Default settings are provided for each option.*



[You're reading an excerpt. Click here to read official KODAK  
EASYSHARE 5300 user guide  
http://yourpdfguides.com/dref/2702069](http://yourpdfguides.com/dref/2702069)

If you make changes to the settings, the changes remain as long as you do not change modes. You can save the settings in each mode by navigating to Save Settings and pressing OK. You may reset options to the master defaults by going to the main menu and selecting Reset All Settings. Photos The LCD screen displays JPG images when you insert a memory card, camera, or USB device.

However, the following images will not be displayed. File size greater than 8 MB Image size greater than 12 megapixels Image colorspace is not sRGB or adobeRGB Progressive JPEG images Memory Card Slots and USB Port Your Kodak EasyShare All-in-One can access the memory cards used in most digital cameras. You can insert the memory card into the EasyShare AiO, or connect your camera directly through one of the two USB ports on the front panel, using a USB cable. Your Kodak EasyShare AiO can read the contents of the memory card while it is still in the camera. If your EasyShare AiO beeps three times when you plug a device into the USB Port, it means the device is not supported.

User's Guide 9 Chapter 1 Supported Memory Cards Your Kodak EasyShare AiO can read the following memory cards. xD-Picture Card Memory Stick Memory Stick Pro Secure Digital Card/MultiMediaCard Compact Flash type I and type II, including microdrives Your EasyShare AiO also supports the following memory cards with Memory Stick and SD/MMC card slot adapters you can purchase. Memory Stick Duo miniSD MicroSD (TransFlash) The Memory Card light is a green LED located near the memory card slots. It lights whenever you insert a memory card, and flashes while the card is being read.

The flashing serves as an indication to not remove the card while it is being read, or written to, which could potentially damage the data on the card. AiO Home Center (Windows) The AiO Home Center software is an application that runs on the computer. It enables you to print, copy, scan, and configure your AiO printer from the computer. The six large icons on the AiO Home Center main window let you: Scan Pictures and Documents Copy Pictures Print Pictures Configure Settings for Printing and Scanning. Access My Resource Center at Kodak Order Supplies There are three small icons in the upper right corner of the window: Returns you to the main Home Center screen Displays the Status Monitor Displays a Help panel for the Home Center software 10 Kodak EasyShare 5300 AiO Product Overview AiO Home Center (Macintosh) The AiO Home Center software is an application that runs on the computer. It enables you to configure your AiO printer from the computer. After installation, you can run Home Center from the Printer Setup Utility by selecting your Kodak AiO Printer in the Printer List and clicking the Utility icon. The Setup and Maintenance tabs let you: Configure Settings Calibration and Printhead Cleaning Select: Provides a list of connected printers where you can select another printer. Order Supplies: Connects you to a Kodak web site where you can order supplies online. View/Hide Status: Opens a drawer that displays the configuration status of your Kodak AiO printer. User's Guide 11 Chapter 1 12 Kodak EasyShare 5300 AiO 2 Getting Started Getting Started It is important to find a good location for your AiO Printer.

Place the printer on a clean flat surface, in a dry location, and out of direct sunlight. Make sure the printer has proper ventilation. Avoid areas where ventilation ducts, open doors, or high traffic might expose the EasyShare AiO and paper to high levels of dust and debris. Airborne particles can affect picture quality. Allow enough space on all sides of the EasyShare AiO to let you connect and disconnect cables, change the ink cartridges, and remove and load paper. Connect Power RISK OF ELECTRICAL SHOCK Use only the AC power adapter included with your AiO printer. Other adapters or cords could damage your printer or computer. 1 Connect the printer power cord to the AC power adapter, then to the back of the AiO printer. 2 Plug the AC adapter power cord into a power outlet. Install the Printhead The printhead dispenses the ink from the cartridges onto the paper.

1 Make sure the EasyShare AiO is on. 2 Open the printer access door. The carriage moves to a center position. User's Guide 13 Chapter 2 3 Remove the printhead from its bag. 4 Remove and discard the clear plastic casing and the orange protective cap. 5 Place the printhead into the carriage. 6 Push against the back wall of the printhead until it clicks into place. 7 Install the ink cartridges. 14 Kodak EasyShare 5300 AiO Getting Started Install Ink Cartridges After installing the printhead, you need to install the black and color ink cartridges. 1 Printhead 2 Color ink cartridge 3 Black ink cartridge 1 Tear open the black ink cartridge bag at the notch and remove the ink cartridge.

IMPORTANT: Insert the ink cartridge immediately to prevent any drying of the ink. 2 Remove and discard the orange cap. IMPORTANT: Handle ink cartridge carefully to avoid ink transfer. 3 Insert the black ink cartridge into the printhead. User's Guide 15 Chapter 2 4 Press down on the ink cartridge until you hear it snap into position. 5 Tear open the color ink cartridge bag at the notch and remove the ink cartridge. 6 Remove and discard the orange cap. 7 Insert the color ink cartridge into the printhead. 8 Press down firmly on the cartridge until you hear it snap into position. 9 Close the printer access door.

NOTE: For the best quality prints, store ink cartridges in a location where the temperature does not exceed 85° F (30° C). Install the Duplexer The Kodak EasyShare AiO supports an optional duplexer (Kodak EasyShare 5000 Series Two-Sided Printing Accessory) that enables printing on both sides of the paper. When installed, the duplexer is automatically detected by the printer and computer system software. The duplexer is limited to plain paper. The paper dimensions that can be used are from 6.9 to 8.5 inches (17.5 to 21.6 cm) wide and from 9.8 to 11.

7 inches (24.9 to 29.7 cm) long. You can purchase a duplexer and other accessories for your printer at [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories). 16 Kodak EasyShare 5300 AiO Getting Started 1 Remove the door on the back of the printer by pressing in on the two latches and pulling out. 2 Insert the bottom of the duplexer into the printer and press the top in until it clicks. You can control how long the printer waits before a sheet is flipped by the duplexer with the AiO Home Center (See General Settings). Startup When you power on your Kodak EasyShare All-in-One, status information is displayed on the LCD.

After the startup is complete, the EasyShare AiO enters the Copy mode, unless a photo device is attached. If a photo device is attached or memory card inserted, the EasyShare AiO enters Photo mode. User's Guide 17 Chapter 2 Menus The Kodak EasyShare AiO menus are accessed by the Menu, Photo, Copy, Scan, and Help buttons.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)  
<http://yourpdfguides.com/dref/2702069>



Menu Button Help OK Inserting Ink Cartridges Making a Copy Printing a Photo Making a Scan Photo Print Settings OK Calibrating Printer Use Print Order if Found Scene Balance Add Date to Prints Control Panel Settings OK Button Sounds Minutes to Standby Ink Levels OK or or or or or Yes No On Off No Yes On Off 10-30 Proofsheet Clean Printhead Calibrate Printer Format Memory Card Print Demo Sheet Print Diagnostic Sheet OK OK OK OK OK OK OK OK Print Proofsheet Scan Proofsheet Basic Clean Deep Clean Print Calibration Page Scan Calibration Page Formats inserted memory card. Prints a demonstration page. Prints a diagnostic page. 18 Kodak EasyShare 5300 AiO Getting Started Date and Time OK Year Month Day Hour Minute or or or or or 2006-2009 January-December 1-31 0-24 0-60 Language Reset all Settings or OK <List of languages> Photo Button Layout or Borderless Bordered 2 per Page 3 per Page 4 per Page 9 per Page Index 2x2 Poster 3x3 Poster Quantity Color or or 4x4 Poster 1 - 99 Color Black & White Normal Best Save Settings or Draft No Yes Quality or User's Guide 19 Chapter 2 Copy Button Quantity Color Quality or or or 1 - 99 Black & White Color Normal Draft Output or Best Same Size Fit to Page Scale Percent Size or Photo Layouts Output = Scale Percent 10 - 500 Output = Photo Layouts Borderless Bordered 2 per Page 3 per Page 4 per Page 9 per Page Index 2x2 Poster 3x3 Poster Brightness Preview Save Settings or or or 4x4 Poster -3 to +3 No Yes (Photo Layouts only) No Yes 20 Kodak EasyShare 5300 AiO Getting Started Scan Button Scan What Scan To or or Document Photo File Application Memory Card Application Save Settings or or List of applications No Yes Help Button Installing Ink Cartridges Making a Copy Making a Photo Making a Scan Calibrating Printer OK OK OK OK OK Demo Sheet You can print a sample page on US Letter or A4 size paper to evaluate print quality. The Demo Sheet is a single sheet of paper that displays information about the features and capabilities of your EasyShare AiO printer. You can print a Demo Sheet by pressing the Copy and Photo buttons at the same time. or 1 Press Menu to display the main menu.

2 Press until Print Demo Sheet is selected. 3 Press OK. 4 Press Start to begin printing. User's Guide 21 Chapter 2 Transfer Photos After you take photos with your digital camera, you can print them immediately or save them directly to your computer. You can transfer from memory cards, PTP cameras, and USB mass storage devices. 1 Insert a Memory Card into the appropriate slot or connect a camera to the USB Port. WARNING: Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Press Transfer.

3 Press Start to transfer. 4 Complete the transfer with the Transfer dialog on your computer. Configuring Settings You can configure settings for your Kodak EasyShare AiO using the Control Panel and the AiO Home Center software. Use Print Order if Found The Digital Print Order Format (DPOF) is an industry-standard file that can be created by some digital cameras. Camera-selected photos are photos you tag for printing with your digital camera.

When you select photos with your camera, the camera creates a DPOF file that identifies which photos have been tagged for printing. Your Kodak EasyShare AiO can read the DPOF file from the memory card in a camera so you do not have to re-select the photos to print. NOTE: Not all digital cameras allow you to tag your photos for printing. See your digital camera documentation to see if it supports tagging (DPOF). When you print tagged photos, the selected default layout is applied, unless your camera allows selection of sizes.

The DPOF file is stored by the digital camera on a memory card and specifies the following information: Which photos to print The quantity of each photo to print Index printing (thumbnails of selected photos) 22 Kodak EasyShare 5300 AiO Getting Started The default setting for using a detected DPOF file is Yes.

1 Press Menu to display the main menu. 2 Press to select Photo Print Settings. to select Use Print Order if Found. or to change the setting. 3 Press OK. 4 Press 5 Press 6 Press OK. Scene Balance Your EasyShare AiO is configurable to apply automatic scene balance improvements (brightness) for photos printed on the AiO from camera cards and USB connected devices. The default is to apply the scene balance improvements. 1 Press Menu to display the main menu.

2 Press to select Photo Print Settings. until Scene Balance is selected. or to enable or disable Scene Balance. 3 Press OK. 4 Press 5 Press 6 Press OK. Add Date to Prints You can set your EasyShare AiO to print the date a picture was taken on the photo print. The default is to not print the date. 1 Press Menu to display the main menu. 2 Press to select Photo Print Settings. until Add Date to Prints is selected.

or to enable or disable date printing. 3 Press OK. 4 Press 5 Press 6 Press OK. Button Sounds You can configure your EasyShare AiO to emit an audio feedback beep when you press a button on the Control Panel. The default setting is to beep.

1 Press Menu to display the main menu. 2 Press until Control Panel Settings is selected. or to enable or disable button sounds. 3 Press OK. 4 Press 5 Press OK.

User's Guide 23 Chapter 2 Minutes to Standby When the Kodak EasyShare All-in-One is idle for the standby power setting timeout period, it enters the Standby state. The On/Off indicator remains lit, but power consumption is reduced. When in the Standby state, any activity such as a single button press, or inserting camera card, brings the EasyShare AiO out of the Standby state and returns it to the Ready state. You can set the standby timeout from 10 30 minutes. The default setting is 15 minutes. 1 Press Menu to display the main menu. 2 Press until Control Panel Settings is selected. or to change the standby timeout period. 3 Press OK. The Power Settings menu is displayed with Minutes to Standby selected.

4 Press 5 Press OK. Date and Time Your Kodak EasyShare All-in-One contains a clock for stamping the date and time on scans to a memory card. 1 Press Menu to display the main menu. 2 Press until Date and Time is selected. 3 Press OK to go to the Date and Time menu. 4 Press or to set the Year. 5 Press OK. 6 Press or to set the Month. 7 Press OK. 8 Press or to set the Day.

9 Press OK. 10 Press or to set the Hour. 11 Press OK. 12 Press or to set the Minute. 13 Press OK.

24 Kodak EasyShare 5300 AiO Getting Started Set Language You can select the language the EasyShare AiO uses for the LCD display. 1 Press Menu to display the Main Menu. 2 Press until Language is displayed. until the language you want is selected. 3 Press OK to go to the Select Language menu.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702069)

[EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)

<http://yourpdfguides.com/dref/2702069>

4 Press 5 Press OK. Reset All Settings You can restore the original factory settings to your Kodak EasyShare All-in-One. NOTE: Restoring the factory defaults will not change the date and time information you set. 1 Press Menu to display the Main Menu. 2 Press until Reset All Settings is selected. 3 Press OK. User's Guide 25 Chapter 2 26 Kodak EasyShare 5300 AiO 3 Handling and Loading Paper Handling and Loading Paper Use the following guidelines when handling paper. To avoid fingerprints, handle the paper by the edges as much as possible. Avoid touching the glossy side of photo paper. Keep the input and 4x6 paper trays closed to keep out dust and debris.

Store paper flat. Keep paper away from direct sunlight, and out of high-temperature environments (such as a vehicle parked in the sun). You can load many different types and sizes of paper in your Kodak EasyShare AiO, including letter paper, photo paper, transparencies, and envelopes (see Paper Types in the Appendix). The EasyShare AiO automatically detects the size and type of paper you load in the input tray, and then adjusts to generate the highest quality output for that paper. The Scanner Glass The scanner glass is where you place originals for copying or scanning. 1 Lift the lid and place your original face down on the right front corner of the scanner glass. 2 Close the lid. User's Guide 27 Chapter 3 You can copy or scan oversized originals by completely removing the lid from your EasyShare AiO. To remove the lid, lift the lid to the open position, grasp the sides of the lid, and then pull the lid upward. Your EasyShare AiO functions normally with the lid removed.

Replace the lid by inserting the tabs on the hinge back into the appropriate slots. Load Main Tray You can load the main paper tray with various types of paper from 3 to 8.5 inches wide and 5 to 14 inches long, with a capacity of 100 sheets of 20 lb plain paper (clean stack of new paper). IMPORTANT: To print from the main paper tray, make sure the photo tray is not engaged, pulled all the way out, and the lid closed. 1 Lift the output tray, and slide the paper-width and paper-length guides to their outermost positions.

2 Align the edges of a stack of paper. 3 Insert the stack of paper into the input tray with the short edge forward and the print side down. Slide the stack of paper forward until it stops. 28 Kodak EasyShare 5300 AiO Handling and Loading Paper 4 Slide the paper-width and paper-length guides inward until they stop at the edges of the paper. 5 Lower the output tray.

6 Pull the extender tray out. User's Guide 29 Chapter 3 Load Photo Tray You can load up to 20 sheets of 10 mil thick 4x6 inch (101x150 mm) photo paper into the photo tray. TIP: To avoid fingerprints, handle the paper by the edges or by the perforated tabs. Avoid touching the glossy side of the paper. 1 Lift the photo tray lid. 2 Slide the photo tray towards you until it stops. NOTE: When the photo tray is disengaged, the main paper tray is active. 3 Insert the stack of photo paper into the photo tray glossy side down. 4 Slide the photo tray with the stack of photo paper in until it stops. Engaging the photo tray turns the photo tray light on.

30 Kodak EasyShare 5300 AiO Handling and Loading Paper 5 Close the photo tray lid. Load Envelopes You can load plain envelopes into the main input tray of your Kodak EasyShare AiO. Do not use envelopes with cutouts or cellophane windows. 1 Lift the output tray. 2 Remove any paper in the input tray. 3 Insert one or more envelopes face down with the envelope flaps to the left. 4 Slide the stack of envelopes forward until it stops. 5 Slide the paper guides inward against the stack of envelopes until they stop. User's Guide 31 Chapter 3 6 Close the output tray. Load Labels Use letter or A4 (designed for use with ink jet printers) label sheets.

1 Ensure that none of the pages are sticking together. 2 Place a stack of label sheets on top of standard paper in the input tray, label side down. 32 Kodak EasyShare 5300 AiO 4 Print Print The memory card slots accept most of the popular memory cards (see Supported Memory Cards). When you insert a memory card into the card slot, connect PTP camera, or USB flash drive, the last photo is displayed on the LCD display. When you press the Photo button the Photo Print menu is displayed.

The Photo button toggles between displaying photos and the Photo Print menu. CAUTION You can only use one device (USB or Memory card) from which to print. If both devices are engaged, the EasyShare AiO generates an error message. When you print from an application, the EasyShare AiO printer driver provides the following features. Non-photo Paper Print Quality Draft Produces the fastest print speed, but the lowest quality.

Normal Delivers high-quality output and is the default setting. Normal prints faster than Best. Best Produces the highest quality for all paper and eliminates the banding (striping) effect that sometimes occurs in solid areas. Best is the slowest print speed. Page Size You can select a standard page size or create a custom size. Borderless Prints without any margin on the printed media. Orientation You can print a document with the short edge of the paper at the top of the page (portrait), or with the long edge of the paper at the top of the page (landscape). Print last page first Causes printing to begin with the last page and end with the first page. NOTE: There can be a delay when printing a large document while it is being spooled. Printing will begin when the last page is spooled.

Collate You can collate pages when printing multiple copies. Scale Layout You can scale pages or pictures by percentage or page size. Multi-page Layout The driver can reduce multiple pages so that they can all be printed on one sheet of paper. Poster Layout This function enlarges a picture, divides it into several pages, and prints each page on a separate sheet of paper. You can paste these sheets of paper together to create a poster. Booklet Layout The pages are distributed and printed on both sides of the paper and arranged in sequence. When they are folded in the middle and stapled they create a booklet. Print Mirror Image Flips the image for iron-on printing. User's Guide 33 Chapter 4 Two-sided Printing You can print on both sides of the paper. Watermark You can select or create a background watermark.

Print Photos from a Camera 1 Connect your camera to the EasyShare AiO. The PictBridge logo is displayed on the LCD. 2 Load the photo tray with photo paper (See Load Photo Tray in Chapter 3). 3 Use your camera to select and print photos. Print Photos from the Control Panel The Photo Print mode is initiated by pressing the Photo button, inserting a memory card, or connecting a USB device to the Kodak EasyShare All-in-One.

1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)  
<http://yourpdfguides.com/dref/2702069>

The last photo is displayed. **WARNING** Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking.

2 Load the main tray (see Load Main Tray in Chapter 3) or photo tray (See Load Photo Tray in Chapter 3) with photo paper. **NOTE:** The Photo Tray only supports 4x6 inch and 100x150 mm photo paper. 3 Press 4 Press to select the number of prints for this photo. to preview the next photo. **TIP:** To select all the photos on a memory card or mass storage device, hold down the OK button for 2 seconds. Holding down the OK button again for 2 seconds will de-select all the photos. 5 Repeat Steps 3 and 4 until you are finished selecting photos. 6 Press Start to print the selected photos or Photo to set print options. 7 Set print options. See Set Print Layout See Set Number of Prints See Set Color See Set Print Quality After a photo is printed, it is de-selected.

34 Kodak EasyShare 5300 AiO Print Index Print The purpose of an index print is to catalog contents of a memory card or USB flash drive. An Index print contains the following: Sequence numbers for the relative position of each photo within the defined set of photos, incrementing from 001 and continuing progressively across all pages of a multi-page index print. 8x10 Index prints are 7/8 inches wide with 1/8 inch white space between photos. The filename is displayed below each thumbnail image. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The first photo is displayed. **WARNING** Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card.

You can safely remove a card only when the status light next to the slots is not blinking. 2 Load the main tray (see Load Main Tray in Chapter 3) or photo tray (See Load Photo Tray in Chapter 3) with photo paper. **NOTE:** The Photo Tray only supports 4x6 inch and 100x150 mm photo paper. 3 Press Photo. The Print menu is displayed with Layout selected.

4 Press the 5 Press Start. or to select Index. User's Guide 35 Chapter 4 Print Photos from a Proofsheets A proofsheets is a simple and convenient way to select photos and make prints directly from a camera or memory card without the need for a computer. Proofsheets printing is a two step process. In the first step, you connect a PTP camera or insert a memory card and print a proofsheets.

In the second step, you select pictures to print from the proofsheets and then scan the proofsheets into the EasyShare AiO. **IMPORTANT:** If the AiO printer goes into standby mode, power is lost, or you unplug the memory card, camera, or USB device before you scan the proofsheets, the proofsheets session number becomes invalid and you will need to re-print it. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The first photo is displayed. **WARNING** Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Load the main tray (see Load Main Tray in Chapter 3) with letter size plain paper. 3 Press Menu. 4 Press until Proofsheets is selected.

5 Press OK. 6 Press Start to print the proofsheets. 7 Complete the four steps on the proofsheets with the memory card, storage device, or camera connected.

Tagged Photos (DPOF) The Digital Print Order Format (DPOF) is an industry-standard file that can be created by some digital cameras. Camera-selected photos are photos you tag for printing with your digital camera. When you select photos with your camera, the camera creates a DPOF file that identifies which photos have been tagged for printing. Your Kodak EasyShare AiO can read the DPOF file from the memory card in a camera so you do not have to re-select the photos to print. **NOTE:** Not all digital cameras allow you to tag your photos for printing. See your digital camera documentation to see if it supports tagging (DPOF). When you print tagged photos, the selected default layout is applied, unless your camera allows selection of sizes.

The DPOF file is stored by the digital camera on a memory card and specifies the following information: Which photos to print The quantity of each photo to print Rotation applied to a photo Cropping applied to a photo Index printing (thumbnails of selected photos) 36 Kodak EasyShare 5300 AiO Print If a DPOF file is detected when you insert a memory card, the EasyShare AiO displays a message asking if you want to print tagged images. Bluetooth Printing Bluetooth is a short-range radio technology that enables wireless connectivity between electronic devices. This feature supports an optional Kodak USB Bluetooth Adapter that accepts JPEG/EXIF image file types from the following types of Bluetooth enabled devices. Mobile camera phones PDAs Digital still cameras You can purchase a Bluetooth Adapter directly from Kodak at [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories).

To enable Bluetooth wireless connectivity, plug your Kodak Bluetooth Adapter into the front USB port. **NOTE:** Your EasyShare AiO supports connection to only one Bluetooth device at a time and has an 8MB file size limitation. Range The recommended maximum distance between Bluetooth devices for the highest transfer speed is 10 meters or 32.81 feet.

However, Bluetooth will work beyond this distance. User-friendly Name Your EasyShare AiO has a serial number that is used to construct name for Bluetooth printing. The default name is Kodak5300+XXXX, where XXXX represents the last four digits if the AiO printer's serial number. You can change this to a more user-friendly name with the AiO Home Center (See General Settings in Chapter 2). Printing When a Bluetooth connection is made, no other functions are available, and the LCD display indicates printing from Bluetooth. You control printing from your Bluetooth device. User's Guide 37 Chapter 4 Panoramic photos Panoramic images are detected based on the aspect ratio of the image. A panoramic image is displayed in a "fit to page" manner with blank space above and below the image. The crop box is adjusted for a 300 x 100 mm (12 x 4") aspect ratio and initially encompasses the entire image. If panoramic images are selected for printing, the AiO printer prints all of the panoramic images after all other images have printed.

Before printing the panoramic images, the EasyShare AiO displays a message to allow you to insert panoramic paper then press Start again to print the panoramic images. Layouts The photo layouts on your Kodak EasyShare AiO "snap" to the nearest standard print size whenever possible based on the combination of layout and paper size loaded.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702069)

[EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)

<http://yourpdfguides.com/dref/2702069>

Otherwise the layouts are based on a standard 2x3 aspect ratio. The table below shows the print sizes that result from the various layouts when applied to US Letter size paper (8.5 X 11 in). Layout Borderless Bordered 2 per Page 3 per Page 4 per Page 9 per Page A Paper Print Size 8.5x11" 8x10" 5x7" 4x6" 3.5x5" 2.5x3.25 (wallet) In addition to US Letter size paper, your EasyShare AiO provides photo layout support the following of US and ISO 216 paper sizes.

US sizes are measured in inches and ISO 216 sizes are based on the metric system. US photo paper sizes 3.5 X 5 inches 4 X 6 inches 5 X 7 inches 8 X 10 inches ISO 216 paper sizes A4 (21 X 30 centimeters) A5 (15 X 21 centimeters) A6 (10 X 15 centimeters) B5 (17.6 X 25 centimeters) The international paper size standard, ISO 216, consists of an A series and a less common B series. This standard has been adopted by all countries in the world except the United States and Canada.

The most widely used size in the ISO format is A4. The charts on the following pages compare the most common paper sizes. 38 Kodak EasyShare 5300 AiO Print User's Guide 39 Chapter 4 Set Print Layout 1 Press Photo. The Print menu is displayed with Layout selected. 2 Press or to change the print layout. 3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. 40 Kodak EasyShare 5300 AiO Print 3.5x5 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 41 Chapter 4 4x6 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 42 Kodak EasyShare 5300 AiO Print 5x7 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 43 Chapter 4 8x10 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 44 Kodak EasyShare 5300 AiO Print US Letter 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 45 Chapter 4 Panoramic 46 Kodak EasyShare 5300 AiO Print A4 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 47 Chapter 4 A5 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 48 Kodak EasyShare 5300 AiO Print A6 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 49 Chapter 4 B5 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page Setting Print Options Before you print photos you may want to change the following default settings. Layout: Borderless Quantity: 1 print Color: Color print Quality: Normal Save Settings: No 50 Kodak EasyShare 5300 AiO Print The Photo Print menu contains parameters that allow you to specify other options. Set Number of Prints You can increase the number of prints of each photo from the Photo Print menu. The default is 1 print. 1 On the Print menu, select Quantity. 2 Press or to change the print quantity. 3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. Set Color You can print in color or black-and-white.

Printing in color is the default. 1 On the Print menu, select Color. 2 Press or to change the print color. 3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. Set Print Quality The Kodak EasyShare All-in-One provides three options that affect print speed and quality for plain paper. Print quality is automatically set to Kodak Picture Quality when photo paper is detected. Draft Produces the fastest print speed, but the lowest quality. Normal Delivers high-quality output and is the default setting. Normal prints faster than Best. Best Produces the highest quality for all paper and eliminates the banding (striping) effect that sometimes occurs in solid areas.

Best is the slowest print speed. 1 On the Print menu, select Quality. 2 Press or to change the print quality. 3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. Save Settings When you change print settings from the control panel, the settings apply only to the current print job.

To apply print settings to all future print jobs, you can save the changes you make. 1 On the Print menu, select Save Settings. 2 Press or to set to Yes. 3 Press Photo to preview, or Start to print. User's Guide 51 Chapter 4 Previewing Photos The Print Preview screen contains a crop box, displays the current photo number on the card or USB host device, and the total number of photos on the card or device.

It displays a checkbox indicating whether or not the currently displayed photo has been selected for printing. A checkmark is placed in the checkbox when the photo is selected along with the number of copies to be printed. All photos selected are given the number of copies specified in the Quantity parameter on the Print menu by default. For example, if the Quantity parameter is set to 2, all selected photos are initially be given a number-to-print value of 2. Additionally, the Print Preview screen displays an icon of a printer and the total number of photos to be printed. For example if you select two photos, each set to print 2 copies, the number next to the printer icon will be 4. For every card/USB host session, a message is displayed the first time a photo is displayed instructing you to press and to view the photos and to press OK to select the photo for printing. For every card/USB host session, a message is displayed the first time you select a photo for printing, instructing you to use and to change the number of photos to print. Preview Mode Preview mode allows you to select and edit photos for printing. If you press the Start button while in Preview mode, all the selected photos are printed.

If there are no photos selected, then the photo displayed is printed. Print preview mode is entered when you insert a memory card, connect a camera or mass storage device, or from Print mode by pressing Photo. The Preview screen displays the current photo inside a crop box. The crop box aspect ratio is 1.4:1. At the bottom of the screen, the current photo number on the card or USB host device, and the total number of photos is displayed. A checkbox indicates whether or not the currently displayed photo has been selected for printing. A checkmark is displayed in the checkbox if the photo has been selected along with the number of copies to be printed to the left of the checkbox.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702069)

[EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)

<http://yourpdfguides.com/dref/2702069>



All photos selected are given the number of copies specified in the Quantity parameter on the Print menu by default. For example, if the Quantity parameter is set to 2, all selected photos are initially given a number-to-print value of 2.

Additionally, the Print Preview screen displays an icon of a printer and the total number of photos to be printed. For example if you select 2 photos, each set to print 2 copies, the number next to the printer icon will be 4. **IMPORTANT:** Crop, zoom, and quantity are per image, but layout is global, applying to all images. 52 Kodak EasyShare 5300 AiO Print Zoom Photos 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The first photo is displayed.

2 Press Zoom + to enlarge the photo in .25X increments up to 5X magnification. Pressing Zoom - decreases magnification in .25X increments down to 1X. 3 Use the 4-way Navigation button to display the part of the picture you want to print.

4 Press OK when finished. The photo is displayed with a crop box around the magnification and position you selected. 5 Press to select the number of prints, and press Start to print the area displayed in the crop box. User's Guide 53 Chapter 4 Multiview The Multiview screen shows thumbnails of nine photos. The current photo number and the total photo number are also displayed. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The last photo is displayed. 2 Press Zoom - to enter Multiview. The current photo is indicated by a red selection box. 3 Use the 4-way Navigation button to move the red selection box to another photo.

Pressing the rightmost column displays the next Multiview screen. Pressing displays the previous Multiview screen. when in when in the leftmost column 4 Press OK to preview the selected photo 5 Press Start to print. 54 Kodak EasyShare 5300 AiO Print User's Guide 55 5 Copy Copy The Kodak EasyShare AiO allows you to produce high-quality color and black-and-white copies on a variety of paper types, including transparencies. Once copying has started, you may at any time abort a copy operation by pressing the Cancel button. Copy with Control Panel Pressing Copy displays the copy menu where you can set copy options, preview copies after scanning, and make copies. When copying from the Control Panel, you can choose from the following outputs. Same Size: The copy is the same size as the original. Cropping will occur if the original is larger than the paper size. The copy will contain white space if the original is smaller than the paper size.

Same Size is the default copy setting. Fit to Page: The image is copied and fit to the paper size loaded. There may be cropping on the sides or top/bottom depending on the difference in the aspect ratios of the image and the page size. Scale Percent: The default copy scale is 100%, however you can scale copies from 10% to 500%. Scaling is anchored to the upper left corner of the original.

Photo Layouts: You can set the layout for making copies of photos on your Kodak EasyShare All-in-One. The following layouts are supported. Borderless (default) Bordered 2 per Page 3 per Page 4 per Page 9 per Page 2x2 Poster 3x3 Poster 4x4 Poster User's Guide 57 Chapter 5 Same Size Copy The copy is the same size as the original and is the default copy setting. Cropping will occur if the original is larger than the paper size. The copy will contain white space if the original is smaller than the paper size.

1 Load your original face down on the right front corner of the scanner glass. 2 Press Copy to display the Copy menu. 3 Press 4 Press to select Output. @@@@3 Press 4 Press to select Output. @@@@3 Press 4 Press 5 Press 6 Press to select Output. or to select Scale Percent. to change the scaling. @@@@The following layouts are supported. @3 Press 4 Press 5 Press 6 Press to select Output. or or to select Photo Layouts.

to change the layout. @@@@The default is 1 copy. 1 On the Copy menu, select Quantity. @@@@Normal copies faster than Best. Draft Produces the fastest copy speed, but the lowest quality. @@2 Press 3 Press until Brightness is selected. @@@@2 Press 3 Press until Save Settings is selected. @@The EasyShare AiO is in Copy mode. Preview is set to Yes. The Start button is pressed.

@@The photo on the glass is scanned and displayed with a crop box. 2 Press Zoom + to enlarge the photo in .25X increments up to 5X magnification. Pressing Zoom - decreases magnification in .25X increments down to 1X.

3 Use the 4-way Navigation button to display the part of the picture you want to copy. 4 Press OK or Start to copy. . 64 Kodak EasyShare 5300 AiO 6 Scan Scan You can start a scan from the Kodak AiO Control Panel or your computer. Scan with Control Panel Pressing Scan places the Kodak EasyShare AiO in Scan mode and displays the Scan menu on the screen.

Save Scan Settings When you change scan settings from the control panel, the settings apply only to the current scan job. To apply scan settings to all future scan jobs, you can save your changes. 1 Press Scan to display the Scan menu. 2 Change the desired Scan settings. 3 Press 4 Press until Save Settings is selected. or to set save scan settings to Yes. Scanning Photos With the Control Panel Scan menu, you can scan photos to a file, application, or memory card. Scan to File 1 Place a photo or photos face down on the scanner glass. 2 Press Scan to display the Scan menu. 3 Press 4 Press 5 Press or or to select Photo.

to select File. until Scan To is selected. 6 Press Start. The photo is scanned and saved based on the Kodak AiO Home Center scan picture settings (see Scan Picture Settings). User's Guide 65 Chapter 6 Scan to Application The Home Center software enables you to maintain a list of scan destination applications. 1 Place a photo or photos face down on the scanner glass. 2 Press Scan to display the Scan menu. 3 Press 4 Press 5 Press 6 Press 7 Press or to select Photo. to select Scan To. to select Application.

to until Application is selected. or to select another application. 8 Press Start. Scan to Memory Card 1 Insert a Memory Card into the appropriate card slot. WARNING: Never attempt to remove a memory card while it is being accessed.

Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Place a photo or photos face down on the scanner glass. 3 Press Scan to display the Scan menu. 4 Press 5 Press 6 Press or or to select Photo.

to select Memory Card. to select Scan To. 7 Press Start. Scanning Documents With the Control Panel Scan menu, you can scan documents to a file, application, or memory card. 66 Kodak EasyShare 5300 AiO Scan Scan to File 1 Load your original face down on the right front corner of the scanner glass.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702069)

[EASYS SHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)

<http://yourpdfguides.com/dref/2702069>

2 Press Scan to display the Scan menu. 3 Press or to select Document. 4 Press Start. The document is scanned and saved based on the Kodak AiO Home Center scan document settings (see Scan Document Settings). Scan to Application 1 Load your original face down on the right front corner of the scanner glass.

2 Press Scan to display the Scan menu. 3 Press 4 Press 5 Press 6 Press 7 Press or to select Document. to select Scan To. or to select Application. to until Application is selected. or to select another application. 8 Press Start. User's Guide 67 Chapter 6 Scan to Memory Card 1 Insert a Memory Card into the appropriate card slot. WARNING: Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card.

You can safely remove a card only when the status light next to the slots is not blinking. 2 Load your original face down on the right front corner of the scanner glass. 3 Press Scan to display the Scan menu. 4 Press 5 Press 6 Press or to select Document. to select Memory Card. to select Scan To. 7 Press Start. 68 Kodak EasyShare 5300 AiO 7 Maintenance Maintenance The Kodak EasyShare All-in-One requires little maintenance. However, you should clean the glass and lid backing to remove dust and fingerprints. Fingerprints and other debris on the glass or lid backing could slow down performance and affect the accuracy of scanning.

This section covers the Settings menu, printhead installation, printhead calibration, checking ink levels, and changing ink cartridges. General Care IMPORTANT: Always disconnect the power before cleaning. Do not use harsh or abrasive cleaners or organic solvents on the EasyShare AiO or any of its parts. WARNING: Do not leave items on the scanner glass. The heat of the scanning lamp may cause them to stick. To clean, wipe the outside of the EasyShare AiO and LCD with a clean, dry cloth. Keep the surrounding area vacuumed and litter-free. Protect the EasyShare AiO from tobacco smoke, dust, sand, and liquid spills. Avoid placing objects on the EasyShare AiO. Keep the EasyShare AiO, accessories, and supplies away from direct sunlight and out of high-temperature environments.

Do not allow chemicals, such as suntan lotion, to come into contact with the painted surface of the EasyShare AiO. If the EasyShare AiO has been subjected to inclement weather or you suspect water has gotten inside the EasyShare AiO, turn it off and let it dry out. If this does not resolve the problem, contact customer support (see Telephone Customer Support). Service agreements are available in some countries. Contact a dealer of Kodak products for more information. For more disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at [www.eiae.org](http://www.eiae.org). User's Guide 69 Chapter 7 Clean the Scanner Glass To ensure that your copies and scans remain clear, keep the scanner glass and lid backing clean and dust the exterior.

1 Turn off the EasyShare AiO and raise the lid. 2 Clean the glass with a soft cloth or sponge slightly moistened with a nonabrasive glass cleaner. WARNING: Do not use abrasives, acetone, benzene, or carbon tetrachloride on the glass, since they can damage it. Do not place or spray liquid directly on the glass. The liquid might seep under the glass and damage the device.

3 Dry the glass with a lint free cloth. Clean the Scanner Lid Minor debris can accumulate on the document backing located underneath the scanner lid of the Kodak EasyShare AiO. 1 Turn off the EasyShare AiO and raise the lid. 2 Clean the lid underside with a soft cloth or sponge slightly moistened with a mild soap and warm water. 3 Wipe the underside gently to loosen debris.

Do not scrub. 4 Dry the underside with a chamois or soft cloth. WARNING Do not use paper-based wipes, as these might scratch the underside. 5 If further cleaning is needed, repeat the previous steps using isopropyl (rubbing) alcohol, and wipe the underside thoroughly with a damp cloth to remove any residual alcohol. Format Memory Card Formatting will erase all the data on a memory card. 1 Insert a memory card into the appropriate slot. 2 Press Menu. 3 Press until Format Memory Card is selected. 4 Press OK. 5 Press Start to begin formatting.

Print Diagnostic Sheet The Diagnostic Page contains information about your printer that can be useful when contacting Kodak support. 1 Press Menu. 2 Press until Print Diagnostic Sheet is selected. 3 Press OK. 70 Kodak EasyShare 5300 AiO Maintenance 4 Press Start to begin printing. Firmware Upgrade You can update the firmware in your EasyShare AiO with the most recent available from the Home Center software. This requires an internet connection. 1 Click the Help button 3 Click Firmware Upgrade. to open the Help panel. 2 Under General Links, click Maintenance.

Ink Cartridges Your Kodak EasyShare AiO uses separate black and color ink cartridges. The ink levels are displayed on the Control Panel and the printer software. Generic or non-Kodak ink cartridges may not function in the KODAK EASYSHARE All-in-One Printer. Kodak recommends using Kodak ink cartridges. Check Ink Levels You can easily check the ink levels to determine how soon you might need to replace an ink cartridge.

The ink level supply screen shows the amount of ink remaining in the ink tanks. 1 Press Menu to display the main menu. 2 Press until Ink Levels is selected. 3 Press OK to display the Ink Levels screen. The Ink Levels screen shows ink levels in a vertical gauge format with one gauge for the Black Ink cartridge and one gauge for the Color Ink cartridge.

Replace Ink Cartridges A Low Ink warning message is displayed when one of the ink levels drops below 20 percent. NOTE: For the best quality prints, store ink cartridges in a location where the temperature does not exceed 85° F (30° C). WARNING: Generic or non-Kodak ink cartridges may not function in the KODAK EASYSHARE All-in-One Printer. Kodak recommends using Kodak ink cartridges. Third party ink cartridges may not contain the necessary Smart Chip information to notify you before the ink cartridge is empty. User's Guide 71 Chapter 7 1 Open the printer access door by lifting from the front center of the unit. The ink tanks are located in the print head. 1 Print head 2 Color ink cartridge 3 Black ink cartridge 2 Wait until the printhead is idle and silent, then pinch the pinch latch on the old ink cartridge with your thumb and forefinger and lift it out of the print head. 3 Open the box of the new ink cartridge. 4 Remove the bagged ink cartridge from the box and tear open the bag at the notch and remove the ink cartridge.

IMPORTANT: Insert the ink cartridge immediately to prevent any drying of the ink. 5 Remove the orange cap from the cartridge by grasping the top edge and pulling/rotating it off the ink cartridge. 72 Kodak EasyShare 5300 AiO Maintenance 6 Slide the ink cartridge into the printhead.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)  
<http://yourpdfguides.com/dref/2702069>

7 Press down on the tab until you hear a click and feel the latch snap into position. 8 Close the printer access door. Printhead The printhead dispenses the ink from the ink cartridges onto the paper. Printer maintenance involves: Calibration Clean the printhead Calibration The Kodak EasyShare AiO performs a calibration every time you install or replace a printhead. However, you can run a calibration if you are seeing changes in the image quality. Calibration aligns the printheads and performs a nozzle health check to enable high-quality prints. To calibrate from computer 1 Load the main tray or photo tray with photo paper.

**IMPORTANT:** If you don't have any photo paper, you can use plain paper, but photo paper is highly recommended for calibrations. 2 Start the AiO Home Center. 3 Click to open the Help panel. 4 Under General Links, click Maintenance. 5 Click Calibration to make a calibration print.

6 Follow the instructions on the calibration print to calibrate the printer. User's Guide 73 Chapter 7 To calibrate from control panel 1 Load the main tray or photo tray with photo paper. **IMPORTANT:** If you don't have any photo paper, you can use plain paper, but photo paper is highly recommended for calibrations. 2 Press Menu. 3 Press until Calibrate Printer is selected.

4 Press OK. A new screen appears with Print Calibration Page selected. 5 Press Start and follow the instructions on the LCD screen to complete the calibration. Clean Printhead If you notice a degradation in the quality of prints, the printhead may need cleaning. To clean printhead from computer 1 Start the AiO Home Center. 2 Click to open the Help panel. 3 Under General Links, click Maintenance. 4 Click Printhead Cleaning. To clean printhead from control panel 1 Press Menu to display the Main Menu. 2 Press until Clean Printhead is selected.

3 Press OK to go to the Clean Printhead menu. 4 Press OK to perform a Basic Clean. or Press to select Deep Clean and press OK to perform a Deep Clean. Replace Printhead 1 Make sure the EasyShare AiO is on. 2 Open the printer access door. The carriage moves to a center position. 74 Kodak EasyShare 5300 AiO Maintenance 3 Wait until the printhead is idle and silent, then pinch the pinch latch on the ink cartridge with your thumb and forefinger and lift it out of the print head. Remove both ink cartridges. 4 Unlatch the printhead by pressing the button in the upper-left corner of the carriage. 5 Remove the old printhead.

6 Remove the printhead from its bag. 7 Remove and discard the clear plastic casing and the orange protective cap. User's Guide 75 Chapter 7 8 Place the printhead into the carriage. 9 Push against the back wall of the printhead until it clicks into place. 10 Reinstall the ink cartridges.

76 Kodak EasyShare 5300 AiO 8 Support Support If you have a problem with your AiO printer, refer to the Troubleshooting topics in this book. Additional technical information is available in the ReadMe file located on the Kodak EasyShare software CD. For online support, visit [www.kodak.com/go/support](http://www.kodak.com/go/support). Contact Kodak Kodak Printer Resource Center Get support for your product (FAQs, troubleshooting information, etc.). Purchase full range of digital camera and printer accessories. Download latest printer software, firmware and drivers. Online tutorials. Software Get information on EasyShare software. [www.kodak.com/go/resourcecenter](http://www.kodak.com/go/resourcecenter) [www.kodak.com/go/sfupport](http://www.kodak.com/go/sfupport) [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories) [www.kodak.com/go/downloads](http://www.kodak.com/go/downloads) [www.kodak.com/go/howto](http://www.kodak.com/go/howto) [www.kodak.com/go/easysharesw](http://www.kodak.com/go/easysharesw) (or click the Help button in the EasyShare software) [www.kodak.com/go/pcbasics](http://www.kodak.com/go/pcbasics) [www.kodak.com/go/support](http://www.kodak.com/go/support) Get help with the Windows operating system and working with digital pictures. Other Get support for Kodak printers, cameras, software, accessories, more. Print a Diagnostics Page before contacting Kodak support (see Print Diagnostic Sheet in the Maintenance chapter).

Register your printer. [www.kodak.com/go/register](http://www.kodak.com/go/register) Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Register your printer. [www.kodak.com/go/register](http://www.kodak.com/go/register) Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to User's Guide 77 Chapter 8 Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured. or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702069)

[EASYSHARE 5300 user guide](http://yourpdfguides.com/dref/2702069)

<http://yourpdfguides.com/dref/2702069>