



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE 5500. You'll find the answers to all your questions on the KODAK EASYSHARE 5500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KODAK EASYSHARE 5500**  
**User guide KODAK EASYSHARE 5500**  
**Operating instructions KODAK EASYSHARE 5500**  
**Instructions for use KODAK EASYSHARE 5500**  
**Instruction manual KODAK EASYSHARE 5500**

**Kodak**  
**EasyShare 5500**  
All-in-One Printer



User's Guide



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

**Manual abstract:**

©1989-2007 I.R.I.S. @@1 Main Components.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 1 Control Panel Layout....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 2 Status Lights..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
*3 LCD Display Screen.....*  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.... 8 Memory Card Slots and USB Port .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 9 Automatic Document Feeder ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

..... 10 AiO Home Center (Windows) ....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 10 AiO Home Center (Macintosh) .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.... 11 Getting Started .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 13 Connect Power .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....13 Install the Printhead .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.13 Install Ink Cartridges ....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..15 Two-sided Printing Accessory .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *16 Startup* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*17 Menus* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....  
*. 18 Demo Sheet.....*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..22 Transfer Photos .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.22 Configuring Settings....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..23 Fax Connections.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....26 Handling and Loading Paper.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.. 31 The Scanner Glass ...*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....



.....  
.....

.....  
.....  
.....  
.....

*.....31 Load Main Tray ...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

*.32 Load Photo Tray .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*....33 Load Envelopes.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

....34 Load Labels .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.35 Print .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

... 37 Print Photos from a Camera.....

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....38 Print Photos from the Control Panel .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....  
.....38 Index Print...*

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

*.....  
.....39 Print Photos from a Proofsheets ....*

.....  
.....

.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*. 40 Tagged Photos (DPOF) ....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*40 Bluetooth Printing .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*41 Panoramic photos.....*

.....

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*42 Layouts .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....42 Setting Print Options.*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....55 Previewing Photos .....*

.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*...57 User's Guide i Table of Contents Copy ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*61 Copy with Control Panel....*

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 61 Scan .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *69 Scan with Control Panel*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *69 Fax* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *73 Fax Functionality.*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*. 73 Print Fax Settings.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.. 73 Fax Header .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....



.....

.....

.....

.....

.....

.....

.....

.....

.... *73 Print Fax Cover Page*.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *73 Print Fax Activity Log* .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. *74 Setting Fax Options*.....

.....

.....

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *74 Sending a Fax.*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *80 Receiving a Fax...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *81 Maintenance* .....

.....  
.....  
.....

.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*83 General Care.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.... 83 Clean the Scanner Glass.*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....84 Clean the Scanner Lid...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*84 Format Memory Card.....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*...84 Print Diagnostic Sheet.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 85 Ink Cartridges .....*

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.. 85 Printhead .....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 88 Support ...*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.....  
.... 91 Contact Kodak.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 91 Limited Warranty .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 91 Telephone Customer Support.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
*93 Troubleshooting.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*..94 Appendix ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....105 All-in-One Specifications .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.....  
.....

..... 105 Computer Requirements .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.... 106 Paper Types .

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.. 106 Safety...

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....

*.. 108 Regulatory Compliance.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*109 Glossary .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....113 Index.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....115 ii Kodak EasyShare 5500 AiO 1 Product Overview Product Overview The Kodak EasyShare 5500 All-in-One (AiO) Printer allows you to print, copy, scan, and fax photos or documents. Many functions can be operated directly from the Control Panel. You can print, store, manage, and share your digital photos with family members and friends with the Kodak EasyShare software. You can buy optional accessories to enhance your Kodak EasyShare AiO experience.

Main Components 1 Automatic Document Feeder 2 Printer access door 3 Memory Card Indicator 4 Memory Card Slots 5 USB Port 6 Photo Tray Light 7 Photo Tray 8 Paper-length Guide 9 Main Tray 10 Output Tray Extender 11 Paper-width Guide 12 Output Tray 13 LCD Display 14 Control Panel 15 Scanner lid 16 Rear Access Door 17 Phone Line Connectors 18 Power Connector 19 USB Port User's Guide 1 Chapter 1 Control Panel Layout Number Name 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 On/Off Button On/Off Light Phonebook Button Keypad Fax Button Copy Button Photo Button Rotate button Zoom + Button LCD

Display Attention Light Cancel the power. If the Photo Tray light does not go out after 20 seconds and the On/Off light comes on, contact Kodak for assistance. None None: Normal operation when performing a print, copy, scan, fax, or other job requests. None: Please wait and allow the printer to complete the initialization process (about 30 seconds). If the flashing green persists, you may have an issue with the printer. Visit [Kodak.com](http://Kodak.com) for additional troubleshooting steps or contact your local Kodak Call Center. Disconnect power for 5 seconds and reconnect power. If the condition persists, please check the LCD display for additional information. Contact Kodak service for assistance.

Also check the status monitor on your computer for a message. Check the LCD display or status monitor on your computer for a message. Please install a Printhead and ink cartridges. Light is a steady green. Light is a flashing green.

The printer is properly powered up, on, and ready. The printer is busy. The printer is initializing. Light is a flashing yellow. The printer has detected an error condition.

Light is a flashing red. The printer has detected an error condition that needs your attention. The printer has not detected that a Printhead is installed. Flashing a rotating pattern of red, yellow, and green. User's Guide 5 Chapter 1 Photo Tray Status Light Light Status Photo tray light is Off. Cause The photo tray is not engaged. Action/Solution Push the photo tray in to engage if you want to print 4 x 6 inch pictures. Press the On/Off button to turn the printer on.

Pull the photo tray out to disengage if you do not want to print 4 x 6 inch pictures. None: Please wait and allow the printer to complete the initialization process.

If the flashing green persists, you may have an issue with the printer. Visit [Kodak.com](http://Kodak.com) for additional troubleshooting steps or contact your local Kodak Call Center. The printer is not turned on. Photo tray light is On. The photo tray is engaged. The printer is powering up. 6 Kodak EasyShare 5500 AiO Product Overview Attention Light Light Status Light is off. Light is blinking steady. Cause No Error.

Recoverable Error. Action/Solution None Paper jam while printing. Main tray empty. Photo tray empty. Carrier stall during pick.

Media size mismatch. Media type mismatch. Paper jam during pick. Carrier stall while printing. Change color ink cartridge.

Change black ink cartridge. Color ink cartridge not readable. Black ink cartridge not readable. Change both ink cartridges. Printhead not calibrated. Calibration sheet needs scanning. Calibration sheet not detected. Calibration sheet read error. Back cover removed when idle. Back cover removed while printing.

Unit opened when idle. Unit opened during printing. Too many picture sources. Proofsheet not detected. Proofsheet read error. Color ink cartridge inserted incorrectly. Black ink cartridge inserted incorrectly. Color ink cartridge not installed. Black ink cartridge not installed. Ink cartridges not installed. Printhead not installed. Media sensor failure. Printhead failure. Scanner failure. Light is blinking rapidly.

Warning Light is on. Non-Recoverable Error User's Guide 7 Chapter 1 Card Slot Light Light Status Light is off. Cause An SD/MMC card is not inserted or is improperly inserted in the card slot. An SD/MMC card is properly inserted in the card slot. Slow blink: The internal card reader is initializing or communicating with the printer.

Fast blink: There is a card or communication error. Action/Solution Remove and reinsert the SD/MMC card. None None Light is on. Light blinks green. Remove the card and make sure the card is not "write" protected or damaged. Reinsert the card or replace with a new card if necessary. LCD Display Screen

The LCD screen displays photos, messages, instructions, and menu parameters. Menu navigation is accomplished with the 4-way Navigation buttons. The screen is hinged at the back edge and can be positioned from flat on the control panel surface to vertical. Instructions displayed on photos appear up to four seconds and then disappear, or disappear immediately after you start interacting with the screen.

The instructions will return after fifteen seconds of inactivity. When a second page of display text is present, it is indicated by the down arrow symbol, positioned in the lower right corner of the menu area. When the second or subsequent page of text is in view, the presence of a previous page is indicated by the up arrow symbol in the top of right corner of the menu area.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

Each time you press Navigate Down ( ), you advance the highlight down 1 row. When the last row is highlighted, pressing causes page 1 to be replaced with page 2. When page 2 appears, the highlight is on the top row. The up arrow symbol appears at the right edge. If a third page of menu parameters is available, the down arrow symbol appears in the lower right corner. Until the highlight is advanced, pressing Navigate Up ( ) returns you to the previous page. Holding down any of the 4-way Navigation buttons causes them to repeat (scroll).

8 Kodak EasyShare 5500 AiO Product Overview Default Display Settings Default settings are provided for each option. If you make changes to the settings, the changes remain as long as you do not change modes. You can save the settings in each mode by navigating to Save Settings and pressing OK. You may reset options to the master defaults by going to the main menu and selecting Reset All Settings. Photos The LCD screen displays JPG images when you insert a memory card, camera, or USB device.

However, the following images will not be displayed. File size greater than 8 MB Image size greater than 12 megapixels Image colorspace is not sRGB or adobeRGB Progressive JPEG images Memory Card Slots and USB Port Your Kodak EasyShare All-in-One can access the memory cards used in most digital cameras. You can insert the memory card into the EasyShare AiO, or connect your camera directly through one of the two USB ports on the front panel, using a USB cable. Your Kodak EasyShare AiO can read the contents of the memory card while it is still in the camera. If your EasyShare AiO beeps three times when you plug a device into the USB Port, it means the device is not supported.

Supported Memory Cards Your Kodak EasyShare AiO can read the following memory cards. xD-Picture Card Memory Stick Memory Stick Pro Secure Digital Card/MultiMediaCard Compact Flash type I and type II, including microdrives User's Guide 9 Chapter 1 Your EasyShare AiO also supports the following memory cards with Memory Stick and SD/MMC card slot adapters you can purchase. Memory Stick Duo miniSD MicroSD (TransFlash) The Memory Card light is a green LED located near the memory card slots. It lights whenever you insert a memory card, and flashes while the card is being read. The flashing serves as an indication to not remove the card while it is being read, or written to, which could potentially damage the data on the card. Automatic Document Feeder The Automatic Document Feeder on the scanner has a tray capacity of 35 sheets of 20-24 lb plain paper. The paper dimensions you can use are from 7 to 8.5 inches (17.8 to 6 cm) wide, and from 10 to 14 inches (25.4 to 35.

6 cm), including 8.5 x 11 pages. Paper is automatically detected when loaded. CAUTION The Automatic Document Feeder is for plain paper only and cannot feed photo paper. NOTE: You can make 2-sided to 1-sided copies, but not full duplex copies. AiO Home Center (Windows) The AiO Home Center software is an application that runs on the computer. It enables you to print, copy, scan, and configure your AiO printer from the computer. The six large icons on the AiO Home Center main window let you: Scan Pictures and Documents Copy Pictures Print Pictures Configure Settings for Printing and Scanning. Access My Resource Center at Kodak Order Supplies There are three small icons in the upper right corner of the window: Returns you to the main Home Center screen Displays the Status Monitor Displays a Help panel for the Home Center software 10 Kodak EasyShare 5500 AiO Product Overview AiO Home Center (Macintosh) The AiO Home Center software is an application that runs on the computer. It enables you to configure your AiO printer from the computer.

After installation, you can run Home Center from the Printer Setup Utility by selecting your Kodak AiO Printer in the Printer List and clicking the Utility icon. The Setup and Maintenance tabs let you: Configure Settings Calibration and Printhead Cleaning Select: Provides a list of connected printers where you can select another printer. Order Supplies: Connects you to a Kodak web site where you can order supplies online. View/Hide Status: Opens a drawer that displays the configuration status of your Kodak AiO printer. User's Guide 11 Chapter 1 12 Kodak EasyShare 5500 AiO 2 Getting Started Getting Started It is important to find a good location for your AiO Printer.

Place the printer on a clean flat surface, in a dry location, and out of direct sunlight. Make sure the printer has proper ventilation. Avoid areas where ventilation ducts, open doors, or high traffic might expose the EasyShare AiO and paper to high levels of dust and debris. Airborne particles can affect picture quality. Allow enough space on all sides of the EasyShare AiO to let you connect and disconnect cables, change the ink cartridges, and remove and load paper.

Connect Power RISK OF ELECTRICAL SHOCK Use only the AC power adapter included with your AiO printer. Other adapters or cords could damage your printer or computer. 1 Connect the printer power cord to the AC power adapter, then to the back of the AiO printer. 2 Plug the AC adapter power cord into a power outlet. Install the Printhead The printhead dispenses the ink from the cartridges onto the paper. 1 Make sure the EasyShare AiO is on. 2 Open the printer access door. The carriage moves to a center position. User's Guide 13 Chapter 2 3 Remove the printhead from its bag. 4 Remove and discard the clear plastic casing and the orange protective cap.

5 Place the printhead into the carriage. 6 Push against the back wall of the printhead until it clicks into place. 7 Install the ink cartridges. 14 Kodak EasyShare 5500 AiO Getting Started Install Ink Cartridges After installing the printhead, you need to install the black and color ink cartridges. 1 Printhead 2 Color ink cartridge 3 Black ink cartridge 1 Tear open the black ink cartridge bag at the notch and remove the ink cartridge. IMPORTANT: Insert the ink cartridge immediately to prevent any drying of the ink. 2 Remove and discard the orange cap. IMPORTANT: Handle ink cartridge carefully to avoid ink transfer. 3 Insert the black ink cartridge into the printhead. User's Guide 15 Chapter 2 4 Press down on the ink cartridge until you hear it snap into position. 5 Tear open the color ink cartridge bag at the notch and remove the ink cartridge. 6 Remove and discard the orange cap. 7 Insert the color ink cartridge into the printhead. 8 Press down firmly on the cartridge until you hear it snap into position. 9 Close the printer access door.

NOTE: For the best quality prints, store ink cartridges in a location where the temperature does not exceed 85° F (30° C). Two-sided Printing Accessory The Kodak EasyShare AiO supports an optional Two-sided Printing Accessory that enables printing on both sides of the paper.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

When installed, the Two-sided Printing Accessory is automatically detected by the printer and computer system software. The Two-sided Printing Accessory is limited to plain paper (no photo paper). The paper dimensions that can be used are from 6.9 to 8.5 inches (17.5 to 21.6 cm) wide and from 9.8 to 11.7 inches (24.9 to 29.7 cm) long. 16 Kodak EasyShare 5500 AiO Getting Started You can purchase a Two-sided Printing Accessory and other accessories for your printer at <http://www.kodak.com/go/accessories>.

To install the Two-sided Printing Accessory 1 Remove the door on the back of the printer by pressing in on the two latches and pulling out. 2 Insert the bottom of the duplexer into the printer and press the top in until it clicks. You can control how long the printer waits before a sheet is flipped by the duplexer with the AiO Home Center (See General Settings). Startup When you power on your Kodak EasyShare All-in-One, status information is displayed on the LCD. After the startup is complete, the EasyShare AiO enters the Copy mode, unless a photo device is attached. If a photo device is attached or memory card inserted, the EasyShare AiO enters Photo mode. User's Guide 17 Chapter 2 Menus The Kodak EasyShare AiO menus are accessed by the Menu, Photo, Copy, Scan, and Fax buttons. Menu Button Help OK Installing Ink Cartridges Making a Copy Printing a Photo Making a Scan Photo Print Settings OK Calibrating Printer Use Print Order if Found Scene Balance Add Date to Prints Control Panel Settings OK Button Sounds Minutes to Standby Ink Levels OK or or or or or Yes No On Off No Yes On Off 10-30 Proofsheet Fax Settings OK OK Print Proofsheet Scan Proofsheet Ans. Machine Mode Rings to Answer Busy Redial Attempts Redial if no Answer Fax Speaker Print Fax Confirmation Page or or or or or No Yes 1-5 1-14 No Yes Off On No Yes 18 Kodak EasyShare 5500 AiO Getting Started Dialing Mode Disable Call-Waiting Error Correction Fax Speed or or or or or Tone Pulse No Yes Off On Fast (33.6K) Medium (14.4K) Slow (9.6K) Print Fax Settings Fax Header Print Fax Cover Page Print Fax Activity Log Clean Printhead Calibrate Printer Format Memory Card Print Demo Sheet Print Diagnostic Sheet Date and Time OK OK OK OK OK OK OK OK OK OK Prints current fax settings. Fax Header Form Prints fax cover sheet. Prints a report of fax activities.

Basic Clean Deep Clean Print Calibration Page Scan Calibration Page Formats inserted memory card. Prints a demonstration page. Prints a diagnostics page. Year Month Day Hour Minute or or or or 2006-2099 January-December 1-31 0-24 0-60 Language Reset all Settings or OK <List of Languages> User's Guide 19 Chapter 2 Photo Button Layout or Borderless Bordered 2 per Page 3 per Page 4 per Page 9 per Page Index 2x2 Poster 3x3 Poster Quantity Color Quality or or or 4x4 Poster 1 - 99 Color Black & White Normal Best Save Settings or Draft No Yes 20 Kodak EasyShare 5500 AiO Getting Started Copy Button Quantity Color Quality or or or 1 - 99 Black & White Color Normal Draft Output or Best Same Size Fit to Page Scale Percent Size or Photo Layouts Output = Scale Percent 10 - 500 Output = Photo Layouts Borderless Bordered 2 per Page 3 per Page 4 per Page 9 per Page Index 2x2 Poster 3x3 Poster Brightness Preview Save Settings or or or 4x4 Poster -3 to +3 No Yes (Photo Layouts only) No Yes Scan Button Scan What Scan To or or Document Photo File Application Application Save Settings or or Memory Card AiO Home Center No Yes User's Guide 21 Chapter 2 Fax Button Resolution or Fine Standard Color Brightness Save Settings or or or Photo Black & White Color -3 to +3 No Yes Demo Sheet You can print a sample page on US Letter or A4 size paper to evaluate print quality. The Demo Sheet is a single sheet of paper that displays information about the features and capabilities of your EasyShare AiO printer.

You can print a Demo Sheet by pressing the Copy and Photo buttons at the same time. or 1 Press Menu to display the main menu. 2 Press until Print Demo Sheet is selected. 3 Press OK. 4 Press Start to begin printing. Transfer Photos After you take photos with your digital camera, you can print them immediately or save them directly to your computer. You can transfer from memory cards, PTP cameras, and USB mass storage devices. 1 Insert a Memory Card into the appropriate slot or connect a camera to the USB Port. WARNING Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card.

You can safely remove a card only when the status light next to the slots is not blinking. 2 Press Transfer. 3 Press Start to transfer. 4 Complete the transfer with the Transfer dialog on your computer. 22 Kodak EasyShare 5500 AiO Getting Started Configuring Settings You can configure settings for your Kodak EasyShare AiO using the Control Panel and the AiO Home Center software. Use Print Order if Found The Digital Print Order Format (DPOF) is an industry-standard file that can be created by some digital cameras. Camera-selected photos are photos you tag for printing with your digital camera. When you select photos with your camera, the camera creates a DPOF file that identifies which photos have been tagged for printing. Your Kodak EasyShare AiO can read the DPOF file from the memory card in a camera so you do not have to re-select the photos to print. NOTE: Not all digital cameras allow you to tag your photos for printing.

See your digital camera documentation to see if it supports tagging (DPOF). When you print tagged photos, the selected default layout is applied, unless your camera allows selection of sizes. The DPOF file is stored by the digital camera on a memory card and specifies the following information: Which photos to print The quantity of each photo to print Index printing (thumbnails of selected photos) The default setting for using a detected DPOF file is Yes. 1 Press Menu to display the main menu. 2 Press to select Photo Print Settings.

to select Use Print Order if Found. or to change the setting. 3 Press OK. 4 Press 5 Press 6 Press OK. User's Guide 23 Chapter 2 Scene Balance Your EasyShare AiO is configurable to apply automatic scene balance improvements (brightness) for photos printed on the AiO from camera cards, USB connected devices, and wireless devices.

The default is to apply the scene balance improvements. 1 Press Menu to display the main menu. 2 Press to select Photo Print Settings. until Scene Balance is selected. or to enable or disable Scene Balance. 3 Press OK. 4 Press 5 Press 6 Press OK. Add Date to Prints You can set your EasyShare AiO to print the date a picture was taken on the photo print. The default is to not print the date. 1 Press Menu to display the main menu.

2 Press to select Photo Print Settings. until Add Date to Prints is selected. or to enable or disable date printing.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

3 Press OK. 4 Press 5 Press 6 Press OK. **Button Sounds** You can configure your EasyShare AiO to emit an audio feedback beep when you press a button on the Control Panel. The default setting is to beep. 1 Press Menu to display the main menu. 2 Press until Control Panel Settings is selected. or to enable or disable button sounds.

3 Press OK. 4 Press 5 Press OK. **Minutes to Standby** When the Kodak EasyShare All-in-One is idle for the standby power setting timeout period, it enters the Standby state. The On/Off indicator remains lit, but power consumption is reduced. When in the Standby state, any activity such as a single button press, or inserting camera card, brings the EasyShare AiO out of the Standby state and returns it to the Ready state.

**NOTE:** Faxes and print jobs from wireless devices (included PC's linked over the WLAN) can be received while in standby. 24 **Kodak EasyShare 5500 AiO Getting Started** You can set the standby timeout from 10 30 minutes. The default setting is 15 minutes. 1 Press Menu to display the main menu. 2 Press until Control Panel Settings is selected.

or to change the standby timeout period. 3 Press OK. The Power Settings menu is displayed with Minutes to Standby selected. 4 Press 5 Press OK. **Date and Time** Your Kodak EasyShare All-in-One contains a clock for stamping the date and time on scans to a memory card and faxes. 1 Press Menu to display the main menu. 2 Press until Date and Time is selected. 3 Press OK to go to the Date and Time menu. 4 Press or to set the Year. 5 Press OK.

6 Press or to set the Month. 7 Press OK. 8 Press or to set the Day. 9 Press OK. 10 Press or to set the Hour. 11 Press OK. 12 Press or to set the Minute. 13 Press OK. **Set Language** You can select the language the EasyShare AiO uses for the LCD display. 1 Press Menu to display the Main Menu.

2 Press until Language is displayed. until the language you want is selected. 3 Press OK to go to the Select Language menu. 4 Press 5 Press OK. **User's Guide 25 Chapter 2 Reset All Settings** You can restore the original factory settings to your Kodak EasyShare All-in-One.

**NOTE:** Restoring the factory defaults will not change the date and time information you set. 1 Press Menu to display the Main Menu. 2 Press until Reset All Settings is selected. 3 Press OK. **Fax Connections** After completing all steps in the Setup Guide, use the instructions in this section to connect the fax feature of your Kodak EasyShare AiO.

**Phone Lines** The Kodak 5500 AiO printer is an analog device and standard phone lines are analog. However, cable lines and some office PBX systems are digital. When connecting your 5500 AiO to a digital phone line, connect a digital-to-analog adapter between your digital line and your 5500 AiO. **NOTE:** Some cable companies install a digital-to-analog adapter with their phone service. **DSL Line** If you have Digital Subscriber Line (DSL) service through your phone company, use the instructions in this section to connect a DSL filter between the telephone wall jack and your Kodak EasyShare AiO. This filter removes the digital signal that would block your EasyShare AiO from communicating properly with the telephone line. **CAUTION** If you have a DSL line and do not connect the DSL filter, you will not be able to send and receive faxes with your EasyShare AiO. 1 Obtain a DSL filter from your DSL provider. 2 Connect the phone cord supplied with your Kodak EasyShare AiO to the open port on the DSL filter and the port labeled 1-LINE. 3 Connect the DSL filter cord to the telephone wall jack.

26 **Kodak EasyShare 5500 AiO Getting Started Separate Fax Line (no voice)** Connect your Kodak EasyShare AiO to the phone line as shown in the illustration if you have a separate fax line on which you receive no voice calls, and you have no other equipment connected on this phone line. 1 Connect the phone cord supplied with your EasyShare AiO to your telephone wall jack and the port labeled 1-LINE. 2 Set Answering Machine Mode on your All-in-One to Off. When the phone rings, your EasyShare AiO will answer automatically after the number of rings you set in the Rings to Answer setting. It will then send fax reception tones to the sending fax machine and receive the fax. **Shared Voice/Fax Line** Connect your Kodak EasyShare AiO to the phone line as shown in the illustration if you receive both voice and fax calls at the same phone number, and you have no other equipment connected to this phone line. 1 Connect the phone cord supplied with your EasyShare AiO to your telephone wall jack and the port labeled 1-LINE. 2 Connect your phone to the port labeled 2-EXT on the back. **User's Guide 27 Chapter 2 Fax Line with Modem** Connect your Kodak EasyShare AiO to the phone line as shown in the illustration if you have a fax line on which you receive no voice calls, and you also have a modem connected on this line. **NOTE:** Since your modem shares the telephone line with your EasyShare AiO, you will not be able to use both your computer modem and fax simultaneously.

For example, while you are sending and receiving faxes, you will not be able to Email or access the Internet. 1 Disconnect the phone cord from the wall jack that connects your modem to the telephone wall jack and plug it into the port labeled 2-EXT on your All-in-One. 2 Connect the phone cord supplied with your Kodak EasyShare AiO to your telephone wall jack and the port labeled 1-LINE. 3 Set Answering Machine Mode on your All-in-One to Yes. 4 If your modem software is set to automatically receive faxes to your computer, set it to On.

**Shared Voice/Fax with Modem** Connect your Kodak EasyShare AiO to the phone line as shown in the illustration if you receive both voice calls and fax calls at the same phone number, and you also have a modem connected on this phone line. **NOTE:** Since your modem shares the telephone line with your EasyShare AiO, you will not be able to use both your computer modem and your All-in-One simultaneously. For example, while you are sending and receiving faxes, you will not be able to Email or access the Internet. 1 Disconnect the phone cord from the wall jack that connects your modem to the telephone wall jack and plug it into the port labeled 2-EXT on your All-in-One..

28 **Kodak EasyShare 5500 AiO Getting Started 2** Connect the phone cord supplied with your Kodak EasyShare AiO to the Out port on the back of your modem. 3 Connect a phone cord to your telephone wall jack and the port labeled 1-LINE. 4 Set Answering Machine Mode on your All-in-One to Yes. 5 If your modem software is set to automatically receive faxes to your computer, set it to Off. **Shared with Answering Machine** Connect your Kodak EasyShare AiO to the phone line as shown in the illustration if you receive both voice calls and fax calls at the same phone number with an answering machine. 1 Disconnect the phone cord from the wall jack that connects your modem to the telephone wall jack and plug it into the port labeled 2-EXT on your All-in-One.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702072)

[EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)

<http://yourpdfguides.com/dref/2702072>

. 2 Connect the phone cord supplied with your Kodak EasyShare AiO to your telephone wall jack and the port labeled 1-LINE. 3 Set Answering Machine Mode on your All-in-One to Yes. The EasyShare AiO will not automatically answer calls.

Instead, the answering machine will answer the call and the EasyShare AiO will monitor the line. If the EasyShare AiO detects fax tones, the EasyShare AiO will receive the fax. If the call is a voice call, the EasyShare AiO ignores the call. Voice/Fax with Modem and Answering Machine Connect your Kodak EasyShare AiO to the phone line as shown in the illustration if you receive both voice calls and fax calls at the same phone number, and you also have a modem and answering machine connected. NOTE: Since your modem shares the telephone line with your EasyShare AiO, you will not be able to use both your computer modem and your All-in-One simultaneously. For example, while you are sending and receiving faxes, you will not be able to Email or access the Internet. User's Guide 29 Chapter 2 1 Disconnect the phone cord from the wall jack that connects your modem to the telephone wall jack and plug it into the port labeled 2-EXT on your All-in-One. 2 Make sure your answering machine is connected to the Out port on the back of your modem. This provides a direct connection between the All-in-One and your answering machine, even though the modem is connected first. CAUTION If you do not connect your answering machine in this way, fax tones from a sending fax machine could be recorded on your answering machine, and you may not be able to receive faxes.

3 Connect the phone cord supplied with your EasyShare AiO to your telephone wall jack and the port labeled 1-LINE. 4 If your modem software is set to automatically receive faxes to your computer, set it to Off. 5 Set Answering Machine Mode on your All-in-One to Yes. The EasyShare AiO will not automatically answer calls. Instead, the answering machine will answer the call and the EasyShare AiO will monitor the line.

If the EasyShare AiO detects fax tones, the EasyShare AiO will receive the fax. If the call is a voice call, the EasyShare AiO ignores the call. 30 Kodak EasyShare 5500 AiO 3 Handling and Loading Paper Handling and Loading Paper Use the following guidelines when handling paper. To avoid fingerprints, handle the paper by the edges as much as possible. Avoid touching the glossy side of photo paper.

Keep the input and 4x6 paper trays closed to keep out dust and debris. Store paper flat. Keep paper away from direct sunlight, and out of high-temperature environments (such as a vehicle parked in the sun). You can load many different types and sizes of paper in your Kodak EasyShare AiO, including letter paper, photo paper, transparencies, and envelopes (see Paper Types in the Appendix). The EasyShare AiO automatically detects the size and type of paper you load in the input tray, and then adjusts to generate the highest quality output for that paper. The Scanner Glass The scanner glass or automatic document feeder is where you place originals for copying, scanning, or faxing. 1 Lift the lid and place your original face down on the left rear corner of the scanner glass or place a stack of originals (up to 35 sheets of 20 lb plain paper) in the automatic document feeder face up. User's Guide 31 Chapter 3 Load Main Tray You can load the main paper tray with various types of paper from 3 to 8.5 inches wide and 5 to 14 inches long, with a capacity of 100 sheets of 20 lb plain paper (clean stack of new paper). IMPORTANT: To print from the main paper tray, make sure the photo tray is not engaged, pulled all the way out, and the lid closed.

1 Lift the output tray, and slide the paper-width and paper-length guides to their outermost positions. 2 Align the edges of a stack of paper. 3 Insert the stack of paper into the input tray with the short edge forward and the print side down. Slide the stack of paper forward until it stops. 4 Slide the paper-width and paper-length guides inward until they stop at the edges of the paper. 32 Kodak EasyShare 5500 AiO Handling and Loading Paper 5 Lower the output tray. 6 Pull the extender tray out. Load Photo Tray You can load up to 20 sheets of 10 mil thick 4x6 inch (101x150 mm) photo paper into the photo tray. TIP: To avoid fingerprints, handle the paper by the edges or by the perforated tabs. Avoid touching the glossy side of the paper.

1 Lift the photo tray lid. 2 Slide the photo tray towards you until it stops. NOTE: When the photo tray is disengaged, the main paper tray is active. User's Guide 33 Chapter 3 3 Insert the stack of photo paper into the photo tray glossy side down. 4 Slide the photo tray with the stack of photo paper in until it stops. Engaging the photo tray turns the photo tray light on. 5 Close the photo tray lid. Load Envelopes You can load plain envelopes into the main input tray of your Kodak EasyShare AiO. Do not use envelopes with cutouts or cellophane windows. 1 Lift the output tray.

2 Remove any paper in the input tray. 3 Insert one or more envelopes face down with the envelope flaps to the left. 34 Kodak EasyShare 5500 AiO Handling and Loading Paper 4 Slide the stack of envelopes forward until it stops. 5 Slide the paper guides inward against the stack of envelopes until they stop. 6 Close the output tray. Load Labels Use letter or A4 (designed for use with ink jet printers) label sheets. 1 Ensure that none of the pages are sticking together. 2 Place a stack of label sheets on top of standard paper in the input tray, label side down. User's Guide 35 Chapter 3 36 Kodak EasyShare 5500 AiO 4 Print Print The memory card slots accept most of the popular memory cards (see Supported Memory Cards). When you insert a memory card into the card slot, connect PTP camera, or USB flash drive, the first photo is displayed on the LCD display.

When you press the Photo button the Photo Print menu is displayed. The Photo button toggles between displaying photos and the Photo Print menu. CAUTION You can only use one device (USB or Memory card) from which to print. If both devices are engaged, the EasyShare AiO generates an error message. When you print from an application, the EasyShare AiO printer driver provides the following features. Non-photo Paper Print Quality Draft Produces the fastest print speed, but the lowest quality. Normal Delivers high-quality output and is the default setting. Normal prints faster than Best. Best Produces the highest quality for all paper and eliminates the banding (striping) effect that sometimes occurs in solid areas. Best is the slowest print speed. Page Size You can select a standard page size or create a custom size. Borderless Prints without any margin on the printed media. Orientation You can print a document with the short edge of the paper at the top of the page (portrait), or with the long edge of the paper at the top of the page (landscape).



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

Print last page first Causes printing to begin with the last page and end with the first page. NOTE: There can be a delay when printing a large document while it is being spooled.

Printing will begin when the last page is spooled. Collate You can collate pages when printing multiple copies. Scale Layout You can scale pages or pictures by percentage or page size. Multi-page Layout The driver can reduce multiple pages so that they can all be printed on one sheet of paper. Poster Layout This function enlarges a picture, divides it into several pages, and prints each page on a separate sheet of paper.

You can paste these sheets of paper together to create a poster. Booklet Layout The pages are distributed and printed on both sides of the paper and arranged in sequence. When they are folded in the middle and stapled they create a booklet. Print Mirror Image Flips the image for iron-on printing. User's Guide 37 Chapter 4 Two-sided Printing You can print on both sides of the paper. Watermark You can select or create a background watermark. Print Photos from a Camera 1 Connect your camera to the EasyShare AiO. The PictBridge logo is displayed on the LCD. 2 Load the photo tray with photo paper (See Load Photo Tray in Chapter 3). 3 Use your camera to select and print photos.

Print Photos from the Control Panel The Photo Print mode is initiated by pressing the Photo button, inserting a memory card, or connecting a USB device to the Kodak EasyShare All-in-One. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The last photo is displayed. WARNING Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Load the main tray (see Load Main Tray in Chapter 3) or photo tray (See Load Photo Tray in Chapter 3) with photo paper. NOTE: The Photo Tray only supports 4x6 inch and 100x150 mm photo paper. 3 Press 4 Press to select the number of prints for this photo. to preview the next photo.

TIP: To select all the photos on a memory card or mass storage device, hold down the OK button for 2 seconds. Holding down the OK button again for 2 seconds will de-select all the photos. 5 Repeat Steps 3 and 4 until you are finished selecting photos. 6 Press Start to print the selected photos or Photo to set print options. 7 Set print options.

See Set Print Layout See Set Number of Prints See Set Color See Set Print Quality After a photo is printed, it is de-selected. 38 Kodak EasyShare 5500 AiO Print Index Print The purpose of an index print is to catalog contents of a memory card or USB flash drive. An Index print contains the following: Sequence numbers for the relative position of each photo within the defined set of photos, incrementing from 001 and continuing progressively across all pages of a multi-page index print. 8x10 Index prints are 7/8 inches wide with 1/8 inch white space between photos. The filename is displayed below each thumbnail image.

4x6 index prints are 3/4 inch wide with 1/8 inch white space between images. The filename is displayed below each thumbnail image. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The first photo is displayed. WARNING Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Load the main tray (see Load Main Tray in Chapter 3) or photo tray (See Load Photo Tray in Chapter 3) with photo paper. NOTE: The Photo Tray only supports 4x6 inch and 100x150 mm photo paper. 3 Press Photo.

The Print menu is displayed with Layout selected. 4 Press the 5 Press Start. or to select Index. User's Guide 39 Chapter 4 Print Photos from a Proofsheets A proofsheets is a simple and convenient way to select photos and make prints directly from a camera or memory card without the need for a computer. Proofsheets printing is a two step process. In the first step, you connect a PTP camera or insert a memory card and print a proofsheets. In the second step, you select pictures to print from the proofsheets and then scan the proofsheets into the EasyShare AiO. IMPORTANT: If the AiO printer goes into standby mode, power is lost, or you unplug the memory card, camera, or USB device before you scan the proofsheets, the proofsheets session number becomes invalid and you will need to re-print it. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The first photo is displayed.

WARNING Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Load the main tray (see Load Main Tray in Chapter 3) with letter size plain paper. 3 Press Menu. 4 Press until Proofsheets is selected. 5 Press OK. 6 Press Start to print the proofsheets. 7 Complete the four steps on the proofsheets file with the memory card, storage device, or camera connected. Tagged Photos (DPOF) The Digital Print Order Format (DPOF) is an industry-standard file that can be created by some digital cameras.

Camera-selected photos are photos you tag for printing with your digital camera. When you select photos with your camera, the camera creates a DPOF file that identifies which photos have been tagged for printing. Your Kodak EasyShare AiO can read the DPOF file from the memory card in a camera so you do not have to re-select the photos to print. NOTE: Not all digital cameras allow you to tag your photos for printing. See your digital camera documentation to see if it supports tagging (DPOF). When you print tagged photos, the selected default layout is applied, unless your camera allows selection of sizes. The DPOF file is stored by the digital camera on a memory card and specifies the following information: Which photos to print The quantity of each photo to print Rotation applied to a photo Cropping applied to a photo Index printing (thumbnails of selected photos) 40 Kodak EasyShare 5500 AiO Print If a DPOF file is detected when you insert a memory card, the EasyShare AiO displays a message asking if you want to print tagged images. Bluetooth Printing Bluetooth is a short-range radio technology that enables wireless connectivity between electronic devices. This feature supports an optional Kodak USB Bluetooth Adapter that accepts JPEG/EXIF image file types from the following types of Bluetooth enabled devices. Mobile camera phones PDAs Digital still cameras You can purchase a Bluetooth Adapter directly from Kodak at [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories). To enable Bluetooth wireless connectivity, plug your Kodak Bluetooth Adapter into the front USB port.

[kodak.com/go/accessories](http://www.kodak.com/go/accessories). To enable Bluetooth wireless connectivity, plug your Kodak Bluetooth Adapter into the front USB port.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

*NOTE: Your EasyShare AiO supports connection to only one Bluetooth device at a time and has an 8MB file size limitation. Range The recommended maximum distance between Bluetooth devices for the highest transfer speed is 10 meters or 32.81 feet. However, Bluetooth will work beyond this distance. User-friendly Name Your EasyShare AiO has a serial number that is used to construct name for Bluetooth printing. The default name is Kodak5500+XXXX, where XXXX represents the AiO printer's serial number. You can change this to a more user-friendly name with the AiO Home Center (See General Settings in Chapter 2).*

*Printing When a Bluetooth connection is made, no other functions are available, and the LCD display indicates printing from Bluetooth. You control printing from your Bluetooth device. User's Guide 41 Chapter 4 Panoramic photos Panoramic images are detected based on the aspect ratio of the image. A panoramic image is displayed in a "fit to page" manner with blank space above and below the image. The crop box is adjusted for a 300 x 100 mm (12 x 4") aspect ratio and initially encompasses the entire image.*

*If panoramic images are selected for printing, the AiO printer prints all of the panoramic images after all other images have printed. Before printing the panoramic images, the EasyShare AiO displays a message to allow you to insert panoramic paper then press Start again to print the panoramic images. Layouts The photo layouts on your Kodak EasyShare AiO "snap" to the nearest standard print size whenever possible based on the combination of layout and paper size loaded. Otherwise the layouts are based on a standard 2x3 aspect ratio. The table below shows the print sizes that result from the various layouts when applied to US Letter size paper (8.*

*5 X 11 in). Layout Borderless Bordered 2 per Page 3 per Page 4 per Page 9 per Page A Paper Print Size 8.5x11" 8x10" 5x7" 4x6" 3.5x5" 2.5x3.25 (wallet) In addition to US Letter size paper, your EasyShare AiO provides photo layout support the following of US and ISO 216 paper sizes. US sizes are measured in inches and ISO 216 sizes are based on the metric system. US photo paper sizes 3.5 X 5 inches 4 X 6 inches 5 X 7 inches 8 X 10 inches 8.5 X 11 inches ISO 216 paper sizes A4 (21 X 30 centimeters) A5 (15 X 21 centimeters) A6 (10 X 15 centimeters) B5 (17.*

*6 X 25 centimeters) The international paper size standard, ISO 216, consists of an A series and a less common B series. This standard has been adopted by all countries in the world except the United States and Canada. The most widely used size in the ISO format is A4. 42 Kodak EasyShare 5500 AiO Print The charts on the following pages compare the most common paper sizes. User's Guide 43 Chapter 4 44 Kodak EasyShare 5500 AiO Print Set Print Layout 1 Press Photo. The Print menu is displayed with Layout selected. 2 Press or to change the print layout. 3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. User's Guide 45 Chapter 4 3.5x5 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 46 Kodak EasyShare 5500 AiO Print 4x6 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 47 Chapter 4 5x7 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 48 Kodak EasyShare 5500 AiO Print 8x10 Inch Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 49 Chapter 4 US Letter 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 50 Kodak EasyShare 5500 AiO Print Panoramic User's Guide 51 Chapter 4 A4 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 52 Kodak EasyShare 5500 AiO Print A5 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page User's Guide 53 Chapter 4 A6 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page 54 Kodak EasyShare 5500 AiO Print B5 Paper 1 per page borderless 1 per page bordered 2 per page 3 per page 4 per page 9 per page Setting Print Options Before you print photos you may want to change the following default settings.*

*Layout: Borderless Quantity: 1 print Color: Color print Quality: Normal Save Settings: No User's Guide 55 Chapter 4 The Photo Print menu contains parameters that allow you to specify other options. Set Number of Prints You can increase the number of prints of each photo from the Photo Print menu. The default is 1 print. 1 On the Print menu, select Quantity. 2 Press or to change the print quantity.*

*3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. Set Color You can print in color or black-and-white. Printing in color is the default. 1 On the Print menu, select Color. 2 Press or to change the print color.*

*3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. Set Print Quality The Kodak EasyShare All-in-One provides three options that affect print speed and quality for plain paper. Print quality is automatically set to Kodak Picture Quality when photo paper is detected. Draft Produces the fastest print speed, but the lowest quality. Normal Delivers high-quality output and is the default setting. Normal prints faster than Best. Best Produces the highest quality for all paper and eliminates the banding (striping) effect that sometimes occurs in solid areas. Best is the slowest print speed. 1 On the Print menu, select Quality. 2 Press or to change the print quality.*

*3 Press OK to set the selected layout and continue to set options, press Photo to preview, or Start to print. Save Settings When you change print settings from the control panel, the settings apply only to the current print job. To apply print settings to all future print jobs, you can save the changes you make. 1 On the Print menu, select Save Settings. 2 Press or to set to Yes. 3 Press Photo to preview, or Start to print. 56 Kodak EasyShare 5500 AiO Print Previewing Photos The Print Preview screen contains a crop box, displays the current photo number on the card or USB host device, and the total number of photos on the card or device. It displays a checkbox indicating whether or not the currently displayed photo has been selected for printing. A checkmark is placed in the checkbox when the photo is selected along with the number of copies to be printed.*



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702072)

[EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)

<http://yourpdfguides.com/dref/2702072>



All photos selected are given the number of copies specified in the Quantity parameter on the Print menu by default.

For example, if the Quantity parameter is set to 2, all selected photos are initially be given a number-to-print value of 2. Additionally, the Print Preview screen displays an icon of a printer and the total number of photos to be printed. For example if you select two photos, each set to print 2 copies, the number next to the printer icon will be 4. For every card/USB host session, a message is displayed the first time a photo is displayed instructing you to press and to view the photos and to press OK to select the photo for printing. For every card/USB host session, a message is displayed the first time you select a photo for printing, instructing you to use and to change the number of photos to print.

Preview Mode Preview mode allows you to select and edit photos for printing. If you press the Start button while in Preview mode, all the selected photos are printed. If there are no photos selected, then the photo displayed is printed. Print preview mode is entered when you insert a memory card, connect a camera or mass storage device, or from Print mode by pressing Photo. The Preview screen displays the current photo inside a crop box.

The crop box aspect ratio is 1.4:1. At the bottom of the screen, the current photo number on the card or USB host device, and the total number of photos is displayed. A checkbox indicates whether or not the currently displayed photo has been selected for printing. A checkmark is displayed in the checkbox if the photo has been selected along with the number of copies to be printed to the left of the checkbox. All photos selected are given the number of copies specified in the Quantity parameter on the Print menu by default. For example, if the Quantity parameter is set to 2, all selected photos are initially given a number-to-print value of 2. Additionally, the Print Preview screen displays an icon of a printer and the total number of photos to be printed. For example if you select 2 photos, each set to print 2 copies, the number next to the printer icon will be 4. IMPORTANT: Crop, zoom, and quantity are per image, but layout is global, applying to all images.

User's Guide 57 Chapter 4 Zoom Photos 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The last photo is displayed. 2 Press Zoom + to enlarge the photo in .25X increments up to 5X magnification. Pressing Zoom decreases magnification in .25X increments down to 1X. 3 Use the 4-way Navigation button to display the part of the picture you want to print. 4 Press OK when finished. The photo is displayed with a crop box around the magnification and position you selected. 5 Press to select the number of prints, and press Start to print the area displayed in the crop box.

58 Kodak EasyShare 5500 AiO Print Multiview The Multiview screen shows thumbnails of nine photos. The current photo number and the total photo number are also displayed. 1 Insert a memory card into the appropriate slot, a mass storage device into the USB port, or connect a digital camera to the USB port. The last photo is displayed. 2 Press Zoom - to enter Multiview.

The current photo is indicated by a red selection box. 3 Use the 4-way Navigation button to move the red selection box to another photo. Pressing the rightmost column displays the next Multiview screen. Pressing displays the previous Multiview screen. when in when in the leftmost column 4 Press OK to preview the selected photo 5 Press Start to print.

User's Guide 59 Chapter 4 60 Kodak EasyShare 5500 AiO 5 Copy Copy The Kodak EasyShare AiO allows you to produce high-quality color and black-and-white copies on a variety of paper types, including transparencies. Once copying has started, you may at any time abort a copy operation by pressing the Cancel button. Copy with Control Panel Pressing Copy displays the copy menu where you can set copy options, preview copies after scanning, and make copies. When copying from the Control Panel, you can choose from the following output options. Same Size: The copy is the same size as the original.

Cropping will occur if the original is larger than the paper size. The copy will contain white space if the original is smaller than the paper size. Same Size is the default copy setting. Fit to Page: The image is copied and fit to the paper size loaded. There may be cropping on the sides or top/bottom depending on the difference in the aspect ratios of the image and the page size.

Scale Percent: The default copy scale is 100%, however you can scale copies from 10% to 500%. Scaling is anchored to the upper left corner of the original.

Photo Layouts: You can set the layout for making copies of photos on your Kodak EasyShare All-in-One. The following layouts are supported. Borderless (default) Bordered 2 per Page 3 per Page 4 per Page 9 per Page 2x2 Poster 3x3 Poster 4x4 Poster User's Guide 61 Chapter 5 Fit to Page Copy The image is copied and fit to the paper size loaded. There may be cropping on the sides or top/bottom depending on the difference in the aspect ratios of the image and the page size. 1 Place your original face down on the left rear corner of the scanner glass. If you have more than one plain paper original, place them face up in the automatic document feeder. 2 Press Copy to display the Copy menu. 3 Press 4 Press to select Output.

or to select Fit to Page. 5 If desired, make changes to the following copy options with the Copy menu. See Set Number of Copies See Set Color See Set Quality See Change Brightness See Set Preview 6 Press Start. If you turned preview on, the EasyShare AiO enters Preview mode, otherwise it starts making copies. 62 Kodak EasyShare 5500 AiO Copy Scale Percent Copy The default copy scale is 100%, however you can scale copies from 10% to 500%.

Scaling is anchored to the upper left corner of the original. 1 Place your original face down on the left rear corner of the scanner glass. If you have more than one original, place them face up in the automatic document feeder. 2 Press Copy to display the Copy menu. 3 Press 4 Press 5 Press 6 Press to select Output. or or to select Scale Percent. to change the scaling. to select Size. 7 If desired, make changes to the following copy options with the Copy menu. See Set Number of Copies See Set Color See Set Quality See Change Brightness See Set Preview 8 Press Start. If you turned preview on, the EasyShare AiO enters Preview mode, otherwise it starts making copies. User's Guide 63 Chapter 5 Photo Layout Copy You can set the layout for making copies of photos on your Kodak EasyShare All-in-One. The following layouts are supported. Borderless (default) Bordered 2 per Page 3 per Page 4 per Page 9 per Page 2x2 Poster

3x3 Poster 4x4 Poster 1 Place your original face down on the left rear corner of the scanner glass.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)  
<http://yourpdfguides.com/dref/2702072>

*If you have more than one original, place them face up in the automatic document feeder.*

2 Press Copy to display the Copy menu. 3 Press 4 Press 5 Press 6 Press to select Output. or or to select Photo Layouts. to change the layout. to select Size. 7 If desired, make changes to the following copy options with the Copy menu. See Set Number of Copies See Set Quality See Change Brightness See Set Preview 8 Press Start. If you turned preview on, the EasyShare AiO enters Preview mode, otherwise it starts making copies. 64 Kodak EasyShare 5500 AiO Copy Setting Copy Options You can set the following copy options with the Control Panel Copy menu. Quantity Color Quality Output/Size (See Same Size Copy, Fit to Page Copy, Scale Percent Copy, or Photo Layout Copy) Brightness Preview Save Settings Set Number of Copies You can set the number of copies to make from the copy menu.

The default is 1 copy. 1 On the Copy menu, select Quantity. 2 Press or hold or to change the number of copies you want to make. 3 Press OK to set and continue setting options, or Start to copy. Set Color You can make copies if documents in color or black-and-white.

The default is color. 1 On the Copy menu, press 2 Press to select Color. or to change the copy color. 3 Press OK to set and continue setting options, or Start to copy. Set Quality Kodak picture quality is automatically selected when photo paper is detected in the main or photo input trays.

The Kodak EasyShare All-in-One provides three options that affect speed and quality for copying documents to plain paper. Best Produces the highest quality for all paper and eliminates the banding (striping) effect that sometimes occurs in solid areas. Normal Delivers high-quality output and is the default setting.

Normal copies faster than Best. Draft Produces the fastest copy speed, but the lowest quality. until Quality is selected. 1 On the Copy menu, press 2 Press or to change the copy quality. 3 Press OK to set and continue setting options, or Start to copy. User's Guide 65 Chapter 5 Change Brightness You can change the brightness of copies with -3 being the darkest and +3 the lightest. 1 If the Copy menu is not displayed, press Copy.

2 Press 3 Press until Brightness is selected. to darken or to lighten. 4 Press OK to set and continue setting options, or Start to copy. Set Preview Copy Preview allows you to preview your originals before making copies. The Copy Preview screen shows the scanned image that you can zoom or crop (see Zoom and Crop). 1 On the Copy menu, press 2 Press until Preview is selected. or to enable or disable Preview. 3 Press OK to set and continue setting options, or Start to copy. Save Copy Settings When you change copy settings from the control panel, the settings apply only to the current copy job. To apply copy settings to all future copy jobs, you can save the setting changes.

1 If the Copy menu is not displayed, press Copy. 2 Press 3 Press until Save Settings is selected. or to set save copy settings to Yes. Previewing Copies Copy Preview mode is entered when the following conditions exist. The EasyShare AiO is in Copy mode.

Preview is set to Yes. The Start button is pressed. The Copy Preview feature can be used for photos or documents. 66 Kodak EasyShare 5500 AiO Copy Zoom and Crop To zoom and crop a photo before making a copy you must be in Preview mode (see Turning Copy Preview On). 1 With Preview set to Yes on the Copy menu, press Start to enter Preview mode.

The photo on the glass is scanned and displayed with a crop box. 2 Press Zoom + to enlarge the photo in .25X increments up to 5X magnification. Pressing Zoom decreases magnification in .25X increments down to 1X. 3 Use the 4-way Navigation button to display the part of the picture you want to copy. 4 Press OK or Start to copy. User's Guide 67 Chapter 5 68 Kodak EasyShare 5500 AiO 6 Scan Scan You can start a scan from the Kodak AiO Control Panel or your computer. Scan with Control Panel Pressing Scan places the Kodak EasyShare AiO in Scan mode and displays the Scan menu on the screen. Save Scan Settings When you change scan settings from the control panel, the settings apply only to the current scan job.

To apply scan settings to all future scan jobs, you can save your changes. 1 Press Scan to display the Scan menu. 2 Change the desired Scan settings. 3 Press 4 Press until Save Settings is selected. or to set save scan settings to Yes. Scanning Photos With the Control Panel Scan menu, you can scan photos to a file, application, or memory card. Scan to File 1 Place a photo or photos face down on the scanner glass. 2 Press Scan to display the Scan menu. 3 Press 4 Press 5 Press or or to select Photo. to select File.

until Scan To is selected. 6 Press Start. The document is scanned and saved based on the Kodak AiO Home Center scan picture settings (see Scan Picture Settings). User's Guide 69 Chapter 6 Scan to Application The Home Center software enables you to maintain a list of scan destination applications. 1 Place a photo or photos face down on the scanner glass.

2 Press Scan to display the Scan menu. 3 Press 4 Press 5 Press 6 Press 7 Press or to select Photo. to select Scan To. to select Application. to until Application is selected.

or to select another application. 8 Press Start. Scan to Memory Card 1 Insert a Memory Card into the appropriate card slot. WARNING Never attempt to remove a memory card while it is being accessed. Doing so can damage files on the card. You can safely remove a card only when the status light next to the slots is not blinking. 2 Place a photo or photos face down on the scanner glass. 3 Press Scan to display the Scan menu. 4 Press 5 Press 6 Press or or to select Photo. to select Memory Card.

to select Scan To. 7 Press Start. Scanning Documents With the Control Panel Scan menu, you can scan documents to a file, application, or memory card. 70 Kodak EasyShare 5500 AiO Scan Scan to File 1 Load your original face down on the left rear corner of the scanner glass. If you have more than one original, load them face up in the automatic document feeder. 2 Press Scan to display the Scan menu. 3 Press or to select Document. 4 Press Start. The document is scanned and saved based on the Kodak AiO Home Center scan document settings (see Scan Document Settings). Scan to Application 1 Load your original face down on the left rear corner of the scanner glass.

If you have more than one original, load them face up in the automatic document feeder. 2 Press Scan to display the Scan menu. 3 Press 4 Press 5 Press 6 Press 7 Press or to select Document. to select Scan To. or to select Application.

to until Application is selected. or to select another application. 8 Press Start. User's Guide 71 Chapter 6 Scan to Memory Card 1 Insert a Memory Card into the appropriate card slot.



**[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/2702072)**

**[EASYSHARE 5500 user guide](http://yourpdfguides.com/dref/2702072)**

**<http://yourpdfguides.com/dref/2702072>**