



**Manual abstract:**

*Press the Menu button , highlight a menu choice, then press the Info button . @@@@Share pictures on your favourite social networking sites. @@Press the Mode button, then to highlight a mode, then press OK. @@To change for previous/next field to accept Store pictures on an optional SD or SDHC Card Turn o the camera, push card in until it clicks, then turn on the camera. @@Press the Mode button, then to highlight Video , then press OK. .*



**[You're reading an excerpt. Click here to read official KODAK EASYSHARE C143 user guide](http://yourpdfguides.com/dref/2821743)**  
**<http://yourpdfguides.com/dref/2821743>**