



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE C1450. You'll find the answers to all your questions on the KODAK EASYSHARE C1450 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK EASYSHARE C1450

User guide KODAK EASYSHARE C1450

Operating instructions KODAK EASYSHARE C1450

Instructions for use KODAK EASYSHARE C1450

Instruction manual KODAK EASYSHARE C1450

KODAK EASYSHARE Camera / C1450



Extended user guide

www.kodak.com

For help with your camera:
www.kodak.com/go/C1450support



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)
<http://yourpdfguides.com/dref/4732975>

Manual abstract:

@@@@@2 Turning on the camera

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 3 Setting the language and date/time.....

.....
.....
.....
.....
.....
.....
.....

..... 3 2 Taking pictures/videos

.....
.....
.....
.....
.....
.....
.....
.....

4 Taking pictures.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 4 Taking a video .

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....

... 12 Taking panoramic pictures..

.....
.....
.....
.....

.....
.....
.....

... 13 3 Sharing and tagging pictures

.....
.....
.....

.....
.....
.....

.....14 Sharing pictures/videos through social networks

.....
.....
.....

.....
.....

.. 14 Tagging pictures ...

.....
.....
.....
.....

.....
.....
.....

.....
.....

. 16 Marking pictures/videos for emailing

.....
.....
.....
.....

.....
.....

18 4 Reviewing and editing

.....

.....
.....
.....
.....

.....19 Reviewing pictures/videos ..

.....
.....
.....
.....

.....
.....
.....
.....

... 19 Deleting pictures/videos ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 20 Viewing pictures/videos in different ways.....

.....
.....
.....

.....
.....
.....

.... 21 A smarter way to find and enjoy your pictures.....

.....
.....
.....
.....

22 Understanding the review icons.....

.....
.....

.....
.....
.....
.....

.....
.....

.. 23 www.kodak.com/go/support iii Table of contents Displaying pictures/videos on a television.

.....
.....

.....
.....
.....

.....
.. 24 Using the menu button in review...

.....
.....

.....
.....
.....
.....

.....
.....

.. 25 Cropping pictures...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

25 Rotating pictures.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 26 Using KODAK PERFECT TOUCH Technology.

.....
.....

.....
.....
.....
.....

... 26 Editing videos

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
..... 27 *Selecting multiple pictures/videos*

.....
.....
.....

.....
.....
.....
.....

.....
28 5 *Doing more with your camera*

.....
.....

.....
.....
.....
.....

.....
.29 *Using the menu button to change settings....*

.....
.....

.....
.....
.....
.....

.. 29 *Using the Setup menu*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 33 6 *Transferring, printing pictures*

.....
.....
.....
.....

.....
.....
.....

....35 *Transferring pictures to your computer.....*

.....
.....
.....
.....

.....
.....
.....

. 35 *Printing pictures.....*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 36 Mark your pictures for printing

.....
.....
.....
.....

.....
.....
.....

..... 37 7 Troubleshooting .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.38 Getting help from your camera

.....
.....
.....
.....

.....
.....
.....

..... 38 Troubleshooting .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 39 Getting help on the Web .

.....
.....

.....
.....

.....
.....
.....

.....
.....

. 42 8 Appendix

.....
.....
.....

.....
.....
.....

.....
.....

...43 Specifications.

.....
.....
.....

.....
.....
.....

.....
.....

... 43 Care and maintenance

.....
.....
.....

.....
.....
.....

... 45 Upgrading your software and firmware..

.....
.....

.....
.....
.....

..... 45 Storage capacities .

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....

..... 46 Important safety instructions

.....
.....
.....
.....
.....
.....
.....

.. 46 Battery replacement, battery life ...

.....
.....
.....
.....
.....
.....
.....

... 47 Limited warranty

.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 48 Regulatory compliance

.....
.....
.....
.....
.....
.....
.....

.. 49 iv www.kodak.com/go/support 1 Setting up your camera Attaching the wrist strap Loading the batteries All batteries lose power over time—even if they're not being used.

Purchase extra batteries for your event Watch the battery level www.kodak.com/go/accessories See page 6 www.kodak.com/go/support 1 Setting up your camera Inserting an SD or SDHC Card (not included) You must insert an SD or SDHC Card (up to 32 GB), to store pictures/videos.

CAUTION: A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures,

the card, or the camera. SD/SDHC Card (Accessory) 1 Turn off the camera. 2 Insert the card until it clicks. 3 Turn on the camera. To eject the card, push and release it. Purchase accessories www.kodak.com/go/accessories 2 www.kodak.com/go/support

Setting up your camera Turning on the camera Press the Power button. Setting the language and date/time Language: OK to accept. Date/Time: to change. At the prompt, press OK. to change current field. for previous/next field. OK to accept. NOTE: To change language in the future, use the Setup Menu (see page 33). www.kodak.com/go/support

3 2 Taking pictures/videos To get clear, focused pictures: 1 The camera turns on in Smart Capture mode. (If it's in a different mode, press the Mode button, then until the LCD displays Smart Capture mode, then press OK.) 2 Compose the picture. 3 Press the Shutter button halfway to focus and set exposure. When the framing marks turn green, press the Shutter button completely down.

Taking pictures Mode button Using the framing marks Framing marks Framing marks indicate the camera focus area. 1 Press the Shutter button halfway. If the camera is not focusing on the desired subject, release the Shutter button and recompose the scene. 2 Press the Shutter button completely down to take the picture. NOTE: Multiple framing marks may appear when faces are detected.

4 www.kodak.com/go/support Taking pictures/videos Taking a video 1 Press the Mode button, then until the LCD, then press OK. displays Video 2 Press the Shutter button completely down, then release it. To stop recording, press and release the Shutter button again. To review and work with videos, see page 19. NOTE: Audio is captured during video recording. Audio can be heard when the video is played on a computer or when the camera is connected to a TV (see page 24). Reviewing the picture/video just taken After you take a picture/video, the LCD briefly displays the picture or the first frame of a video. (To take new pictures/videos sooner, press the Shutter button halfway.

) While a picture/video is displayed, you may: Delete the current picture/video Play/pause a video To review pictures/videos anytime, see page 19. Adjusting LCD brightness You can adjust the LCD brightness for your environment or to conserve battery power, see page 33. www.kodak.com/go/support 5 Taking pictures/videos Understanding the picture-taking icons Focus mode Self timer Exposure compensation Flash mode Capture mode Pictures/time remaining Zoom indicator Date stamp Battery level Watch the battery level Don't miss out on great pictures and videos—watch the battery level. Full Three quarters Half Critical AC Power Purchase extra batteries www.kodak.com/go/accessories 6 www.kodak.com/go/support Taking pictures/videos Using the optical zoom 1 Use the LCD to frame your subject.

2 To zoom in, turn the lever right toward T (Telephoto). To zoom out, turn the lever left toward W (Wide Angle). 3 Take the picture or video. NOTE: For focus distances, see Specifications starting on page 43. Using digital zoom Use digital zoom to get up to 5X magnification beyond optical zoom (Digital zoom is not available in Smart Capture mode).

Turn the lever toward T (Telephoto) until the slider on the LCD is at the end of the optical zoom range. Release the lever, then turn it again. NOTE: You may notice decreased image quality when using digital zoom. www.kodak.com/go/support

7 Taking pictures/videos Using the flash Press the Flash button repeatedly until the LCD displays the desired flash mode. Flash button Flash modes Auto Fill (Flash On) Flash fires When the lighting conditions require it. Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: (Not available in Smart Capture mode.) Off Red-eye Reduction Never A preflash fires, shrinking the eye pupil, before the picture is taken. 8 www.kodak.com/go/support view single picture. Taking pictures/videos Using different modes Press the Mode button, then until the LCD displays the mode that best suits your subjects and surroundings, then press OK.

Mode button Use this mode For General picture taking—it offers excellent image quality and ease of use. □ Faces get focus and exposure priority. □ The scene is analyzed for other content and for lighting. You can choose the best picture size and aspect ratio for your needs—just press the Menu button and choose Picture Size. □ 3:2 (the best choice when making 4 x 6 prints) □ 16:9 (wide screen) □ 4:3 (the default setting) Smart Capture Scene Video Point-and-shoot simplicity when taking pictures in practically any situation. (See page 10.) Capturing video with sound. (See page 5.) Advanced picture-taking—gives access to more manual settings than Smart Capture. P Program www.kodak.com/go/support

9 Taking pictures/videos Using Scene (SCN) modes Choose a Scene mode—for great pictures in practically any situation.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C1450 user guide](http://www.kodak.com/go/support)
<http://yourpdfguides.com/dref/4732975>

1 Press the Mode button, then 2 Press until the LCD displays SCN, then press OK. to choose a mode and read its description. 3 Press OK to enter that Scene mode.

The camera is now in the scene mode that you chose. SCN mode Portrait Sport Landscape Close-up Sunset Backlight Candle Light Children Bright Fireworks Self Portrait Night Portrait Night Landscape High ISO Blur Reduction For Full-frame portraits of people. Action pictures. Distant scenes. Close range. Use available light instead of flash, if possible. Subjects at dusk or dawn. Subjects that are in shadow or "backlit." Subjects illuminated by candle light. Action pictures of chitall the KODAK Share Button App. (See page 35.) 1 Press the Share button, then to find a picture. If it's your first time, a Help screen appears. 2 Press to choose a social networking site, then press OK. A check mark appears.

Repeat this step to choose more sites. (You can press OK again to remove a check mark.) 3 Press to choose Done, then press OK. The picture is displayed with the Share icon. When you transfer the picture to your computer, it will be uploaded to the networking site(s) that you chose. Tip: Do you send pictures to the same sites each time? Find a picture, then press and hold the Share button for about 1 second. The camera applies the settings that you used previously and adds the Share icon to the picture. 14 www.kodak.com/go/support Sharing and tagging pictures Choose which social networking sites to display on your camera You can show/hide social networking sites on your camera so that only your favorite sites appear.

1 Press the Menu button . to choose Share Button Settings, 2 Press to choose the Setup tab, then then press OK. 3 Press to choose Keyword Tag, then press OK. You can also access Keyword Tag using a shortcut (see page 11). 3 Press to choose an existing keyword, or New Keyword (see Using the keyboard, page 17) to add a new one, then press OK.

4 Press to add keywords to other pictures. When finished, press choose Done, then press OK. @@to Marking pictures/videos for emailing It's simple to mark pictures so that they're ready to email when you transfer them to your computer and use KODAK Software. First, create a new email address. (See Using the keyboard.

) 1 Press the Share button. Press 2 Press 3 Press to find a picture. to choose Email, then press OK. to find an email address, then press OK. , then press OK. To mark other pictures/videos with the same address, press To send the pictures/videos to more than one address, repeat step 4. @@When you transfer the marked pictures/videos to your computer, the software prompts you to send the pictures/videos. 18 www.kodak.com/go/support 4 Reviewing and editing 1 Press the Review button 2 Press □ □ Reviewing pictures/videos .

for previous/next picture/video. To exit, press the Review button or press the Shutter button halfway down. To view pictures/videos as thumbnails, press the Wide Angle (W) button. (For more information, see page 21.) For tips on finding your pictures/videos, see page 22. Review □ Playing a video Press OK to play a video. Press OK to pause/resume. During playback: □ □ Press to play at 2X speed; press again for 4X. Press to reverse at 2X speed; press again for 4X. NOTE: Audio is captured during video recording.

Audio can be heard when the video os played on a computer or when the camera is connected to a TV (see page 24). Playback speed 4X 2X 1X 2X 4X www.kodak.com/go/support 19 Reviewing and editing Deleting pictures/videos 1 Press the Review button 2 Press 3 Press the Delete button. 4 Follow the screen prompts.

NOTE: To delete protected pictures/videos, remove protection before deleting. (See Protecting pictures/videos from deletion.) . for previous/next picture/video. Using the undo delete picture feature If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture. Protecting pictures/videos from deletion 1 Press the Review button 2 Press the Menu button 3 Press . . to choose Protect, then press OK. 4 Press to choose Protect, then press OK. A padlock indicates that the picture/video is protected. Clicking OK again removes the padlock. Press to protect other pictures/videos, or press to choose Done, then press OK. □ Press the Menu button to exit the menu. CAUTION: Formatting an SD or SDHC Card deletes all (including protected) pictures/videos.

20 www.kodak.com/go/support Reviewing and editing Viewing pictures/videos in different ways Magnifying a picture 1 Turn the lever toward T (Telephoto) to magnify 2X–8X. 2 Press □ to view other parts of a picture. Press OK to return to 1X. Viewing pictures/videos as thumbnails (multi-up) 1 Press the Review button . The camera shows the last picture/video that was taken. 2 Press the Wide Angle (W) button to view pictures/videos as thumbnails. (Press it again to see more, smaller thumbnails.) To view all pictures/videos, choose the All tab.

To sort pictures/videos by date, people, favorites, or keywords, press and choose the appropriate tab. 3 To see a single picture/video, press Telephoto (T) button. □ □ to choose it. Then press the To select multiple pictures/videos, see page 28. Press the Review button to exit Review.

www.kodak.com/go/support 21 Reviewing and editing A smarter way to find and enjoy your pictures Tag pictures—by people or keywords—to make them easy to find, later. For example, the camera can find all pictures that contain "Mary" or "Dad's 60th Birthday." (See Tagging people, page 16 or Tagging with keywords, page 18.

) You can also find pictures by date taken or if it's marked as a favorite. 1 Press the Review button . 2 Press the Wide Angle (W) button to view pictures by thumbnail (or choose View Thumbnails shortcut). 3 Press to choose a tab and sort pictures/videos by All, Date, People, Favorite, or Keyword. 4 Press to choose a picture or picture stack. @@Press Wide Angle (W) to see thumbnails or picture stacks. @@@@Press to move the crop box. When satisfied with the crop box, press OK. 4 Follow the screen prompts. The picture is cropped.

@@@@Press to find the previous/next picture. @@@@1 Press the Review button , then for previous/next picture. 2 Press the Menu button , then to highlight the Edit tab. Highlight PERFECT TOUCH Tech, then press OK. The enhancement is previewed. Press to view other parts of the picture. 3 Press OK. @@Press the Shutter button halfway down to return to Capture mode. @@1 Press the Review button video. @@@@Press to choose the Trim icon, then press OK.

Repeat this step to choose the last frame. The video is trimmed. @@@@1 Press the Review button, then video. @@@@A 9-up picture is created.

@@Multi-select is used most effectively in Multi-Up mode (see page 21). @@A check mark appears on the picture. @@@@NOTE: Some modes offer limited settings. @@@@Self-timer/Burst Choose Self-timer or Burst feature. More information See Specifications, starting on page 43.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)
<http://yourpdfguides.com/dref/4732975>

@@@ Make a picture lighter or darker.

@@ ISO Speed Control the sensitivity of the camera to light. See Specifications, starting on page 43. See Specifications, starting on page 43. Long Time Exposure Choose how long the shutter stays open (normally in low-light conditions). For best results, place the camera on a tripod or steady surface. Color Mode Choose color tones. Unavailable in Video mode. Vivid Color—For increased saturation and exaggerated color. Full Color—For rich, balanced color. Basic Color—For accurate color.

Black & White—For black and white. Sepia—For a reddish-brown, antique look. 30 www.kodak.com/go/support Doing more with your camera Settings White Balance Choose your lighting condition. (Available only in Program and Panorama modes.) More information Auto—Automatically corrects white balance. Ideal for general picture taking. Daylight—For pictures in natural lighting. Tungsten—Corrects the orange cast of incandescent light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash. Fluorescent—Corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash. Open Shade—For pictures in shade in natural lighting. Auto—For general picture-taking. Macro—For sharpness and detail in pictures at close range. Use available light instead of flash, if possible. The camera automatically sets the focus distance depending on the zoom position. Infinity—For distant subjects; auto-focus framing marks are unavailable. Face Priority—If faces are detected, they receive focus/exposure priority. (If faces are not detected, the camera switches to Multi-Zone.) Multi-Zone—Evaluates 5 zones to give an even picture focus. Ideal for general picture taking. Center-Zone—Evaluates the small area centered in the lens. Ideal for focusing on a precise area. Focus Mode Choose a focus distance. Focus/Exposure Zone Choose how the camera assesses the scene for exposure and focus. AF Control (Still) Continuous AF—Because the camera is always focusing Choose an auto-focus setting. during liveview, there is no need to press the Shutter button halfway down to focus. Single AF—Focuses when the Shutter button is pressed halfway down.

(This setting uses less battery power.) www.kodak.com/go/support 31 Doing more with your camera Settings More information New Keyword Preset Keyword Tag Delete Keyword Create keyword names and assign them to the pictures/videos you take next. See page 16. Sharpness Control picture sharpness or softness. See Specifications, starting on page 43. Video settings (available when the camera is in a Video mode) Press Menu, , More information and OK to access settings AF Control (Video) Continuous AF—Camera is always focusing during liveview. Choose an auto-focus setting. Single AF—Camera focuses once, when the Shutter button is pressed.

Self-timer Choose a Self-timer feature. Off 10 Seconds 2 Seconds 32 www.kodak.com/go/support Doing more with your camera Using the Setup menu Use Setup to customize other camera settings. Settings Date & Time LCD Brightness Choose LCD brightness during picture/video capture. (During Review, the LCD is set to High Power.) More information Set date and time. Auto—LCD brightness is automatically adjusted according to environment. High Power—Brighter LCD; uses more battery power. Power Save—Dimmer LCD; uses less power.

Share Button Settings Show or hide: Choose what is displayed when the Share Individual social networking sites button is pressed. E-mail addresses (all or none) KODAK PULSE Digital Frames (all or none) Date Stamp On Add a stamp—showing the date/time that Off a picture was taken—to all future pictures. NOTE: You cannot remove a date stamp on the camera. You cannot add a date stamp to a picture already taken. Camera Sounds All on—Alert sounds are on. Choose volume, and sound effects for each Shutter only function. All off—Alert sounds are off. NTSC—Used in North America and Japan; most Video Out Choose the regional setting that lets you common format. @@ external device. @@@@ Make sure the computer is connected to the Internet.

@ I Turn off the camera. @@ (Use only the cable included with this camera.) 3 Turn on the camera. @@@@ NOTE: You can also use a card reader to transfer pictures/videos to your computer. Get Software help www.kodak.com/go/support www.kodak.com/go/support 35 Transferring, printing pictures Printing pictures Direct printing with a KODAK All-in-One Printer IMPORTANT: To print using PICTBRIDGE Technology, you must change the Computer Connection setting (in the Setup menu) to Other Application (see page 34). You need a camera, a PICTBRIDGE enabled Printer, and a USB cable. Connecting the camera to a KODAK All-in-One Printer 1 Turn off the camera and printer. 2 Connect the appropriate USB cable from the camera to the printer. Printing from a KODAK All-in-One Printer 1 Turn on the printer. Turn on the camera. The PictBridge logo is displayed, followed by the current picture and menu.

(If no pictures are found, a message is displayed.) If the menu turns off, press any button to redisplay it. If the printer sees the camera as a mass storage device, turn the camera off and then back on. 2 Choose a printing option, then press OK. Current Picture—Press to choose a picture. Tagged Pictures—If your printer is capable, print pictures that you marked for printing. Index Print—Print thumbnails of all pictures. (This option requires one or more sheets of paper.) All Pictures—Print all pictures on a card. NOTE: During direct printing, pictures are not permanently transferred or saved to the printer. To transfer pictures to your computer, see page 35. Purchase cables, accessories www.kodak.com/go/accessories 36 www.kodak.

com/go/support Transferring, printing pictures Disconnecting the camera from a KODAK All-in-One Printer 1 Turn off the camera and printer. 2 Disconnect the USB cable from the camera and the printer. Ordering prints online KODAK Gallery (www.kodakgallery.com) makes it easy to: Upload your pictures. Edit, enhance, and add borders to your pictures. Store pictures, and share them with family and friends. Have prints, photo greeting cards, frames, and albums delivered to your door. Printing from an SD or SDHC Card Automatically print tagged pictures when you insert your card into a printer with an SD/SDHC Card slot. See your printer user's guide for details.

Make prints at an SD/SDHC Card-capable KODAK Picture Kiosk. Go to www.kodak.com/go/picturemaker. Take the card to your local photo retailer for professional printing.

Mark your pictures for printing You can mark your pictures so they are easy to print: 1 Press the Review button 2 Press the Menu button 3 Press 4 Press 5 Press OK. . Press . to find a picture. to choose Print, then press OK.

to choose the number of copies. www.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)
<http://yourpdfguides.com/dref/4732975>

kodak.com/go/support 37 7 Troubleshooting Getting help from your camera Your camera offers a built-in Help system. It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help. Turning on camera Help 1 Press the Menu button 2 Press the Info button then make a menu choice. . Scroll through a Help topic. 38 www.kodak.com

kodak.com/go/support Troubleshooting Camera problems Status Camera does not turn on Camera does not turn off Camera buttons and controls do not function LCD is too dark. Adjust the LCD Brightness setting (see page 33). Solution Make sure the batteries are fresh and installed correctly (see page 1). Pictures remaining Continue taking pictures. The camera is operating normally. number does not (The camera estimates the number of pictures remaining after each decrease after taking a picture is taken, based on picture size and content.) picture Flash does not fire Check the flash setting, and change as needed (see page 8). NOTE: The flash does not fire in all modes. Memory card is almost Transfer the pictures to the computer (see page 35). or entirely full Delete pictures from the card (see page 20) or insert a new card. Memory card not Card may be corrupted. Format the card in the camera (see page 34). recognized or camera freezes with card Use another memory card. Only SD or SDHC Cards are supported. Battery life is short Make sure the correct battery type is installed (see page 47). Wipe the battery's contacts with a clean, dry cloth before inserting it in the camera. Insert a new/charged battery (see page 1). Limit the time you review pictures/videos on the camera LCD. Purchase a spare battery at www.kodak.com

kodak.com/go/accessories. www.kodak.com/go/support 39 Troubleshooting Status You cannot take a picture Solution Turn the camera off, then on again. Depress the Shutter button all the way (see page 4). Insert a new/charged battery (see page 1). Memory is full. Transfer pictures to the computer (see page 35), delete pictures (see page 20), or insert another card. Cannot find the desired picture/video To view pictures on a card, see page 19.

Computer/connectivity problems Status Slide Show does not run on an external display device Computer does not communicate with the camera Solution Adjust the camera Video Out setting to NTSC or PAL (see page 33). Make sure the external device settings are correct. (See the device's user guide.) Turn off the camera, then turn it back on. Make sure the batteries are fresh and installed correctly (see page 1). Make sure the KODAK Camera USB Cable, Micro B / 5-Pin is connected to the camera and the computer (see page 35). Then turn on the camera. See KODAK Software Help at www.kodak.com/go/camerasw.

Direct printing (PICTBRIDGE enabled printer) problems Status Cannot print to a PICTBRIDGE Printer Solution In the Setup menu, change the Computer Connection setting to Other Application (see page 34). 40 www.kodak.com/go/support Troubleshooting Picture quality problems Status Picture is not clear Solution To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture.

Clean the lens (see page 45). Make sure the camera is not in Macro mode if you are more than 27.6 in. (70 cm) from your subject (see page 31). Place the camera on a flat, steady surface or use a tripod (especially in high-zoom settings or in low light). Use a larger picture size (see page 29). If you're manually adjusting the ISO speed, realize that high ISO setting may cause grainy pictures (see page 30). Picture is too dark Reposition the camera for more available light. Use Fill flash (see page 8) in Program mode, Backlight in SCN mode, or change your position so light is not behind the subject. Move so that the distance between you and the subject is within the effective flash range. (See Specifications, page 43.) To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. In Program mode, increase the Exposure Compensation (see page 30). Picture is too light Reposition the camera to reduce the amount of available light.

Turn the flash off (see page 8). Move so that the distance between you and the subject is within the effective flash range. (See Specifications, page 43.) To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. In Program mode, decrease the Exposure Compensation (see page 30). www.kodak.com/go/support 41 Troubleshooting Getting help on the Web Camera Get support for your product (FAQs, troubleshooting www.kodak.com)

[com/go/C1450support](http://www.kodak.com/go/C1450support) information, arrange for repairs, etc.) Purchase camera accessories Register your camera Chat, email, write, or phone Kodak (Chat not available in all languages) Get information on KODAK All-in-One Printers www.kodak.com/go/accessories www.kodak.com/go/register www.kodak.com/go/contact www.kodak.com/go/inkjet Download the latest camera firmware and software www.kodak.com/go/C1450downloads 42 www.kodak.com/go/support 8 Appendix Specifications CCD—1/2.3-type Effective pixels—14 MP (4352 x 3264) LCD—3 in. (7.62 cm) LCD; 230K pixels; 4:3 aspect ratio Image storage—Accessory SD/SDHC Card (The SD logo is a trademark of the SD Card Association.)

Maximum supported card size: 32 GB Taking lens—5X optical zoom; f/3.5–f/5.9; 35 mm equivalent: 27–135 mm Lens protection—Built-in Digital zoom—5X continuous Focus system—TTL-AF (through-the-lens auto focus); Multi-Zone, Center-Zone, Face Priority.

Working range: 0.5 m (1.6 ft)–infinity @ wide, normal 1.0 m (3.3 ft)–infinity @ telephoto, normal .05–0.8 m (2–31.5 in.) @ wide, Macro mode 1.0–1.5 m (1.6–4.9 ft) @ telephoto, Macro mode Auto Exposure / Auto focus control—Multi zone, Center zone, Face Priority Face detection—Yes Face recognition—Yes Shutter speed—1/4–1/1400 seconds (Auto); 1/2–8 seconds (Manual) Long time exposure—0.5–8 seconds ISO speed—Up to 1000 at full resolution Program mode: Auto 80–400; manual 80, 100, 200, 400, 800, 1000 Exposure metering—TTL-AE; Face Priority, Multi-Zone, Center-Zone www.kodak.com

[com/go/support](http://www.kodak.com/go/support) 43 Appendix Exposure compensation—+/-2.0 EV with 1/3 EV step White Balance—Auto, Daylight, Tungsten, Fluorescent, Open Shade Electronic Flash—Auto flash; Auto, Fill, Red Eye, Off; Guide No. 5.7; working range @ ISO 400 with red-eye reduction off: 0.3–2.85 m (1–9.4 ft) @ wide; 0.5–1.68 m (1.6–5.5 ft) @ telephoto Self-timer mode—2 seconds, 10 seconds, 2 picture timer Burst mode—Maximum 3 pictures @ 1.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/4732975)

[EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)

<http://yourpdfguides.com/dref/4732975>

5 fps Capture modes—Smart Capture, Scene modes, P-mode, Video Image file format—Still: EXIF 2.3 (JPEG compression); file organization DCF Video: .AVI (CODEC Motion JPEG; audio: -Law) Picture size—14 MP (4:3): 4288 x 3216 pixels 12 MP (3:2): 4288 x 2848 pixels 10 MP (16:9): 4288 x 2416 pixels 6 MP (4:3): 2880 x 2160 pixels 3 MP (4:3): 2048 x 1536 pixels Color modes—Vivid Color, Full Color, Basic Color, Black & White, Sepia Sharpness modes—Sharp, Normal, Soft Video capture—2 GB maximum; VGA (640 x 480 @ 25 fps) Communication with computer—USB 2.0 high speed (PIMA 15740 protocol); via KODAK Camera USB Cable, Micro B / 5-Pin Video output—NTSC or PAL Microphone—Yes Beeper—Yes PICTBRIDGE support—Yes Power—2 KODAK AA Alkaline Batteries, ENERGIZER L91 Lithium Battery, KODAK 44 www.

kodak.com/go/support Appendix Rechargeable AA size NiMH Battery Tripod mount—1/4 inch Size—94.5 x 61.4 x 29.4mm (3.7 x 2.4 x 1.2 in.) @ power off Weight—179 g (4.6 oz) including card and battery Operating temperature—0–40° C (32–104° F) Care and maintenance □ □ If you suspect water has gotten inside the camera, remove the batteries and card.

Allow all components to air-dry for at least 24 hours before using the camera. Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.

Service agreements may be available in your country. Contact a dealer of KODAK Products for more information. For digital camera disposal or recycling information, contact your local authorities. In the US, go to the Electronics Industry Alliance site at www.eiae.org or Kodak at www.kodak.com/go/support. □ □ Upgrading your software and firmware Download the latest versions of KODAK Software and the camera firmware (the software that runs on the camera). Go to www.kodak.com/go/C1450downloads. www.kodak.com/go/support 45 Appendix Storage capacities

The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining.

For average SD Card capacities, go to www.kodak.com/go/SDcapacities. Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos. Important safety instructions CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid.

Contact Kodak customer support. □ □ □ □ □ □ □ □ The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury.

For approved accessories, go to www.kodak.com/go/accessories. Use only a USB-certified computer equipped with a current-limiting motherboard.

Contact your computer manufacturer if you have questions. If using this product in an airplane, observe all instructions of the airline. When removing the batteries, allow them to cool; they may be hot. Follow all warnings and instructions supplied by the battery manufacturer. Use only batteries approved for this product to avoid risk of explosion.

Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak. Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.

www.kodak.com/go/support 46 Appendix □ Remove the batteries when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support. In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.

Go to www.kodak.com/go/reach for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH). Dispose of batteries according to local and national regulations. Go to www.kodak.com/go/kes. Do not charge non-rechargeable batteries. For more information on batteries, go to www.kodak.com/go/batterytypes. □ □ □ □ Battery replacement, battery life KODAK 2AA Alkaline Batteries: 180 pictures per charge. Battery life per CIPA testing method. (Approx.

number of pictures in Smart Capture mode, using an SD Card.) Actual life may vary based on usage. Extending battery life □ □ □ □ Use power-saving features, such as LCD Brightness (see page 33). Charge rechargeable batteries when necessary. Dirt on the battery contacts can affect battery life.

Wipe the contacts with a clean, dry cloth before loading the battery in the camera. Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable. www.kodak.com/go/support 47 Appendix Limited warranty Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging.

Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair. @@@@ @@@@ If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid.

Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. @@@@ @@@@ Kodak makes no other express or implied warranty for this product. @@ The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/4732975)

[EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)

<http://yourpdfguides.com/dref/4732975>

The limitations and exclusions of liability set forth herein apply to both Kodak and its suppliers. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction. Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. Regulatory compliance FCC compliance and advisory This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful www.kodak.com/go/support 49 Appendix interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. The KODAK High Performance USB AC Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Waste Electrical and Electronic Equipment/Battery disposal In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to www.kodak.com/go/recycle. Product weight: 179 g (6.3 oz) including card and battery Canadian DOC statement DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes—Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. 50 www.kodak.com/go/support Appendix CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Australian C-Tick N137 VCCI Class B ITE China RoHS www.kodak.com/go/support 51 Appendix Russian GOST-R Eastman Kodak Company Rochester, NY 14650 Korean Class B ITE 52 www.kodak.com/go/support Index A A/V out, 24 about this camera, 34 accessories battery, 47 buying, 42 SD/SDHC Card, 2 add keywords, names, 17 AF control (video), 32 auto enhancement, 26 focus control, 31, 32 focus framing marks, 4 auto focus (AF) zone, 31 B backlight, 10 battery expected life, 47 icons, 6 loading, 1 types, 47 bright, 10 brightness, LCD, 5 burst, 12 button delete, 5 telephoto/zoom, 7 C cable www.kodak.

com/go/support 1 audio/video, 24 camera sounds, 33 Canadian compliance, 50 care and maintenance, 45 charging battery icon, 6 children, 10 clock, setting, 3 color mode, 30 computer connect camera, 35 transfer to, 35 connector, USB / A/V, 24 copy pictures to computer, 35 cropping pictures, 25 customize camera, 33 D date setting, 3 date stamp, 33 deleting during quickview, 5 from SD/SDHC Card, 20 protecting pictures, videos, 20 digital zoom, 7 display, brightness, 5 disposal, recycling, 45 download KODAK Software, 35 download pictures, 35 53 Index E edit videos, 27 emailing pictures, videos, 18 expected battery life, 47 exposure long time, 30 exposure compensation, 30 external video device viewing pictures, videos, 24 F faces, tagging, recognition, 16 FCC compliance, 49 find pictures, 22 fireworks, 10 firmware, upgrading, 45 flash, using, 8 flower, 10 focus framing marks, 4 focus mode, 31 format, 34 framing marks, 4 G guidelines, battery, 47 H help camera help, 38 Web links, 38 high ISO, 10 I icons battery, 6 54 icons, modes, 9 installing battery, 1 SD/SDHC Card, 2 ISO speed, 30 K keyboard, 17 keyword tag, 32 keywords, 18 KODAK EASYSHARE Software upgrading, 45 KODAK PERFECT TOUCH Technology, 26 KODAK Software, download, 35 Kodak Web sites, 38 L language, 33 LCD brightness, 33 reviewing pictures, 19 reviewing videos, 19 LCD brightness, 5, 33 lens cleaning lens, 45 loading battery, 1 SD/SDHC Card, 2 locate pictures, 22 long time exposure, 30 M magnify a picture, 21 maintenance, camera, 45 www.kodak.com/go/support Index make picture from video, 27 making a video action print, action print, video action print, 28 marking for email, 18 memory inserting card, 2 menu settings, 29 modes, 9 backlight, 10 bright, 10 children, 10 fireworks, 10 flower, 10 high ISO, 10 night landscape, 10 night portrait, 10 scene (SCN), 10 self portrait, 10 modes, capture smart capture, 9 multiple selections, 28 multi-up, 21 N names, tagging, 16 night landscape, 10 night portrait, 10 O online prints, ordering, 37 optical zoom, 7 P panoramic pictures, 13 www.kodak.com/go/support people, tagging, 16 PERFECT TOUCH Technology, 26 PICTBRIDGE enabled printer, 36 picture size, 29 pictures cropping, 25 emailing marked, 18 KODAK PERFECT TOUCH, 26 marking, 37 protecting, 20 review icons, 23 reviewing, 19 taking, modes, 9 transfer to computer, 35 pictures/video deleting, 20 playing a video, 19 power camera, 3 power icon, 6 preset keyword, 32 printing from a card, 37 optimizing printer, 38 order online, 37 PICTBRIDGE, 36 tagged pictures, 37 protecting pictures, videos, 20 Q quickview, using, 5 R recognizing faces, 16 55 Index recycling, disposal, 45 regulatory information, 49 repair, 42 reset camera, 34 resolution, 29 reviewing pictures/video as you take them, 5 deleting, 20 LCD, 19 protecting, 20 S safety, 46 scene modes (SCN), 10 SD/SDHC Card inserting, 2 printing from, 37 search pictures, 22 select multiple pictures/videos, 28 self portrait, 10 self-timer, 12 setting AF zone, 31 auto-focus, 31, 32 camera sounds, 33 color mode, 30 date and time, 3 date stamp, 33 exposure compensation, 30 focus mode, 31 ISO, 30 keyword, 32 language, 33 LCD brightness, 33 56 long time exposure, 30 picture size, resolution, 29 picture-taking mode, 9 self-timer, 12 Share Button, 33 sharpness, 32 video out, 33 white balance, 31 setting up the camera, 1 setup menu, 33 Share button, 33 sharpness, 32 shutter problems, 40 self-timer delay, 12 smart capture, 9 smart find, 22 software upgrading, 45 software downloader, 35 sounds, 33 specifications, camera, 43 strap, 1 T tagging keywords, 18 people, faces, 16 taking pictures, videos, 4 television, slide show, 24 time, setting, 3 timer, shutter delay, 12 tips battery guidelines, 47 www.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)
<http://yourpdfguides.com/dref/4732975>

kodak.com/go/support Index care & maintenance, 45 transfer pictures, 35 trash can, deleting, 5 trimming a video, 27 troubleshooting, 38 turning camera on and off, 3 typing, 17 U undelele, undo, 20 upgrading software, firmware, 45 URLs, Kodak Web sites, 38 USB transfer pictures, 35 V VCCI compliance, 51 video edit, 27 emailing marked, 18 out, 33 playback, 19 protecting, 20 review icons, 23 transfer to computer, 35 viewing, 19 video out, 33 viewing by multi-up, 21 picture, after taking, 5, 19 W warranty, 48 white balance, 31 www.kodak.com/go/support Z zoom digital, 7 optical, 7 57 .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C1450 user guide](http://yourpdfguides.com/dref/4732975)
<http://yourpdfguides.com/dref/4732975>