



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE C610. You'll find the answers to all your questions on the KODAK EASYSHARE C610 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK EASYSHARE C610
User guide KODAK EASYSHARE C610
Operating instructions KODAK EASYSHARE C610
Instructions for use KODAK EASYSHARE C610
Instruction manual KODAK EASYSHARE C610

Kodak EasyShare C610 digital camera



Extended user guide

www.kodak.com

For interactive tutorials, www.kodak.com/go/howto

For help with your camera, www.kodak.com/go/c610support



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C610 user guide](http://yourpdfguides.com/dref/3208381)
<http://yourpdfguides.com/dref/3208381>

Manual abstract:

@@@@@2 Setting the language, date/time.....

.....
.....
.....
.....
.....
.....
.....

..... 2 Storing pictures on an SD or SDHC card .

.....
.....
.....
.....
.....
.....

..... 3 2 Taking pictures/videos

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.4 Taking a picture

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 4 Using the digital zoom

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

5 Using the flash.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 6 Using different modes .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.. 7 Taking a video ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 7 Using Scene (SCN) modes

.....

.....
.....
.....
.....

.....
.....
.....
.....

... 8 Using the self-timer.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

9 Understanding the picture-taking icons.....

.....
.....
.....

.....
.....
.....

..... 10 3 Working with pictures/videos

.....
.....
.....
.....

.....
.....
.....

.....11 Reviewing pictures/videos ..

.....
.....
.....
.....

.....
.....
.....
.....

... 11 Deleting pictures/videos ..

.....
.....

.....
.....
.....

.....
.....
.....
.....

. 12 Cropping pictures.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 13 Rotating pictures.

.....
.....
.....
.....

.....
.....
.....

..... 14 Running a slide show ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

14 Copying pictures/videos.....

.....
.....
.....

.....
.....
.....

..... 16 Understanding the review icons.

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 17 www.kodak.com/go/support iii Table of contents 4 Doing more with your camera ..

.....
.....
.....

.....
.....
.....

....18 Changing picture-taking settings .

.....
.....
.....

.....
.....
.....

.....
.....
.....
.... 18 Customizing your camera

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
20 Using exposure compensation to adjust picture brightness

.....
.....

..... 22 Using camera Help ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 22 Using the framing grid to compose a picture.....

.....
.....
.....
.....
.....
.....
.....

. 22 Sharing your pictures.....

.....
.....
.....
.....
.....
.....
.....

.... 23 5 Transferring and printing pictures .

.....
.....
.....
.....
.....
.....

.....26 Installing the software.

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

26 Transferring pictures with the USB cable.....

.....

.....

.....

.....

.....

.....

.... 27 Printing pictures.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 28 6 Troubleshooting

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.30 Camera problems....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 30 7 Getting help .

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..34 Helpful links...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 34 8 Appendix ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.36 Camera specifications

.....
.....
.....
.....

.....
.....
.....
.....

.. 36 Care and maintenance ...

.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.. 38 Upgrading your software and firmware.....

.....
.....
.....

.....
.....
.....

..... 39 Storage capacities ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 39 Important safety instructions

.....
.....
.....
.....

.....
.....
.....
.....

..... 39 Battery life

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 40 Limited Warranty ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 41 Regulatory compliance ...
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 43 iv www.kodak.com/go/support 1 Setting up your camera Attaching the strap Loading the AAA batteries To extend battery life, see page 40.
www.kodak.com/go/support 1 Setting up your camera Turning on the camera Setting the language, date/time 1 Language: to change. 2 OK to accept.
Date/Time: 1 At the prompt, press OK.

2 for previous/next field. to change. OK to accept. NOTE: To change the date/time and language in the future, use the Menu button (page 20). 2 www.kodak.com/go/support Setting up your camera Storing pictures on an SD or SDHC card Your camera has internal memory. You can purchase an SD or SDHC card to conveniently store more pictures and videos. CAUTION: A card can only be inserted one way; forcing it may cause damage. If you insert or remove a card while the camera is on, the card, pictures, or camera may be damaged.

1 Turn off the camera. 2 Insert or remove the optional card. 3 Turn on the camera. optional Purchase accessories www.kodak.com/go/c610accessories
www.kodak.com/go/support 3 2 Taking pictures/videos Taking a picture 1 Press the Power button to turn on the camera in Auto mode. 2 Press the Shutter button completely down. You can repeatedly press Display to turn on/off status icons and framing grid.

Display Reviewing the picture just taken After you take a picture or video, the LCD displays a quickview for several seconds. Play/pause a video Delete To review pictures/videos anytime, see page 11. 4 www.kodak.com/go/support Taking pictures/videos Using the digital zoom Use digital zoom to get up to 5X closer to your subject. Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out. The zoom indicator shows zoom status. NOTE: You may notice decreased image quality when using digital zoom. The slider on the zoom indicator turns red when picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print. DW DT www.kodak.com/go/support 5 Taking pictures/videos Using the flash Press the flash button repeatedly to scroll through flash modes. The current flash mode is shown in the LCD status area.

Flash modes Auto Fill Flash fires When the lighting conditions require it. Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). In low light, hold the camera steady or use a tripod. Red Eye Once to shrink the eye pupil, then again to light the subject.

Off Never 6 www.kodak.com/go/support Taking pictures/videos Using different modes Choose the mode that best suits your subjects and surroundings. Mode 1 Press the Mode button. 2 Press button. to highlight a mode, then press the OK Use this mode Auto Scene For General picture taking--it offers excellent image quality and ease of use. Point-and-shoot simplicity when taking pictures in practically any situation. (See page 8.) Capturing video. Video NOTE: Audio is captured, but will not play on the camera.

To hear the audio, transfer the video to your computer. Taking a video Mode 1 Press the Mode button. 2 Press button. to highlight Video, then press the OK 3 Press the Shutter button completely down, then release it. To stop recording, press and release the Shutter button again. www.kodak.com/go/support 7 Taking pictures/videos Using Scene (SCN) modes Choose a Scene mode--for great pictures in practically any situation! 1 Press the Mode button. 2 Press to highlight SCN, then press the OK button. 3 Press to view scene mode descriptions.

If the mode description turns off before you finish reading it, press the OK button. 4 Press the OK button to choose a Scene mode. SCN mode Portrait Sport Landscape Children Night Portrait Beach Snow Fireworks Backlight For Full-frame portraits of people. Subjects that are in motion. Distant scenes. Action pictures of children in bright light. Reduces red eye of people in night scenes or low-light conditions. Bright beach scenes. Bright snow scenes. Fireworks.

Place the camera on a steady surface or tripod. Subjects that are in shadow or "backlit" (when light is behind the subject). Quiet occasions, like a wedding or lecture. Flash and sound are disabled. Place the camera on steady surface or tripod. Subjects at dusk. Reducing blur caused by camera shake or subject motion. People indoors, in low-light scenes. Night Landscape Distant scenery at night. Flash does not fire.

Manner/ Museum Sunset Blur Reduction High ISO 8 www.kodak.com/go/support Taking pictures/videos Using the self-timer Use the self-timer when you want to be included in a picture, or to ensure a steady Shutter button press. Place the camera on a tripod or flat surface. 1 In any Still mode, press until the desired self-timer icon appears for: 10 seconds--A picture is taken after a 10-second delay (so you have time to get into the scene). 2 seconds--A picture is taken after a 2-second delay (for a steady, shutter release on a tripod). 2 shot--The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later. 2 Compose the scene. Press the Shutter button completely down.

The camera takes the picture/pictures after the delay. Use the same procedure to take a 2- or 10-second self-timer video. www.kodak.com/go/support 9 Taking pictures/videos Understanding the picture-taking icons Picture size Flash mode Self timer Date stamp Pictures/time remaining Image storage location Digital zoom indicator Exposure metering White Balance ISO Battery level Capture mode Exposure compensation 10 www.kodak.com/go/support 3 Working with pictures/videos Reviewing pictures/videos Press the Review button to view and work with your pictures/videos.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C610 user guide](http://yourpdfguides.com/dref/3208381)
<http://yourpdfguides.com/dref/3208381>

Review 1 Press the Review button. 2 Press to view previous/next picture/video. Magnifying pictures 1 While reviewing a picture, press W/T to magnify a picture up to 5X.

2 Press to view other parts of the picture. Press OK to return to 1X. NOTE: If you press while at 1X, the view changes from single-picture to multi-up thumbnails. (See page 12.) Playing videos Playback speed 4X 2X 1X 2X Reverse 4X Press Press to play/pause. during playback to play at 2X, 4X. Forward Press to reverse at 2X, 4X. NOTE: To hear audio, transfer the video to your computer. (See page 27.) www.

kodak.com/go/support 11 Working with pictures/videos Viewing as thumbnails (multi-up) 1 Press the Review button. 2 Press W to change from single-picture view to multi-up thumbnails. 3 Press OK to return to single-picture view. Press the Review button to exit Review. Viewing picture/video information 1 Press the Review button. 2 Repeatedly press info. (Display) to turn on/off status icons and picture/video Press the Review button to exit Review. Deleting pictures/videos 1 Press the Review button. 2 tion from which you are copying (see page 20).

Copy pictures/videos: 1 Press the Review button, then the Menu button. 2 Press 3 Press to highlight Copy, then press OK. to highlight an option. 4 Press OK. NOTE: Pictures/videos are copied, not moved.

To remove pictures/videos from the original location after copying, delete them (see page 12). Print tags, email tags, and protection settings are not copied. Viewing picture/video information 1 Press the Review button. 2 Repeatedly press info. (Display) to turn on/off status icons and picture/video Press the Review button to exit Review.

16 www.kodak.com/go/support Working with pictures/videos Understanding the review icons Pictures Protected Favorite tag Email tag Print tag/number of prints Picture/Video number Image storage location Review Videos Protected Favorite tag Email tag Video length Picture/Video number Image storage location Review www.kodak.com/go/support 17 4 Doing more with your camera Changing picture-taking settings You can change settings to get the best results from your camera. 1 Press the Menu button. 2 Press to highlight a setting, then press OK. 3 Choose an option, then press OK. Press the Menu button to exit the menu. NOTE: To better understand each menu option, use camera Help (see page 22).

Some settings remain until you change them; others, until you change modes or turn off the camera. Some modes offer limited settings. Press Menu, , and Options OK to access settings Exposure Compensation Increase or decrease brightness before taking a picture. (Also see page 22.) 0.0, -0.3, -0.7, -1.0, -1.3,

-1.7, -2.0, +0.3, +0.7, +1.0, +1.3,

+1.7, +2.0 Picture Size 6.1 MP (4:3) Choose a picture resolution. 5.

4 MP (3:2) 5.0 MP (4:3) 4.6 MP (16:9) 3.1 MP (4:3) 2.2 MP (3:2) 2.1 MP (16:9) 1.2 MP (4:3) 18 www.kodak.com/go/support Doing more with your camera Press Menu, , and Options OK to access settings Video Size 640 x 480 Available only in Video mode. 320 x 240 White Balance Choose your lighting condition.

Auto--automatically corrects white balance. Ideal for general picture taking. Daylight--for pictures in natural lighting. Tungsten--corrects the orange cast of household light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash. Fluorescent--corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash. Open Shade--for pictures in shade in natural lighting. Center-Weight--evaluates the lighting conditions of the subject centered in the lens. Ideal for backlit subjects.

Center-Spot--similar to Center-weight, except the metering is concentrated on a smaller area of the subject centered in the lens. Ideal when you need an exact exposure of a specific area in the picture. Choose a lower ISO setting in brightly lit scenes; use a higher ISO for low-light scenes. Choose Auto, 80, 100, 200, 400, 800. Exposure Metering Evaluate light levels at specific areas of a scene.

ISO Speed Control the camera's sensitivity to light. Unavailable in Video mode. Color Mode Choose color tones. Unavailable in Video mode. NOTE: ISO returns to Auto when the camera is set to SCN mode.

High Color Natural Color Low Color Black & White Sepia NOTE: EasyShare software also lets you change a color picture to black-and-white or sepia. www.kodak.com/go/support 19 Doing more with your camera Press Menu, , and Options OK to access settings Image Storage Auto--the camera uses the card if one is in the camera. If not, Choose a storage location for the camera uses internal memory. pictures/videos. Internal Memory--the camera uses internal memory, even if a card is installed. Setup Menu Choose additional settings. See Customizing your camera. Customizing your camera Use Setup to customize your camera settings.

1 In any mode, press the Menu button. 2 Press 3 Press to highlight Setup, then press OK. to highlight a setting, then press OK. 4 Choose an option, then press OK. 5 Press the Menu button to exit. To better understand each menu option, use camera Help (see page 22). Press Menu, to highlight Setup, Options then OK to access settings LCD Brightness Power Save High Power Camera Sounds Choose sound effects. All On Shutter Only All Off 20 www.kodak.com/go/support Doing more with your camera Press Menu, to highlight Setup, Options then OK to access settings Auto Power Off 10 minutes Choose inactivity time until camera turns off.

5 minutes 3 minutes 1 minute TV Out Choose the regional setting for connecting to a television or other external device. Date & Time Date Stamp Imprint the date on pictures. Language Format NTSC--used in North America and Japan. PAL--used in Europe and China. See page 2.

On Off See page 2. Memory Card--deletes everything on the card; formats the card. Cancel--exits this setting. Internal Memory--deletes everything in internal memory including email addresses; formats the internal memory. CAUTION: Formatting deletes all pictures/videos, including those that are protected.

@@@T 1 Highlight a menu choice. @@@@When they are transferred to your computer, you can share them. Use the Share button: Any time. @@@Press 2 Press to locate a picture. @@@@Press to locate a picture. Press to change the print quantity. Repeat until the desired print quantity is applied to pictures. 4 Press OK. The Print icon appears in the status area. Press the Share button to exit the menu.

@@For details, click the Help button in EasyShare software. @@NOTE: For the best 4 x 6 in. @@@@to highlight Email, then press OK. @@When the picture/video you want is displayed, press OK. To send the pictures/videos to more than one address, repeat step 3. Selected addresses are checked. 4 To remove a selection, highlight a checked address and press OK. To remove all email selections, highlight Clear All. 5 Press to highlight Exit, then press OK. The Email icon appears in the status area.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C610 user guide](#)

Press the Share button to exit the menu. NOTE: To add an email address, use the Add Email menu choice. Then use the on-camera keyboard. @@@@Press to find a picture. 2 Press the Menu button, highlight Favorite, then press OK.

The Favorite icon appears in the status area. To remove the tag, press OK again. @@@@2 Place the EasyShare software CD into the CD-ROM drive. @@@@NOTE: You may need to download some Mac OS software versions. Visit www.kodak.com/go/easysharesw.

4 Follow the on-screen instructions to install the software. @@@@To register later, visit www.kodak.com/go/register. 5 If prompted, restart the computer. If you turned off anti-virus software, turn it back on. See the anti-virus software manual for details. @@@@2 Connect the USB cable (U-8).

3 Turn on the camera. Kodak EasyShare software opens on your computer and prompts you through the transfer process. NOTE: Visit www.kodak.com/go/howto for an online tutorial on connecting. www.kodak.com/go/support 27 Transferring and printing pictures Printing pictures Direct printing with a PictBridge enabled printer Your camera is compatible with PictBridge technology, so you can print directly to PictBridge enabled printers.

You need: Camera with fully charged batteries PictBridge enabled printer USB cable (may be sold separately) Connecting the camera to a PictBridge enabled printer 1 Turn off the camera and printer. 2 Connect the appropriate USB cable from the camera to the printer.

(See your printer user guide or visit www.kodak.com/go/c610accessories.) Printing from a PictBridge enabled printer 1 Turn on the printer. Turn on the camera.

The PictBridge logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu interface turns off, press any button to redisplay it. 2 Press to choose a printing option, then press OK. to choose a picture.

Choose the number of copies. Current Picture--Press Tagged Pictures--If your printer is capable, print pictures that you tagged for printing and choose a print size. Index Print--Print thumbnails of all pictures. This option requires one or more sheets of paper. If the printer is capable, choose a print size. All Pictures--Print all pictures in internal memory, on a card. Choose the number of copies. Image Storage--Access internal memory, a card. NOTE: During direct printing, pictures are not permanently transferred or saved to the computer or printer. 28 www.kodak.com/go/support

Transferring and printing pictures Disconnecting the camera from a PictBridge enabled printer 1 Turn off the camera and printer. 2

Disconnect the USB cable from the camera and the printer. Using a printer that is not PictBridge enabled For details on printing pictures from your computer, click the Help button in EasyShare software. Ordering prints online Kodak Gallery (www.kodakgallery.com) is one of the many online print services offered in the Kodak EasyShare software. You can easily: Upload your pictures. Edit, enhance, and add borders to your pictures. Store pictures, and share them with family and friends.

Order high-quality prints, photo greeting cards, frames, and albums--and have them delivered to your door. Printing from an optional SD card Automatically print tagged pictures when you insert your card into a printer with an SD card slot. See your printer user's guide for details. Make prints at an SD-capable

Kodak picture maker/picture kiosk. (Contact a location before visiting.

Visit www.kodak.com/go/picturemaker.) Take the card to your local photo retailer for professional printing. Dock compatibility for your camera This camera is not compatible with Kodak EasyShare docks.

www.kodak.com/go/support 29 6 Troubleshooting For step-by-step product support, visit www.kodak.com/go/c610support and select Interactive Troubleshooting & Repairs. Camera problems If... Camera does not turn on. Camera does not turn off.

Try one or more of the following Install new batteries (see page 1). Charge rechargeable batteries. Remove the battery, then reinsert or replace it. If the camera still does not function, visit www.kodak.com/go/c610support and select Interactive Troubleshooting & Repairs. Pictures remaining The camera is operating normally. Continue taking pictures. number does not decrease after taking a picture. Stored pictures are Retake pictures.

Do not remove card while the camera is accessing it. corrupted. Keep rechargeable batteries charged. Transfer pictures to the computer (see page 27). In Review mode, a Transfer the picture to the computer (see page 27).

blue or black Take another picture. If problem continues, try internal memory and/or screen is displayed another memory card. instead of a picture. Shutter button Turn on the camera (see page 2). does not work.

Transfer pictures to the computer (see page 27), delete pictures from the camera (see page 12), switch image storage locations (see page 20), or insert a card with available memory (see page 3). 30 www.kodak.com/go/support Troubleshooting If... Try one or more of the following Picture is too light. Move so there is at least 2 ft (0.6 m) between the camera and the subject. Decrease Exposure Compensation (see page 22).

Picture is not clear. Clean the lens (see page 38). Make sure your camera is not in Close-up mode. Move so there is at least 2 ft (0.6 m) between the camera and the subject. Place the camera on a flat, steady surface or use a tripod. Picture is too dark. Turn on the flash (see page 6). Move so there is no more than 7.9 ft (2.

4 m) between the camera and the subject. Use Fill flash (see page 6) or change your position so light is not behind the subject. Increase Exposure Compensation (see page 22). Camera does not Purchase a certified SD card. recognize SD card.

Insert a card into the slot, then push to seat (see page 3). Camera freezes up Turn the camera off, then back on. Make sure the camera is turned off when a card is before inserting or removing a card. inserted or removed. Memory card full.

Insert a new card (see page 3). Transfer pictures to the computer (see page 27). Delete pictures/videos (see page 12). www.kodak.com/go/support 31 Troubleshooting Camera/computer communications If... Try one or more of the following The computer does Visit www.kodak.com/go/c610support.

not communicate Turn on the camera (see page 2). with the camera. Install new batteries (see page 1) or charge rechargeable batteries.

Connect the USB cable to camera and computer port (see page 27). Install the software (see page 26). Disconnect the USB cable. Close all software applications. Re-install the software (see page 26). Disconnect camera from the computer.

Close all software applications, reconnect camera. Cannot transfer Disconnect the USB cable. Close all open applications. Re-install the software (see page 26). pictures.

Disconnect the USB cable. Close all software applications. Re-install (The Add New the software (see page 26). Hardware Wizard cannot locate drivers.



[You're reading an excerpt. Click here to read official KODAK](http://yourpdfguides.com/dref/3208381)

[EASYSHARE C610 user guide](http://yourpdfguides.com/dref/3208381)

<http://yourpdfguides.com/dref/3208381>

) LCD screen messages If.

.. Memory card requires formatting Memory card cannot be read (Please format memory card or insert another memory card) Try one or more of the following Insert a new card (see page 3) or format the card (see page 21). Caution: Formatting a card deletes all pictures and videos, including protected files. 32 www.kodak.com/go/support/Troubleshooting If... Unrecognized file format Try one or more of the following Transfer the picture to the computer (see page 27), or delete it (see page 12).

Camera error Turn camera off, then back on. If the message reappears, visit www.kodak.com/go/c610support and select Interactive #XXXX. See user's Troubleshooting & Repairs. guide. www.kodak.com/go/support 33 7 Camera Getting help Helpful links Email, write, or phone customer support www.kodak.com/go/contact Get support for your product (FAQs, www.kodak.com/go/c610support troubleshooting information, arrange for repairs, etc.) Purchase camera accessories (lenses, cards, etc.) www.kodak.com/go/c610accessories

Download the latest camera firmware and www.kodak.com/go/c610downloads software See online demonstrations of your camera www.kodak.com/go/howto Software www.kodak.com/go/easysharesw (or click the Help button in EasyShare software) Get help with the Windows operating system and www.kodak.com/go/pcbasics working with digital pictures Get information on EasyShare software Other Get support for other cameras, software, accessories Get information on Kodak inkjet products Optimize your printer for truer, more vibrant colors Register your camera www.kodak.com/go/support www.kodak.com/go/inkjet www.kodak.com

www.kodak.com/go/onetouch www.kodak.com/go/register 34 www.kodak.com/go/support Getting help NOTE: If you have questions concerning this product, you may speak with Kodak customer support. Australia Austria Belgium Brazil Canada China Denmark Finland France Germany Greece Hong Kong 1800 267 588 0179 567 357 02 713 14 45 0800 891 42 13 1 800 465 6325 800 820 6027 3 848 71 30 0800 1 17056 01 55 1740 77 069 5007 0035 Netherlands New Zealand Norway Philippines 020 346 9372 0800 880 120 23 16 21 33 1 800 1 888 9600 Poland Portugal Russia Singapore 00800 4411625 021 415 4125 8 495 929 9166 800 6363 036 Czech Republic 00 800 56325000 Slovakia Spain Sweden Switzerland Taiwan Thailand 00 800 56325000 91 749 76 53 08 587 704 21 01 838 53 51 0800 096 868 001 800 631 0017 00800 44140775 800 901 514 Hungary India Ireland Italy Japan Korea 06 80 456 325 91 80 41374555 Turkey (toll free 000800 440 1227) 01 407 3054 02 696 33452 03 5540 9002 080 708 5600 United Kingdom United States International Toll Fax 00800 448827073 0870 243 0270 1 800 235 6325 +44 131 458 6962 International Toll Line +44 131 458 6714 www.kodak.com/go/support 35 8 Appendix Camera specifications For more specifications, visit www.kodak.com/go/c610support.

CCD--1/2.5 in. CCD, 4:3 aspect ratio Effective pixels--6.2 MP ISO speed-- Mode Night Portrait, Landscape, Sunset, Snow, Beach Auto, Children Portrait, Fireworks, Night Landscape Backlight Manner/Museum Sports, Blur Reduction, High ISO Selectable ISO ISO 80-200 80-250 80 140-250 80-800 80-800 80, 100, 200, 400, 800 Taking lens--Fixed focus, 38 mm, f/4.5 (35 mm equivalent); includes mechanical shutter and f/7.

2 aperture Aperture--f/4.5 or f/7.2 Digital zoom--5.0X continuous in 0.2X increments Shutter--Mechanical shutter with CCD, 1/21/1500 sec.

Color display--6.1 cm (2.4 in.); 150K (480 x 240) pixels; 30 fps Image storage--Optional SD/SDHC Card the SD Card Association.) . (The SD logo is a trademark of 36 www.kodak.com/go/support Appendix Internal storage capacity--16 MB internal memory/10 MB available for image storage (1 MB equals one million bytes) Image file format--Still: EXIF 2.21 (JPEG compression); DCF file organization. Video: MOV; CODEC Motion JPEG; G.

711 (audio) Picture size-- 6.1 MP (4:3): 2848 x 2134 pixels 5.4 MP (3:2): 2848 x 1896 pixels 5.0 MP (4:3): 2592 x 1944 pixels 4.6 MP (16:9): 2848 x 1602 pixels 3.1 MP (4:3): 2048 x 1536 pixels 2.2 MP (3:2): 1800 x 1200 pixels 2.1 MP (16:9): 1920 x 1080 pixels 1.2 MP (4:3): 1280 x 960 pixels Video capture--VGA (640 x 480) @ 15 fps; QVGA (320 x 240) @ 30 fps; movie length limited to less than 80 mins. Color modes--High Color, Natural Color, Low Color, Black & White, Sepia White balance--Auto, Daylight, Tungsten, Fluorescent, Open Shade Focus system--Fixed focus; working range: 1 m (3.3 ft) infinity Exposure metering--TTL-AE (through-the-lens auto-exposure), center-weight, center-spot Exposure compensation--+/-2.0 EV with 1/3 EV steps Capture modes--Auto, SCN modes, Video Self Timer--2 seconds, 10 seconds, or 2-shot Electronic flash--Guide no. 6.0 (@ ISO 100); auto flash working range at ISO 250: 12.1 m (3.

36.9 ft) www.kodak.com/go/support 37 Appendix Flash modes--Auto, Fill, Red-eye, Off Communication with computer--USB 2.0 Full Speed (PIMA 15740 protocol) via USB cable model U-8 Power--(2) alkaline or Ni-MH AAA batteries PictBridge support--Yes Auto power off--Selectable 1, 3, 5, 10 minutes Microphone--Yes Tripod mount--1/4 inch Operating temperature--32104°F (040°C) Size--82 mm (3.

2 in.) x 52 mm (2.0 in.) x 23.5 mm (0.9 in.) @ power off Weight--80 g (2.8 oz) without battery or card Care and maintenance If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera. Blow gently on the lens or LCD to remove dust and dirt.

Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces. Service agreements may be available in your country. Contact a dealer of Kodak products for more information. For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or the Kodak Web site at www.kodak.com/go/c610support.

38 www.kodak.com/go/support Appendix Upgrading your software and firmware Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). Visit www.kodak.com/go/c610downloads.

Storage capacities The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD card capacities, visit www.kodak.com/go/SDcapacities.

Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos. Important safety instructions CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C610 user guide](http://yourpdfguides.com/dref/3208381)
<http://yourpdfguides.com/dref/3208381>

If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support. The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury.

For approved accessories, visit www.kodak.com/go/accessories. Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions. If using this product in an airplane, observe all instructions of the airline. When removing the battery, allow it to cool; it may be hot. Read and follow all warnings and instructions supplied by the battery manufacturer. Use only batteries approved for this product to avoid risk of explosion. 39 www.kodak.com/go/support Appendix

Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak. Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.

Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support. In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support. Dispose of batteries according to local and national regulations.

Visit www.kodak.com/go/kes. Do not charge non-rechargeable batteries. For more information on batteries, visit www.kodak.com/go/batterytypes. Battery life Battery (2) Ni-MH batteries AAA (2) alkaline batteries AAA Pictures 170-220 70-120 * Approximate number of pictures in Auto mode (CIPA testing method using internal memory.) For acceptable battery life, and to make sure your camera operates dependably, use the batteries listed. Actual battery life may vary based on usage.

Extending battery life See Auto Power Off (see page 21). Limit the following activities that quickly deplete battery power: Reviewing your pictures on the LCD (see page 11) 40 www.kodak.com/go/support Appendix Excessive use of the flash Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera. Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable. Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt.

Proof of the date of purchase will be required with any request for warranty repair. Limited warranty coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts.

If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. @@@@In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law.

The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to 42 www.kodak.com/go/support Appendix the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

Regulatory compliance FCC compliance and advisory Kodak EasyShare C610 digital camera This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C610 user guide](http://yourpdfguides.com/dref/3208381)
<http://yourpdfguides.com/dref/3208381>

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. www.kodak.com/go/support 43 Appendix Canadian DOC statement DOC Class B Compliance--This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes--Classe B--Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. FCC and Industry Canada--This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Waste Electrical and Electronic Equipment labeling In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility, or appropriate local authorities; or visit www.kodak.com/go/recycle. (Product weight: 80 g.) 44 www.kodak.com/go/support

Index A A/V out, 15 about picture, video, 12, 16 about this camera, 21 accessories battery, 40 buying, 34 SD card, 3 appendix, 36 auto, 7 flash, 6 B backlight, 8 battery compartment, ii extending life, 40 loading, 1 types, 38 beach, 8 blur reduction, 8 button delete, ii, 4 flash/status, 6 menu, ii on/off, i review, ii, 11 share, ii shutter, i zoom, ii, 5 www.kodak.com/go/support 1 C cable audio/video, 15 cable, USB, 27 camera screen getting help, 22 camera sounds, 20 caring for your camera, 38 children, 8 clock, setting, 2 color mode, 19 copy pictures card to memory, 16 memory to card, 16 to computer, 26 cropping pictures, 13 customer support, 34, 35 customizing camera settings, 20 D date setting, 2 stamp, 21 delete button, ii deleting during quickview, 4 from internal memory, 12 from SD/SDHC card, 12 protecting pictures, videos, 13 displaying slide show, 14 disposal, recycling, 38, 44 doing more with your camera, 18 45 Index download pictures, 26 E EasyShare software installing, 26 emailing pictures, videos, 24 exposure compensation, 22 metering, 19 external video device viewing pictures, videos, 15 F favorites tagging, 25 fireworks, 8 firmware, upgrading, 39 flash settings, 6 flower, 8 format, 21 framing grid, 22 G grid, framing, 22 guidelines, battery, 40 H help, 30 camera help, 22 web links, 34 high ISO, 8 I icons, modes, 7 46 image storage, 20 information about pictures, videos, 12, 16 installing batteries, 1 SD card, 3 software, 26 internal memory storage capacity, 39 ISO speed, 19 K Kodak EasyShare software, 26, 39 web sites, 34 L LCD, ii brightness, 20 reviewing pictures, 11 reviewing videos, 11 lens cleaning lens, 38 loading batteries, 1 SD card, 3 software, 26 M Macintosh computers, installing software on, 26 maintenance, camera, 38 manner/museum, 8 memory inserting card, 3 www.kodak.com/go/support Index storage capacities, 39 menu button, ii mode button, i modes, 7 backlight, 8 beach, 8 blur reduction, 8 children, 8 fireworks, 8 flower, 8 high ISO, 8 manner/museum, 8 night landscape, 8 night portrait, 8 scene (SCN), 8 snow, 8 sport, 8 modes, capture auto, 7 multi-up, 12 N night landscape, 8 night portrait, 8 O on/off button, i online prints, ordering, 29 P PictBridge enabled printer, 28 pictures copying, 16 cropping, 13 emailing tagged, 24 www.kodak.com/go/support printing, 29 protecting, 13 review icons, 17 reviewing, 11 rotating, 14 storage capacity, 39 taking, modes, 7 transfer, 26 pictures/video deleting, 12 picture-taking settings, 18 power, camera, 2 printing from a card, 29 from computer, 29 optimizing printer, 34 order online, 29 PictBridge technology, 28 tagged pictures, 29 problem-solving, 30 protecting pictures, videos, 13 Q quickview, using, 4 R recycling, disposal, 38, 44 red-eye, flash, 6 regulatory information, 43 repair, 34 review button, ii, 11 reviewing pictures as you take them, 4 LCD, 11 47 Index slide show, 14 reviewing pictures/video deleting, 12 protecting, 13 reviewing videos LCD, 11 slide show, 14 rotating pictures, 14 running slide show, 14 S scene modes (SCN), 8 SD card inserting, 3 printing from, 29 storage capacities, 39 self-timer, 9 self-timer light, i service and support telephone numbers, 35 setting about, 21 camera sounds, 20 color mode, 19 date and time, 2 date stamp, 21 exposure metering, 19 flash, 6 image storage, 20 ISO, 19 LCD brightness, 20 picture-taking mode, 7 self-timer, 9 TV out, 21 48 video size, 19 white balance, 19 settings picture taking, 18 setup mode, using, 20 share button, ii sharing pictures, videos, 23 shutter button, i problems, 30 self-timer delay, 9 slide show continuous loop, 15 running, 14 snow, 8 software installing, 26 upgrading, 39 sounds, 20 specifications, camera, 36 sport, 8 storage capacity, 39 support, technical, 34, 35 T tag favorites, 25 for email, 24 for print, 23 telephone support, 35 television, slide show, 15 time, setting, 2 timer, shutter delay, 9 tips www.kodak.com/go/support Index care & maintenance, 38 transferring pictures, videos, 26 trash can, deleting, 4 tripod socket, ii troubleshooting, 30 turning camera on and off, 2 TV out, 21 U undelete, undo, 12 upgrading software, firmware, 39 URLs, Kodak web sites, 34 USB cable, 27 V video copying, 16 emailing tagged, 24 protecting, 13 review icons, 17 reviewing, 11 size, 19 storage capacities, 39 viewing, 11 videos transfer, 26 viewing by multi-up, 12 picture/video information, 12, 16 viewing picture after taking, 4, 11 W warranty, 41 www.kodak.com/go/support WEEE, 44 white balance, 19 Windows OS-based computers installing software, 26 wrist strap, 1 Z zoom, 5 zoom button, ii 49 .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE C610 user guide](http://yourpdfguides.com/dref/3208381)
<http://yourpdfguides.com/dref/3208381>