



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE CX7525. You'll find the answers to all your questions on the KODAK EASYSHARE CX7525 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK EASYSHARE CX7525 User guide KODAK EASYSHARE CX7525 Operating instructions KODAK EASYSHARE CX7525 Instructions for use KODAK EASYSHARE CX7525 Instruction manual KODAK EASYSHARE CX7525

Tag your pictures

Merk dine billeder
Kuvien merkintämenin
Merk bildene dine
Märk dina bilder

Tag pictures by Keyword, Favorites, or People (Face recognition) to easily find them later. See the Extended User Guide.

Merk billeder eller favoritter, personer eller personer (ansigtsgenkendelse) så du nemt kan finde dem senere. Se den udvidede brugsvejledning.

Merkéeke kuvat avainsanoilla, suosikkimerkinnällä tai henkilönnimillä (kasvojen tunnistus), niin löydät ne helposti myöhemmin. Lisätietoja on laajennetussa käyttöoppaassa.

Säter bilder eller nävskod, favoriter eller personer (ansiktsigenkänning) så du lätt kan hitta dem senare. Se Utvidat bruksanvisning.

Märk bilderna genom att använda Nyckelord, Favoriter eller Personer (ansiktsigenkänning) för att enkelt hitta dem senare. Se den utökade bruksanvisningen.



- | | |
|--------------|-------------|
| 1 All | 4 Favorites |
| 2 Allie | Favoritter |
| 3 Kaikki | Suosikit |
| 4 All (alle) | Favoriter |
| 5 Date | 5 Keywords |
| Date | Nyckelord |
| Datum | Nyckelord |
| 3 People | |
| Personer | |
| Henkilöt | |
| Personer | |



- | | |
|--------------------------|---|
| 1 Shutter button | 12 Delete button |
| 2 Flash button | 13 OK |
| 3 Mode button | 14 Strap post |
| 4 Power button | 15 Info button |
| 5 Flash | 16 Review button |
| 6 Beeper | 17 Share button |
| 7 Lens | 18 Battery compartment, SD/SDHC Card slot |
| 8 Microphone | 19 USB port, A/V Out |
| 9 Self-timer/Video light | 20 Tripod socket |
| 10 Menu button | 21 LCD |
| 11 Wide Angle/Telephoto | |



- | | |
|--------------------------|--------------------------------------|
| 1 Suljinpainike | 12 Poistopainike |
| 2 Salama painike | 13 OK |
| 3 Toimintatila painike | 14 Hihnan pitike |
| 4 Virtapainike | 15 Tietopainike |
| 5 Salama | 16 Käteispainike |
| 6 Äänimerkki | 17 Lähetyspainike |
| 7 Linssi | 18 Akkukotelo, SD-/SDHC-korttipaikka |
| 8 Mikrofon | 19 USB-portti, AV-uloslusto |
| 9 Vitkäläytys-/videovalo | 20 Jalustan kiinnityspaikka |
| 10 Valikkopainike | 21 LCD-näyttö |
| 11 Laajakuiva-/telekuv | |

- | | |
|-----------------------|----------------------------------|
| 1 Lukkerknapp | 13 OK |
| 2 Blitzknapp | 14 Øjet til rem |
| 3 Modusknapp | 15 Knappen Info |
| 4 Aftrykknapp | 16 Knappen |
| 5 Blitz | 17 Knappen Share (Del) |
| 6 Bipper | 18 Batterihus, SD-/SDHC-kortstik |
| 7 Objektiv | 19 USB-port, AV-udgang |
| 8 Mikrofon | 20 Stativfæstning |
| 9 Selvløser-/videolys | 21 LCD |
| 10 Knappen Menu | |
| 11 Vidvinkel/tele | |
| 12 Knappen Set | |

- | | |
|-------------------------|--------------------------------|
| 1 Lukkerknapp | 12 Slettknapp |
| 2 Blitzknapp | 13 OK |
| 3 Modusknapp | 14 Feste for rem |
| 4 Av/påknapp | 15 Infoknapp |
| 5 Blitz | 16 Gjennomtryknapp |
| 6 Lydsignal | 17 Knappen Share (Del) |
| 7 Linse | 18 Batteriom, SD/SDHC-kortspor |
| 8 Mikrofon | 19 USB, A/V-utgang |
| 9 Selvløser-/videolampe | 20 Sokkel for stativ |
| 10 Menyknapp | 21 LCD |
| 11 Vidvinkel/teletoto | |

- | | |
|-------------------------------|------------------------------------|
| 1 Sluterknapp | 12 Knappen Ta bort |
| 2 Blittrknapp | 13 OK |
| 3 Lågestknapp | 14 Remfäste |
| 4 Strömbytare | 15 Info-knapp |
| 5 Blitz | 16 Knappen Granska |
| 6 Signal | 17 Knappen Share (Del) |
| 7 Objektiv | 18 Batterifack, SD-/SDHC-kortplats |
| 8 Mikrofon | 19 USB-port, A/V-utgång |
| 9 Lampa för självlösare/video | 20 Stativfäste |
| 10 Menyknapp | 21 LCD-skärm |
| 11 Vidvinkel/teletoto | |

For complete information about your camera, see the **Extended user guide**: www.kodak.com/go/c123manuals


Du kan få flere oplysninger om dit kamera i den **udvidede brugsvejledning**: www.kodak.com/go/c123manuals

Lisätietoja kamerasta on **laajennetussa käyttöoppaassa**: www.kodak.com/go/c123manuals

Du finner mer utfyllende informasjon om kammeret i den **utvidede bruksanvisningen**: www.kodak.com/go/c123manuals

Fullständig information om kameran hittar du i den **utökade bruksanvisningen**: www.kodak.com/go/c123manuals

Eastman Kodak Company
Rochester, NY 14650
© 2009 Eastman Kodak Company. Product number: 18-4143 (en) with all rights reserved.



Kodak EasyShare Sport Camera C123

User Guide
Brugsvejledning
Käyttöopas
Brukerhåndbok
Bruksanvisning

4H7431

Kodak
Eastman Kodak Company
Rochester, NY 14650 U.S.A.
© Eastman Kodak Company, 2010.
MC/MR/TM: Kodak, EasyShare Sport, 4H7431



You're reading an excerpt. [Click here to read official KODAK EASYSHARE CX7525 user guide](http://yourpdfguides.com/dref/4732943)
<http://yourpdfguides.com/dref/4732943>

Manual abstract:

Com/go/c123manuals EasyShare Sport Camera C123 9 8 7 6 10 11 Suljinpainike Salamapainike Toimintatilapainike Virtapainike Salama Äänimerkki Linssi Mikrofoni Vitkalaukaisin-/ videovalo 10 Valikkopainike 11 Laajakulma-/ telekuva 1 2 3 4 5 6 7 8 9 12 13 14 15 16 17 18 Poistopainike OK, Hihnan pidike Tietopainike Katselupainike Lähetyspainike Akkulokero, SD-/SDHC-korttipaikka 19 USB-portti, AV-ulostulo 20 Jalustan kiinnityspaikka 21 LCD-näyttö Lukkerknapp Blits-knapp Modusknapp Av/på-knapp Blits Lydsignal Linse Mikrofon Selvutløser-/ videolampe 10 Menyknapp 11 Vidvinkel/telefoto 1 2 3 4 5 6 7 8 9 12 13 14 15 16 17 Sletteknapp OK, Feste for reim Infoknapp Gjennomsynsknapp Knappen Share (Del) 18 Batterirom, SD/SDHC-kortspor 19 USB, A/V-utgang 20 Sokkel for stativ 21 LCD 1 2 3 4 5 21 12 13 20 19 15 16 17 18 Eastman Kodak Company Rochester, NY 14650 AIO-40 14 Waste Electrical and Electronic Equipment/Battery Disposal In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste). @@@@Press the Shutter button completely down. 2 Press the Mode button, then to highlight Video , then press OK. Press the Shutter button then release. @@Press OK for each destination, then on Done. Turn off the camera.

2. Connect the camera to a computer connected to the Internet. 3. Turn on the camera.

@@Anslut kameran till en dator med anslutning till Internet. Use underwater Brug undervandsbilleder Vedenalainen käyttö Bruke under vann Använda under vattent Press the Mode button, then to highlight Underwater Picture or Video, then press OK. @@For å kunne bruke funksjonene for deling og sosiale nettverk. .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE CX7525 user guide](http://yourpdfguides.com/dref/4732943)
<http://yourpdfguides.com/dref/4732943>