



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE M23. You'll find the answers to all your questions on the KODAK EASYSHARE M23 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK EASYSHARE M23
User guide KODAK EASYSHARE M23
Operating instructions KODAK EASYSHARE M23
Instructions for use KODAK EASYSHARE M23
Instruction manual KODAK EASYSHARE M23

KODAK EASYSHARE Camera / M23



Extended user guide

www.kodak.com
For help with your camera:
www.kodak.com/go/m23support



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M23 user guide](http://yourpdfguides.com/dref/4732916)
<http://yourpdfguides.com/dref/4732916>

Manual abstract:

@@@1 Loading the KLIC-7006 battery.....

.....
.....
.....
.....
.....
.....
.....

1 Charging the battery

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 2 Turning on the camera

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 5 Setting the language and date/time...

.....
.....
.....
.....
.....
.....
.....
.....
.....

@@@@@@9 Watch the battery level

.....
.....
.....
.....
.....
.....
.....
.....
.....

. 9 Using the optical zoom.....

.....
.....
.....
.....

.....
.....
.....
.....

. 10 Adjusting LCD brightness

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 10 Using the flash..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 11 Using different modes .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

12 Using Program mode.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

... 14 Using shortcuts ..

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.... *15 Using the self-timer.*

.....
.....
.....
.....
.....
.....
.....
.....

..... *16 Using burst .*

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
. *16 Taking panoramic pictures...*

.....
.....
.....
.....
.....
.....
.....

. *17 3 Sharing and tagging pictures*

.....
.....
.....
.....
.....
.....

...18 Sharing pictures/videos through social networks

.....
.....
.....

18 Tagging pictures

.....
.....
.....
.....
.....
.....
.....
.....

.... 20 Marking pictures/videos for emailing .

.....
.....
.....
.....
.....

... 22 4 Reviewing and editing ..

.....
.....
.....
.....
.....
.....
.....
.....

.....23 Reviewing pictures/videos

.....
.....
.....
.....
.....
.....
.....

. 23 Deleting pictures/videos

.....
.....
.....
.....
.....
.....

.....
.....

..... *24 Viewing pictures/videos in different ways.*

.....
.....
.....
.....

.....
.....
.....

.. 25 iv www.kodak.com/go/support Table of contents A smarter way to find and enjoy your pictures.....

.....
.....
.....
.....

26 Understanding the review icons.....

.....
.....

.....
.....
.....
.....

.....
.....

.. 27 Displaying pictures/videos on a television...

.....
.....
.....
.....
.....

.....
.....

28 Using the menu button in review.....

.....
.....

.....
.....
.....
.....

.....
.....

29 Cropping pictures.....

.....
.....
.....
.....
.....

.....
.....
.....
.....

... 29 Rotating pictures..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 30 Using KODAK PERFECT TOUCH Technology...

.....

.....

.....

.....

.....

.....

. 30 Editing videos

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 31 Selecting multiple pictures/videos

.....

.....

.....

.....

.....

.....

.....

..... 32 5 Doing more with your camera ..

.....

.....

.....

.....

.....

.....

.....

.....33 Using the menu button in picture-taking modes.

.....

.....

.....

.....

.....

.....

.. 33 Using the Setup menu

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 36 6 Install software, then share ..

.....
.....

.....
.....
.....
.....

.....
.....

...39 Install software, transfer pictures..

.....

.....
.....
.....
.....

.....
.....
.....

... 39 Printing pictures.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 40 Marking your pictures for print

.....
.....
.....
.....

.....
.....
.....
.....

. 41 7 Troubleshooting

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
.....
...42 Getting help on the Web

.....
.....
.....
.....

.....
.....
.....
.....

.....
45 8 Appendix

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...46 Specifications..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 46 Care and maintenance ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 48 Upgrading your software and firmware...

.....
.....
.....

.....
.....
.....
.....

... 48 Storage capacities

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

49 Important safety instructions

.....
.....
.....

.....
.....
.....
.....

. 49 Battery replacement, battery life

.....
.....

.....
.....
.....
.....

.....
.....

.. 50 Limited warranty ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 51 Regulatory compliance

.....

.....
.....
.....
.....

.....

.....
.....
.....

..... 52 www.kodak.com/go/support v 1 Setting up your camera Attaching the strap Loading the KLIC-7006 battery All batteries lose power over time—even if they're not being used. For longer life, fully charge the battery prior to use.

Purchase extra batteries Charge the battery Watch the battery level www.kodak.com/go/accessories See page 2 See page 9 1 www.kodak.com/go/support Setting up your camera Charging the battery If your package included An in-camera battery charger An external battery charger Then see Using the in-camera battery charger Using the external battery charger Using the in-camera battery charger You can charge the Li-Ion battery whenever necessary. Battery Charging light: •Blinking: charging •Steady On: finished charging 1 Turn off the camera. 2 Connect the KODAK Camera USB Cable, Micro B / 5-Pin and charger. (Use only the cable included with this camera.) NOTE: You can use the camera while it's plugged in. Your adapter may differ. Purchase extra batteries Watch the battery level www.kodak.com/go/accessories See page 9 www.kodak.com/go/support 2 Setting up your camera Using the external battery charger You can charge the Li-Ion battery whenever necessary. If you have this charger... Your plug may differ. Battery Charging light: • Orange: charging • Green: finished charging If you have this charger.

.. Your plug may differ. Battery Charging light: •Flashing green: charging •Steady On green: finished charging Purchase extra batteries Watch the battery level www.kodak.com/go/accessories See page 9 3 www.kodak.com/go/support Setting up your camera Charge via your computer's USB port You can charge the Li-Ion battery whenever necessary. IMPORTANT: The camera charges when the computer is on and awake. Turn off the computer's hibernation, sleep, and standby modes.

1 Turn off the camera. 2 Connect the KODAK Camera USB Cable, Micro B / 5-Pin and charger. Use only the cable included with this camera. Battery Charging light: •Blinking: charging •Steady: finished charging Purchase extra batteries Watch the battery level www.kodak.com/go/accessories See page 9 www.kodak.com/go/support 4 Setting up your camera Turning on the camera Press the Power button. Setting the language and date/time Language: OK to accept. Date/Time: to change.

At the prompt, press OK. to change current field. for previous/next field. OK to accept. NOTE: To change language in the future, use the Setup Menu (see page 36). 5 www.kodak.com/go/support Setting up your camera Storing pictures on an accessory SD or SDHC Card Your camera has internal memory. We strongly recommend purchasing an SD or SDHC Card to conveniently store more pictures/videos. CAUTION: A card can only be inserted one way; forcing it may cause damage.

Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera. SD/SDHC Card (Accessory) 1 Turn off the camera. 2 Insert the card until it clicks. 3 Turn on the camera. To eject the card, push and release it. IMPORTANT: When you turn on the camera, it checks to see if a card is inserted. If so, new pictures/videos are stored on the card. If no card is inserted, new pictures/videos are stored in the camera's internal memory. If pictures/videos are detected in internal memory and a card is inserted, the camera prompts you to move the pictures to the card (and erase those in internal memory). Purchase cards www.kodak.com/go/accessories

www.kodak.com/go/support 6 2 Taking pictures/videos 1 The camera turns on in Smart Capture mode. (If it's in a different mode, press the Mode button, then until the LCD displays Smart Capture mode, then press OK.

) 2 Compose the picture. Press the Shutter button halfway to focus and set exposure. If the framing marks are not focused on the desired subject, release the Shutter button and recompose the scene. 3 Press the Shutter button completely down. Taking pictures Framing marks 7 www.kodak.com/go/support

Taking pictures/videos Taking a video 1 Press the Mode button. 2 Press until the LCD displays Video then press OK. , 3 To take a video, press the Shutter button completely down, then release it. To stop recording, press and release the Shutter button again. To review and work with videos, see page 23. Reviewing the picture/video just taken After you take a picture/video, the LCD briefly displays a quickview—the picture just taken or the first frame of a video. While a picture/video is displayed, you may: Delete the current picture/video OK Play/pause a video Adjust the volume To dismiss a quickview, press the Shutter button halfway. To review pictures/videos anytime, see page 23. www.kodak.com/go/support

8 Taking pictures/videos Understanding the picture-taking icons Focus mode Self timer Exposure compensation Flash mode Capture mode Pictures/time remaining Zoom indicator Battery level Watch the battery level Don't miss out on great pictures and videos—keep your battery fully charged. Full Three quarters Half Critical AC Power Charge the battery Purchase extra batteries see page 2 www.kodak.com/go/accessories 9 www.kodak.com/go/support Taking pictures/videos Using the optical zoom 1 Use the LCD to frame your subject. 2 To zoom in, press Telephoto (T). To zoom out, press Wide Angle (W). 3 Take the picture or video.

NOTE: For focus distances, see Specifications starting on page 46. Using digital zoom Use digital zoom to get up to 5X magnification beyond optical zoom.



[You're reading an excerpt. Click here to read official KODAK](#)

[EASYSHARE M23 user guide](#)

<http://yourpdfguides.com/dref/4732916>

(Digital zoom is not available in Smart Capture mode.) Press Telephoto (T) until the slider on the LCD is at the end of the optical zoom range. Release Telephoto (T), then press it again.

NOTE: You may notice decreased image quality when using digital zoom. Adjusting LCD brightness You can adjust the LCD brightness for your environment or to conserve battery power, see page 37. www.kodak.com/go/support 10 Taking pictures/videos Using the flash Press the Flash button repeatedly until the LCD displays the desired flash mode.

Flash button Flash modes Auto Fill (Flash) Press the Menu 2 Press 3 Press button. to choose Self-timer/Burst, then press OK. to choose a Self-timer setting: A picture is taken after a 2-second delay. A picture is taken after a 10-second delay. 2 Seconds— 2 10 Seconds— 10 2 Picture Timer— 2x The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later. 4 Compose the scene. Press the Shutter button halfway, then completely down. The camera takes the picture/pictures after the delay. To take a video after a 2- or 10-second delay, use the same procedure but press the Shutter button completely down while in video mode.

Using burst Use the burst feature to take up to 3 pictures in rapid succession. You can turn on burst using a shortcut (see page 15) or these steps: 1 Press the Menu 2 Press 3 Press the Menu button. to choose Burst On. button to exit the menu. to choose Self-timer/Burst, then press 4 Compose the scene. Press the Shutter button halfway, then completely down and hold it. The camera stops taking pictures when you release the Shutter button, when picting people When you tag faces, your camera “learns” to recognize people by name. Then it matches names and faces in pictures you’ve taken and those you take in the future. 1 Press the Review button, then to find a picture that contains faces. 2 Press the Menu button.

Press to choose Tag People, then press OK. You can also access Tag People using a shortcut (see page 15). 3 Press to choose Apply Tags, then press OK. 4 Press to choose an existing name, or New Name to add a new one (see Using the keyboard, page 21), then press OK. If more than one face is detected, a name or question mark is assigned to each detected face.

To resolve an incorrect name or a question mark, press to select a face, then press OK. 5 If prompted to Update People Tags, press to choose Yes, then press OK. Other pictures are scanned and updated with the name(s) you applied here. Press to add names to other pictures. When finished, press to choose Done, then press OK.

@@Tip: Are faces not always detected? If a face is turned sideways, is too distant, or if the contrast between face and background is insufficient, then the camera might not detect the face. www.kodak.com/go/support 20 Sharing and tagging pictures Need to update a name? If you meet a new friend—James—but you already have pictures tagged with your old friend, James, you can: □ □ Tag the new James with “James Smith” and/or Update the old James to “James Monroe” button. button. Press to choose Tag People, then press OK. Here’s how: 1 Press the Review 2 Press the Menu 3 Press 4 Press to choose Modify Names List, then press OK. to choose the name you want to modify, then press OK. 5 Edit the name, press to choose OK, then press OK.

@@Tip: You can have up to 20 active names.

Using the keyboard The keyboard appears when you need to enter text. 1 Press to choose a letter, then press OK. to choose OK, then press OK. 2 When finished, press 21 www.kodak.com/go/support Sharing and tagging pictures Tagging with keywords 1 Press the Review button, then to find a picture to tag. 2 Press the Menu button. Press to choose Keyword Tag, then press OK. You can also access Keyword Tag using a shortcut (see page 15). 3 Press to choose an existing keyword, or New Keyword (see Using the keyboard, page 21) to add a new one, then press OK.

4 Press to add keywords to other pictures. When finished, press choose Done, then press OK. @@to Marking pictures/videos for emailing It’s simple to mark pictures so that they’re ready to email when you transfer them to your computer and use KODAK Software. First, create a new email address. (See Using the keyboard.

) 1 Press the Share button. Press 2 Press 3 Press to find a picture. to choose Email, then press OK. to find an email address, then press OK. , then press OK. To mark other pictures/videos with the same address, press To send the pictures/videos to more than one address, repeat step 4. @@When you transfer the marked pictures/videos to your computer, the software prompts you to send the pictures/videos. www.kodak.com/go/support 22 4 Reviewing and editing 1 Press the Review 2 Press □ □ Reviewing pictures/videos button. for previous/next picture/video. To exit, press the Review button or press the Shutter button halfway down. To view pictures/videos as thumbnails, press the Wide Angle (W) button. (For more information, see page 25.) For tips on finding your pictures/videos, see page 26.

Review □ Playing a video Press OK to play a video. Press OK to pause/resume. During playback: □ □ □ Press Press Press to adjust the volume. to play at 2X speed; press again for 4X. to reverse at 2X speed; press again for 4X. Playback speed 4X 2X 1X 2X 4X 23 www.kodak.com/go/support Reviewing and editing Deleting pictures/videos 1 Press the Review 2 Press button. for previous/next picture/video. 3 Press the Delete button.

4 Follow the screen prompts. **NOTE:** To delete protected pictures/videos, remove protection before deleting. (See Protecting pictures/videos from deletion.) Using the undo delete picture feature If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture.

Protecting pictures/videos from deletion 1 Press the Review 2 Press the Menu 3 Press button. button. to choose Protect, then press OK. 4 Press to choose Protect again, then press OK. A padlock indicates that the picture/video is protected.

Clicking OK again removes the padlock. Press to protect other pictures/videos, or press to choose Done, then press OK. □ Press the Menu button to exit the menu. **CAUTION:** Formatting internal memory or an SD or SDHC Card deletes all (including protected) pictures/videos. (Formatting internal memory also deletes email addresses and keyword tags.) www.kodak.com/go/support 24 Reviewing and editing Viewing pictures/videos in different ways Magnifying a picture 1 Press Telephoto (T) to magnify 2X–8X. 2 Press □ to view other parts of a picture. Press OK to return to 1X.

Viewing pictures/videos as thumbnails (multi-up) 1 Press the Review button. The camera shows the last picture/video that was taken. 2 Press the Wide Angle (W) button to view pictures/videos as thumbnails. (Press it again to see more, smaller thumbnails.) To view all pictures/videos, choose the All tab. To sort pictures/videos by date, people, favorites, or keywords, press and choose the appropriate tab.



You're reading an excerpt. Click here to read official KODAK EASYSHARE M23 user guide
<http://yourpdfguides.com/dref/4732916>

3 To see a single picture/video, press Telephoto (T) button. □ □ to choose it. Then press the To select multiple pictures/videos, see page 32. @@@@1 Press the Review button.

@@@@@4 Press to choose a picture or picture stack. @@Press Wide Angle (W) to see thumbnails or picture stacks. @@@@@@@@@@@@@@@@@@Press to move the crop box. When satisfied with the crop box, press OK. 4 Follow the screen prompts.

The picture is cropped. @@@@@@Press to find the previous/next picture. @@@@1 Press the Review button, then for previous/next picture. 2 Press the Menu button, then to highlight the Edit tab. Highlight PERFECT TOUCH Tech, then press OK.

The enhancement is previewed. Press to view other parts of the picture. 3 Press OK. @@Press the Shutter button halfway down to return to Capture mode. @@1 Press the Review video. @@@@Press to choose the Trim icon, then press OK. Repeat this step to choose the last frame. The video is trimmed. @@@@@@@@@@1 Press the Review button, then video. @@A 9-up picture is created.

@@Multi-select is used most effectively in Multi-Up mode (see page 25). @@2 Press OK to select pictures/videos. A check mark appears on the picture. @@the selected pictures. Selected pictures www.kodak.com/go/support 32 5 Doing more with your camera Using the menu button in picture-taking modes You can change settings to get the best results from your camera. NOTE: Some modes offer limited settings. Some settings remain until you change them; others, until you change modes or turn off the camera. For menu settings in Review, see page 29.

1 Press the Menu 2 Press □ □ button. to choose a tab: Capture/Video for the most common picture- and video-taking settings Setup for other camera settings to choose a setting, then press OK. 3 Press 4 Choose an option, then press OK. Using the capture tab (available when the camera is in a capture mode) Settings Picture Size Choose a picture resolution. Self-timer/Burst Choose Self-timer or Burst feature.

More information See Specifications, starting on page 46. Off 2 Seconds 10 Seconds 2 Picture Timer Burst On—Press the Shutter button halfway to focus and set exposure. Press the Shutter button completely down and hold it to take up to 3 pictures. 33 www.kodak.com/go/support Doing more with your camera Settings More information Exposure Compensation See Specifications, starting on page 46. Make a picture lighter or darker. (Available in Program and Panorama modes.) To access this feature with a shortcut, see page 15. ISO Speed Control the sensitivity of the camera to light. See Specifications, starting on page 46. See Specifications, starting on page 46. Long Time Exposure Choose how long the shutter stays open (normally in low-light conditions). For best results, place the camera on a tripod or steady surface. Color Mode Choose color tones.

Unavailable in Video mode. Vivid Color—For increased saturation and exaggerated color. Full Color—For rich, balanced color. Basic Color—For accurate color. Black & White—For black and white. Sepia—For a reddish-brown, antique look. www.kodak.com/go/support 34 Doing more with your camera Settings White Balance Choose your lighting condition. (Available only in Program and Panorama modes.)

) More information Auto—Automatically corrects white balance. Ideal for general picture taking. Daylight—For pictures in natural lighting. Tungsten—Corrects the orange cast of incandescent light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash. Fluorescent—Corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash. Open Shade—For pictures in shade in natural lighting. Auto—For general picture-taking. Macro—For sharpness and detail in pictures at close range.

Use available light instead of flash, if possible. The camera automatically sets the focus distance depending on the zoom position. Infinity—For distant subjects; auto-focus framing marks are unavailable. Face Priority—If faces are detected, they receive focus/exposure priority. (If faces are not detected, the camera switches to Multi-Zone.) Multi-Zone—Evaluates 5 zones to give an even picture focus. Ideal for general picture taking. Center-Zone—Evaluates the small area centered in the lens. Ideal for focusing on a precise area. Focus Mode Choose a focus distance.

Focus/Exposure Zone Choose how the camera assesses the scene for exposure and focus. AF Control (Still) Continuous AF—Because the camera is always focusing Choose an auto-focus setting. during liveview, there is no need to press the Shutter button halfway down to focus. Single AF—Focuses when the Shutter button is pressed halfway down. (This setting uses less battery power.) 35 www.kodak.com/go/support Doing more with your camera Settings Sharpness Control picture sharpness or softness. More information See Specifications, starting on page 46. Video settings (available when the camera is in a Video mode) Press Menu, , More information and OK to access settings AF Control (Video) Continuous AF—Camera is always focusing during liveview. Choose an auto-focus setting. Single AF—Camera focuses once, when the Shutter button is pressed. Self-timer Choose a Self-timer feature.

@@@@@@@High Power—Brighter LCD; uses more battery power. @@@@@@@@external device.

Reset Camera Reset settings to their default. @@@@@@CAUTION: Exit—Exits without making a change. @@@@@@View camera information. For menu settings in Review, see page 29. www.kodak.com/go/support 38 6 Install software, then share Install software, transfer pictures Install KODAK Software—so it's easy to transfer and share pictures and videos. IMPORTANT: To use the sharing and social networking features, you must install the KODAK Share Button App. For help using the software, go to www.kodak.com/go/support. Make sure the computer is connected to the Internet. When you connect the camera to the computer, the KODAK Camera Setup App automatically runs. Follow the prompts to install the KODAK Share Button App. 1 Turn off the camera.

2 Use the KODAK Camera USB Cable, Micro B / 5-Pin to connect the camera to the computer. (Use only the cable included with this camera.) 3 Turn on the camera. 4 After the software is installed, follow the prompts to transfer pictures and videos to your computer. IMPORTANT: If the installer does not run, download and install the right version for your computer's operating system: www.kodak.com/go/camerasw NOTE: You can also use a card reader to transfer pictures/videos. Get Software help Download the Share Button App www.kodak.com/go/support www.kodak.com/go/camerasw 39 www.kodak.com/go/support Install software, then share Printing pictures Direct printing with a KODAK All-in-One Printer IMPORTANT: To print using PICTBRIDGE Technology, you must change the Computer Connection setting (in the Setup menu) to Other Application (see page 37). You need a camera, a PICTBRIDGE enabled Printer, and a USB cable.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M23 user guide](http://yourpdfguides.com/dref/4732916)
<http://yourpdfguides.com/dref/4732916>

Connecting the camera to a KODAK All-in-One Printer 1 Turn off the camera and printer. 2 Connect the appropriate USB cable from the camera to the printer. Printing from a KODAK All-in-One Printer 1 Turn on the printer. Turn on the camera. The PictBridge logo is displayed, followed by the current picture and menu.

(If no pictures are found, a message is displayed.) If the menu turns off, press any button to redisplay it. If the printer sees the camera as a mass storage device, turn the camera off and then back on. 2 Choose a printing option, then press OK. Current Picture—Press to choose a picture. Tagged Pictures—If your printer is capable, print pictures that you marked for printing. Index Print—Print thumbnails of all pictures. (This option requires one or more sheets of paper.) All Pictures—Print all pictures in internal memory or on a card. NOTE: During direct printing, pictures are not permanently transferred or saved to the printer.

To transfer pictures to your computer, see page 39. Purchase cables, accessories www.kodak.com/go/accessories www.kodak.com/go/support 40 Install software, then share Disconnecting the camera from a KODAK All-in-One Printer 1 Turn off the camera and printer. 2 Disconnect the USB cable from the camera and the printer. Ordering prints online KODAK Gallery (www.kodakgallery.com) makes it easy to: Upload your pictures.

Edit, enhance, and add borders to your pictures. Store pictures, and share them with family and friends. Have prints, photo greeting cards, frames, and albums delivered to your door. Printing from an accessory SD or SDHC Card Automatically print tagged pictures when you insert your card into a printer with an SD/SDHC Card slot. See your printer user's guide for details.

Make prints at an SD/SDHC Card-capable KODAK Picture Kiosk. Go to www.kodak.com/go/picturemaker. Take the card to your local photo retailer for professional printing.

Marking your pictures for print You can mark your pictures so they are easy to print: 1 Press the Review 2 Press the Menu 3 Press 4 Press 5 Press OK. button. Press button. to find a picture. to choose Print, then press OK. to choose the number of copies. 41 www.kodak.com/go/support 7 Status Troubleshooting Solution Make sure the battery is installed correctly (see page 1) and Camera problems Camera does not turn on Camera does not turn off Camera buttons and controls do not function LCD is too dark. charged (see page 2).

Charge the Li-Ion battery whenever necessary. Adjust the LCD Brightness setting (see page 37). Pictures remaining Continue taking pictures. The camera is operating normally. number does not (The camera estimates the number of pictures remaining after each decrease after taking a picture is taken, based on picture size and content.) picture Flash does not fire Check the flash setting, and change as needed (see page 11). NOTE: The flash does not fire in all modes. Memory card is almost Transfer the pictures to the computer (see page 39). or entirely full Delete pictures from the card (see page 24) or insert a new card. Battery life is short Make sure the correct battery type is installed (see page 50).

Wipe the battery's contacts with a clean, dry cloth before inserting it in the camera. Insert a new/charged battery (see page 1). Charge the Li-Ion battery whenever necessary. Limit the time you review pictures/videos on the camera LCD. Purchase a spare battery at www.kodak.com/go/accessories.

www.kodak.com/go/support 42 Troubleshooting Status Solution Memory card not Card may be corrupted. Format the card in the camera (see page 38). recognized or camera freezes with card Use another memory card. Only SD or SDHC Cards are supported. You cannot take a picture Turn the camera off, then on again. Depress the Shutter button all the way (see page 7). Insert a new/charged battery (see page 1). Charge the Li-Ion battery whenever necessary. Memory is full. Transfer pictures to the computer (see page 39), delete pictures (see page 24), or insert another card. Computer/connectivity problems Status Slide Show does not run on an external display device Computer does not communicate with the camera Solution Adjust the camera Video Out setting to NTSC or PAL (see page 37).

Make sure the external device settings are correct. (See the device's user guide.) Turn off the camera, then turn it back on. Make sure the battery is installed correctly (see page 1) and charged (see page 2). Make sure the KODAK Camera USB Cable, Micro B / 5-Pin is connected to the camera and the computer (see page 39). Then turn on the camera. See KODAK Software Help at www.kodak.com/go/camerasw. Direct printing (PICTBRIDGE enabled printer) problems Status Cannot print to a PICTBRIDGE Printer Solution In the Setup menu, change the Computer Connection setting to Other Application (see page 37).

43 www.kodak.com/go/support Troubleshooting Picture quality problems Status Picture is not clear Solution To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. Clean the lens (see page 48).

Make sure the camera is in Macro mode only if you are very close to your subject (see page 35). Place the camera on a flat, steady surface or use a tripod (especially in high-zoom settings or in low light). Use a larger picture size (see page 33). If you're manually adjusting the ISO speed, realize that high ISO setting may cause grainy pictures (see page 34). Picture is too dark Reposition the camera for more available light.

Use Fill flash (see page 11) in Program mode, Backlight in SCN mode, or change your position so light is not behind the subject. Move so that the distance between you and the subject is within the effective flash range. (See Specifications, page 46.) To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. In Program mode, increase the Exposure Compensation (see page 34). Picture is too light Reposition the camera to reduce the amount of available light. Turn the flash off (see page 11). Move so that the distance between you and the subject is within the effective flash range. (See Specifications, page 46).

) To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. In Program mode, decrease the Exposure Compensation (see page 34). www.kodak.com/go/support 44 Troubleshooting Getting help on the Web Camera Get support for your product (FAQs, troubleshooting www.kodak.com/go/m23support information, arrange for repairs, etc.) Purchase camera accessories Register your camera Chat, email, write, or phone Kodak (Chat not available in all languages) Get information on KODAK All-in-One Printers www.kodak.com.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M23 user guide](http://yourpdfguides.com/dref/4732916)
<http://yourpdfguides.com/dref/4732916>

kodak.

www.kodak.com/go/accessories www.kodak.com/go/register www.kodak.com/go/contact www.kodak.com/go/inkjet

Download the latest camera firmware and software www.kodak.com/go/m23downloads 45 www.kodak.com/go/support 8 Appendix

Specifications CCD—1/2.3-type Effective pixels—14 MP (4352 x 3264) LCD—2.7 in. (6.9 cm) LCD; 230K pixels; 4:3 aspect ratio Image storage—Accessory SD/SDHC Card (The SD logo is a trademark of the SD Card Association.) Maximum supported card size: 32 GB Internal storage capacity—32 MB internal memory (18 MB available for image storage. 1 MB equals one million bytes.) Taking lens—5X optical zoom; f/3.5–f/5.0; 35 mm equivalent: 27–108 mm Lens protection—Built-in Digital zoom—5X continuous Focus system—TTL-AF (through-the-lens auto focus); Multi-Zone, Center-Zone, Face Priority.

Working range: 0.5 m (1.6 ft)–infinity @ wide, normal 1.0 m (3.3 ft)–infinity @ telephoto, normal 5–80 cm (2–31.5 in.) @ wide, Macro mode 1–1.5 m (3.3–4.9 ft) @ telephoto, Macro mode Auto focus control—Continuous and Single AF Face detection—Yes Face recognition—Yes Shutter speed—1/4–1/1400 seconds Long time exposure—0.

5–8 seconds ISO speed—Up to 1000 at full resolution www.kodak.com/go/support 46 Appendix Program mode: Auto 80–400; manual 80, 100, 200, 400, 800, 1000 Exposure metering—TTL-AE; Face Priority, Multi-Zone, Center-Zone Exposure compensation—+/-2.0 EV with 1/3 EV step White Balance—Auto, Daylight, Tungsten, Fluorescent, Open Shade Electronic Flash—Auto flash; Auto, Fill, Red Eye, Off; Guide No. 5.

8; working range @ ISO 400 with red-eye reduction off: 0.3–3.0 m (1–9.8 ft) @ wide; 0.5–2.

0 m (1.6–6.6 ft) @ telephoto Self-timer mode—2 seconds, 10 seconds, 2 picture timer Burst mode—Maximum 3 pictures @ 1.5 fps Capture modes—Smart Capture, Scene modes (see page 13), Program, Video Image file format—Still: EXIF 2.21 (JPEG compression); file organization DCF Video: .AVI (CODEC Motion JPEG); audio: -Law) Picture size—14 MP (4:3): 4288 x 3216 pixels 12 MP (3:2): 4288 x 2848 pixels 10 MP (16:9): 4288 x 2416 pixels 6 MP (4:3): 2880 x 2160 pixels 3 MP (4:3): 2048 x 1536 pixels Color modes—Vivid Color, Full Color, Basic Color, Black & White, Sepia Sharpness modes—Sharp, Normal, Soft Video capture—2 GB maximum; VGA (640 x 480 @ 25 fps) Communication with computer—USB 2.0 high speed (PIMA 15740 protocol); via KODAK Camera USB Cable, Micro B / 5-Pin Video output—NTSC or PAL Microphone—Yes Speaker—Yes PICTBRIDGE support—Yes 47 www.kodak.com/go/support Appendix Power—KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7006; 5V AC-to-USB battery charging; USB charging via computer Tripod mount—1/4 inch Size—94.8 x 56.

4 x 23.2 mm (3.7 x 2.2 x 0.9 in.) @ power off Weight—160 g (5.6 oz) including card and battery Operating temperature—0–40° C (32–104° F) Care and maintenance □ □ If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera. Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue.

Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces. Service agreements may be available in your country. Contact a dealer of KODAK Products for more information. For digital camera disposal or recycling information, contact your local authorities.

In the US, go to the Electronics Industry Alliance site at www.eiae.org or Kodak at www.kodak.com/go/support.

□ □ Upgrading your software and firmware Download the latest versions of KODAK Software and the camera firmware (the software that runs on the camera). Go to www.kodak.com/go/m23downloads. www.kodak.com/go/support 48 Appendix Storage capacities The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD Card capacities, go to www.kodak.com/go/SDcapacities.

Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos.

Important safety instructions CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support. □ □ □ □ □ □ □ □ The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to www.kodak.com/go/accessories.

Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions. If using this product in an airplane, observe all instructions of the airline. When removing the battery, allow it to cool; it may be hot.

Follow all warnings and instructions supplied by the battery manufacturer. Use only batteries approved for this product to avoid risk of explosion. Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.

Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature. www.kodak.com/go/support 49 Appendix □ Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support. In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support. Go to www.kodak.com/go/reach for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No.

1907/2006 (REACH). Dispose of batteries according to local and national regulations. Go to www.kodak.com/go/kes. Do not charge non-rechargeable batteries. □ □ □ □ Battery replacement, battery life KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7006 (710 mAh): 200 pictures per charge. Battery life per CIPA testing method. (Approx. number of pictures in Smart Capture mode, using an SD Card.)

) Actual life may vary based on usage. Extending battery life □ □ □ □ Use power-saving features, such as LCD Brightness (see page 37). Charge the battery whenever necessary. Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading the battery in the camera.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M23 user guide](http://yourpdfguides.com/dref/4732916)
<http://yourpdfguides.com/dref/4732916>

Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable. www.kodak.com/go/support

50 Appendix Limited warranty Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair. @@@@If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. @@@@Kodak makes no other express or implied warranty for this product. @The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause.

Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. The limitations and exclusions of liability set forth herein apply to both Kodak and its suppliers. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction. Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. Regulatory compliance FCC compliance and advisory This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful www.kodak.com/go/support

52 Appendix interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. The KODAK High Performance USB AC Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Waste Electrical and Electronic Equipment/Battery disposal In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to www.kodak.com/go/recycle.

Product weight: 160 g (5.6 oz) including card and battery Canadian DOC statement DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003. Observation des normes—Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. 53 www.kodak.com/go/support Appendix CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Australian C-Tick N137 VCCI Class B ITE China RoHS www.kodak.com.

www.kodak.com/go/support 54 Appendix Russian GOST-R Eastman Kodak Company Rochester, NY 14650 Korean Li-Ion Regulatory 55 www.kodak.com/go/support Appendix Korean Class B ITE www.kodak.com/go/support 56 Index A A/V out, 28 about this camera, 38 accessories battery, 50 buying, 45 SD/SDHC Card, 6 add keywords, names, 21 AF control (Still), 35 AF control (video), 36 AF zone, 35 auto enhancement, 30 focus control, 35, 36 auto focus (AF) zone, 35 B backlight, 13 battery charging, 2 expected life, 50 icons, 9 loading, 1 purchase, 27 status, 27 types, 50 bright, 13 brightness, LCD, 10 burst, 16 button delete, 8 57 telephoto/zoom, 10 C cable audio/video, 28 camera sounds, 37 Canadian compliance, 53 care and maintenance, 48 charging battery icon, 9 USB, 4 charging the battery, 2 children, 13 clock, setting, 5 color mode, 34 computer connect camera, 39 transfer to, 39 connector, USB / A/V, 28 copy pictures to computer, 39 cropping pictures, 29 customize camera, 36 1 D date setting, 5 deleting during quickview, 8 from internal memory, 24 from SD/SDHC Card, 24 protecting pictures, videos, 24 digital zoom, 10 www.kodak.com/go/support Index display, brightness, 10 disposal, recycling, 48 download KODAK Software, 39 download pictures, 39 E edit videos, 31 emailing pictures, videos, 22 expected battery life, 50 exposure long time, 34, 36 exposure compensation, 34 external video device viewing pictures, videos, 28 F faces, tagging, recognition, 20 FCC compliance, 52 find pictures, 26 fireworks, 13 firmware, upgrading, 48 flash, using, 11 flower, 13 focus mode, 35 format, 38 framing marks, 7 G guidelines, battery, 50 H help Web links, 42 high ISO, 13 www.kodak.com.



www.kodak.com/go/support 54 Appendix Russian GOST-R Eastman Kodak Company Rochester, NY 14650 Korean Li-Ion Regulatory 55 www.kodak.com/go/support Appendix Korean Class B ITE www.kodak.com/go/support 56 Index A A/V out, 28 about this camera, 38 accessories battery, 50 buying, 45 SD/SDHC Card, 6 add keywords, names, 21 AF control (Still), 35 AF control (video), 36 AF zone, 35 auto enhancement, 30 focus control, 35, 36 auto focus (AF) zone, 35 B backlight, 13 battery charging, 2 expected life, 50 icons, 9 loading, 1 purchase, 27 status, 27 types, 50 bright, 13 brightness, LCD, 10 burst, 16 button delete, 8 57 telephoto/zoom, 10 C cable audio/video, 28 camera sounds, 37 Canadian compliance, 53 care and maintenance, 48 charging battery icon, 9 USB, 4 charging the battery, 2 children, 13 clock, setting, 5 color mode, 34 computer connect camera, 39 transfer to, 39 connector, USB / A/V, 28 copy pictures to computer, 39 cropping pictures, 29 customize camera, 36 1 D date setting, 5 deleting during quickview, 8 from internal memory, 24 from SD/SDHC Card, 24 protecting pictures, videos, 24 digital zoom, 10 www.kodak.com/go/support Index display, brightness, 10 disposal, recycling, 48 download KODAK Software, 39 download pictures, 39 E edit videos, 31 emailing pictures, videos, 22 expected battery life, 50 exposure long time, 34, 36 exposure compensation, 34 external video device viewing pictures, videos, 28 F faces, tagging, recognition, 20 FCC compliance, 52 find pictures, 26 fireworks, 13 firmware, upgrading, 48 flash, using, 11 flower, 13 focus mode, 35 format, 38 framing marks, 7 G guidelines, battery, 50 H help Web links, 42 high ISO, 13 www.kodak.com.

www.kodak.com/go/support 54 Appendix Russian GOST-R Eastman Kodak Company Rochester, NY 14650 Korean Li-Ion Regulatory 55 www.kodak.com/go/support Appendix Korean Class B ITE www.kodak.com/go/support 56 Index A A/V out, 28 about this camera, 38 accessories battery, 50 buying, 45 SD/SDHC Card, 6 add keywords, names, 21 AF control (Still), 35 AF control (video), 36 AF zone, 35 auto enhancement, 30 focus control, 35, 36 auto focus (AF) zone, 35 B backlight, 13 battery charging, 2 expected life, 50 icons, 9 loading, 1 purchase, 27 status, 27 types, 50 bright, 13 brightness, LCD, 10 burst, 16 button delete, 8 57 telephoto/zoom, 10 C cable audio/video, 28 camera sounds, 37 Canadian compliance, 53 care and maintenance, 48 charging battery icon, 9 USB, 4 charging the battery, 2 children, 13 clock, setting, 5 color mode, 34 computer connect camera, 39 transfer to, 39 connector, USB / A/V, 28 copy pictures to computer, 39 cropping pictures, 29 customize camera, 36 1 D date setting, 5 deleting during quickview, 8 from internal memory, 24 from SD/SDHC Card, 24 protecting pictures, videos, 24 digital zoom, 10 www.kodak.com/go/support Index display, brightness, 10 disposal, recycling, 48 download KODAK Software, 39 download pictures, 39 E edit videos, 31 emailing pictures, videos, 22 expected battery life, 50 exposure long time, 34, 36 exposure compensation, 34 external video device viewing pictures, videos, 28 F faces, tagging, recognition, 20 FCC compliance, 52 find pictures, 26 fireworks, 13 firmware, upgrading, 48 flash, using, 11 flower, 13 focus mode, 35 format, 38 framing marks, 7 G guidelines, battery, 50 H help Web links, 42 high ISO, 13 www.kodak.com.

www.kodak.com/go/support 54 Appendix Russian GOST-R Eastman Kodak Company Rochester, NY 14650 Korean Li-Ion Regulatory 55 www.kodak.com/go/support Appendix Korean Class B ITE www.kodak.com/go/support 56 Index A A/V out, 28 about this camera, 38 accessories battery, 50 buying, 45 SD/SDHC Card, 6 add keywords, names, 21 AF control (Still), 35 AF control (video), 36 AF zone, 35 auto enhancement, 30 focus control, 35, 36 auto focus (AF) zone, 35 B backlight, 13 battery charging, 2 expected life, 50 icons, 9 loading, 1 purchase, 27 status, 27 types, 50 bright, 13 brightness, LCD, 10 burst, 16 button delete, 8 57 telephoto/zoom, 10 C cable audio/video, 28 camera sounds, 37 Canadian compliance, 53 care and maintenance, 48 charging battery icon, 9 USB, 4 charging the battery, 2 children, 13 clock, setting, 5 color mode, 34 computer connect camera, 39 transfer to, 39 connector, USB / A/V, 28 copy pictures to computer, 39 cropping pictures, 29 customize camera, 36 1 D date setting, 5 deleting during quickview, 8 from internal memory, 24 from SD/SDHC Card, 24 protecting pictures, videos, 24 digital zoom, 10 www.kodak.com/go/support Index display, brightness, 10 disposal, recycling, 48 download KODAK Software, 39 download pictures, 39 E edit videos, 31 emailing pictures, videos, 22 expected battery life, 50 exposure long time, 34, 36 exposure compensation, 34 external video device viewing pictures, videos, 28 F faces, tagging, recognition, 20 FCC compliance, 52 find pictures, 26 fireworks, 13 firmware, upgrading, 48 flash, using, 11 flower, 13 focus mode, 35 format, 38 framing marks, 7 G guidelines, battery, 50 H help Web links, 42 high ISO, 13 www.kodak.com.

www.kodak.com/go/support 54 Appendix Russian GOST-R Eastman Kodak Company Rochester, NY 14650 Korean Li-Ion Regulatory 55 www.kodak.com/go/support Appendix Korean Class B ITE www.kodak.com/go/support 56 Index A A/V out, 28 about this camera, 38 accessories battery, 50 buying, 45 SD/SDHC Card, 6 add keywords, names, 21 AF control (Still), 35 AF control (video), 36 AF zone, 35 auto enhancement, 30 focus control, 35, 36 auto focus (AF) zone, 35 B backlight, 13 battery charging, 2 expected life, 50 icons, 9 loading, 1 purchase, 27 status, 27 types, 50 bright, 13 brightness, LCD, 10 burst, 16 button delete, 8 57 telephoto/zoom, 10 C cable audio/video, 28 camera sounds, 37 Canadian compliance, 53 care and maintenance, 48 charging battery icon, 9 USB, 4 charging the battery, 2 children, 13 clock, setting, 5 color mode, 34 computer connect camera, 39 transfer to, 39 connector, USB / A/V, 28 copy pictures to computer, 39 cropping pictures, 29 customize camera, 36 1 D date setting, 5 deleting during quickview, 8 from internal memory, 24 from SD/SDHC Card, 24 protecting pictures, videos, 24 digital zoom, 10 www.kodak.com/go/support Index display, brightness, 10 disposal, recycling, 48 download KODAK Software, 39 download pictures, 39 E edit videos, 31 emailing pictures, videos, 22 expected battery life, 50 exposure long time, 34, 36 exposure compensation, 34 external video device viewing pictures, videos, 28 F faces, tagging, recognition, 20 FCC compliance, 52 find pictures, 26 fireworks, 13 firmware, upgrading, 48 flash, using, 11 flower, 13 focus mode, 35 format, 38 framing marks, 7 G guidelines, battery, 50 H help Web links, 42 high ISO, 13 www.kodak.com.

kodak.com/go/support I icons battery, 9 icons, modes, 12 installing battery, 1 SD/SDHC Card, 6 ISO speed, 34 K keyboard, 21 keywords, 22 KODAK EASYSHARE Software upgrading, 48 KODAK PERFECT TOUCH Technology, 30 KODAK Share Button App, 39 KODAK Software, download, 39 Kodak Web sites, 42 L language, 36, 37 LCD brightness, 37 reviewing pictures, 23 reviewing videos, 23 LCD brightness, 10, 37 lens, i cleaning lens, 48 loading battery, 1 SD/SDHC Card, 6 locate pictures, 26 long time exposure, 34, 36 58 Index M magnify a picture, 25 maintenance, camera, 48 make picture from video, 31 making a video action print, action print, video action print, 32 marking for email, 22 memory inserting card, 6 menu settings, 33 microphone, i modes, 12 backlight, 13 bright, 13 children, 13 fireworks, 13 flower, 13 high ISO, 13 night landscape, 13 night portrait, 13 scene (SCN), 13 self portrait, 13 modes, capture smart capture, 12 multiple selections, 32 multi-up, 25 N names, tagging, 20 night landscape, 13 night portrait, 13 O online prints, ordering, 41 optical zoom, 10 P panoramic pictures, 17 people, tagging, 20 PERFECT TOUCH Technology, 30 PICTBRIDGE enabled printer, 40 picture size, 33, 34 pictures cropping, 29 emailing marked, 22 KODAK PERFECT TOUCH, 30 marking, 41 protecting, 24 review icons, 27 reviewing, 23 taking, modes, 12 transfer to computer, 39 pictures/video deleting, 24 playing a video, 23 power camera, 5 power icon, 9 printing from a card, 41 optimizing printer, 42 order online, 41 PICTBRIDGE, 40 tagged pictures, 41 protecting pictures, videos, 24 59 www.kodak.

com/go/support Index Q quickview, using, 8 R recognizing faces, 20 recording light, i recycling, disposal, 48 regulatory information, 52 repair, 45 reset camera, 37 reviewing pictures/video as you take them, 8 deleting, 24 LCD, 23 protecting, 24 S safety, 49 scene modes (SCN), 13 SD/SDHC Card inserting, 6 printing from, 41 search pictures, 26 select multiple pictures/videos, 32 self portrait, 13 self-timer, 16 setting AF zone, 35 auto-focus, 35, 36 camera sounds, 37 color mode, 34 date and time, 5 ISO, 34 language, 36, 37 www.kodak.com/go/support LCD brightness, 37 long time exposure, 34, 36 picture size, 33, 34 picture-taking mode, 12 self-timer, 16 sharpness, 36 video out, 37 white balance, 35 setting up the camera, 1 setup menu, 36 Share button, 36 Share Button

App, 39 sharpness, 36 shutter problems, 43 self-timer delay, 16 smart capture, 12 smart display, 37 smart find, 26 software upgrading, 48 software downloader, 39 sounds, 37 specifications, camera, 46 strap, 1 T tagging keywords, 22 people, faces, 20 taking pictures, videos, 7 television, slide show, 28 time, setting, 5 timer, shutter delay, 16 60 Index tips battery guidelines, 50 care & maintenance, 48 transfer pictures, 39 trash can, deleting, 8 trimming a video, 31 troubleshooting, 42 turning camera on and off, 5 typing, 21 U undelete, undo, 24 upgrading software, firmware, 48 URLs, Kodak Web sites, 42 USB transfer pictures, 39 USB charging, 4 V VCCI compliance, 54 video edit, 31 emailing marked, 22 out, 37 playback, 23 protecting, 24 review icons, 27 transfer to computer, 39 viewing, 23 video out, 37 viewing by multi-up, 25 picture, after taking, 8, 23 W warranty, 51 white balance, 35 Z zoom digital, 10 optical, 10 61 www.kodak.com/go/support .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M23 user guide](http://yourpdfguides.com/dref/4732916)
<http://yourpdfguides.com/dref/4732916>