



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE M341. You'll find the answers to all your questions on the KODAK EASYSHARE M341 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KODAK EASYSHARE M341**  
**User guide KODAK EASYSHARE M341**  
**Operating instructions KODAK EASYSHARE M341**  
**Instructions for use KODAK EASYSHARE M341**  
**Instruction manual KODAK EASYSHARE M341**

---

## **KODAK EASYSHARE M341 Digital Camera**

**User guide**



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M341 user guide](http://yourpdfguides.com/dref/3208393)  
<http://yourpdfguides.com/dref/3208393>

**Manual abstract:**

Then return to this user guide. Loading and charging the battery 1 Turn off the camera. 2 Connect KODAK USB Cable, Model U-8 and adapter. Battery Charging light: · Blinking: charging · Steady: finished charging (approx. 3 hours) Notched corner Charge Li-Ion batteries frequently, even if power remains. More charging options in the Extended user guide [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 1 ENGLISH ENGLISH Using an (accessory) SD or SDHC Card Your camera has internal memory.

You can purchase an SD or SDHC Card to store more pictures and videos. (Maximum supported card size is 32 GB.) CAUTION: A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card when the camera is on may damage the pictures, the card, or the camera. 1 Turn off the camera.

2 Insert or remove the optional card. 3 Turn on the camera. Purchase accessories [www.kodak.com/go/m341accessories](http://www.kodak.com/go/m341accessories) 2 [www.kodak.com/go/easyssharecenter](http://www.kodak.com/go/easyssharecenter) Turning on the camera Press the Power button. Setting the language and date/time Language: to change. OK to accept. Date/Time: At the prompt, press OK. to change current field. for previous/next field. OK to accept. [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) OK (press) See the Extended user guide [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 3 ENGLISH ENGLISH 4 Taking a picture 1 Turn the Mode dial to Smart Capture . 2 Press the Shutter button halfway to lock the focus. When the framing marks turn green, press the Shutter button completely down.

Framing marks See the Extended user guide [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) Learn more about Smart Capture and other modes see page 11 [www.kodak.com/go/easyssharecenter](http://www.kodak.com/go/easyssharecenter) Reviewing pictures/videos Press the Review button to enter/exit Review.

View previous/next picture/video. @ @ 2 Connect a KODAK USB Cable, Model U-8. @ @ It describes every setting for every menu choice. @ @ @ @ 2 Press the Info button. Scroll through a Help topic See the Extended user guide [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 7 ENGLISH ENGLISH 8 Keep learning about your camera! Congratulations! You have: · set up your camera · taken pictures · transferred pictures to your computer Keep learning! Finish reading this book, so you can take and share your best pictures! Visit [www.kodak.com](http://www.kodak.com).

[www.kodak.com/go/m341support](http://www.kodak.com/go/m341support): · the extended user guide · interactive troubleshooting and repairs · interactive tutorials · FAQs · downloads · accessories · printing information · product registration [www.kodak.com/go/easyssharecenter](http://www.kodak.com/go/easyssharecenter) Front view 1 2 3 4 5 9 8 6 7 1 2 3 4 5 Shutter button Mode dial Power button Flash button Self-timer light 6 7 8 9 Lens/Lens cover DC-In (5V) Flash Microphone [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 9 ENGLISH ENGLISH Back view 1 2 3 4 5 6 11 10 9 optional 7 8 1 2 3 4 5 6 LCD Ready/Battery Charging light Delete, Menu, Info, Review buttons Zoom (Telephoto/Wide Angle) button USB/AV Out OK button 7 8 9 Strap post Share button Battery, SD/SDHC Card compartment 10 Speaker 11 Tripod socket 10 [www.kodak.com/go/easyssharecenter](http://www.kodak.com/go/easyssharecenter) 1 Doing more with your camera Mode dial Turn the Mode dial to the mode that best suits your subjects and surroundings. Use this mode For Smart Capture General picture taking--it offers excellent image quality and ease of use. Program Advanced picture taking--allows access to manual settings. Blur Reduction Reducing blur caused by camera shake or subject motion.

Sport Panorama Scene Video Action pictures. "Stitching" up to 3 pictures into a panoramic scene. Point-and-shoot simplicity when taking pictures in practically any situation. Capturing video with sound. See the Extended user guide [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 11 Doing more with your camera Using the flash Press the flash button repeatedly to scroll through flash modes. The current flash mode is shown in the LCD status area.

Flash modes Auto Fill (Flash On) Flash fires When the lighting conditions require it. Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: (Not available in Smart Capture mode.) Preflash Red Eye A preflash fires, shrinking the eye pupil, before the picture is taken.

Your camera can correct red-eye using 2 methods. To choose A preflash does not fire; the camera corrects red eye. Digital Correction a red eye setting, see the Setup menu. Off Never See the Extended user guide [www.kodak.com](http://www.kodak.com).

[www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 12 [www.kodak.com/go/easyssharecenter](http://www.kodak.com/go/easyssharecenter) Doing more with your camera Using the optical zoom 1 Use the LCD to frame your subject. 2 To zoom in, press Telephoto (T). To zoom out, press Wide Angle (W). 3 Take the picture. Using digital zoom Use digital zoom to get up to 5X magnification beyond optical zoom. (Digital zoom is not available in Smart Capture mode.) Press Telephoto (T) until the slider is at the end of the optical zoom range. Release Telephoto (T), then press it again.

NOTE: You may notice decreased image quality when using digital zoom. @ @ @ @ NOTE: Some modes offer limited settings. @ @ 1 Press the Menu 2 Press 3 Press button. to highlight the Capture/Video or Setup tab. @ @ IMPORTANT: Your camera offers a built-in Help system. @ @ and each begins with a picture.

How do you tell yours? @ @ @ @ @ Take another picture. Continue taking pictures. @ @ @ @ @ Refer servicing to qualified service personnel. @ @ @ @ If the LCD breaks, do not touch the glass or liquid.

Contact Kodak customer support. @ @ For approved accessories, visit [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories). @ @ Contact your computer manufacturer if you have questions.

@ @ When removing the battery, allow it to cool; it may be hot. @ @ Use only batteries approved for this product to avoid risk of explosion. Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.

Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature. Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support. In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support. Dispose of batteries according to local and national regulations. Visit [www.kodak.com/go/kes](http://www.kodak.com/go/kes). Do not charge non-rechargeable batteries.

For more information, see [www.kodak.com/go/batteries](http://www.kodak.com/go/batteries). [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 19 Appendix Limited warranty Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your Kodak Product packaging.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M341 user guide](#)



Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair. Limited warranty coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased.

@@@@@@@If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials ensure compliance with FCC regulation. CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/E. www.

[kodak.com/go/m341support](http://kodak.com/go/m341support) 21 Appendix Canadian DOC statement DOC Class B Compliance--This Class B digital apparatus complies with Canadian ICES-003. Observation des normes Classe B--Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Australian C-Tick N137 VCCI Class B ITE Korean Class B ITE 22 [www.kodak.com](http://www.kodak.com).

[com/go/easysharecenter](http://com/go/easysharecenter) Appendix China RoHS Eastman Kodak Company Rochester, New York 14650 © Kodak, 2009 Kodak and EasyShare are trademarks of Eastman Kodak Company. 4H5437\_en [www.kodak.com/go/m341support](http://www.kodak.com/go/m341support) 23 .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE M341 user guide](http://www.kodak.com/go/m341support)  
<http://yourpdfguides.com/dref/3208393>