



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE P76 FRAME. You'll find the answers to all your questions on the KODAK EASYSHARE P76 FRAME in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK EASYSHARE P76 FRAME
User guide KODAK EASYSHARE P76 FRAME
Operating instructions KODAK EASYSHARE P76 FRAME
Instructions for use KODAK EASYSHARE P76 FRAME
Instruction manual KODAK EASYSHARE P76 FRAME

KODAK EASYSHARE P76 Digital Frame



Extended user guide

www.kodak.com

For help with your digital frame, www.kodak.com/go/digitalframesupport



[You're reading an excerpt. Click here to read official KODAK EASYSHARE P76 FRAME user guide](http://yourpdfguides.com/dref/4732912)
<http://yourpdfguides.com/dref/4732912>

Manual abstract:

SD logo is a trademark used under license by Kodak. @@ Press to highlight an icon, then press OK to select it. Icon Description Play—start playing a slide show. Pause—resume a paused slide show (see page 18). @@@@ Copy—copy pictures to the frame, appears when a memory card or USB device is inserted (see page 8). Delete—delete pictures from the frame, appears when no memory card or USB device is inserted (see page 18). Picture Finder—play similar pictures, those taken on the same day as the picture on the screen (see page 17). Transitions—choose a transition style between pictures, and how long each picture is displayed (see page 24). @@@@ @@@@ 1 Attaching the power cable ..

.....
.....

.....
.....
.....

.....
.....
.....

.... 2 Navigation buttons

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 3 Setting your language

.....
.....
.....

.....
.....
.....

.... 4 Setting the time, date, and on/off times.

.....
.....

.....
.....
.....

. 5 Turning your frame on and off

.....
.....

.....
.....
.....

.....

.....
.....

.. 5 Inserting a memory card.....

.....
.....
.....

.....
.....
.....

.. 6 Inserting a USB device...

.....
.....

.....
.....
.....

.....
.....
.....

..... 7 Copying pictures to your frame.....

.....
.....
.....

.....
.....
.....

.....
.....

8 2 Viewing pictures

.....

.....
.....
.....

.....
.....
.....

.....10 Viewing from internal memory...

.....
.....
.....

.....
.....
.....

.....
.....

. 10 Viewing from a memory card or USB device....

.....
.....
.....
.....
.....

..... 10 Searching for and viewing your pictures.....

.....
.....
.....

.....
.....
.....
.....

11 Changing viewing modes

.....
.....
.....

.....
.....
.....
.....

.....
.....

. 16 Picture Finder—auto-play similar pictures....

.....

.....
.....
.....
.....

..... 17 Pausing play on a single picture..

.....
.....
.....

.....
.....
.....
.....

.....
.....

18 Deleting pictures from your frame.....

.....

.....
.....
.....
.....

.....
.....

.... 18.3 Changing settings and more .

.....

.....
.....
.....
.....

.....
.....
.....
..19 Changing frame settings

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 19 Settings .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 20 Setting the time, date, and on/off times.....

.....
.....
.....
.....

. 22 Setting transitions between pictures

.....
.....
.....
.....
.....

. 24 Setting viewing modes

.....
.....
.....
.....
.....
.....
.....
.....

..... 25 Upgrading your firmware (recommended)

.....

.....
.....

..... 26 Changing your frame orientation ..

.....
.....
.....
.....
.....
.....
.....
.....

... 27 Hanging your frame on the wall

.....
.....
.....
.....
.....
.....

..... 27 www.kodak.com/go/support iii Table of contents Maintaining your frame...

.....
.....
.....
.....
.....
.....
.....
.....

28 Learning more about your frame.....

.....
.....
.....
.....
.....

..... 28 4 Troubleshooting and support

.....
.....
.....
.....
.....

.....29 Picture frame problems ..

.....
.....
.....

.....
.....
.....
.....

..... 29 *Screen messages...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 30 *Re-setting your frame after losing power*

.....
.....
.....
.....

.....
.....
.....
.....

..... 31 *5 Appendix .*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 32 *Digital frame specifications.....*

.....
.....
.....
.....

.....
.....
.....
.....

..... 32 *Important safety instructions*

.....
.....
.....
.....

.....
.....
.....

.. 33 Additional care and maintenance ...

.....
.....
.....
.....
.....

. 34 Limited warranty

.....
.....
.....
.....
.....

34 Regulatory compliance and advisory

.....
.....
.....
.....
.....

36 iv www.kodak.com/go/support 1 Getting started Welcome to your KODAK EASYSHARE Digital Frame. Viewing and sharing your pictures couldn't be simpler! Attaching the stand Attach the stand Push the notched end of the stand into the back of the frame until it snaps into place. When displayed with the stand extended, the frame rests at a 75° angle. Storing the stand Remove the stand Pull the stand to remove it from the back of the frame. Store the stand Snap the stand into the holder. www.kodak.com/go/support 1 Getting started Attaching the power cable CAUTION: Do not use this power cable with other devices, including digital cameras.

If more than one plug is included, use the plug for your type of power outlet. □ □ The frame automatically turns on when you plug it in for the first time. If the frame loses power or you unplug it for more than a minute, you are prompted to reset the time and date when power is restored or when you plug it back in. 2 www.kodak.com/go/support Getting started Navigation buttons Mode 4-way/OK Back Buttons Press to: Navigate left or view the previous picture Navigate right or view the next picture Navigate up or highlight the previous screen item Navigate down or highlight the next screen item Select or accept the highlighted screen item Cycle through the available viewing modes Return to the previous screen www.kodak.com/go/support 3 Getting started Setting your language The language screen appears the first time you turn on your frame. Press to highlight your language, then press OK. To change the language at a later time: 1 Press OK to pause a slideshow and display the control panel icons.

2 Press 3 Press 4 Press to highlight (Settings), then press OK. to highlight Language, then press OK. to highlight your language, then press OK. 4 www.kodak.com.

www.kodak.com/go/support Getting started Setting the time, date, and on/off times The first time you turn on your frame, the Time, Date, and On/Off screens appear automatically after you select your language. To set the current date and time: Press to change values. Press to move to the next entry. When you've entered all the settings, press OK. For details on setting the 12- or 24-hour clock, current time, date, and on/off times, see page 22.

Turning your frame on and off The frame automatically turns on when it is plugged in for the first time. Power button—to turn the frame on or off, press and hold (for about 2 seconds), then release. www.kodak.com/go/support 5 Getting started Inserting a memory card To insert a card, push it firmly into the slot. To remove a card, pull it out of the slot. MS* xD MMC (MULTIMEDIA Card) SD/SDHC (SECURE DIGITAL) IMPORTANT: *If you are using a micro or mini memory card (MS PRO or MS PRO Duo), insert it into an adapter first or it could get stuck in the display card slot. Memory cards and adapters are sold separately. 6 www.kodak.com.

www.kodak.com/go/support Getting started Inserting a USB device Supported USB devices include flash drives and card readers. USB devices are sold separately.

www.kodak.com/go/support 7 Getting started Copying pictures to your frame Copy pictures to your frame's internal memory from a memory card or USB device. Each time you insert a card or USB device, press OK and follow the copy directions. CAUTION: Do not remove a card or disconnect a device while copying. Your card, pictures, or device could be damaged. @@@@The pictures start playing. @@@@4 Press OK.

The slide show plays while pictures are being copied. @@@@3 Remove the card or USB device from your computer, and insert it into the frame. 4 Follow the copy directions on page 8 (highlight All pictures, then press OK). Copying pictures from a digital camera 1 Remove the memory card (containing pictures) from your camera, and insert it into the frame. 2 Follow the copy directions on page 8.

www.kodak.com/go/support 9 2 □ □ Viewing pictures View pictures from your frame's internal memory or any connected picture source (memory card, USB device). By default, pictures play in random order. For different ways of viewing your pictures, see Searching for and viewing your pictures, page 11.

You can change the duration (how long each picture stays on the screen) and transition style between pictures. See Changing frame settings, page 19. Viewing from internal memory Pictures play from the frame's internal memory when no card or USB device is inserted. Turn on the frame. All pictures in your frame's internal memory begin to play automatically. NOTE: Make sure no memory card or USB device is inserted in the frame. To copy pictures into the frame's internal memory, see page 8. □ Viewing from a memory card or USB device Pictures play from a memory card or USB device whenever one is inserted in the frame. □ □ Turn on the frame. Insert a memory card, USB flash drive, or other USB device (see page 6).

Your pictures start playing automatically. To copy pictures into the frame's internal memory, press OK and follow the screen instructions (see page 8). 10 www.kodak.com/go/support Viewing pictures Searching for and viewing your pictures NOTE: The buttons and controls you use to search for and view pictures are located on the back of the frame.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE P76 FRAME user guide](http://www.kodak.com/go/support)
<http://yourpdfguides.com/dref/4732912>

See Navigation buttons, page 3. 1 Press OK to pause a slide show and display the control panel icons. 2 Press the highlighted thumbnail at full-screen. 3 Press OK again to start the slide show. 4 www.

kodak.com/go/support Viewing pictures Viewing thumbnails View the pictures on your frame as thumbnails when you're searching for pictures (page 11). 1 Press to highlight the first thumbnail. 2 Press the arrows to navigate through the thumbnails. To move even faster, press and hold an arrow button. 3 To quickly page through the thumbnails, continue to press to highlight the slider bar. Then press . 4 Press OK to display the highlighted thumbnail at full-screen. 5 Press OK again to start the slide show or press the back button to return to thumbnails view. www.

kodak.com/go/support 15 Viewing pictures Changing viewing modes Press the mode button to change how you display pictures on your frame. Single picture Calendar Clock Collage Single picture Press mode button Each time you press the mode button, the 1 panel icons. 2 Press OK. to highlight (Transitions), then press 3 Press Slowest Slower Slow to highlight a timing and transition option, then press OK. pictures change once a day, at midnight; transition effect is a gentle motion to the left. pictures change once an hour, on the hour; transition effect is a slow fade. pictures change once a minute; transition effect is a slow fade. pictures change once every 10 seconds; transition effect is pan and zoom. pictures change once every 10 seconds; transition effect is a slow fade.

pictures change once every 5 seconds; transition effect is a gentle motion to the left. Medium 1 Medium 2 Fast 24 www.kodak.com/go/support Changing settings and more Setting viewing modes There are several styles of clock, calendar, and collage modes available. Preview the available modes and select your choices here. @@2 Press to highlight (Set Modes), then press OK. 3 Press to highlight a mode. 4 With Clock, Calendar, or Collage highlighted, press to highlight and preview each different style. Leave the highlight on the style you wish to select. NOTE: Collage styles include Multi-Grid, Single Grid, and Picture Book.

@@5 Press OK to exit and save your selections. @@@@The upgrade may take up to 5 minutes. When the upgrade is complete, your frame automatically restarts. @@@@To change the orientation to portrait, rotate your pictures in the Settings menu (see page 20) and then turn the frame on its side. Turn the frame Portrait Landscape Hanging your frame on the wall To hang your frame on the wall in landscape orientation, remove the stand, then use wall anchoring hardware (not included) to securely mount the frame to the wall.

See Frame features, page i for the location of the mounting hole on the back of the frame. www.kodak.com/go/support 27 Changing settings and more Maintaining your frame IMPORTANT: Always disconnect the power before cleaning. @@Gently wipe the frame and screen with a clean, dry, lint-free cloth.

For fingerprints on the frame, apply light pressure. Learning more about your frame www.kodak.com/go/digitalframes www.kodak.com/go/support Learn more about your frame. Order accessories. Support for all KODAK Products www.kodak.com/go/digitalframesupport Support for KODAK Digital Frames 28 www.

kodak.com/go/support 4 If... Troubleshooting and support For product support, go to www.kodak.com/go/digitalframesupport. Picture frame problems Try one or more of the following Make sure the power cable that was included with your frame is connected securely (see page 2). Unplug the power cable for 5 seconds, then reconnect the cable.

Press and hold the power button (for about 2 seconds), then release. Nothing happens when Insert a certified memory card, with images, into the card slot, then push to seat it (see page 6). a memory card or USB device is connected. Make sure the USB device is connected securely (see page 7). Make sure the file format of your pictures and videos are supported (see page 32).

Unplug the power cable for 5 seconds, then reconnect the cable. Frame freezes up or Press and hold the power button (for about 2 seconds), then doesn't work properly. release. Reset the frame. On the back of the frame, press the mode and power buttons (see page i) at the same time.

Highlight a reset option, then press OK. Just reset—reset and save all pictures on the frame. Reset and delete all pictures—reformat the internal memory and delete all pictures on the frame. Return to slide show without doing anything If your frame loses power, the clock returns to the factory setting and You set automatic auto on/off times are disabled. See Re-setting your frame after losing on/off but the frame doesn't turn on and off power, page 31. at the specified times. www.kodak.com/go/support 29 Troubleshooting and support Screen messages Screen message Try one or more of the following The frame cannot display the picture because the file is File is bad. (usually preceded by the file name.

corrupted or it's an unsupported file format (see page 32). For example: xxx_xxxx.JPG file is NOTE: Videos are not supported. bad) Write failed. Select another location. Error attempting to open file or directory. Error occurred while closing a file. Error invalid filename. Error reading from file. Error writing from file.

Error writing a file. Error writing to a file. File Copy Failed! Internal error. Parameter is invalid. Unknown error.

The frame was unable to copy the picture. Insert a different card or device (page 6). Turn off the frame, then turn it back on. Press and hold the power button (for about 2 seconds), then release. If the problem persists, contact customer support help, at www.

kodak.com/go/digitalframesupport. 30 www.kodak.com/go/support Troubleshooting and support Re-setting your frame after losing power If the frame loses power or you unplug it for more than a minute, the time and date setting is lost. When the power is restored and the frame turns on, you are prompted to reset the time and date (see page 5). www.kodak.com/go/support 31 5 Appendix Digital frame specifications For more specifications, go to www.kodak.

com/go/digitalframesupport. KODAK EASYSHARE P76 Digital Frame Color display 16.2 cm (6.4 in.) diagonal digital LCD, 714 x 480 pixels, 16:10 aspect ratio, 14.3 x 9.1 cm (5.6 x 3.6 in.) viewable area Internal storage capacity (internal memory) 128 MB (store up to 1000 pictures.

Actual storage capacity will vary based on picture content) Power AC adapter 100–240V AC 50/60 Hz; AC adapter, 5V DC @ 1.5 A Manufacturer, Model # Ktec KSAS7R50500150D5 KSAS7R50500150HU KSAS7R50500150HR Communication with USB devices USB High Speed Type B (for connecting a USB device, purchase separately) Other features Picture formats Memory cards see page 6 Temperature Size JPEG, EXIF 2.2 SD, SDHC (SECURE DIGITAL); MMC (MULTIMEDIA Card); xD. MS PRO/MS PRO Duo (MEMORY STICK), with adapter only. (Memory cards are not included, purchase separately)

Operating: 0 to 40° C (32 to 104° F) Storage: -20 to 60° C (-4 to 140° F) 12.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE P76 FRAME user guide](http://yourpdfguides.com/dref/4732912)
<http://yourpdfguides.com/dref/4732912>

8 x 19.6 x 2.2 cm (5.0 x 7.7 x .

9 in.) 32 www.kodak.com/go/support Appendix KODAK EASYSHARE P76 Digital Frame Weight 262 g (.58 lb.) - includes frame, stand Important safety instructions CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid.

Contact Kodak customer support. □ □ □ □ The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to www.kodak.com/go/accessories. Use only the AC adapter that was packaged with your frame. Use of other AC adapters may damage the frame and void your warranties. When displayed with the stand extended, the frame rests at a 75° angle. Do not place frame near open flame sources such as lighted candles or heaters. www.kodak.com/go/support

33 Appendix Additional care and maintenance □ Always disconnect the power before cleaning. @@ Gently wipe the frame and screen with a clean, dry, lint-free cloth. For fingerprints on the frame, apply light pressure. Service agreements are available in some countries.

Contact a dealer of KODAK Products for more information. @@@@ Retain the original dated sales receipt. @@ You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts.

If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. @@@@ This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

www.kodak.com/go/support 35 Appendix Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. Regulatory compliance and advisory FCC compliance and advisory This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. 36 www.kodak.com/go/support Appendix Canadian DOC statement This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Waste Electrical and Electronic Equipment labeling In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility, or appropriate local authorities; or visit www.kodak.com/go/recycle.

(Product weight: 262 g.) Australian C-Tick N137 Russian GOST-R Eastman Kodak Company Rochester, New York 14650 ANSI/UL, CAN/CSA CONFORMS TO ANSI/UL STD.60950-1 CERTIFIED TO CAN/CSA STD. C22.2 NO.60950-1 www.kodak.com/go/support 37 Appendix VCCI Class B China RoHS 38

www.kodak.com/go/support



[You're reading an excerpt. Click here to read official KODAK EASYSHARE P76 FRAME user guide](http://yourpdfguides.com/dref/4732912)
<http://yourpdfguides.com/dref/4732912>

kodak.com/go/support Index A about, frame, 21 AC adapter, 2, 33 all pictures, searching, 11 appendix, 32 arrow buttons, 3 attaching power cable, 2 stand, 1 auto enhancements, setting, 20 automatic on/off, setting, 23 picture finder, 17 a-z, play alphabetically, 20 B back button, 3 brightness, 20 button, mode, 16 buttons, i C cable, power, connecting, 2 calendar, viewing mode, 16 camera, copying pictures from, 9 card, memory copying from, 9 inserting, 6 slot, i supported types, 33 viewing pictures from, 10 changing settings, 19—21 www.

kodak.com/go/support 1 cleaning frame, 28, 34 clock and on/off times, setting, 5, 22 clock, resetting after losing power, 31 clock, viewing mode, 16 collage mode changing styles, 25 viewing, 16 control panel icons, ii controls, i copy pictures, 8 D date, searching by, 12 date, setting, 5, 22 deleting pictures from frame, 18 display picture order by, 20 disposal, recycling, 34 download firmware, 26 duration, setting, 24 E energy saver, auto on/off, 23 ENERGY STAR product, 38 error messages, 30 F favorites, searching by, 14 file formats, picture, 32 firmware, upgrading, 21, 26 fit/fit, display, 20 flash drive inserting, 7 39 Index viewing pictures from, 10 folders, searching by, 13 frame, picture hanging on wall, 27 specifications, 32 troubleshooting, 29 turn on/off, 5 H help frame, 29 support URLs, 28 troubleshooting and support, 29 I icons, control panel, ii installing flash drive, 7 memory cards, 6 USB device, 7 internal memory capacity, 32 copying to, 8 playing from, 10 K keywords, searching by, 13 L landscape, change orientation, 27 language, setting, 4, 21 M main control panel, ii memory card. See card, memory 40 mode button, i, 3 changing, 16 setting styles, 25 N newest to oldest, display, 20 O OK button, 3 oldest to newest, display, 20 on/off button, 5 on/off, energy saver, 23 order, display by, 20 orientation, changing, 27 P pausing play, 18 people, searching by, 14 picture book backgrounds, 20 picture finder, 17 pictures copying to frame, 8 deleting, 18 rotate, 20 searching, 11—14 viewing, 10—15 portrait, change orientation, 27 power button, i, 5 connecting, 2 specifications, 32 R random display, 20 www.kodak.com/go/support Index recycling, disposal, 34 regulatory compliance, 36 reset frame, 29 reset time after losing power, 31 rotate pictures, 20 S safety information, 33 screen cleaning, 28, 34 error messages, 30 searching for pictures, 11—14 set modes icon, 25 settings, changing, 19—21 about auto enhancements brightness date display picture order by firmware upgrade language picture book backgrounds rotate time time on/off specifications, frame, 32 stand, attaching, 1 storage capacity, internal memory, 32 support, 28 T tags, searching by, 13 thumb drive, 7 thumbnails, viewing, 15 www.kodak.com/go/support time, date, and on/off times, 5, 22 timer, auto on/off, 23 transitions, setting, 24 troubleshooting error messages, 30 frame, 29 turn on frame, 5 U upgrade firmware, 21, 26 USB devices, types, 32 inserting, 7 V viewing modes changing, 16 setting styles, 25 viewing pictures, 10—15 W wall mount, frame, 27 warranty, 34 Web sites, help, 28 Z z-a, play alphabetically, 20 41 .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE P76 FRAME user guide](http://yourpdfguides.com/dref/4732912)
<http://yourpdfguides.com/dref/4732912>