



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK EASYSHARE SPORT C123. You'll find the answers to all your questions on the KODAK EASYSHARE SPORT C123 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK EASYSHARE SPORT C123
User guide KODAK EASYSHARE SPORT C123
Operating instructions KODAK EASYSHARE SPORT C123
Instructions for use KODAK EASYSHARE SPORT C123
Instruction manual KODAK EASYSHARE SPORT C123

KODAK EASYSHARE SPORT Camera / C123



Extended user guide

www.kodak.com
For interactive tutorials:
www.kodak.com/go/c123demos
For help with your camera:
www.kodak.com/go/c123support



[You're reading an excerpt. Click here to read official KODAK EASYSHARE SPORT C123 user guide](http://yourpdfguides.com/dref/4732963)
<http://yourpdfguides.com/dref/4732963>

Manual abstract:

.....
.....
.....

.....
.....
.....

.....
.....

... 3 Turning on the camera ..

.....

.....
.....
.....

.....
.....
.....

.....

4 Setting the language and date/time.....

.....
.....

.....
.....
.....

.....

... 4 Storing pictures on an optional SD or SDHC Card..

.....
.....

.....
.....
.....

..... @@@@8 Using the digital zoom

.....
.....
.....

.....
.....
.....

.....
.....

... 8 Using the flash..

.....

.....
.....
.....

.....
.....
.....
.....

.. 9 Using different modes

.....
.....
.....
.....
.....
.....
.....
.....

... 10 Using shortcuts ..

.....
.....
.....
.....
.....
.....
.....
.....

.... 12 Using the self-timer.

.....
.....
.....
.....
.....
.....
.....
.....

..... 13 Using the camera under water.

.....
.....
.....
.....
.....
.....
.....

... 14 3 Sharing pictures/videos ..

.....
.....
.....

.....
.....

.....15 Sharing through social networks.

.....
.....
.....

.....
.....
.....

..... 15 Tagging pictures/videos with keywords.....

.....
.....

.....
.....
.....

. 17 Marking pictures/videos for emailing

.....
.....

.....
.....
.....

18 4 Reviewing and editing

.....
.....

.....
.....
.....

...19 Reviewing pictures/videos ..

.....
.....

.....
.....

.....
.....

..... 19 Deleting pictures/videos ..

.....
.....
.....

.....
.....
.....

. 19 Viewing pictures/videos in different ways....

.....
.....
.....
.....

..... 21 A smarter way to find and enjoy your pictures.

.....
.....

.....
.....

..... 22 Understanding the review icons....

.....
.....
.....

.....
.....
.....

.. 23 Creating a slide show.....

.....
.....

.....
.....
.....

.....
.....

.... 24 www.kodak.com/go/support iii Table of contents Displaying pictures/videos on a television....

.....
.....
.....

.....
.....

.... 25 Using the menu button in review.

.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

30 5 Doing more with your camera

.....

.....

.....

.....

.....

.....

.....

.31 Using the menu button to change settings....

.....

.....

.....

.....

.....

.....

.. 31 Using the Setup menu

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 33 6 Transferring, printing pictures

.....

.....

.....

.....

.....

.....

.....

....35 Printing pictures.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.... 36 Marking your pictures for print

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 38 7 Troubleshooting

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....39 Getting help from your camera

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 39 Troubleshooting

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 40 Getting help on the Web

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 43 8 Appendix .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..44 Camera specifications

.....

.....

.....

.....

.....

.....

.....

.....

... 44 Care and maintenance ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 46 Upgrading your software and firmware.....

.....

.....

.....

.....

.....

.....

..... 46 Storage capacities .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 47 Important safety instructions

.....
.....
.....
.....
.....
.....
.....
.....

..... 47 Battery replacement, battery life ...

.....
.....
.....
.....
.....
.....

.. 48 Limited warranty ..

.....
.....
.....
.....
.....
.....
.....
.....

.. 49 Regulatory compliance ...

.....
.....
.....
.....
.....
.....
.....
.....

.. 50 iv www.kodak.com/go/support 1 Setting up your camera Attaching the wrist strap www.kodak.com/go/support 1 Setting up your camera Opening the doors 1 2 2 www.kodak.com/go/support Setting up your camera Loading the AA batteries Purchase extra batteries for your event www.kodak.com/go/accessories www.kodak.com/go/support 3 Setting up your camera Turning on the camera Setting the language and date/time Language: to change. OK to accept. Date/Time: At the prompt, press OK. to change current field. for previous/next field. OK to accept. NOTE: To change language in the future, use the Setup Menu (see page 33). 4 www.kodak.com/go/support Setting up your camera Storing pictures on an optional SD or SDHC Card Your camera has internal memory. We recommend purchasing an SD or SDHC Card to conveniently store more pictures/videos. CAUTION: A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera. 1 Turn off the camera. 2 Insert a card until it clicks. 3 Turn on the camera. Optional Accessory Purchase accessories www.kodak.com.

www.kodak.com/go/accessories IMPORTANT: When you turn on the camera, it checks to see if a card is inserted. If so, new pictures/videos are stored on the card. If no card is inserted, new pictures/videos are stored in the camera internal memory. If pictures/videos are detected in internal memory and a card is inserted, the camera prompts you to move the pictures to the card (and erase those in internal memory). www.kodak.com/go/support 5 2 Taking pictures/videos Mode 1 The camera turns on in Auto mode. (If it's in a different mode, press the Mode button, then until the LCD displays Auto , then press OK.) 2 Compose the picture. 3 Press the Shutter button all the way down.

Taking pictures Taking a video 1 Press the Mode button, then until , then press OK. the LCD displays Video 2 Press the Shutter button all the way down, then

release it. To stop recording, press and release the Shutter button again. To review and work with videos, see page 19. 6 www.kodak.com/go/support Taking pictures/videos Reviewing the picture/video just taken After you take a picture/video, the LCD briefly displays the picture or the first frame of a video. While a picture/video is displayed, you may: Delete the current picture/video Play/pause a video NOTE: Audio is captured during video recording. Audio can be heard when the video is played on a computer or when the camera is connected to a TV (see page 25). To review pictures/videos anytime, see page 19.

www.kodak.com/go/support 7 Taking pictures/videos Understanding the picture-taking icons Self timer Exposure compensation Flash mode Capture mode Pictures/time remaining Zoom slider Keyword tag Battery level Know when your batteries need attention The battery level icon appears when the battery requires your attention. (If you're viewing shortcuts, the battery level is always displayed. See page 12.) Purchase extra batteries for your special event www.kodak.com/go/accessories Using the digital zoom 1 Use the LCD to frame your subject. 2 To zoom in, press Telephoto (T). To zoom out, press Wide Angle (W).

The zoom slider shows the zoom level on the LCD. 3 Take the picture. NOTE: You may notice decreased image quality when using digital zoom. 8 www.kodak.com/go/support Taking pictures/videos Using the flash Press the Flash button repeatedly until the LCD displays the desired flash mode. Flash button Flash modes Auto Fill (Flash On) Flash fires When the lighting conditions require it. Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: Not available in Auto mode.

Red-eye Reduction Off Preflash A preflash fires, shrinking the eye pupil, before the picture is taken. Never www.kodak.com/go/support 9 Taking pictures/videos Using different modes Press the Mode button, then until the LCD displays the mode that best suits your subjects and surroundings, then press OK. Mode button Use this mode For General picture taking—it offers excellent image quality and ease of use.

You can choose the best picture size and aspect ratio for your needs—just press the Menu button and choose Picture Size. Capturing video with sound. Audio can be heard when the video is played on a computer or when the camera is connected to a TV (see page 6.) Point-and-shoot simplicity when taking pictures in practically any situation. (See page 11.

) Best for taking pictures under water. Best for taking videos under water. Auto Video Scene Picture Video 10 www.kodak.com/go/support Taking pictures/videos Using Scene (SCN) modes Choose a Scene mode—for great pictures in practically any situation. 1 Press the Mode OK. button, then until the LCD displays SCN, then press 2 Press to view scene mode descriptions. If the mode description turns off before you finish reading it, press OK. 3 Press OK to choose a Scene mode. SCN mode Portrait Sport Sunset Backlight Children Bright Fireworks Night Portrait For Full-frame portraits of people.

Action pictures. Subjects at dusk. Subjects that are in shadow or "backlit." Action pictures of children in bright light. Bright scenes that include a beach or snow. Fireworks. For best results, place the camera on a steady surface or tripod. Red-eye reduction in people in night scenes or low-light conditions.

www.kodak.com/go/support

11 view single picture.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE SPORT C123 user guide](http://www.kodak.com/go/support)
<http://yourpdfguides.com/dref/4732963>

Taking pictures/videos Using shortcuts Your camera has a clean, uncluttered interface. For quick access to the most popular capture and review functions: 1 Press the Info button. The shortcuts appear. To hide the shortcuts again, press .

2 Press to access functions like Exposure Compensation and Self-timer. (You'll see different functions in different modes.) 3 Press to choose a setting. Shortcuts Press to show/hide shortcuts. 12 www.kodak.com/go/support

Taking pictures/videos Using the self-timer and burst Use the self-timer when you want to be included in a picture or to ensure a steady Shutter button press. For best results, place the camera on a tripod or steady surface. You can turn Email or Delete Frame, then press OK. Press to choose the address or frame, then press OK so that a check mark appears. Press to choose Delete, then press OK. 3 When finished, press to choose Done, then press OK. 16 www.kodak.com/go/support

Sharing pictures/videos Tagging pictures/videos with keywords You can tag pictures/videos with a keyword to make them easy to find, later.

You can tag pictures using a shortcut (see page 12) or these steps: 1 Press the Review 2 Press the Menu button, then button. Press to find a picture. to choose Keyword Tag, then press OK. 3 Press to choose an existing keyword or New Keyword (see Using the keyboard) to add a new one, then press OK. 4 Press to add keywords to other pictures. When finished, press choose Done, then press OK. To return to picture-taking mode, press the Review button. to Using the keyboard The keyboard appears when you need it. 1 Press to choose a letter, then press OK. to choose OK, then press OK.

2 When finished, press www.kodak.com/go/support 17 Sharing pictures/videos Marking pictures/videos for emailing It's simple to mark pictures/vihumbnails Play video Upload Favorite Keyword tag Battery level Print/number of prints Protected Email Picture/Video number * For more about shortcuts, see page 12. www.kodak.com/go/support

23 Reviewing and editing Creating a slide show Use Slide Show to display your pictures/videos on the LCD. You can play all pictures/videos, or choose pictures to include in the slide show. Make a slide show 1 Press the Review button. Select pictures (see page 29). If you select no pictures, all pictures are shown.

2 Press the Menu 3 Press button, then to choose the Review tab. to choose Slide Show, then press OK. 4 Press to choose Begin Show, then press OK. Each picture/video is displayed once. To interrupt the slide show, press OK. You can also determine the slide interval duration. IMPORTANT: Your camera offers a built-in Help system. See page 39. Play a slide show loop When you turn on Loop, the slide show is continuously repeated. 1 On the Slide Show menu, press press OK.

2 Press to choose Loop, then to choose On, then press OK. 3 Press to choose Begin Show, then press OK. @@@@IMPORANT: Your camera offers a built-in Help system. @@@@Press to move the crop box. When satisfied with the crop box, press OK. 4 Follow the screen prompts. The picture is cropped. @@To return to picture-taking mode, press the Review button. IMPORTANT: Your camera offers a built-in Help system. @@@Choose Make Picture, then press OK.

3 Follow the screen prompts. A picture is created. @@IMPORANT: Your camera offers a built-in Help system. @@@Choose Action Print, then press OK. 3 Choose an option, then press OK.

A 9-up picture is created. @@1 Press the Review video. @@Choose Trim, then press OK. 3 Follow the screen prompts. The video is trimmed.

@@Multi-select is used most effectively with thumbnails, page 21. @@2 Press OK to select pictures/videos. A check mark appears on the picture. @@@@Press to find the previous/next picture. @@@@Rotate Left—rotates the picture 90 degrees counterclockwise. @@1 Press the Review button, then for previous/next picture. 2 Press the Menu button, then to highlight the Edit tab. Highlight PERFECT TOUCH Tech, then press OK. The enhancement is previewed. Press to view other parts of the picture.

3 Choose Continue or Cancel. 4 Press OK. @@Press the Review button to return to Picture-taking mode. @@1 Press the Review button, then to find a picture. 2 Press the Menu button, then to choose the Edit tab. Choose Date Stamp, then press OK. The date/time is added to the picture. @@@@NOTE: Some modes offer limited settings. @@@@Self-timer Choose Self-timer feature. More information See Camera specifications, starting on page 44. See Camera specifications, starting on page 44. www.kodak.com/go/support 31 Doing more with your camera Settings More information Exposure Compensation See Camera specifications, starting on page 44. Make a picture lighter or darker.

To access this feature with a shortcut, see page 12. ISO Speed See Camera specifications, starting on page 44. Control the camera sensitivity to light. See Camera specifications, starting on page 44. Long Time Exposure Choose how long the shutter stays open (normally in low-light conditions). For best results, place the camera on a tripod or steady surface. Color Mode See Camera specifications, starting on page 44. Choose color tones. Unavailable in Video and Auto modes. White Balance Choose your lighting condition. Auto—Automatically corrects white balance. Ideal for general picture taking. Daylight—For pictures in natural lighting. Tungsten—Corrects the orange cast of incandescent light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.

Fluorescent—Corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash. Open Shade—For pictures in shade in natural lighting. Face priority (default) Multi-pattern Center-weight Exposure Metering 32 www.kodak.com/go/support Doing more with your camera Settings Sharpness Control picture sharpness or softness. More information See Camera specifications, starting on page 44. Video settings IMPORTANT: Your camera offers a built-in Help system. See page 39. Settings Self-timer Choose Self-timer feature.

More information Off 10 Seconds 2 Seconds Using the Setup menu Use Setup to customize other camera settings. IMPORTANT: Your camera offers a built-in Help system. See page 39. Settings Date & Time More information Set date and time. Share Button Settings Show or hide: Choose what is displayed when the Share Individual social networking sites button is pressed in Review.

E-mail addresses (all or none) KODAK Digital Frames (all or none) LCD Brightness Choose LCD brightness during picture/video capture. High Power—Brighter LCD; uses more battery power. Power Save—Dimmer LCD; uses less power. www.kodak.com/go/support 33 Doing more with your camera Settings More information Video Out NTSC—Used in North America and Japan; most Choose the regional setting that lets you common format. connect the camera to a television or other PAL—Used in Europe and China. external device. Language Reset Camera Reset settings to their default. Choose your language.



[You're reading an excerpt. Click here to read official KODAK](#)

[EASYSHARE SPORT C123 user guide](#)

<http://yourpdfguides.com/dref/4732963>

Reset All Camera Settings—Settings revert to their factory defaults. **Reset Startup Application**—Resets camera to startup mode to allow KODAK Software download. **Memory Card**—Deletes everything on the card; formats the card. **Cancel**—Exits without making a change. **Internal Memory**—Deletes everything in internal memory including keyword tags; formats the internal memory.

Format CAUTION: Formatting deletes all pictures/videos, including those that are protected. Removing a card during formatting may damage the card. **KODAK Camera Software View URL** to download KODAK Software. **About View** camera information. **Camera Sounds** Choose whether to play a sound during certain events or have all sounds off. **All On Shutter Only All Off 34** www.kodak.com/go/support **6 Transferring, printing pictures** **Install KODAK Software**—so it's easy to transfer and share pictures and videos. Make sure the computer is connected to the Internet. When you connect the camera to the computer, the KODAK Camera Setup App automatically runs.

Follow the prompts to download and install KODAK Software.* **1 Turn off the camera. 2 Use the KODAK Camera USB Cable, Micro B / 5-Pin to connect camera to computer. (Use only the cable included with this camera!)** **3 Turn on the camera. After the software is installed, follow the prompts to transfer pictures and videos to your computer.**

* **If the KODAK Software Downloader doesn't run, find and launch it here:** • **WINDOWS OS:** in My Computer • **MAC OS:** on your Desktop **NOTE:** You can also use a card reader to transfer pictures/videos. **Download KODAK Software later** **Get Software help** www.kodak.com/go/camerasw www.kodak.com/go/support **To use this camera on more than one computer, use see page 34 the Reset Startup Application feature** www.kodak.com/go/support **35 Transferring, printing pictures** **Printing pictures** **Direct printing with a KODAK All-in-One Printer** Your camera is compatible with PICTBRIDGE Technology, so you can print directly to PICTBRIDGE enabled Printers. You need a camera, a PICTBRIDGE enabled Printer, and a USB cable. **Connecting the camera to a KODAK All-in-One Printer** **1 Turn off the camera and printer. 2 Connect the USB cable from the camera to the printer. Printing from a KODAK All-in-One Printer** **1 Turn on the printer. Turn on the camera. The PictBridge logo is displayed, followed by the current picture and menu. @ @2 Choose a printing option, then press OK.**

Current Picture—Press to choose a picture. @ @ **Index Print**—Print thumbnails of all pictures. @ @ @ @ @ @ @ **Edit, enhance, and add borders to your pictures. Store pictures, and share them with family and friends. @ @ See your printer user's guide for details. Make prints at an SD/SDHC Card-capable KODAK Picture Kiosk. Go to** www.kodak.com/go/picturemaker. @ @ **Press button.** **to find a picture. to choose Print, then press OK. @ @ Press for previous/next. @ @5 Press OK. To return to picture-taking mode, press the Review button. IMPORTANT:** Your camera offers a built-in Help system. @ @ **It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help. Turning on camera Help button, 1 Press the Menu then make a menu choice. 2 Press the Info button.**

Scroll through a Help topic. www.kodak.com/go/support **39 Troubleshooting Troubleshooting Camera problems Status Camera does not turn on Camera does not turn off Camera buttons and controls do not function In Review, a blue or black screen is displayed instead of a picture** **Transfer all pictures to the computer (see page 35).** **Take another picture. Solution** **Make sure the batteries are installed correctly (see page 3).** **Make sure batteries are new. If batteries are rechargeable, make sure they are fully charged (see charger documentation).** **Pictures remaining** **Continue taking pictures. The camera is operating normally.**

number does not (The camera estimates the number of pictures remaining after each decrease after taking a picture is taken, based on picture size and content.) picture Flash does not fire **Check the flash setting, and change as needed (see page 9). NOTE: The flash does not fire in all modes. Memory card is almost** **Transfer the pictures to the computer (see page 35), or entirely full** **Delete pictures from the card (see page 19) or insert a new card. Battery life is short** **Make sure the correct battery type is installed (see page 48).** **Insert new/charged batteries (see page 3).** **See Extending battery life, page 48.**

Cannot find the desired picture/video **To view pictures on a card or in internal memory, see page 19. 40** www.kodak.com/go/support **Troubleshooting Status You cannot take a picture Solution** **Turn the camera off, then on again.** **Depress the Shutter button all the way (see page 6).** **Insert new/charged batteries in the correct orientation (see page 3).** **Memory is full.**

Transfer pictures to the computer (see page 35), delete pictures (see page 19), or insert another card. Memory card not **Remove and reinsert the card (see page 5). recognized or camera IMPORTANT: Insert a card until it clicks. freezes with card** **Card may be corrupted. Format the card in the camera (see page 34).**

Use another memory card. Only SD or SDHC Cards are supported. The camera gets wet inside **If the camera is wet inside, open all doors.** **Remove the card. Do not turn on the camera.** **Let it dry for at least 24 hours.** **Keep doors watertight. Computer/connectivity problems Status Computer does not communicate with the camera Solution** **Turn off the camera, then turn it back on.** **Make sure the batteries are charged and installed correctly (see page 3).** **Make sure the KODAK Camera USB Cable, Micro B / 5-Pin is connected to the camera and directly to the computer (not through a USB hub).**

See page 35. Then turn on the camera. IMPORTANT: Use only the cable included with this camera! **See KODAK Software Help at** www.kodak.com/go/camerasw. www.kodak.com/go/support **41 Troubleshooting Picture quality problems Status Picture is not clear Solution** **Clean the lens (see page 46).** **Place the camera on a flat, steady surface or use a tripod (especially in low light).** **Use a larger picture size (see page 31).**

If you're manually adjusting the ISO speed, realize that a high ISO setting may cause grainy pictures (see page 32). Picture is too dark **Reposition the camera for more available light.** **Use Fill flash (see page 9) or change your position so light is not behind the subject.** **Move so that the distance between you and the subject is within the effective flash range (see Camera specifications starting on page 44). Picture is too light** **Reposition the camera to reduce the amount of available light.**

Turn the flash off (see page 9). **Move so that the distance between you and the subject is within the effective flash range (see Camera specifications starting on page 44). Underwater videos are not clear. Use an underwater mode (see page 14). Direct printing (PICTBRIDGE enabled printer) problems Status Cannot find the desired picture Solution** **Use the Direct printing menu to change the image storage location.**



[You're reading an excerpt. Click here to read official KODAK EASYSHARE SPORT C123 user guide](http://yourpdfguides.com/dref/4732963)
<http://yourpdfguides.com/dref/4732963>

The Direct printing Press any camera button to redisplay the menu. menu interface turns off 42 www.kodak.com/go/support Troubleshooting Status Solution Cannot print pictures Make sure there is a connection between the camera and the printer (see page 36). Make sure the printer and the camera have power. Camera or printer displays an error message Follow the prompts to resolve the issue. Getting help on the Web Get support for your product (FAQs, troubleshooting www.kodak.com/go/c123support information, arrange for repairs, etc.) Purchase camera accessories See online demonstrations of your camera Chat, email, write, or phone Kodak (Chat not available in all languages) Download KODAK EASYSHARE Software Get information on KODAK All-in-One Printers www.kodak.com.

www.kodak.com/go/accessories www.kodak.com/go/c123demos www.kodak.com/go/contact www.kodak.com/go/easysharesw (or see Help in EASYSHARE Software) www.kodak.com/go/inkjet Download the latest camera firmware and software www.kodak.com/go/c123downloads www.kodak.com/go/support 43 8 Appendix Camera specifications CCD—1/2.3-type Effective pixels—12 MP (4026 x 3026) LCD—2.

4 in. (6.1 cm) LCD; 112 pixels; 4:3 aspect ratio Image storage—Optional SD/SDHC Card (The SD logo is a trademark of the SD Card Association.) Maximum supported card size: 32 GB Internal storage capacity—32 MB internal memory (19 MB available for image storage. 1 MB equals one million bytes.) Taking lens—f/4.5; 35 mm equivalent: 35 mm Lens protection—Built-in Digital zoom—5X continuous Shutter speed—1/8–1/1400 seconds Long time exposure—0.5–8 seconds ISO speed—Auto: 80–360; Manual: 80, 100, 200, 400, 800, 1000, 1250 Exposure compensation—+/-2.0 EV with 1/3 EV step White Balance—Auto, Daylight, Tungsten, Fluorescent, Open Shade Electronic Flash—Auto flash; Auto, Fill, Red Eye, Off; Guide No. 6.4 (m); working range @ ISO 250: 0.3–2.4 m (1–7.9 ft) Self-timer mode—10 seconds, 2 seconds, 2 picture timer Capture modes—Auto, Scene modes, Video, Underwater still, Underwater video Image file format—Still: EXIF 2.21 (JPEG compression); file organization DCF Video: AVI (CODEC Motion JPEG; audio: -Law) 44 www.kodak.com.

www.kodak.com/go/support Appendix Picture size—12 MP (4:3): 4000 x 3000 pixels 11 MP (3:2): 4000 x 2664 pixels 9 MP (16:9): 4000 x 2248 pixels 6 MP (4:3): 2880 x 2160 pixels 3 MP (4:3): 2048 x 1536 pixels Color modes—Vivid, Full, Basic, Black & White, Sepia Sharpness modes—Sharp, Normal Video capture—4 GB maximum; VGA (640 x 480 @ 30 fps) Communication with computer—USB 2.0 high speed (PIMA 15740 protocol); via KODAK Camera USB Cable, Micro B / 5-Pin Video output—NTSC or PAL Microphone—Yes Beeper—Yes PICTBRIDGE support—Yes Power—KODAK MAX Alkaline Batteries AA; KODAK Ni-MH Rechargeable Digital Camera Batteries AA, Lithium batteries AA Tripod mount—1/4 inch Size—92.2 x 66.6 x 29.4 mm (3.6 x 2.6 x 1.1 in.) @ power off Weight—175 g (6.

1 oz) with batteries and card Operating temperature—0–40° C (32–104° F) Waterproof capability—Conforms to IEC60529 IPX8, up to 3 meters (9.8 ft) Dust proof capability—Conforms to IEC60529 IP6X www.kodak.com/go/support 45 Appendix Care and maintenance If you suspect water has gotten inside the camera, remove the batteries and card. Allow all components to air-dry for at least 24 hours before using the camera.

Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces. Service agreements may be available in your country.

Contact a dealer of KODAK Products for more information. For digital camera disposal or recycling information, contact your local authorities. In the US, go to the Electronics Industry Alliance site at www.eiae.org or Kodak at www.kodak.com/go/c123support. In water, do not use below a depth of 3 meters (9.8 ft). Do not open/close camera doors in water.

The camera will not float. Use the strap at all times. If water has entered the camera, remove the card. Allow all components to air-dry for at least 24 hours before using the camera. If the camera was used in chemically treated water or saltwater, rinse it in fresh water, then use a soft towel to dry it. Wipe off dirt or sand from the door seals—debris could compromise the seal and cause a leak when in water. Upgrading your software and firmware Download the latest versions of KODAK Software and the camera firmware (the software that runs on the camera). Go to www.kodak.com/go/c123downloads.

46 www.kodak.com/go/support Appendix Storage capacities The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD Card capacities, go to www.kodak.com/go/SDcapacities.

Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos. Important safety instructions CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel.

KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support. The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to www.kodak.com/go/accessories. Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions. If using this product in an airplane, observe all instructions of the airline.

When removing the batteries, allow them to cool; they may be hot. Follow all warnings and instructions supplied by the battery manufacturer. Use only batteries approved for this product to avoid risk of explosion. Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak. Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature. 47 www.kodak.com/go/support Appendix Remove the batteries when the product is stored for an extended period of time.

In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support. In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.



[You're reading an excerpt. Click here to read official KODAK EASYSHARE SPORT C123 user guide](http://yourpdfguides.com/dref/4732963)
<http://yourpdfguides.com/dref/4732963>

Go to www.kodak.com.

[com/go/reach](http://www.kodak.com/go/reach) for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH). Dispose of batteries according to local and national regulations. Go to www.kodak.com.

[com/go/kes](http://www.kodak.com/go/kes). Do not charge non-rechargeable batteries. For more information on batteries, go to www.kodak.com/go/batterychart. □ □ □ □ Battery replacement, battery life Lithium batteries AA, KODAK MAX Alkaline Batteries AA: 250 pictures. Battery life per CIPA testing method. (Approx. number of pictures in Auto mode, using an SD Card.) Actual life may vary based on usage.

For other compatible batteries, see the Power section in Camera specifications, page 44. Extending battery life □ □ □ Charge Ni-MH batteries when they are nearly depleted. Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera.

@@@ Retain the original dated sales receipt. @ Limited warranty coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts.

@@@@ Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be the length of the express warranty period www.kodak.com/go/support 49 Appendix specified on your Kodak product packaging. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause.

Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction. Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. Regulatory compliance FCC compliance and advisory This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that 50 www.kodak.com/go/support Appendix

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. Waste Electrical and Electronic Equipment/Battery disposal In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to www.kodak.com/go/recycle. Product weight: 174 g (6.1 oz) with batteries and card. Canadian DOC statement DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes—Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. www.kodak.com/go/support 51 Appendix Australian C-Tick N137 Korean Class B ITE Russian GOST-R Eastman Kodak Company Rochester, NY 14650 China RoHS 52 www.kodak.com.

www.kodak.com/go/support Index A A/V out, 25 about this camera, 34 accessories battery, 48 buying, 43 SD/SDHC Card, 5 add keywords, 17 add keywords, names, 17 auto, 10 enhancement, 30 B backlight, 11 battery expected life, 48 loading, 3 purchase, 8 status, 8 types, 48 beach, 11 button delete, 7 zoom, 8 C cable audio/video, 25 camera sounds, 34 Canadian compliance, 51 care and maintenance, 46 children, 11 www.kodak.com.



www.kodak.com. You're reading an excerpt. Click here to read official KODAK

www.kodak.com. EASYSHARE SPORT C123 user guide

<http://yourpdfguides.com/dref/4732963>

kodak.com/go/support I clock, setting, 4 color mode, 32 computer connect camera, 35 transfer to, 35 connector, USB / A/V, 25 copy pictures to computer, 35 cropping pictures, 26 customize camera, 33 D date setting, 4 date/time stamp, 30 deleting during quickview, 7 from internal memory, 19 from SD/SDHC Card, 19 protecting pictures, videos, 20 displaying slide show, 24 disposal, recycling, 46 download KODAK Software, 35 download pictures, 35 E edit videos, 27 emailing pictures, videos, 18 expected battery life, 48 exposure long time, 32, 33 exposure compensation, 31 53 Index external video device viewing pictures, videos, 25 F FCC compliance, 50 find pictures, 22 fireworks, 11 firmware, upgrading, 46 flash, using, 9 flower, 11 format, 34 G guidelines, battery, 48 H help camera help, 39 Web links, 39 I icons, modes, 10 installing battery, 3 SD/SDHC Card, 5 ISO speed, 32 K keyboard, 17 KODAK EASYSHARE Software upgrading, 46 KODAK PERFECT TOUCH Technology, 30 KODAK Software, download, 35 Kodak Web sites, 39 54 L language, 33, 34 LCD brightness, 33 reviewing pictures, 19 reviewing videos, 19 LCD brightness, 33 lens cleaning lens, 46 loading battery, 3 SD/SDHC Card, 5 locate pictures, 22 long time exposure, 32, 33 M magnify a picture, 21 maintenance, camera, 46 make picture from video, 27 marking for email, 18 memory inserting card, 5 menu settings, 31 modes, 10 backlight, 11 beach, 11 children, 11 fireworks, 11 flower, 11 night portrait, 11 scene (SCN), 11 modes, capture auto, 10 www.kodak.com.

com/go/support Index multiple selections, 29 multi-up, 21 N night portrait, 11 O online prints, ordering, 37 P PERFECT TOUCH Technology, 30 PICTBRIDGE enabled printer, 36 picture size, 31 pictures adding date/time stamp, 30 cropping, 26 emailing marked, 18 KODAK PERFECT TOUCH, 30 marking, 38 protecting, 20 review icons, 23 reviewing, 19 taking, modes, 10 transfer to computer, 35 pictures/video deleting, 19 playing a video, 19 power camera, 4 printing from a card, 37 optimizing printer, 39 order online, 37 PICTBRIDGE, 36 tagged pictures, 37 www.kodak.com/go/support protecting pictures, videos, 20 Q quickview, using, 7 R recycling, disposal, 46 regulatory information, 50 repair, 43 reset camera, 34 reviewing pictures/video as you take them, 7 deleting, 19 LCD, 19 protecting, 20 slide show, 24 running slide show, 24 S safety, 47 scene modes (SCN), 11 SD/SDHC Card inserting, 5 printing from, 37 search pictures, 22 select multiple pictures/videos, 29 self-timer, 13 setting camera sounds, 34 color mode, 32 date and time, 4 ISO, 32 language, 33, 34 LCD brightness, 33 long time exposure, 32, 33 55 Index picture size, 31 picture-taking mode, 10 self-timer, 13 sharpness, 32 video out, 33 white balance, 32 setting up the camera, 1 setup menu, 33 Share button, 33 sharpness, 32 shutter problems, 41 self-timer delay, 13 slide show continuous loop, 24 running, 24 smart display, 33 smart find, 22 software upgrading, 46 software downloader, 35 sounds, 34 specifications, camera, 44 strap, 1 T taking pictures, videos, 6 television, slide show, 25 text, entering, 17 time, setting, 4 timer, shutter delay, 13 tips battery guidelines, 48 care & maintenance, 46 56 transfer pictures, 35 trash can, deleting, 7 trimming a video, 28 troubleshooting, 39 turning camera on and off, 4 typing, 17 U undelete, undo, 20 underwater, 14 upgrading software, firmware, 46 URLs, Kodak Web sites, 39 USB transfer pictures, 35 V video action print, 28 edit, 27 emailing marked, 18 out, 33 playback, 19 protecting, 20 review icons, 23 transfer to computer, 35 viewing, 19 video out, 33 viewing by multi-up, 21 picture, after taking, 7, 19 W warranty, 49 water, 14 white balance, 32 www.kodak.com/go/support Index Z zoom, 8 www.kodak.com/go/support 57 .



[You're reading an excerpt. Click here to read official KODAK EASYSHARE SPORT C123 user guide](http://yourpdfguides.com/dref/4732963)
<http://yourpdfguides.com/dref/4732963>