



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ESP 3200. You'll find the answers to all your questions on the KODAK ESP 3200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KODAK ESP 3200**  
**User guide KODAK ESP 3200**  
**Operating instructions KODAK ESP 3200**  
**Instructions for use KODAK ESP 3200**  
**Instruction manual KODAK ESP 3200**

## **KODAK ESP 3200 Series All-in-One Printer**



Includes information for the:  
**ESP 3250 All-in-One Printer**  
ESP 3260 All-in-One Printer

Extended User Guide



[You're reading an excerpt. Click here to read official KODAK ESP 3200 user guide](http://yourpdfguides.com/dref/2702087)

<http://yourpdfguides.com/dref/2702087>

**Manual abstract:**

@@@@@ 3 2 *Configuring Your Printer Configuring printer settings .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...4 Configuring basic printer settings ..*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*....4 Setting your printer as the default printer.*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....5 Connecting to another KODAK All-in-One Printer....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...5 3 Handling Paper Paper types..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.7 Paper sizes.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*...8 Loading photo paper ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*.....9 Loading envelopes...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*....10 4 Printing Pictures Changing Print Photos Options / Defaults .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.... 11 Printing pictures from a memory card .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 12 Types of memory cards .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 12 Printing a picture using the default settings ..*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 16 Changing copy document options .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*16 Changing copy photo options .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 18 Adjusting copy settings....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....





.....  
.....  
.....  
.....

..... 20 [www.kodak.com/go/aio-support](http://www.kodak.com/go/aio-support) iii Table of contents 6 Scanning Before you begin scanning .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....21 Simple scanning ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....21 Scanning multiple pictures simultaneously ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....  
.....

*...22 Scanning multiple pictures with a WINDOWS OS-based computer .....*

.....  
.....  
.....  
.....

*22 Scanning multiple pictures with a MACINTOSH Computer .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.22 7 Maintaining Your Printer General care and cleaning.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*23 Cleaning the scanner glass .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....



.....  
.....  
.....  
.....

*29 Upgrading the printer software and firmware .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...33 Upgrading software and firmware on a WINDOWS OS-based computer .....*

.....  
.....  
.....

.....  
.....

*....33 Upgrading software and firmware on a MACINTOSH Computer .*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....

*33 Monitoring and adjusting printer performance .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*34 Checking ink levels.....*

.....  
.....  
.....

.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *34 Resetting factory defaults* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *34 8 Troubleshooting Basic troubleshooting* ...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *35 Status light* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.36 Power status light.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*....36 9 Product and Safety Specifications Specifications and features .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....37 *Print performance* ....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

...37 *Photo printing features* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.37 *Copy document features* .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....



.....  
.....  
.....  
.....  
.....

.....38 Copy photo features ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....38 Scanning features .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....38 Paper tray features...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....39 Ink cartridges .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....39 Connectivity.

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....39 Software support ...

.....



.....  
.....  
.....  
.....

..... 40 System requirements ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 40 iv [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer Safety information ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

42 Regulatory compliance.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

....44 FCC statement .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....44 Canadian statements....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

..44 German compliance statement ...

.....

.....  
.....  
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 45 REACH Article 33 declarations.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 45 Waste electrical and electronic equipment labeling.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 45 ENERGY STAR® Qualified ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....



out the paper tray extender until it is fully extended. 3.

Lift the paper stop. 4. Make sure the left paper-edge guide is to the far left. left paper-edge guide Back Home MS SD/HC MMC paper stop paper tray extender  
8 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer 5. Carefully fan and stack the paper, then insert it into the tray. 6. Move the  
paper forward until it stops. 7.

Move the left paper-edge guide until it touches the paper. left paper-edge guide Back Home MS SD/HC MMC Loading photo paper The paper tray capacity is  
20 sheets of photo paper. To load photo paper: 1. Remove any paper from the tray. 2.

Carefully fan and stack the photo paper, then insert the paper (short side first) into the tray with the logo side facing up. 3. Move the paper forward until it  
stops. 4. Move the left paper-edge guide until it touches the paper.

left paper-edge guide Back Home MS SD/HC MMC [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 9 Handling Paper Loading envelopes The paper tray capacity is 20  
envelopes. To load envelopes: 1. Remove any paper from the tray. 2. Insert the envelope(s) into the tray with the flap up and against the right side of the tray.  
3. Move the left paper-edge guide until it touches the envelope(s). left paper-edge guide 10 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport)

4 Printing Pictures The quickest way to print pictures is from a memory card inserted into the printer. Another way to print pictures  
is to use Home Center Software on your computer running the WINDOWS Operating System. Home Center Software lets you edit and enhance your pictures  
on your computer before printing. Open Home Center Software, select Print Pictures, then follow the on-screen instructions. If you have a MACINTOSH  
Computer, print your pictures using KODAK EASYSHARE Software, iPhoto, or another picture-editing program. Changing Print Photos Options / Defaults  
You can change the print photos options for an individual picture or group of pictures, or you can change the settings and save them as the default. To change  
print photos options: 1. Press Home. 2.

If necessary, press to select View and Print Photos, then press OK. 3. Press or as needed to change the settings below. Print Photos Option View Photos  
Transfer All to PC --Settings Description Scroll through the pictures on the memory card. To transfer all the pictures on the memory card to your computer,  
press OK then Start.

(Your printer and computer must be connected with a USB cable.) The number of copies that print. If the selected copy size is smaller than the paper in the  
paper tray, the printer automatically arranges the pictures to best fit the paper size. Quantity Print Size 1 (default) to 99 2x3 3.5 x 5 4 x 6 (default) 4x7 5x7 4 x  
12 8 x 10 8.



[You're reading an excerpt. Click here to read official KODAK ESP  
3200 user guide  
<http://yourpdfguides.com/dref/2702087>](http://yourpdfguides.com/dref/2702087)



5 x 11 or A4 Normal (default) Best Draft Plain Paper Quality Good quality output; prints faster than Best. The highest quality. The fastest print speed. The printer detects when you load photo paper and sets Best quality automatically. 11 Photo Paper Quality Automatic (default) [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) Printing Pictures Print Photos Option Color Settings Color (default) Black & White Description Prints full color. Prints black and white (gray scale). Adjusts the image brightness to correct for underexposure and reduces the variation in contrast in different areas of the picture. Prints the date of the picture(s) (the date the picture was taken or last edited) in a corner of the print.

To save settings as the new default, press OK, select Yes, then press OK. Scene Balance On (default) Off Add Date to Prints No (default) Yes No (default) Yes Save as Defaults Printing pictures from a memory card Types of memory Your printer accepts the following memory cards: cards · SD Card · · · SDHC Card MMC Card Memory Stick Variations of the memory cards listed above that require an adapter (for example, MEMORY STICK Duo, miniSD, and microSD) the adapter and the memory card as a unit; do not remove the memory card while leaving the adapter in the printer. IMPORTANT: If you use a memory card with an adapter, make sure you insert and remove Printing a picture If you use the default settings, one 4 x 6 in. /101 x 152 mm picture is printed. using the default To print a picture: settings 1. Load photo paper with the logo side facing up (see Loading photo paper, page 9), and move the left paper-edge guide until it touches the paper. 12 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer 2. Insert the memory card into the memory card slot.

Back Home MS SD/H C MMC memory card slot left paper-edge guide 3. Press or to display the picture you want to print. 4. Press Start to begin printing. IMPORTANT: To prevent loss of data from your memory card, do not remove it from the printer while printing.

Printing pictures To print pictures with options other than the default settings (such as a different using non-default print size, black-and-white instead of color, or a date on the print): photo options 1. Load photo paper with the logo side facing up (see Loading photo paper, page 9), and move the left paper-edge guide until it touches the paper. Back Home MS SD/H C MMC memory card slot left paper-edge guide 2. Press Back. 3.

If necessary, use the navigation buttons to select View and Print Photos. 4. Press OK. [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 13 Printing Pictures 5. Press to select the option you want to change (for example, Quantity, Print Size, Color, Scene Balance, or Add Date to Print). 6. Press to change the selection. 7.

Repeat steps 5 and 6 for each option you want to change. 8. When you are done changing options, press to select View Photos, then press OK. 9. Insert the memory card into the memory card slot. 10. Press or to select the picture you want to print, then press OK. A check mark on the LCD indicates the picture is selected. NOTE: To deselect the picture, press OK again. 11.

To select additional pictures, press or until the picture is displayed, then press OK. 12. When you are done selecting pictures, press Start to begin printing. IMPORTANT: To prevent loss of data from your memory card, do not remove it from the printer while printing. Printing tagged pictures Some digital cameras let you tag (or "mark") pictures on the memory card for printing.

This creates a tag that is recognized by the printer. If you choose to print tagged pictures, they will be printed according to the default settings on your printer (unless otherwise specified by the tag from the camera). NOTE: Refer to your camera user guide to determine whether your camera supports tagged (also "marked" or "DPOF") functionality. To print tagged pictures: 1. Load photo paper with the logo side facing up (see Loading photo paper, page 9), and move the left paper-edge guide until it touches the paper.

14 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer 2. Insert the memory card into the memory card slot. Back Home MS SD/H C MMC memory card slot left paper-edge guide 3. When the "Print tagged images?" message appears, press Start. Printing panoramic pictures To print a panoramic picture, load 4 x 12 in. / 101 x 305 mm paper, or US letter or A4 paper. Transferring pictures to a computer You can transfer .jpg, .

mov, and .wav files from a memory card in the printer to your computer. To transfer these files, the printer must be connected to your computer with a USB cable. NOTE: If you have large video files or a large number of pictures (400 or more), we recommend that you use a memory card reader attached directly to your computer to transfer them. Transferring pictures to a WINDOWS OS-based computer 1. 2. 3. 4. 5. 6. 7. 1. 2. 3. 4.

5. 6. 7. Insert the memory card into the memory card slot on the printer. Press Back.

If necessary, use the navigation buttons to select View and Print Photos. Press OK. Press to select Transfer All to PC, then press OK. Press Start. Follow the on-screen instructions on your computer. Insert the memory card into the memory card slot on the printer. Press Back. If necessary, use the navigation buttons to select View and Print Photos. Press OK. Press to select Transfer All to PC, then press OK.

Press Start. Use iPhoto or Image Capture on your computer to complete the transfer. Transferring pictures to a MACINTOSH Computer [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 15 5 Copying You can copy documents and pictures with your all-in-one printer. The printer produces highquality color or black-and-white copies on a variety of paper types (see Paper types, page 7). Making a copy To copy a document or a picture using the default settings: 1. @@ Close the lid. NOTE: Single-button document copy is a feature that lets you put paper on the scanner and immediately press Start, without following the remaining steps below. You can use this feature when the printer has been idle or when it is turned on; the printer automatically goes to Copy Document mode.

3. Press Home. 4. If needed, press or to select Copy Document or Copy Photo. 5.

Press Start to begin copying. Changing copy options You can change the copy options for an individual copy, or you can change the settings for copying documents or copying photos, and save them as the defaults. Changing copy To change the copy document options: document options 1. Press Home. 2. If necessary, press 3. Press OK. to select Copy Document. 16 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer 4. Press to go through the options, and press settings below: Copy Document Option Quantity Copy Size Settings 1 (default) to 99 Same Size (default) Fit to Page or as needed to change the Description The number of copies that print.



[You're reading an excerpt. Click here to read official KODAK ESP](http://yourpdfguides.com/dref/2702087)

[3200 user guide](http://yourpdfguides.com/dref/2702087)

<http://yourpdfguides.com/dref/2702087>

The copy is the same size as the original. The printer detects the size of the original on the scanner glass and the size of the paper in the paper tray, and automatically reduces or enlarges the original so that the copy fits on the paper. Reduces up to 20% or enlarges up to 500% of the original size.

Good quality output; prints faster than Best. The highest quality, but the slowest print speed; eliminates the banding effect that sometimes occurs when printing Draft or Normal. The fastest print speed, but the lowest quality. The printer detects when you load photo paper and sets Best quality automatically. Prints full color. Prints black and white (gray scale). Lightens or darkens the copy. 0 (Normal) is no change from the original; -3 is the darkest; +3 is the lightest. To save settings as the new default: press OK, select Yes, then press OK. 20% to 500% Plain Paper Quality Normal (default) Best Draft Photo Paper Quality Automatic (default) Color (default) Black & White Brightness -3 to +3 (0 is default) Color Save as Defaults No / Yes www.

[kodak.com/go/aiosupport](http://kodak.com/go/aiosupport) 17 Copying Changing copy photo options To change the copy photo options: 1. 2. 3. 4.

Press Home. If necessary, press to select Copy Photo. Press OK. Press to view the options, and press or below: Settings 1 (default) to 99 2x3 3.5 x 5 4 x 6 (default) 4x7 5x7 4 x 12 8 x 10 8.

5 x 11 or A4 Normal (default) Best Draft Photo Paper Quality Automatic (default) Color (default) Black & White Brightness -3 to +3 (0 is default) as needed to change the settings Description The number of copies that print. If the selected copy size is smaller than the paper in the paper tray, the printer automatically arranges the pictures to best fit the paper size. Copy Photo Option Quantity Copy Size Plain Paper Quality Good quality output; prints faster than Best. The highest quality. The fastest print speed. The printer detects when you load photo paper and sets Best quality automatically. Prints full color. Prints black and white (gray scale). Lightens or darkens the copy. 0 (Normal) is no change from the original; -3 is the darkest; +3 is the lightest.

@@@Lift the scanner lid, and place the document face down on the glass. @@3. 4. 5. 6. 7. Close the lid. Press Home. If needed, press or to select Copy Document. Press OK.

Press to select Copy Size. @@@Lift the scanner lid, and place the photo face down on the glass. 2. 3. 4.

5. 6. 7. 8. Close the lid.

Press Home. If needed, press or to select Copy Photo. Press OK. Press to select Copy Size. Press or to select the photo size you want. @@@@3. 4. 5. 6. 7.

Close the lid. Press Home. If needed, press or to select Copy Document or Copy Photo. Press OK. Press to select Brightness. @@8. @@@@ (Click the Tool icon, then select Printer Scan Settings.) You can adjust the following settings for scanned pictures and documents: · Color / black-and-white / gray scale ·

Resolution (dpi) · File format (.pdf, .rtf, .

tif, .jpg for documents; .jpg, .bmp, .tif for pictures) · Base name (by default, scanned files are named "scan1", "scan2", etc) · Location (folder) where the scanned files will be saved Before saving a scanned file, you can preview it in Home Center Software, and crop the output as desired.

See the Home Center Software Help (? icon) for instructions. Simple scanning To scan a single document or picture: 1. @@Close the lid. 3.

@@@@@OS-based 2.

Close the lid. computer 3. @@5. 6. 7. 8. Open the Tools panel, if it is not open, by clicking the Tools icon. Click Printer Scan Settings. Select the Picture tab. @@@@Computer 2.

Close the lid. 3. 4. 5. 6. 7. Open Home Center Software, then select the Tools tab. Select Color Picture or Black and White Picture. Click the Scan Application button. Select Automatically detect multiple pictures, if it is not selected.

@@@@@If you use a power strip, don't turn off the power strip. Keep the printhead and ink cartridges in the printer at all times. This helps prevent damage to the printhead. Service agreements are available in some countries. Contact dealers of KODAK Products for more information.

@@@@@Keep the surrounding area vacuumed and litter-free. @@Do not place objects on the printer. @@@@If this does not solve the problem, contact Kodak Service & Support. [www.kodak.com](http://www.kodak.com).

[com/go/aiosupport](http://com/go/aiosupport) 23 Maintaining Your Printer Cleaning the scanner glass For good quality copies and scans, ensure the printer's scanner glass and lid backing are clean; dust the exterior as needed. CAUTION: Do not use abrasives, acetone, benzene, or carbon tetrachloride on the glass, as these chemicals may damage it. Do not pour or spray liquid directly on the glass; the liquid might seep under the glass and damage the printer. To clean the scanner glass: 1.

Unplug the printer and raise the scanner lid. Back Home MS SD/HC MMC 2. Wipe the glass with a soft cloth or sponge, slightly moistened with a nonabrasive glass cleaner. 3. Dry the glass with a lint-free cloth. 4.

When finished cleaning, plug in the printer. 24 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer Cleaning inside the scanner lid Minor debris can accumulate on the white document backing located under the scanner lid. CAUTION: Do not use paper-based wipes, as they can scratch the underside of the scanner lid. @@To clean the white document backing under the scanner lid: 1. Unplug the printer and raise the scanner lid. MS SD/HC MMC Back Home MS SD/HC MMC 2. Gently clean the underside of the lid with a soft cloth or sponge, slightly moistened with a mild soap and warm water.

3.

Dry the underside with a chamois or soft cloth. 4. If the white document backing needs further cleaning, use isopropyl (rubbing) alcohol on a soft cloth, then wipe thoroughly with a cloth dampened with water to remove any residual alcohol. 5. When finished cleaning, plug in the printer.

[www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 25 Maintaining Your Printer Replacing ink cartridges Your printer uses both black and color ink cartridges. You can check the approximate ink levels on the LCD (see Checking ink levels, page 34) or in Home Center Software. When an ink cartridge is out of ink, the printer LCD displays a message stating that the black or color ink cartridge needs replacing.

IMPORTANT: Do not use non-Kodak brand or refilled ink cartridges. To replace an ink cartridge: 1. Make sure your printer is on. 2. Lift the printer access door, and wait for the carriage to move to the access position. The black and color ink cartridges are located in the printhead. printhead color ink cartridge black ink cartridge 26 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer 3. Pinch the latch on the ink cartridge and lift it out of the printhead.

4. Remove the ink cartridge from its bag. IMPORTANT: Insert the ink cartridge into the printhead immediately to prevent the printhead from drying out. 5. Remove the protective cap from the cartridge.



[You're reading an excerpt. Click here to read official KODAK ESP 3200 user guide](http://yourpdfguides.com/dref/2702087)

<http://yourpdfguides.com/dref/2702087>

10 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 27 Maintaining Your Printer 6. Insert the ink cartridge into the printhead. 7. Press down on the tab until you hear a click. 8. Close the printer access door. 28 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer Replacing the printhead IMPORTANT: Replacing the printhead is not a regular maintenance procedure. Replace the printhead only if you receive a new printhead from Kodak. To replace the printhead: 1. Make sure your printer is on. 2. Lift the printer access door, and wait for the carriage to move to the access position. 3. Remove any paper that may be loaded in the printer. 4. Remove both ink cartridges and set them aside. [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 29 Maintaining Your Printer 5. Unlatch the used printhead by lifting the button in the center of the carriage. 6. Lift the used printhead out of the carriage. 7. Remove the two plastic protective shields. 9. Place the new printhead into the carriage. 10. Insert the black ink cartridge into the printhead. 12. Repeats steps 11 - 12 for the color ink cartridge. 14. Close the printer access door. The printer detects the new printhead. Use these procedure when you want to upgrade manually. To upgrade the software and firmware: 1. Make sure that your computer is connected to the Internet. 2. Open Home Center Software. 4. Click the Tools icon to open the side navigation pane. 5. Under Web Links, click Software Updates to check whether software updates are available. 6. If there are updates, click Next and follow the on-screen instructions. 7. Under Web Links, click Firmware Updates to check whether firmware updates are available. 8. If there are updates, click Next and follow the on-screen instructions. To upgrade the software: 1. 2. 3.

4. Make sure that your computer is connected to the Internet. Open Home Center Software. On the File menu, select Check for Updates. If there are software updates, follow the on-screen instructions for upgrading your software. Upgrading software and firmware on a WINDOWS OS-based computer Upgrading software and firmware on a MACINTOSH Computer To upgrade the firmware: 1. Go to [www.kodak.com/go/esp3250downloads](http://www.kodak.com/go/esp3250downloads). 2. Select your operating system from the drop-down list. 4. Click Select in the Firmware box. 5. Read the instructions, click Download, then follow the on-screen instructions. [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 33 Maintaining Your Printer Monitoring and adjusting printer performance From the control panel, you can perform many tasks to help you keep the printer functioning well. Checking ink levels To check the ink levels: 1. Press Home. 2. Press to select Maintenance. 3. With Check Ink Levels selected, press OK. The LCD shows approximate levels of ink in the cartridges so you know when it's time to order replacement cartridges. Resetting factory To reset all defaults to the factory default settings: defaults 1. Press Home. 2. Press to select Reset All Settings, then press OK. 4. When you see the message, "This will reset printer settings to factory defaults," press OK. 34 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 8 Troubleshooting Basic troubleshooting Some problems can be resolved quickly by power cycling the printer: Turn off your printer. Wait five seconds. Turn on the printer. Use the following information to help troubleshoot problems with your printer. For more troubleshooting information, go to: · [www.kodak.com/go/itg](http://www.kodak.com/go/itg) to use our Step-by-Step Solutions and Repair tool for help with problems such as paper jams and image quality. · [www.kodak.com/go/esp3250support](http://www.kodak.com/go/esp3250support) for FAQs and links to other support for your printer. · [www.kodak.com/go/esp3250downloads](http://www.kodak.com/go/esp3250downloads) to download the latest software and firmware files. · [www.kodak.com/go/esp3250specs](http://www.kodak.com/go/esp3250specs) for the recommended system requirements. Problem Possible Solutions Printer does not power on · Make sure you are using the power cord that came with your printer. · Make sure the power cord is connected to the AC adapter and is plugged into an outlet or power strip. · If the USB 2.0 cable was disconnected from the printer, then reconnected, or if power to the printer was interrupted, restart the computer. Printer not detected · Make sure your printer is plugged in and turned on. · Make sure: you have a USB 2.0 cable. that the USB cable is connected to both your printer and your computer.

Printhead carriage jam · Open the printer access door and clear any obstructions. · Check that the printhead and ink cartridges are installed correctly. (The printhead and ink cartridges are installed correctly when you hear them click into place.) · For best results, use KODAK Paper or a paper with the COLORLOK Technology logo on the package. · Make sure the paper is loaded correctly. See Loading paper, page 8 5. For more help, go to [www.kodak.com/go/itg](http://www.kodak.com/go/itg), select All-in-one printer, then Print Quality (missing colors, blank prints, etc). · Check that KODAK Ink Cartridge(s) are installed. Do not use non-Kodak brand or refilled ink cartridges. · Remove, then install the cartridges again. Make sure the cartridges click into place. Image quality problems Ink cartridge problems [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 35 Troubleshooting Problem Paper jam Possible Solutions · Check for paper in the rear-access cleanout area. · Open the printer access door and gently remove any paper from inside the printer. · Make sure the paper in the tray is free of tears or creases. · Make sure you do not overload the paper tray. For more information, see [www.kodak.com/go/itg](http://www.kodak.com/go/itg). Select All-in-one printer, then Paper jam. If you need to contact Kodak (see [www.kodak.com/go/contact](http://www.kodak.com/go/contact)), have the following information available: · Kodak Service Number (located inside or on the outside of the printer) · Printer mode number (located on the back of the printer) · Computer model, operating system, and version of Home Center Software · Exact wording of any error message(s) Error messages or other problems you cannot resolve For more troubleshooting information, go to [www.kodak.com/go/esp3250support](http://www.kodak.com/go/esp3250support). Status light The status light indicates the condition of the printer. Power status light Power light Off What it means · The printer is turned off.

Press the on/off button to turn on power. · The printer does not have power. Make sure that the power cord is plugged into the back of the printer and into an electrical outlet, and that the electrical outlet has power. · The printer is busy. Wait for the printer to finish the task. · The printer is ready Blinking On 36 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 9 Product and Safety Specifications Specifications for this KODAK ESP 3200 Series All-in-One Printer are described in the tables below. Specifications and features Print performance Print Performance Black Print Speed Color Print Speed Print Technology Print Quality Modes Up to 30 pages per minute on plain paper Up to 29 pages per minute on plain paper Continuous-tone, thermal inkjet Draft, Normal, and Best on plain paper Photo quality mode on photo paper Photo printing features Photo Printing Features Quantity Print Sizes Up to 99 (may vary for different models of the 3200 series printers) 2 x 3 in.



[You're reading an excerpt. Click here to read official KODAK ESP 3200 user guide](#)



(5 x 7.

6 cm) 3.5 x 5 in. (9 x 12.7 cm) 4 x 6 in. (10 x 15 cm) 4 x 7 in.

(10 x 18 cm) (Panoramic) 4 x 12 in. (10 x 30 cm) 5 x 7 in. (13 x 18 cm) 8 x 10 in. (20 x 25 cm) US Letter - 8.5 x 11 in.

(22 x 28 cm) A4 (21 x 30 cm) Best, Normal, Draft Auto-detect plain paper, photo paper, and transparency Optimize image quality for KODAK Photo Papers with barcode KODAK PERFECT TOUCH Technology with Home Center Software Yes, No Color, Black-and-white On, Off Quality Auto-detect Media Image Enhancement Add Dates to Prints Color Scene Balance [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 37 Product and Safety Specifications Copy document features Copy Document Features Color Quantity Copy Sizes Plain Paper Quality Brightness Black-and-white or color 1 to 99 copies (may vary for different models of the 3200 series printers) Same Size, Fit-to-Page, 20% to 500% (may vary for different models of the 3200 series printers) Best, Normal, Draft 3 to + 3 Copy photo features Copy Photo Features Color Quantity Copy Sizes Black-and-white or color 1 to 99 copies (may vary for different models of the 3200 series printers) 2 x 3 in. (5 x 7.6 cm) 3.5 x 5 in. (9 x 12.7 cm) 4 x 6 in. (10 x 15 cm) 4 x 7 in. (10 x 18 cm) (Panoramic) 4 x 12 in.

(10 x 30 cm) 5 x 7 in. (13 x 18 cm) 8 x 10 in. (20 x 25 cm) US Letter - 8.5 x 11 in. (22 x 28 cm) A4 (21 x 30 cm) Automatic 3 to + 3 Quality Brightness Scanning features Scanning Features Scanner Type Maximum Scan Size Functions Contact Image Sensor (CIS) 8.5 x 11.7 in. (21.6 x 29.7 cm) Segmentation scanning Auto-destination OCR 38 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport)

KODAK ESP 3200 Series All-in-One Printer Paper tray features Paper Tray Features Paper Capacity 100 sheets of 20 lb plain paper 20 sheets of photo paper, up to 12 mil (290 gsm) 20 envelopes 4 x 6 in. to 8.5 x 14 in. (10 x 15 cm to 21.

6 x 36 cm) Tray Size Ink cartridges Ink Cartridges Ink Handling Ink Life 2-cartridge, 6-ink system 1-year warranty from date of purchase Connectivity Connectivity Protocols Supported Devices Supported Image Formats Supported Number of USB Ports Protocols Supported USB 2.0, DPOF, MIPC WINDOWS OS-based and MACINTOSH Computers, memory cards (SD, MS/Duo, MMC, SDHC) Image printing supports JPEG (EXIF v2.2); does not support progressive JPEG format One rear device port (high speed) USB 2.0, DPOF (Tagged image printing), MIPC Software support Software Support Application Support KODAK EASYSHARE Software for photos or third-party image management applications; optical character reader (OCR) support for documents Plain paper, photo paper, envelopes, greeting cards, transparencies with white stripe, labels TWAIN and WIA, WIA2 (VISTA OS) import, including EASYSHARE Software, segmentation scanning Software and firmware updates available through Web support Media Support Scanner Support Update Support [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport)

39 Product and Safety Specifications Physical specifications Physical Specifications Power US: 110/120 V AC, 50/60 Hz at 2 A WW: 110-240 V AC, 50-60 Hz at 2 A Output: 36 V DC at 1.6 A 422 x 98 x 181 mm [L x H x D] (16.6 x 11.7 x 7.1 in.) 5.6 kg (12.3 lb) 5°C (41°F) to 35°C (95°F), 15 to 85% RH (non-condensing and atmospheric pressure to approximately 10,000 ft ASL) 15°C (59°F) to 30°C (86°F), and 20 to 80% RH.

ENERGY STAR® Qualified Dimensions Weight Operating Range Full image Quality Environmental Range Warranty Warranty Product Printhead One year from purchase (with proof of purchase) One year from purchase (with proof of purchase) System requirements The following specifications are subject to change without notice. WINDOWS OS-based computer WINDOWS OS-Based Computer Operating System CPU Clock Speed Memory Available Disk Space Interface Removable Drive Other Minimum MICROSOFT WINDOWS XP SP2 OS Celeron 1.2 GHz 512 MB RAM 500 MB available USB 2.0 CD-ROM Internet access capability Recommended MICROSOFT WINDOWS VISTA OS 32- or 64-bit processor 2 GHz 1024 MB RAM 500 MB available USB 2.0 CD-ROM Internet access capability 40 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer MACINTOSH Computers MACINTOSH Computers Operating System CPU Clock Speed Memory Available Disk Space Interface Removable Drive Other Minimum MACINTOSH OS X 10.4.8 PowerPC G4, G5, or Intel Based Mac 1.2 GHz 512 MB RAM 200 MB available USB 2.

0 Full Speed CD-ROM Internet access capability Recommended OS X 10.4.8 or later Intel Based Mac 2 GHz 1024 MB RAM 200 MB available USB 2.0 High Speed CD-ROM Internet access capability Paper types supported Paper Types Supported Plain Paper Photo Paper Card Stock Envelopes Transparencies Labels Iron-on Transfers 20 to 24 lb (60 to 90 gsm) Up to 12 mil (290 gsm) 110 lb index max (200 gsm) 20 to 24 lb (75 to 90 gsm) All commercially available inkjet varieties (with a white stripe) All commercially available inkjet varieties on 8.5 x 11 in.

and A4 size sheets All commercially available inkjet varieties on 8.5 x 11 in. and A4 size sheets [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 41 Product and Safety Specifications Paper sizes supported Paper Sizes Supported Usage Document Page Sizes Labels Size A4 (210 x 297 mm) A5 (148 x 210 mm) A6 (105 x 148 mm) B5 (176 x 250 mm) US Executive (7.

25 x 10.5 in.) (184 x 266 mm) US Letter (8.5 x 11 in.) (216 x 280 mm) US Legal (8.5 x 14 in.) (216 x 356 mm) Custom sizes from 48.5 in. wide and 614 in. long 4 x 6 in.

index cards (101 x 152 mm) 5 x 7 in. index cards (127 x 178 mm) A4 (210 x 297 mm) US Letter (8.5 x 11 in.) (216 x 280 mm) C5 (6.38 x 9 in.) (162 x 299 mm) C6 (4.49 x 6.38 in.) (114 x 162 mm) A2 (4.37 x 5.

75 in.) (111 x 146 mm) DL (designated long) (4.33 x 8.66 in.) (110 x 220 mm) US #10 (4.

12 x 9.5 in.) (105 x 241 mm) 4 x 6 in. (102 x 152 mm) 4 x 7 in. (102 x 178 mm) 4 x 12 in. (102 x 305 mm) 5 x 7 in.

(127 x 178 mm) 8 x 10 in. (203 x 254 mm) US Letter (8.5 x 11 in.) (216 x 280 mm) A4 (210 x 297 mm) 4 x 5.5 in. (101 x 140 mm) 4 x 8 in. (101 x 203 mm) Index Card Stock Transparency Iron-on Transfer Label Sizes Photo Greeting card Safety information · Always follow all warnings and instructions marked on the product. · Use only the power source indicated on the product regulatory label. · Use only the power cord that comes with the product. Using another power cord may cause fire and/or shock.

Do not use the included power cord with any other equipment. 42 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 3200 Series All-in-One Printer · If you do not use this product for a long period of time, unplug it from the electrical outlet. · Always turn this product off by using the On/Off button. Wait until the On/Off button stops flashing before removing the power plug from the outlet. · Do not allow the power cord to become damaged or frayed. · If you need to use an extension cord with this product, make sure that the ampere rating of the product does not exceed the ampere rating of the extension cord. · Place the product on a flat, stable surface that extends beyond the product's base in all directions.



[You're reading an excerpt. Click here to read official KODAK ESP 3200 user guide](http://yourpdfguides.com/dref/2702087)

<http://yourpdfguides.com/dref/2702087>

*This product will not operate properly if tilted or at an angle.*

*· When storing or transporting this product, do not tilt or stand it on its side. Never turn this product upside down (ink can leak out of the product). · Avoid placing this product in an environment that is subject to rapid changes in temperature or humidity, mechanical shocks, vibration, or dust. Do not place near radiators, heating vents, or in direct sunlight. · Leave enough room around this product for sufficient ventilation.*

*· Do not block this product's covers or openings, or insert any objects through slots. · Do not use aerosol products inside or around this product. · Do not spill any liquid on this product. · Do not attempt to repair or service this product. · If the power cord or plug is damaged, if any liquid has been spilled onto the product, if the product has been dropped or the case damaged, if the product does not operate normally or exhibits a major change in performance level, unplug this product and contact Kodak at [www.kodak.com/go/contact](http://www.kodak.com/go/contact).*

*LCD screen safety · Use only a dry, soft cloth to clean the LCD screen. Do not use any liquid or chemical cleaners. · If the LCD screen is damaged, contact Kodak immediately. If any of the solution from the display gets on your hands, wash then thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush your eyes immediately with water. If any discomfort or change in vision persists after washing, seek medical attention immediately. Ink cartridge safety · Keep all ink cartridges out of the reach of children. · If ink gets on your skin, wash with soap and water.*

*If ink gets into your eyes, flush immediately with water. If any discomfort or change in vision persists after washing, seek medical attention immediately. · For MSDS information on inks, go to [www.kodak.com/go/MSDS](http://www.kodak.com/go/MSDS). [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport) 43 Product and Safety Specifications Regulatory compliance FCC statement The United states Federal Communications Commission (in CFR 47 Part 15.105) has specified that the following notice be brought to the attention of the users of this product: Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.*

*This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver · Connect the product into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help.*

*CAUTION: Pursuant to Part 15.21 of the FCC Rules, any changes or modifications to this product not expressly approved by Eastman Kodak Company might cause harmful interference and void the FCC authorization to operate this product. The radiated energy from this product is well below the FCC radio frequency exposure limits. Nevertheless, the product shall be used in such a manner that the potential for human contact during normal operation is minimized. This product and any attached external antenna, if supported, shall be placed in such a manner to minimize the potential for human contact during normal operation.*

*In order to avoid the possibility of exceeding the FCC exposure limits, human proximity shall not be less than 20 cm (8 inches) during normal operation. Canadian statements This product meets the applicable Industry Canada technical specifications. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003. 44 [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport) KODAK ESP 3200 Series All-in-One Printer Industry Canada (IC) Radiation Exposure Statement This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your person. German compliance statement Noise emissions for this equipment do not exceed 70 dBa. @@@@ service marks.*

*As an ENERGY STAR partner, KODAK has determined that this product meets ENERGY STAR Guidelines for energy efficiency. For more information on the ENERGY STAR program, see [www.energystar.gov](http://www.energystar.gov). [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport) 45 Product and Safety Specifications Warranty Information Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased.*

*You may be required to send Products, at your expense, to the authorized service facility for the country where the Products were purchased. @@@@ If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. Limitations This warranty does not cover circumstances beyond Kodak's control.*

*This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. KODAK MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY FOR THIS PRODUCT, AND DISCLAIMS THE IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law.*



[You're reading an excerpt. Click here to read official KODAK ESP](http://yourpdfguides.com/dref/2702087)

[3200 user guide](http://yourpdfguides.com/dref/2702087)

<http://yourpdfguides.com/dref/2702087>

The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause.

Liability for any special consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services or claims of your customers for such damages resulting from the purchase, use or failure of the Product), regardless of cause, or for breach of any written or implied warranty is expressly disclaimed. Your Rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction. Your statutory rights are not affected. Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. 46 [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport) KODAK ESP 3200 Series All-in-One Printer Declaration of Conformity

Manufacturer's Name: Manufacturer's Address: Eastman Kodak Company 16275 Technology Drive San Diego, CA 92127, USA Declares our sole responsibility that the product Product Name: Power adapters: Radio Module Number: KODAK ESP 3250 All-in-One Printer HP-A0601R3, VP-09500084-000 US101 conforms to the following Product Specifications: Safety: IEC 60950-1:2001 EN 60950-1:2001 + A11:2004 UL 60950-1:2003 R7.

06 CAN/CSA-C22.2 No. 60950-1-03 EN 55022:2006+A1:2007, Class B CISPR 22:1997 Class B EN 61000-3-2:2006, Class A EN 61000-3-3:1995+A1:2001 +A2:2005 AS/NZS CISPR 22:2006, Class B EN 61000-4-2:1995 + A1:1998 + A2:2001 EN 61000-4-3:2006 + A1:2008 EN 61000-4-4:2004 EN 61000-4-11:2004 EN 61000-4-8:2001 ED 1.1 CFR 47, FCC Part 15, Subpart B, Class B EN 61000-4-5:2006 EN 61000-4-6:2007 ICES003:2004 Class B ANSI C63.4-2003 EN 301 489-1 V1.8.1 (2008-04) EN 301 489-17 V1.3.2 (2008-04) AS/NZS 4268:2003 + A1:2005 + A2:2006 EMC: Radio: The product herewith complies with the requirements of the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC and carries the CE marking. In addition, it complies with the WEEE Directive 2002/96/EC and RoHS Directive 2002/95/EC.

The product was tested in a typical configuration. [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport) 47 Index B Back button, 2 Black print speed, 38 C Cancel button, 2 Changing ink cartridges. See Replacing ink cartridges Cleaning the printer, 24 Components, printer, 1 Configuring your printer, 4 basic printer settings, 4 setting printer as the default printer, 5 Control panel, 1, 2 Copies adjusting settings, 20 changing document options, 17 changing photo options, 19 darkening or lightening, 21 enlarging or reducing a photo, 20 enlarging or reducing documents, 20 making, 17 Copy document features, 39 Copy photo features, 39 D Darkening copies, 21 Date and time setting, 4 synchronizing to your computer, 4 Default printer settings, resetting, 4 Document paper sizes, 43 Downloading latest software and firmware, 36 DPOF.

See Tagged images printing E Energy Star qualification, 46 Enlarging or reducing a copy document, 20 photo, 20 Envelopes capacity, 11 loading, 11 sizes, 9 Extender, paper tray, 1 F FAQs, Web support, 36 Firmware, downloading, 36 G Glass, scanner, 1 Greeting card size paper, 43 Guides left paper-edge, 1 right paper-edge, 1 H Home button, 2 Home Center Software, 3 for MACINTOSH Computers, 3 Maintenance pane, 3 Select pane, 3 Tools pane, 3 for WINDOWS OS-based computers, 3 Help icon, 3 Home icon, 3 Tools icon, 3 I Image Capture software, 16 Image formats supported, 40 Index card stock sizes, 43 Ink cartridge replacing, 27 Ink levels, 27 iPhoto software, 16 Iron-on transfers, 43 K KODAK Home Center Software. See Home Center Software L Label sizes, 43 Language, setting, 4 LCD, 1, 2 Left paper-edge guide, 1 Lid, scanner, 1 Lightening copies, 21 Lights power status, 37 Loading paper envelopes, 11 photo, 10 plain, 9 48 [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport) KODAK ESP 3200 Series All-in-One printer M Maintenance, 24 Marked images, printing. See Tagged images Media supported, 42 Memory card slot, 1 Memory cards printing pictures from, 13 types compatible with printer, 13 Monitoring printer performance, 35 N Navigation buttons, 2 O OK button, 2 On/Off button, 2 Overview of printer, 1 P Panoramic photos, printing, 16 Paper, 8 loading envelopes, 11 photo paper, 10 plain paper, 9 sizes, 8 sizes supported, 43 types, 8 types supported, 42 Paper stop, 1 Paper tray, 1 Paper tray capacity envelopes, 11 photo paper, 10 plain paper, 9 Paper tray extender, 1 Photo paper capacity, 10 loading, 10 Photo paper sizes, 43 Photo printing features, 38 Plain paper capacity, 9 loading, 9 Ports power cord connection, 1 USB, 1 Power status light, 37 Print photos options, 12 Print sizes, 38 Printer access door, 1 Printer performance, monitoring and adjusting, 35 Printer supplies maintaining, 24 recycling, 24 Printhead removing, 31 replacing, 30 Printhead with ink cartridges installed, 1 Printing panoramic photos, 16 tagged image photos, 15 Protecting the printer, 24 R Rear-access cleanout area, 1 Recycling printer or supplies, 24 Reducing or enlarging a copy document, 20 photo, 20 Removing the printhead, 31 Replacing ink cartridges, 27 Right paper-edge guide, 1 S Scanner glass, 1 lid, 1 Scanning, 22 changing settings in Home Center Software, 22 multiple pictures simultaneously, 23 Service agreements, 24 Settings basic printer, 4 Software support, 40 Software, downloading, 36 Start button, 2 Step-by-step solutions and repair, 36 Stop, paper, 1 System requirements, 36 T Tagged images printing, 15 setting, 4 Time to low power, setting, 4 Transferring pictures to a computer, 16 Transparency sizes, 43 Tray capacity envelopes, 11 photo paper, 10 plain paper, 9 Tray, paper, 1 Troubleshooting, 36 [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport)

49 Index U USB port, 1 W Warranty, 40 Water exposure, troubleshooting, 24 Web support [www.kodak.com/go/esp3250downloads](http://www.kodak.com/go/esp3250downloads), 36 [www.kodak.com/go/esp3250specs](http://www.kodak.com/go/esp3250specs), 36 [www.kodak.com/go/esp3250support](http://www.kodak.com/go/esp3250support), 36 [www.kodak.com/go/inkjetnetworking](http://www.kodak.com/go/inkjetnetworking), 36 [www.kodak.com/go/itg](http://www.kodak.com/go/itg), 36 [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle), 24 50 [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport)

[www.kodak.com/go/itg](http://www.kodak.com/go/itg), 36 [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle), 24 50 [www.kodak.com/go/aioosupport](http://www.kodak.com/go/aioosupport)



[You're reading an excerpt. Click here to read official KODAK ESP 3200 user guide](http://yourpdfguides.com/dref/2702087)  
<http://yourpdfguides.com/dref/2702087>