



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ESP 5200. You'll find the answers to all your questions on the KODAK ESP 5200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK ESP 5200
User guide KODAK ESP 5200
Operating instructions KODAK ESP 5200
Instructions for use KODAK ESP 5200
Instruction manual KODAK ESP 5200

KODAK ESP 5200 Series All-in-One Printer



Extended User Guide



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>

Manual abstract:

@@@@@11 Changing from USB to a wireless connection

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 11 3 Handling Paper Paper types.

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 13 Paper sizes.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 13 Envelope sizes...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... @@@@16 4 Printing Printing documents

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 17 Printing two-sided documents.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

..... *17 Printing pictures .*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *18 Printing from a memory card....*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... *18 Using default settings to print a picture .*

.....
.....

.....
.....
.....

.....
.....
.....

.. 22 Printing pictures or documents from a wireless device

.....
.....
.....

.....
.....
.....

.....
.....
.....

..23 Transferring pictures to a computer.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...23 Transferring pictures to a computer with WINDOWS OS.....

.....
.....
.....

.....
.....
.....

.....23 Transferring pictures to a computer with MAC OS ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....23 www.kodak.com/go/aio-support i 5 Copying Copying a document...

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 24 Using the default settings to copy a document.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 24 Adjusting the settings and copying a document.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 25 Changing the number of copies of a document ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.26 Enlarging or reducing a document

...27 Darkening or lightening a copy .

...28 Copying a photograph..

...29 Using the default settings to copy a photograph .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

..29 Adjusting the settings and copying a photograph

.....

.....
.....
.....

.....
.....
.....

.....
.....

30 Changing the number of copies of a photograph.....

.....

.....
.....
.....

.....
.....
.....

.....
.....

...31 Enlarging or reducing a photograph ..

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

...32 Darkening or lightening a copy of a photograph ..

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.33 6 Scanning Before you begin scanning

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 34 Changing the scan settings for scanning from the control panel

.....
.....
.....
.....

.....
.....
.....
.....

..... 34 Scanning from the computer

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
....36 Scanning multiple pictures simultaneously.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.36 Scanning from the control panel.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....37 7 Maintaining Your Printer General care and cleaning.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....39 Cleaning the scanner glass and document backing ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... *40 Replacing ink cartridges.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. *41 Replacing the printhead ...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *44 Updating the software and printer firmware.*

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.... 47 Updating if your printer is connected to a computer with WINDOWS OS

.....
.....
.....
.....

..... 47 Updating if your printer is connected to a computer with MAC OS..

.....
.....
.....

.....
.....
.....
.....

..... 48 Monitoring and adjusting printer performance

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

49 Checking ink levels.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

49 Resetting factory defaults

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 49 8 Troubleshooting Basic troubleshooting

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

... 50 Getting help on the Web ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
51 Status lights.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....52 Power status light.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
...52 Wi-Fi status light

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

..52 [ii www.kodak.com/go/aioisupport](http://www.kodak.com/go/aioisupport) KODAK ESP 5200 Series All-in-One Printer 9 Product and Safety Specifications Specifications and features

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
..53 *Print performance....*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....53 *Photo printing features.*

.....
.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....53 Copy document features ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...53 Copy photo features ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 54 Scanning features

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 54 Paper tray features

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 54 Ink cartridges ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.. 54 Connectivity

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 55 Software support .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 55 Physical specifications ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
..... 55 Warranty.....
.....
.....
.....

..... On a computer with WINDOWS Operating System (OS), you can use Home Center Software to: ••••• browse, crop, enhance, and edit pictures print, scan, and fax upgrade your printer with the latest software and firmware configure your printer order supplies access the KODAK Tips and Projects Center On a computer with MAC OS, you can use Home Center Software to order supplies, configure your printer, set printer scan settings, or check for printer software updates. Configuring printer settings To set or change basic printer settings: 1.

Press Home. 2. Press to select Printer Settings, then press OK. 3. Press to select one of the following settings: • Date and Time – Press OK, then press to select Year, Month, Day, Hour, or Minute. Press or to change the values; press OK when you are done. NOTE: You can also synchronize the printer date and time to your computer using Home Center Software. • Time to Low Power To conserve energy, the printer will enter a reduced power (sleep) mode automatically after 1 hour. You can adjust the delay time (in 0.5 hour increments) up to 4 hours.

Increasing the delay time may result in reduced energy savings. – Press to change the time to energy-saving sleep mode (select from 1 to 4 hours in 0.5 hour increments). • Tagged Images Printing (see Printing tagged pictures, page 21) – Press to select Off or On. www.

kodak.com/go/aioosupport 3 Printer Overview • Language – Press OK, press to select a language, then press OK. • Country/Region – Press OK, press to select a country or region, then press OK. • Reset All Settings (see Resetting factory defaults, page 49) NOTE: Resetting factory defaults does not change the date and time, language, country/region, or network settings. 4.

Press Back to return to the Main Menu. Setting your printer as the default printer If you have more than one printer and your all-in-one printer is not the default printer, you may set it as your default printer. IMPORTANT: For all operating systems, if you connect your printer with a USB cable and with a wireless connection, your printer may be listed twice. Be sure to select the correct printer. (The name of the printer plus a number indicates a wireless connection; for example, KodakESP5200+1133.) For computers with WINDOWS XP OS 1. Select Start > Control Panel > Printers and Faxes. 2. Right-click your printer, and select Set as Default Printer. For computers with WINDOWS VISTA OS 1.

Select Start > Control Panel > Hardware and Sound > Printers. 2. Right-click your printer, and select (for example, KodakESP5200+1133). 8. Enable the firewall that you disabled earlier. 6 www.kodak.com/go/aioosupport KODAK ESP 5200 Series All-in-One Printer Connecting to a WPS wireless router If your router supports Wi-Fi Protected Setup (WPS), you can use WPS Connect. WPS lets you configure your printer for a wireless network by pressing buttons or entering a PIN. To connect to a network using WPS: 1.

Press Home. 2. Press to select Network Settings, then press OK. 3. With Wi-Fi Setup Wizard selected, press OK.

NOTE: The Wi-Fi radio turns on automatically when you select Wi-Fi Setup Wizard. 4. With WPS Connect selected, press OK. 5. Select one of two methods of connecting: IMPORTANT: Before you press OK on the printer, make sure you know where the router's push button is, or where to enter the generated PIN.

If necessary, consult your Internet service provider or router device manufacturer's documentation for more information. Pressing a button Entering a PIN NOTE: You will have two minutes to press or select the WPS button. It may be a button on the device or a virtual button in the device's software. a. With Push Button Configuration selected, press OK. b. Press or select the WPS button for your wireless router. a. Press to select Generate WPS PIN, then press OK. b.

In your wireless router's software, locate the PIN screen. c. Enter the PIN you received on the LCD into the PIN screen. 6. When the confirmation message appears, press OK. If the printer is successfully connected, the Wi-Fi LED will stop blinking and stay on steadily. If you are unable to connect your printer, go to www.kodak.com/go/inkjetnetworking for more information. 7.

If you haven't yet installed the KODAK All-in-One Printer Software, go to www.kodak.com/go/aiodownloads and follow the on-screen instructions to install the software. The printer with a wireless connection is listed as the name of the printer plus a number (for example, KodakESP5200+1133). 8.

Enable the firewall that you disabled earlier. www.kodak.com/go/aioosupport 7 Networking Your Printer Using the LCD keyboard When you need to enter letters or numbers, a keyboard appears on the LCD.



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>

There are two types of keyboards, depending on which printer model you have.

• To change from uppercase to lowercase, select abc/123, then press OK. • To change from lowercase to uppercase, select ABC/123, then press OK. • To enter punctuation or symbols, select !@#, then press OK. Use the arrow keys to select the letters, numbers, and symbols, then press OK. On the control panel (both types of keyboards), press , , or to select the letters and numbers, using the correct uppercase and lowercase letters. Press OK after each character. When you are done, select DONE, then press OK. Setting up an IP address IMPORTANT: You should only need to set up an IP address for your printer if you are having a problem with connecting. Typically, it is not necessary to set up an IP address. This procedure is for advanced users who know how to obtain the IP address for the printer.

All IP address entries have the following format: 000.000.000.000. Within each three-digit grouping, the number must be right-justified. If an address or subnet mask has only one or two characters between the periods, include one or two leading zeros in front of that number. For example: The address as it may appear in your documentation 149.89.138.149 149.

2.40.149 How to enter the address in the printer menu 149.089.138.

149 149.002.040.149 For information about obtaining the printer IP address, go to www.kodak.com/go/inkjetnetworking.

8 www.kodak.com/go/aioosupport KODAK ESP 5200 Series All-in-One Printer To set up your IP address on the printer: 1. 2. 3. 4. 5. Press Home. Press to select Network Settings, then press OK.

Press to select Advanced IP Address Setup, then press OK. Press OK again to continue. Select one of the following, then press OK: • Dynamic (DHCP) • Automatic (Private) • Manual (Static) 6. If you selected Manual (Static), you are prompted to enter an IP address, a Subnet Mask, a Gateway Address, and a DNS Server address. Press OK after each entry. Use the navigation buttons to enter each digit of the numbers. Consult your Internet service provider or network administrator for more information. Viewing the network configuration To view the network configuration and verify that you are connected to your wireless network: 1. Press Home. 2.

Press to select Network Settings, then press OK. 3. Press to select View Network Configuration, then press OK. The wireless or Ethernet network settings appear on the LCD, including: • Printer Hostname • Connection • Speed • IP Address • IP Address Type • Network Subnet • Connected Network SSID • Security • Authentication • Channel • Region • Radio (on/off) • MAC Address If the printer is connected to your network, you will see the network name and the word CONNECTED. 4.

To scroll through the information, press . 5. When you are done, press OK. www.kodak.com/go/aioosupport

9 Networking Your Printer Printing the network configuration To print the current network configuration: 1. 2. 3. 4. Load plain paper into the printer. (See Loading plain paper, page 14.) Press Home. Press to select Network Settings, then press OK. Press to select Print Network Configuration, then press OK. Installing your printer on additional computers on the network To add your printer to another computer(s) on your network, install the KODAK All-in-One Printer Software on each computer.

Go to www.kodak.com/go/aiodownloads and follow the on-screen instructions. Connecting to another KODAK All-in-One Printer If you are connecting to a newer model printer (for example, you have an ESP 7 printer and now you are adding an ESP 5250 printer), you must install the software for the newer model. If you are connecting to another ESP 5250 printer or to a previous model: On a computer with WINDOWS OS: 1. Select Start > All Programs > Kodak > Kodak Printer Network Setup Utility. • If your wireless all-in-one printer (example: KodakESP5200+1133) is not listed: a. Select No, my printer is not listed, then click Next. b. From the drop-down list, select your printer.

c. Select Network - Wireless / WiFi, then click Next. When your printer is detected, driver installation begins. • If your wireless all-in-one printer (example: KodakESP5200+1133) is listed: a. Highlight the all-in-one printer that is connected to your network. b. Select Yes, my printer is listed, then click Next. When your printer is detected, driver installation begins. 2. When driver installation is complete, click Done. On a computer with MAC OS: 1. 2. 3. 4. Select Apple > System Preferences. Under Hardware, select Print & Fax. In the Print & Fax dialog box, click +. Select your printer from the list, then click Add. 10 www.kodak.com

www.kodak.com/go/aioosupport KODAK ESP 5200 Series All-in-One Printer Adding a wireless network connection to a USB-connected computer You can change the way you connect to your printer at any time. Changing from USB to a wireless connection To change the printer connection type from USB to a wireless (Wi-Fi) network: If your printer is connected to a computer with WINDOWS OS: 1. 2. 3. 4. 5. 6. Unplug the USB cable from your printer and computer. On the printer control panel, press Home. Press to select Network Settings, then press OK.

Press to select View Network Configuration, press OK, then confirm you have a non-zero IP address. If you have not already done so, connect your printer to your wireless network. See Connecting to a wireless network, page 5. On your computer, disable any firewall you have installed until you have successfully completed the installation. For more information on firewalls, go to www.kodak.com/go/inkjetnetworking.

Select Start > All Programs > Kodak > Kodak Printer Network Setup Utility. • If your wireless all-in-one printer (example: KodakESP5200+1133) is not listed: a. Select No, my printer is not listed, then click Next.

b. Select your printer from the list. c. Select Network - Wireless/WiFi, then click Next. When your printer is detected, driver installation begins. • If your wireless all-in-one printer (example: KodakESP5200+1133) is listed: a. Highlight the all-in-one printer that is connected to your network. b. Select Yes, my printer is listed, then click Next. When your printer is detected, driver installation begins.

When driver installation is complete, click Done. 7. 8. The printer with a wireless connection is listed as the name of the printer plus a number (for example, KodakESP5200+1133). www.kodak.com/go/aioosupport 11 Networking Your Printer If your printer is connected to a computer with MAC OS: 1. 2. 3. 4. 5. 6. 7. 8. Unplug the USB cable from your printer and computer.

On the printer control panel, press Home. Press to select Network Settings, then press OK. Press to select View Network Configuration, press OK, then confirm you have an IP address. Select Apple > System Preferences. Under Hardware, select Print & Fax.

In the Print & Fax dialog box, click +. Select your printer from the list, then click Add. The printer with a wireless connection is listed as the name of the printer plus a number (for example, KodakESP5200+1133).



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>

12 www.kodak.com/go/aiosupport 3 Handling Paper For the best photo printing results, use KODAK Photo Papers, which are optimized to work with KODAK All-in-One Printers. For the best document printing results, use KODAK Document Papers or a paper with the COLORLOK Technology logo on the package. Use only paper that is designed for inkjet printers. When handling paper: • Hold the paper by the edges; avoid placing your fingerprints on it. • Do not touch the glossy side of photo paper.

• Store paper flat, away from direct sunlight and heat. Paper types You can use: ••••• Plain paper — 20 to 24 lb / 75 to 90 gsm Photo paper — 6.5 to 12 mils (up to 290 gsm) Card stock — 110 lb / 200 gsm, max Envelopes — 20 to 24 lb / 75 to 90 gsm Transparencies — inkjet variety with white stripe Labels — all commercially available inkjet varieties on 8.5 x 11-in. or A4 sheets Iron-on transfers — all commercially available inkjet varieties on 8.5 x 11-in. or A4 sheets Paper sizes The printer accepts the following paper sizes: • 4 x 6 in. / 10 x 15 cm • 4 x 7 in. / 10 x 18 cm • 4 x 12 in. / 10 x 31 cm • 5 x 7 in.

/ 13 x 18 cm • 7.3 x 8.5 in. / 18 x 22 cm • 7.3 x 10.

5 in. / 18 x 22 cm • 8 x 10 in. / 20 x 25 cm • 8.5 x 11 in. / 22 x 28 cm • 8.

5 x 14 in. / 22 x 36 cm • A4 (8.3 x 11.7 in. / 21 x 30 cm) • A5 (5.8 x 8.3 in. / 15 x 21 cm) • A6 (4.1 x 5.8 in.

/ 11 x 15 cm) • B5 (6.9 x 9.8 in. / 18 x 25 cm) NOTE: Do not load paper smaller than 4 x 6 in. / 10 x 15 cm. www.kodak.com/go/aiosupport 13 Handling Paper Envelope sizes The printer accepts the following envelope sizes: C5 (6.7 x 9 in. / 16 x 23 cm) C6 (4.

5 x 6.4 in. / 11 x 16 cm) DL (4.3 x 8.7 in.

/ 11 x 22 cm) US #7¼ (3.9 x 7.5 in. / 10 x 19 cm) US #9 (3.9 x 8.

9 in. / 10 x 23 cm) US #10 (4.1 x 9.5 in. / 11 x 24 cm) IMPORTANT: Do not load envelopes with cutout or clear windows. ••••• Loading paper Loading plain paper The paper tray capacity is 100 sheets of plain paper. To load plain paper: 1. Open the paper tray. 2. Pull out the paper tray extender until it is fully extended.

3. Lift the paper stop. 4. Move the left paper-edge guide to the far left. left paper-edge guide paper stop paper tray extender 14 www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer 5. Fan and stack the paper, then insert it into the tray. 6. Move the paper forward until it stops.

7. Move the left paper-edge guide until it touches the paper. left paper-edge guide Loading photo paper The paper tray capacity is 20 sheets of photo paper. To load photo paper: 1. Remove any plain paper from the tray.

2. Fan and stack the photo paper, then insert the paper (short side first) into the tray with the logo side facing up and the glossy side down. IMPORTANT: If the photo paper is loaded the wrong way, the ink on your pictures will be wet and the image quality will be affected. 3. Move the paper forward until it stops.

4. Move the left paper-edge guide until it touches the paper. www.kodak.com/go/aiosupport 15 Handling Paper Loading envelopes The paper tray capacity is 20 envelopes. IMPORTANT: Do not load envelopes with cutout or clear windows. To load envelopes: 1. Remove all paper from the tray. 2. Make sure the left paper-edge guide is to the far left.

3. Insert the envelope(s) into the tray with the flap up and against the right side of the tray. 4. Move the envelopes forward until they stop. 5. Move the left paper-edge guide until it touches the envelope(s). left paper-edge guide 16 www.kodak.com/go/aiosupport 4 Printing Print documents and lab-quality pictures on your printer. Printing documents To print a document: 1.

2. 3. 4. Open the document on your computer. Select File > Print.

In the Print dialog box, select your KODAK Printer. Choose the pages to print, number of copies, etc, then click OK (on a computer with WINDOWS OS) or Print (on a computer with MAC OS). Printing two-sided documents You can print two-sided documents on any size paper that the printer accepts when you rotate the paper manually. (See Paper sizes, page 13.) IMPORTANT: Two-sided printing will not work on bar-coded photo paper (the bar code is on the back side).

Two-sided printing can only be done on media that can absorb ink on both sides, such as plain paper or two-sided photo paper. Printing two-side documents from a computer with WINDOWS OS To print two-sided documents from a computer with WINDOWS OS: 1. Load paper into the paper tray. 2. Open the document you want to print, then select File > Print. 3. In the Print dialog box, make sure that KODAK ESP 5200 Series AiO (or for a wireless connection, KodakESP5200+XXXX, where XXXX is a number) is selected, then click Properties. 4. Select the Layout tab. 5.

In the Two-sided printing field, select Manual (Instructions provided), then click OK. 6. Click OK. 7. When a message appears on your computer and printer LCD, remove the printed pages from the output tray. 8. Rotate the printed pages 180 degrees, and place them into the paper tray (printed side up). 9. Press Start on the printer. Printing two-side documents from a computer with MAC OS To print two-sided documents from a computer with MAC OS: 1. Load paper into the paper tray. 2. Open the document you want to print, then select File > Print. 3. In the Print dialog box, make sure that Eastman Kodak Company ESP 5200 Series AiO (or for a wireless connection, KodakESP5200+XXXX, where XXXX is a number) is selected.

www.kodak.com/go/aiosupport 17 Printing 4. 5. 6.

7. 8. 9. 10. 11. 12. 13. 14. In the Copies & Pages drop-down list, select Paper Handling. In the Pages to Print drop-down list, select Odd Only.

In the Page Order drop-down list, select Reverse. Click Print. When the odd pages have finished printing, remove them from the output tray. Rotate the printed pages 180 degrees, and place them into the paper tray (printed side up). Select File > Print. In the Copies & Pages drop-down list, select Paper Handling. In the Pages to Print drop-down list, select Even Only. In the Page Order drop-down list, select Normal. Click Print. Printing pictures You can print pictures with your all-in-one printer from a memory card inserted into a memory card slot, or you can print pictures using Home Center Software from your computer with WINDOWS OS.

Home Center Software lets you edit and enhance your pictures quickly. Open Home Center Software, select Print Pictures, then follow the on-screen instructions. On a computer with either MAC OS or WINDOWS OS, you can print pictures from KODAK EASYSHARE Software or any picture-editing or photo-management software. Printing from a memory card Your printer accepts the following memory cards: SD Card SDHC Card MMC Card MEMORY STICK Variations of the memory cards listed above that require an adapter (for example, MEMORY STICK Duo, miniSD, and microSD) IMPORTANT: If you use a memory card with an adapter, make sure you insert and remove the adapter and the memory card as a unit; do not remove the memory card while leaving the adapter in the printer.



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](#)

kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer Using default settings to print a picture To print a picture from a memory card using the factory default settings: 1. Load photo paper with the logo side facing up (see Loading photo paper, page 15), and move the left paper-edge guide until it touches the paper. 2. Insert the memory card into the memory card slot.

memory card slot left paper-edge guide 3. Press **or** to select the picture you want to print. 4. Press **Start** to begin printing. The printer prints one 4 x 6 in. / 10 x 15 cm picture. **IMPORTANT:** To prevent loss of data from your memory card, do not remove it from the printer while printing. Changing the settings and printing pictures You can change the print photos options for an individual picture or group of pictures, or you can change the settings and save them as the default. To print a picture or pictures using settings other than the default settings: 1. Load photo paper with the logo side facing up (see Loading photo paper, page 15), and move the left paper-edge guide until it touches the paper.

memory card slot left paper-edge guide 2. Insert the memory card into the memory card slot. 3. Press **or** to select the picture you want to print, then press **OK**. www.kodak.com/go/aiosupport 19 Printing 4. Repeat step 3 for each picture you want to print. 5. Press to select **View and Print Photos**, then press **OK**. 6. Press to select an option, then press **or** to change the setting. **Print Photos Option View Photos Transfer All to PC --Settings Description** Scroll through the pictures on the memory card. To transfer all the pictures on the memory card to your computer, press **OK** then **Start**. (Your printer and computer must be connected with a USB cable.

) The number of copies that print. If the selected copy size is smaller than the paper in the paper tray, the printer automatically arranges the pictures to best fit the paper size. **Quantity Print Size 1 (default) to 99 2x3 3.5 x 5 4 x 6 (default) 4x7 5x7 4 x 12 8 x 10 8.5 x 11 or A4 Normal (default) Best Draft Plain Paper Quality Good quality output; prints faster than Best.**

The highest quality. The fastest print speed. **@@Prints full color. Prints black and white (gray scale).** Adjusts the image brightness to correct for underexposure and reduces the variation in contrast in different areas of the picture. Prints the date of the picture(s) (the date the picture was taken or last edited) in a corner of the print. **Photo Paper Quality Automatic (default) Color (default) Black & White Color Scene Balance On (default) Off Add Date to Prints No (default) Yes 20** www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer **Print Photos Option Save as Defaults Settings No / Yes Description** To save the settings as the new default, press **OK**. With **Yes** selected, press **OK**.

7. When you have finished changing settings, press **Start** to begin printing. **IMPORTANT:** To prevent loss of data from your memory card, camera, or portable drive, do not remove it from the printer while printing. **Printing tagged pictures** Some digital cameras let you tag (or "mark") pictures on the memory card for printing. This creates a tag that is recognized by the printer. If you choose to print tagged pictures, they will be printed according to the default settings on your printer (unless otherwise specified by the tag from the camera). **NOTE:** Refer to your camera user guide to determine whether your camera supports tagged (also "marked" or "DPOF") functionality. To print tagged pictures: 1. Load photo paper with the logo side facing up (see Loading photo paper, page 15), and move the left paper-edge guide until it touches the paper. 2.

Insert the memory card into the memory card slot. memory card slot left paper-edge guide 3. When the "Print tagged images?" message appears, press **Start**. www.kodak.com/go/aiosupport

21 Printing **Zooming and cropping pictures** Use the zoom buttons to select a portion of your picture for printing. To zoom and crop a picture: 1. Load photo paper with the logo side facing up (see Loading photo paper, page 15), and move the left paper-edge guide until it touches the paper. 2. Insert the memory card into the memory card slot.

memory card slot left paper-edge guide 3. Press **or** to select the picture you want to crop, then press **OK**. 4. Press **Zoom +** to enlarge the picture on the LCD. A red box shows the area that will be printed. **NOTE:** You can press **Zoom +** repeatedly to enlarge the picture in increments of 0.25 up to a magnification of 5X. Press **Zoom -** to decrease the magnification in increments of 0.25 back down to 1X. 5.

Use the navigation buttons to move the picture on the LCD up, down, left, or right. Only the part of the picture in the red box will print. The crop window matches the aspect ratio of the selected output print size. 6. After you have pressed the zoom button(s), press **Rotate** if you want to rotate the red box in 90 degree increments. This will determine the content that is printed. **NOTE:** Zooming and cropping does not change the saved picture on the memory card. 7.

When you are satisfied with the picture, press **OK**. @@8.

@@@2. 3. 4. 5. 6.

Insert the memory card into the memory card slot on the printer. Press **Back**. Press to select **View and Print Photos**, then press **OK**. Press to select **Transfer All to PC**, then press **OK**. Press **Start**.

@@7. @@2. 3. 4. 5. 6. Insert the memory card into the memory card slot on the printer. Press **Back**. Press to select **View and Print Photos**, then press **OK**. Press to select **Transfer All to PC**, then press **OK**.

Press **Start**. @@7. @@@@To copy a document using the current default settings: 1. @@Close the lid. 3. Press **Home**. 4. @@@@3. 4. 5.

Close the lid. Press **Home**. Make sure **Copy Document** is selected, then press **OK**. @@Prints full color. Prints black and white (gray scale).

The copy is the same size as the original. @@@@The fastest print speed, but the lowest quality. @@Lightens or darkens the copy. @@To save the settings as the new default, press **OK**. @@@@Press **Home**.

4. Make sure **Copy Document** is selected, then press 5. @@@@3. 4. 5. 6. 7. Close the lid. Press **Home**. Make sure **Copy Document** is selected, then press **OK**.

Press to select **Copy Size**. Press **or** to select an enlargement or reduction. @@@@3. 4. 5. 6. Close the lid. Press **Home**. With **Copy Document** selected, press **OK**. Press to select **Brightness**.

@@7. @@To copy a photograph using the current default settings: 1. @@3. 4. 5.

Close the lid. Press **Home**. Press to select **Copy Photo**. @@@@3. 4.

5. Close the lid. Press **Home**. Press to select **Copy Photo**, then press **OK**. @@Prints full color. Prints black and white (gray scale). The printer enlarges or reduces the original to make it the copy size you select. If the selected copy size is smaller than the paper in the paper tray, the printer automatically arranges the pictures to best fit the paper size. 30 www.kodak.com

kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer **Copy Photo Option Plain Paper Quality Setting Normal (default) Best Description Good quality output; prints faster than Best.**

[You're reading an excerpt. Click here to read official KODAK ESP](#)



[5200 user guide](#)

<http://yourpdfguides.com/dref/4732969>

@@The fastest print speed, but the lowest quality. The printer detects when you load photo paper and sets Best quality automatically. Lightens or darkens the copy. @@To see a preview of the photograph on the LCD, select Yes. To save the settings as the new default, press OK. With Yes selected, press OK. Draft Photo Paper Quality Automatic (default) Normal (default) -3 to +3 No (default) Yes No / Yes Brightness Preview Save as Defaults 6. Press Start to begin copying. Changing the number of copies of a photograph To change the number of copies: 1.

@@Close the lid. www.kodak.com/go/aiosupport 31 Copying 3. 4. 5. 6. 7. Press Home. Press to select Copy Photo, then press OK.

Make sure Quantity is selected. Press or to select a number. Press Start to begin copying. Enlarging or reducing a photograph To enlarge or reduce the size of the copy: 1. @@3. 4. 5. 6. 7. Close the lid.

Press Home. Press to select Copy Photo, then press OK. Press to select Copy Size. Press or to select the copy size. Press Start to begin copying. 32 www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer Darkening or lightening a copy of a photograph To darken or lighten the copy: 1. @@3. 4.

5. 6. Close the lid. Press Home. Press to select Copy Photo, then press OK.

Press to select Brightness. @@7. Press Start to begin copying, to select a www.kodak.com/go/aiosupport 33 6 Scanning Scanning digitizes documents and pictures, and sends the digital files to your computer. When you scan, the digital file can:

• Open in Home Center Software (when connected to a computer with WINDOWS OS) • Open in a third-party scanner software • Be saved in a format and location that you determine (see Changing the scan settings for scanning from the control panel, page 34) Scanning from a software program on the computer (such as Home Center Software) gives you more options, but you can also scan from the printer control panel. Before you begin scanning Make sure that the printer is connected to a computer using a USB cable or wireless network (see Chapter 2 , Networking Your Printer). Changing the scan settings for scanning from the control panel Make sure that Home Center Software is installed on the computer. (If not, go to www.kodak.com/go/aiodownloads, and follow the on-screen instructions to install the KODAK All-in-One Printer Software.) Then change the scan settings in Home Center Software. The printer uses these settings when you scan from the printer control panel. 1.

Open Home Center Software. 2. Select Tools and Documentation (when connected to a computer with WINDOWS OS) or Tools (when connected to a computer with MAC OS). 3. Select Printer Scan Settings. 4. Adjust settings for scanning documents and pictures as described below. To adjust settings for scanning documents, select the Document tab, then select an option for each setting: Setting Scan As Options Black and white Color Grayscale .pdf .rtf (available only when connected to a computer with WINDOWS OS).

.tif .jpg .bmp (available only when connected to a computer with MAC OS) File format 34 www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer Setting Resolution (dpi) Options 75 150 200 300 Prompt for File Name and Location Automatically Save - specify: • Base name; by default, scanned files are names "scan1", "scan2", and so on.

• Location (folder) where the scanned files will be saved File Save To adjust settings for scanning pictures, select the Picture tab, then select an option for each setting: Setting Scan As Options Black and white Color Grayscale .jpg .bmp .tif 75 150 300 600 When connected to a computer with WINDOWS OS: • Best for E-mail • Normal • High • Maximum When connected to a computer with MAC OS, a slider bar with: • Least • Medium • Best File format Resolution (dpi) Quality www.kodak.com/go/aiosupport 35 Scanning Setting Options Automatically When selected, multiple pictures placed on the scanner glass Detect Pictures are saved as separate files. (when connected to a computer with WINDOWS OS) or Auto Crop (when connected to a computer with MAC OS) File Save Prompt for File Name and Location Automatically Save - specify: • Base name; by default, scanned files are names "scan1", "scan2", and so on. • Location (folder) where the scanned files will be saved Before saving a scanned file, you can preview it in Home Center Software version 6.0, crop and sharpen the image, and adjust color, if desired. On a computer with WINDOWS OS, see the Home Center Software Help (? icon) for instructions. Scanning from the computer To scan a document or a picture on a computer: 1. Lift the scanner lid, and place the document or picture face down on the glass. 2. Close the scanner lid. 3.

Open Home Center Software. • On a computer with WINDOWS OS, select Scan Documents and Pictures, then follow the on-screen instructions. • On a computer with MAC OS and Home Center Software version 6.0, select the Tools tab, click Scan Application, then follow the on-screen instructions. Scanning multiple pictures simultaneously Using Home Center Software, you can scan multiple pictures simultaneously and save them as separate files. When scanning multiple pictures, leave space between the pictures so that the printer can detect the separate pictures. @@@@2. Close the lid. 3. Open Home Center Software, then select Tools and Documentation.

4. Click Printer Scan Settings, then select the Picture tab. 5. @@6. @@7.

@@@@@@2. Close the lid. 3. Open Home Center Software version 6.0, then select your printer.

4. Select the Tools tab. 5. Click Scan Application. 6. Select Color Picture or Black and White Picture. 7. Select Automatically detect multiple pictures, if it is not selected. 8. Click Preview or Scan All, then follow the on-screen instructions.

@@Load the original. 2. Press Home. 3. Press to select Scan, then press OK. @@@@Sets the scan settings for scanning a document (see Changing the scan settings for scanning from the control panel, page 34). Sets the scan settings for scanning a photograph (see Changing the scan settings for scanning from the control panel, page 34). Sends the scanned file in the format and to the location on your computer that you designate (see Changing the scan settings for scanning from the control panel, page 34). Sends the scanned file to Home Center Software. To save the settings as the new default, press OK.

With Yes selected, press OK. Scan What Document (default) Photo Destination File (default) Application Save as Defaults No / Yes 5. Press Start to make a scan. The scanned file appears at the destination you specified. 38 www.kodak.com/go/aiosupport 7 Maintaining Your Printer Your printer requires little maintenance. However, Kodak recommends cleaning the scanner glass and lid regularly to remove dust and fingerprints, which affect the quality and accuracy of scanning. Except while cleaning the printer, keep the printer plugged into an AC power outlet. If you use a power strip, don't turn off the power strip.



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>

(The printer does not necessarily have to be turned on, but should be plugged in.) Keep the printhead and ink cartridges in the printer at all times to help prevent damage to the printhead. For recycling and/or disposal information, contact your local authorities. In the US, go to the Electronics Industry Alliance at www.eia.org or go to www.kodak.com/go/recycle. General care and cleaning CAUTION: Always disconnect the power to the printer before cleaning it. Do not use harsh or abrasive cleaners on any part of the printer.

••••• To clean the printer, wipe the outside with a clean, dry cloth. Keep the surrounding area vacuumed and litter-free. Protect the printer from tobacco smoke, dust, and liquid spills. Do not place objects on the printer. Keep the printer supplies away from direct sunlight and out of high-temperature environments. • Do not allow chemicals to come into contact with the printer. www.kodak.com/go/aiosupport 39 Maintaining Your Printer Cleaning the scanner glass and document backing The scanner glass can get smudged and minor debris can accumulate on the white document backing under the scanner lid. Periodically clean the scanner glass and document backing.

CAUTION: Do not use harsh or abrasive cleaners on any part of the printer. Do not spray liquid directly on the glass. Do not use paper-based wipes on the document backing as they can scratch it. To clean the scanner glass and document backing under the scanner lid: 1. Turn off the printer and unplug it from the power outlet.

2. Lift the scanner lid. 3. Wipe the glass with a soft cloth or sponge, slightly moistened with a nonabrasive glass cleaner. 4. Dry the glass with a lint-free cloth. 5. Gently clean the document backing with a soft cloth or sponge, slightly moistened with mild soap and warm water. 6. Dry the document backing with a chamois or lint-free cloth. NOTE: If the document backing needs further cleaning, use isopropyl (rubbing) alcohol on a soft cloth, then wipe thoroughly with a cloth moistened with water to remove any residual alcohol. 7. When you finish cleaning, plug in the printer and press the on/off button to power on the printer. 40 www.kodak.com.

[com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 5200 Series All-in-One Printer Replacing ink cartridges Your printer uses both black and color ink cartridges. You can check the approximate ink levels on the LCD (see Checking ink levels, page 49) or in Home Center Software. When an ink cartridge is out of ink, the printer LCD displays a message stating that the black or color ink cartridge needs replacing. IMPORTANT: Do not use non-Kodak brand or refilled ink cartridges. To replace an ink cartridge: 1. Make sure your printer is on. 2. Lift the printer access door, and wait for the carriage to move to a position where you can access it. The ink cartridges are located in the printhead. Black ink cartridge Printhead Color ink cartridge www.kodak.com/go/aiosupport 41 Maintaining Your Printer 3. Pinch the tab on the ink cartridge and lift it out of the printhead. 4. Remove the new ink cartridge from its bag.

IMPORTANT: To prevent the printhead from drying out, insert the ink cartridge into the printhead immediately. 5. Remove the protective cap from the cartridge. 42 www.kodak.com.

[com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 5200 Series All-in-One Printer 6. Insert the ink cartridge into the printhead. 7. Press down on the ink cartridge tab until you hear a click. 8. Close the printer access door. www.kodak.com/go/aiosupport 43 Maintaining Your Printer Replacing the printhead IMPORTANT: Replacing the printhead is not a regular maintenance procedure. Replace the printhead only if you receive a new printhead from Kodak.

To replace the printhead: 1. Make sure your printer is on. 2. Lift the printer access door, and wait for the carriage to move to the access position. 3. Remove both ink cartridges and set them aside. 4. Unlatch the used printhead by lifting the button in the center of the carriage. 44 www.kodak.com.

[com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP 5200 Series All-in-One Printer 5. Lift the used printhead out of the carriage. 6. Remove the new printhead from its bag. CAUTION: Do not touch the copper contacts on the printhead, as doing so may damage the printhead.

7. Remove the two plastic protective caps. www.kodak.com/go/aiosupport 45 Maintaining Your Printer 8. Place the new printhead into the carriage. 9. Push firmly against the target label of the printhead until you hear a loud snap. 10. Insert the black ink cartridge into the printhead. 46 www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer 11. Press down on the ink cartridge until you hear it click into position. 12.

Repeat steps 10 - 11 for the color ink cartridge. 13. Close the printer access door. The printer detects the new printhead. Follow the instructions on the LCD to calibrate your printer. Updating the software and printer firmware Using the latest software and firmware helps ensure optimal performance of your printer. NOTE: Firmware is the software that runs on your printer. When you open Home Center Software on a computer with WINDOWS OS, the software automatically checks for software and firmware updates. On a computer with MAC OS, you must check manually for updates. Use the following procedure to update manually.

Updating if your printer is connected to a computer with WINDOWS OS To update the software: 1. 2. 3. 4. Make sure that your computer is connected to the Internet.

Open Home Center Software. Click Tools and Documentation. Under Web Links, click Check for Software Updates to check whether software updates are available. 5. If there are updates, click Next and follow the on-screen instructions.

www.kodak.com/go/aiosupport 47 Maintaining Your Printer To update the printer firmware: 1. Make sure that your computer is connected to the Internet. 2. Connect the printer to the computer with a USB cable or wirelessly (if not currently connected). 3. Open Home Center Software, and make sure that KODAK ESP 5200 Series AiO - Connected appears in the lower left corner of the Home Center Software window. 4. Click Tools and Documentation.

5. Under Web Links, click Check for Printer (Firmware) Updates. 6. If there are updates, click Next and follow the on-screen instructions. IMPORTANT: Do not turn off or unplug your printer or your computer during the update. Doing so may cause the printer to become inoperable. Updating if your printer is connected to a computer with MAC OS To update the software: 1. 2. 3. 4.

Make sure that your computer is connected to the Internet. Open Home Center Software. On the KODAK AiO Home Center menu, select Check for Updates. If there are software updates, follow the on-screen instructions for updating your software. To update the firmware: 1.

Go to www.kodak.com/go/esp5210downloads or www.kodak.com/go/esp5250downloads.

2. Connect the printer to the computer with a USB cable or wirelessly (if not currently connected). 3. Select your operating system from the drop-down list. 4. Click Select in the Firmware box. 5. Read the instructions, click Download, then follow the on-screen instructions.



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>

IMPORTANT: Do not turn off or unplug your printer or your computer during the update. 48 www.kodak.com.

www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer Monitoring and adjusting printer performance From the control panel, you can perform tasks to help keep the printer functioning well. Checking ink levels To check the ink levels: 1. Press Home. 2. Press to select Maintenance, then press OK. 3. With Check Ink Levels selected, press OK. The LCD shows approximate levels of ink in the cartridges so you know when it's time to order replacement cartridges. Resetting factory defaults To reset defaults to the factory default settings: Press Home.

Press to select Printer Settings. Press to select Reset All Settings, then press OK. When you see the message, "This will reset printer settings to factory defaults," press OK. NOTE: Resetting factory defaults does not change the date and time, language, country/region, or network settings. 1.

2. 3. 4. www.kodak.com.

www.kodak.com/go/aiosupport 49 8 Troubleshooting Basic troubleshooting Some problems can be resolved quickly by power cycling the printer: Turn off your printer. Wait five seconds. Turn on the printer. Use the following information to help troubleshoot problems with your printer. Problem Printer does not power on Possible Solutions • Make sure you are using the power cord that came with your printer. • Make sure the power cord is connected to the AC adapter, it is plugged into an outlet or power strip, and that the LED on the AC adapter is lit. • Make sure your printer is plugged in and turned on. • If you are using a USB cable, make sure that: – it is a USB 2.0 High-Speed cable. – it is connected to both your printer and your computer.

– you restart the computer if the USB cable was disconnected from the printer then reconnected, or if power to the printer was interrupted. • If you are using a wireless connection, make sure: – the Wi-Fi connectivity LED on the printer is glowing steadily. – the printer is connected to your wireless network. To check: a. On the printer, press Home. b. Press to select Network Settings, then press OK. c. Press to select View Network Configuration, then press OK. Make sure that the Active Connection Type is Wi-Fi, and that the IP Address is not zeros.

– your router is transmitting data. – the firewall (excluding WINDOWS Firewall) is allowing the services needed for your printer. For additional information, go to www.kodak.com/go/inkjetnetworking.

Printer not detected Wireless connectivity problems Carriage jam For wireless connectivity issues, go to www.kodak.com/go/inkjetnetworking. • Open the printer access door and clear any obstructions. • Check that the printhead and ink cartridges are installed correctly.

(The printhead and ink cartridges are installed correctly when you hear them click into place.) 50 www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer Problem Print quality Possible Solutions • For best results, use KODAK Paper or a paper with the COLORLOK Technology logo on the package. • Make sure the paper is loaded correctly. See Loading paper, page 14. For more help, go to www.kodak.com/go/stepbystep, select All-in-one printer, then Print Quality (missing colors, blank prints, etc). • Check that KODAK Ink Cartridge(s) are installed.

Do not use non-Kodak brand or refilled ink cartridges. • Remove, then install the cartridges again. Make sure the cartridges click into place. • Check for paper in the rear-access cleanout area. • Open the printer access door and gently remove any paper from inside the printer. • Make sure the paper in the tray is free of tears or creases. • Make sure you do not overload the paper tray. For more information, see www.kodak.com/go/stepbystep.

Select All-in-one printer, then Paper jam. Go to www.kodak.com/go/esp5250support or www.kodak.com.

www.kodak.com/go/esp5210support, then type your error code or message. Ink cartridge Paper jam Error codes/messages Getting help on the Web For more troubleshooting information: Get help with wireless networking. Use our Step-by-Step Solutions and Repair tool to troubleshoot common problems. Search our knowledge base of FAQs (Frequently Asked Questions). Download the latest firmware and software for optimal printer performance.

Check the Extended User Guide for detailed instructions and the recommended system requirements. Get help with problems you cannot resolve. www.kodak.com/go/inkjetnetworking www.kodak.com/go/stepbystep www.kodak.com/go/esp5250support or www.kodak.com.

www.kodak.com/go/esp5210support www.kodak.com/go/esp5250downloads or www.kodak.com/go/esp5210downloads www.kodak.com/go/manuals Contact Kodak at www.kodak.com/go/contact and have the following information available: – Kodak Service Number (located inside the printer when you open the printer access door) – Printer model number (located on the control panel) – Computer model, operating system, and version of Home Center Software 51 www.kodak.com.

www.kodak.com/go/aiosupport Troubleshooting Status lights The status lights indicate the condition of the printer. There are two status lights on the printer, one that indicates power, the other indicates Wi-Fi status. Power status light Power light Off What it means • The printer is turned off. – Press the on/off button to turn on power. • The printer does not have power.

– Make sure that the power cord is plugged into the back of the printer and into an electrical outlet, and that the electrical outlet has power. • The printer is busy. – Wait for the printer to finish the task. • The printer is ready Blinking On Wi-Fi status light Power light Off Blinks continuously Blinks intermittently What it means The Wi-Fi radio is either turned off, or is turned on but not connected to a wireless network. The Wi-Fi radio is turned on and the printer is searching for available wireless networks within range.

The Wi-Fi radio is turned on and the printer cannot find any available wireless networks within range, or the Wi-Fi radio connection has been interrupted, or is too weak to send signals to and from the printer To find and connect to an available wireless network within range, press OK, turn the Wi-Fi radio off, and run the Wi-Fi Setup Wizard (see Connecting to a wireless network, page 5). The Wi-Fi radio is turned on and there is a working connection between the printer and a wireless network. On 52 www.kodak.com/go/aiosupport 9 Product and Safety Specifications The following specifications are subject to change without notice. Specifications and features Print performance Black print speed Up to 30 pages per minute on plain paper Color print speed Up to 29 pages per minute on plain paper Print technology Continuous-tone, thermal inkjet Print quality modes Draft, Normal, and Best on plain paper Photo quality mode on photo paper Photo printing features Quantity 1 to 99 (may vary for different models of the 5200 series printers) Print sizes 2 x 3 in.



You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide
<http://yourpdfguides.com/dref/4732969>

(5 x 7.6 cm) 3.5 x 5 in. (9 x 12.

7 cm) 4 x 6 in. (10 x 15 cm) 4 x 7 in. (10 x 18 cm) (Panoramic) 4 x 12 in. (10 x 30 cm) 5 x 7 in. (13 x 18 cm) 8 x 10 in. (20 x 25 cm) US Letter - 8.5 x 11 in. (22 x 28 cm) A4 (21 x 30 cm) Quality Best, Normal, Draft Auto-detect media Auto-detect plain paper, photo paper, and transparency Optimize image quality for KODAK Photo Papers with barcode Image enhancement KODAK PERFECT TOUCH Technology with Home Center Software Add date to prints No (default), Yes Color Black-and-white or color Scene balance On (default), Off Copy document features Color Black-and-white or color Quantity 1 to 99 copies (may vary for different models of the 5200 series printers) Copy sizes Same Size, Fit-to-Page, 20% to 500% (may vary for different models of the 5200 series printers) Plain paper quality Best, Normal, Draft Brightness -3 to +3 www.kodak.com/go/aiosupport 53 Product and Safety Specifications Copy photo features Color Black-and-white or color Quantity 1 to 99 copies (may vary for different models of the 5200 series printers) Copy sizes 2 x 3 in.

(5 x 7.6 cm) 3.5 x 5 in. (9 x 12.7 cm) 4 x 6 in.

(10 x 15 cm) 4 x 7 in. (10 x 18 cm) (Panoramic) 4 x 12 in. (10 x 30 cm) 5 x 7 in. (13 x 18 cm) 8 x 10 in. (20 x 25 cm) US Letter - 8.

5 x 11 in. (22 x 28 cm) A4 (21 x 30 cm) Quality Automatic Brightness -3 to +3 Scanning features Scanner type Contact Image Sensor (CIS) Maximum scan size 8.5 x 11.7 in. (21.6 x 29.7 cm) Functions Segmentation scanning Auto-destination OCR Auto picture detection Paper tray features Paper capacity 100 sheets of 20 lb plain paper 20 sheets of photo paper, up to 12 mil (290 gsm) 20 envelopes Tray size 4 x 6 in. to 8.5 x 14 in. (10 x 15 cm to 21.

6 x 36 cm) Ink cartridges Ink handling 2-cartridge, 6-ink system Ink life 1-year warranty from date of purchase 54 www.kodak.com/go/aiosupport KODAK ESP 5200 Series All-in-One Printer Connectivity Protocols supported USB 2.0 High Speed; DPOF, MIPC Devices supported WINDOWS OS-based and MACINTOSH Computers, memory cards (SD, MS/Duo, MMC, SDHC) Image Formats supported Image printing supports JPEG (EXIF v2.2); does not support progressive JPEG format Number of USB ports One rear device port (high speed) Protocols supported USB 2.0 High Speed (for connection to computer only), DPOF (Tagged image printing), MIPC Wi-Fi Technology 802.11b/g/n, WPA/WPA2, and WPS supported Software support Application support Third-party image management applications; optical character reader (OCR) support for documents Media support Plain paper, photo paper, envelopes, greeting cards, transparencies with white stripe, labels Scanner support TWAIN and WIA, WIA2 (VISTA OS and WINDOWS 7), ICA (MAC OS), including segmentation scanning Update support Software and firmware updates available through Web support Physical specifications Power WW: 110-240 V AC, 50-60 Hz at 1.3 A Output: 36 V DC at 1.6 A Dimensions 422 x 98 x 181 mm [L x H x D] (16.6.

x 11.7. x 7.1 in.) Weight 5.

7 kg (12.7 lb) Operating range 5°C (41°F) to 35°C (95°F), 15 to 85% RH Full image quality 15°C (59°F) to 30°C (86°F), and 20 to 80% RH. environmental range Energy efficiency ENERGY STAR® Qualified All-in-One Printer Warranty Printer One year from purchase (with proof of purchase) Printhead One year from purchase (with proof of purchase) www.kodak.com/go/aiosupport 55 Product and Safety Specifications System requirements Computer with

WINDOWS OS Minimum Operating system WINDOWS 7, VISTA, or XP (SP2 or later) CPU INTEL CELERON Processor Clock speed 1.

2 GHz Memory 512 MB RAM Available hard disk space 500 MB available Interface USB 2.0 High Speed Removable drive CD-ROM Computer with MAC OS Minimum Operating system MAC OS X 10.4.8 or later CPU PowerPC G4, G5, or INTEL-based Mac Clock speed 1.2 GHz Memory 512 MB RAM Available hard disk space 200 MB available Interface USB 2.0 High Speed Removable drive CD-ROM Paper types supported Plain paper 20 to 24 lb (75 to 90 gsm) Photo paper Up to 12 mil (290 gsm) Card stock 110 lb index max (200 gsm) Envelopes 20 to 24 lb (75 to 90 gsm) Transparencies All commercially available inkjet varieties (with a white stripe) Labels All commercially available inkjet varieties on 8.5 x 11 in. and A4 size sheets Iron-on transfers All commercially available inkjet varieties on 8.5 x 11 in. and A4 size sheets 56 www.kodak.com/go/aiosupport

KODAK ESP 5200 Series All-in-One Printer Paper sizes supported Plain paper A4 (8.3 x 11.7 in. / 21 x 30 cm) A5 (5.8 x 8.3 in. / 15 x 21 cm) A6 (4.1 x 5.8 in.

/ 11 x 15 cm) B5 (6.9 x 9.8 in. / 18 x 25 cm) US Executive (7.3 x 10.

5 in. / 18 x 27 cm) US Letter (8.5 x 11 in. / 22 x 28 cm) US Legal (8.5 x 14 in.

/ 22 x 36 cm)) Custom sizes from 4-8.5 in. / 10-22 cm wide and 6-14 in. / 15-36 cm long Labels A4 (8.3 x 11.7 in. / 21 x 30 cm) US Letter (8.5 x 11 in. / 22 x 28 cm) Index card stock 4 x 6 in. index cards (10 x 15 cm) 5 x 7 in.

index cards (13 x 18 cm) Transparencies and A4 (210 x 297 mm) iron-on transfers US Letter (8.5 x 11 in.) (216 x 280 mm) Envelopes C5 (6.7 x 9 in. / 16 x 23 cm) C6 (4.5 x 6.4 in. / 11 x 16 cm) DL (designated long) (4.3 x 8.7 in.

/ 11 x 22 cm) US #7¼ (3.9 x 7.5 in. / 10 x 19 cm) US #9 (3.9 x 8.

9 in. / 10 x 23 cm) US #10 (4.12 x 9.5 in) (105 x 241 mm) Photos 4 x 6 in. (10 x 15 cm) 4 x 7 in.

(10 x 18 cm) 4 x 12 in. (10 x 31 cm) 5 x 7 in. (13 x 18 cm) 8 x 10 in. (20 x 25 cm) US Letter (8.5 x 11 in. / 22 x 28 cm) A4 (8.3 x 11.7 in. / 21 x 30 cm)

www.kodak.com/go/aiosupport

57 Product and Safety Specifications Safety information KODAK ESP 5200 Series All-in-One Printers are Class 1 LED Products. • Always follow all warnings and instructions marked on the product. • Use only the power source indicated on the product regulatory label. • Use only the power cord that comes with the product (or an approved power cord greater or equal to H05W-F, 2G, 0.75mm²). Using another power cord may cause fire and/or shock. Do not use the included power cord with any other equipment. • If you do not use this product for a long period of time, unplug it from the electrical outlet. •

Always turn this product off by using the On/Off button. Wait until the On/Off button stops flashing before removing the power plug from the outlet.

• Do not allow the power cord to become damaged or frayed. • If you need to use an extension cord with this product, make sure that the ampere rating of the product does not exceed the ampere rating of the extension cord. • Place the product on a flat, stable surface that extends beyond the product's base in all directions. This product will not operate properly if tilted or at an angle. • When storing or transporting this product, do not tilt or stand it on its side.

Never turn this product upside down (ink can leak out of the product). • Avoid placing this product in an environment that is subject to rapid changes in temperature or humidity, mechanical shocks, vibration, or dust. Do not place near radiators, heating vents, or in direct sunlight.



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>

• Leave enough room around this product for sufficient ventilation. • Do not block this product's covers or openings, or insert any objects through slots. • Do not use aerosol products inside or around this product. • Do not spill any liquid on this product. • Do not attempt to repair or service this product. • If the power cord or plug is damaged, if any liquid has been spilled onto the product, if the product has been dropped or the case damaged, if the product does not operate normally or exhibits a major change in performance level, unplug this product and contact Kodak at www.kodak.com/go/contact. For Service Personnel: CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to local instructions. 58 www.kodak.com/go/aiosupport

KODAK ESP 5200 Series All-in-One Printer LCD screen safety • Use only a dry, soft cloth to clean the LCD screen. Do not use any liquid or chemical cleaners. • If the LCD screen is damaged, contact Kodak immediately. If any of the solution from the display gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush your eyes immediately with water. If any discomfort or change in vision persists after washing, seek medical attention immediately. Ink cartridge safety • Keep all ink cartridges out of the reach of children. • If ink gets on your skin, wash with soap and water. If ink gets into your eyes, flush immediately with water. If any discomfort or change in vision persists after washing, seek medical attention immediately.

• For MSDS information on inks, go to www.kodak.com/go/MSDS. Regulatory compliance FCC statement The United States Federal Communications Commission (in CFR 47 Part 15.105) has specified that the following notice be brought to the attention of the users of this product: Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver • Connect the product into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help. www.kodak.com/go/aiosupport 59 Product and Safety Specifications CAUTION: Pursuant to Part 15.21 of the FCC Rules, any changes or modifications to this product not expressly approved by Eastman Kodak Company might cause harmful interference and void the FCC authorization to operate this product. The radiated energy from this product is well below the FCC radio frequency exposure limits. Nevertheless, the product shall be used in such a manner that the potential for human contact during normal operation is minimized. This product and any attached external antenna, if supported, shall be placed in such a manner to minimize the potential for human contact during normal operation. In order to avoid the possibility of exceeding the FCC exposure limits, human proximity shall not be less than 20 cm (8 inches) during normal operation. Canadian statements This product meets the applicable Industry Canada technical specifications.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. @@@@ This equipment is not intended for use in the work place in accordance with BildscharbV regulations. "Das Gerät ist nicht für die Benutzung am Bildschirmarbeitsplatz gemäß BildscharbV vorgesehen." REACH Article 33 declarations

Go to www.kodak.com/go/REACH for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH). Waste electrical and electronic equipment labeling In the European Union, do not discard this product as unsorted municipal waste. Contact your local authorities or go to www.kodak.com/go/recycle

for recycling program information. ENERGY STAR® Qualified All-in-One Printer To conserve energy, this printer will enter a reduced power (sleep) mode automatically after 1 hour. You can adjust the delay time (in 0.5 hour increments) up to 4 hours. @@service marks.

@@@ Retain the original dated sales receipt. @@ You may be required to send Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak together with proof of the purchase price paid.

Repair, replacement, or refund of the purchase price are the sole remedies under this warranty. If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. KODAK MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY FOR THIS PRODUCT, AND DISCLAIMS THE IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law.

one year from the purchase date or such longer period as required by law.



[You're reading an excerpt. Click here to read official KODAK ESP 5200 user guide](http://yourpdfguides.com/dref/4732969)

<http://yourpdfguides.com/dref/4732969>