



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ESP C110. You'll find the answers to all your questions on the KODAK ESP C110 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK ESP C110
User guide KODAK ESP C110
Operating instructions KODAK ESP C110
Instructions for use KODAK ESP C110
Instruction manual KODAK ESP C110

User Guide • Guide d'utilisation
Guía del usuario • Guia do Usuário



Kodak ESP C110

All-in-One Printer • Imprimantes tout-en-un
Impresoras multifunción • Impressoras Multifuncionais



[You're reading an excerpt. Click here to read official KODAK ESP C110 user guide](http://yourpdfguides.com/dref/3664799)

<http://yourpdfguides.com/dref/3664799>

Manual abstract:

Resources Support is available! Go to www.kodak.com/go/aio-support for: · answers to questions · software or firmware upgrades · Extended User Guide · and more! If you prefer, you can chat online, send us an e-mail, or call for technical support. Go to www.kodak.com/go/contact. Table of contents 1 Printer

Overview Components....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..2 Control panel ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 3 Home Center Software

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..4 Paper

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.4 Paper types

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.4 Paper sizes

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..4 Loading paper.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...5 2 Basic Functions Printing ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...8 Printing documents.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....8 Printing pictures.

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.8 Copying

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...10 Scanning.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... @@@@12 Getting help on the Web

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. 13 4 Safety and Warranty Information Safety Information

.....

.....
.....
... 16 Your Rights.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. @@@@The Home Center icon will appear on your desktop. @@@@Use only paper that is designed for inkjet printers. Paper types You can use:
Plain paper -- 16 to 24 lb / 60 to 90 gsm Photo paper -- up to 12 mils Card stock -- 110 lb / 200 gsm, max Envelopes -- most standard types Labels -- all commercially available inkjet varieties on 8.5 x 11-in. or A4 sheets · Iron-on transfers -- all inkjet varieties on 8.5 x 11-in. or A4 sheets · · · · Paper sizes 4 x 6 in. / 10 x 15 cm to 8.

5 x 14 in. / 22 x 36 cm For more information about paper types and sizes, see the Extended User Guide at www.kodak.com/go/manuals. 4
www.kodak.com/go/aiosupport KODAK ESP C110 All-in-One Printer Loading paper 1. Lift the input tray. 2. Open the output tray, then pull out the extender until it is fully extended.

www.kodak.com/go/aiosupport 5 Printer Overview Loading plain paper The input tray capacity is 100 sheets of plain paper. To load plain paper: 1. Fan and stack the paper.

2. Make sure the left and right paper-edge guides are in the far left and far right positions, then insert the paper into the input tray. 6
www.kodak.com/go/aiosupport KODAK ESP C110 All-in-One Printer Loading photo paper The input tray capacity is 20 sheets of photo paper. To load photo paper (smaller than 8.5 x 11 in.): 1. Remove any paper from the tray. 2. Insert the paper (short side first) into the center of the input tray with the logo side toward the tray and the glossy side toward you. IMPORTANT: If the photo paper is loaded the wrong way, print quality will be affected. 3. Move the paper-edge guides until they touch the paper. www.kodak.com/go/aiosupport

kodak.com/go/aiosupport 7 2 Printing Basic Functions Printing documents To print a document from your computer: 1. 2. 3. 4. Open the document. Select File > Print. In the Print window, select your KODAK Printer. @@@@Home Center Software lets you edit and enhance your pictures quickly.

@@@@@Use or to browse to the picture you want to print, then press OK.

3. @@4. Select a print size. a. Press Back.

b. Press to select Print Size. c. Press to navigate to the size picture you want to print. 5.

Press Start to begin printing. @@@@Close the lid. 3. Press Home. 4. Press or to select Copy Document or Copy Photo, then press OK. 5. Press Start to begin copying. @@To scan a document or picture: 1. @@Close the lid.

3. Open Home Center Software on your computer. @@4. @@@@Open Home Center Software. 2. Select Order Supplies. 3. @@Wait five seconds. Turn on the printer. @@· Make sure the power cord is connected to the AC adapter, it is plugged into an outlet or power strip, and that the LED on the AC adapter is lit.

Make sure that: · your printer is plugged in and turned on. @@@@· Make sure the paper is loaded correctly. See Loading paper, page 5. · For more help, go to www.kodak.com/go/troubleshooting.

· Check that KODAK Ink Cartridge(s) are installed. Do not use non-Kodak brand or refilled ink cartridges. · Remove, then install the cartridges again. @@· Make sure the paper in the tray is free of tears or creases.

· Make sure you do not overload the input paper tray. For more information, go to www.kodak.com/go/MSDS.
www.kodak.com/go/aiosupport 15 Safety and Warranty Information Warranty Information Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to send Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. @@@@If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters

and cables), or claims made after the duration of this warranty. @@@@Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause.

16 www.kodak.com/go/aiosupport KODAK ESP C110 All-in-One Printer Liability for any special consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services or claims of your customers for such damages resulting from the purchase, use or failure of the Product), regardless of cause, or for breach of any written or implied warranty is expressly disclaimed. Your Rights Some states or jurisdictions do not allow ex.



[You're reading an excerpt. Click here to read official KODAK ESP](#)

[C110 user guide](#)

<http://yourpdfguides.com/dref/3664799>