



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ESP C310. You'll find the answers to all your questions on the KODAK ESP C310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KODAK ESP C310**  
**User guide KODAK ESP C310**  
**Operating instructions KODAK ESP C310**  
**Instructions for use KODAK ESP C310**  
**Instruction manual KODAK ESP C310**

User Guide • Guide d'utilisation  
Guía del usuario • Guia do Usuário



## **Kodak** ESP C310

All-in-One Printer • Imprimantes tout-en-un  
Impresoras multifunción • Impressoras Multifuncionais



[You're reading an excerpt. Click here to read official KODAK ESP C310 user guide](http://yourpdfguides.com/dref/3664819)

<http://yourpdfguides.com/dref/3664819>

**Manual abstract:**

Resources Support is available! Go to [www.kodak.com/go/aio-support](http://www.kodak.com/go/aio-support) for: · answers to questions · software or firmware upgrades · Extended User Guide · and more! If you prefer, you can chat online, send us an e-mail, or call for technical support. Go to [www.kodak.com/go/contact](http://www.kodak.com/go/contact). Table of contents 1 Printer

Overview Components....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

2 Control panel....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... @@@@4 Paper sizes..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 4 Loading paper .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 5.2 Basic Functions Printing .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. @@@@10 Scanning .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 11 Ordering supplies.....

.....

.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *11 3 Troubleshooting Basic troubleshooting* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

*..12 Getting help on the Web...*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.. 14 4 Safety and Warranty Information Safety Information .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

*....15 LCD Screen Safety.*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*15 Ink Cartridge Safety* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 16 Warranty Information...*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 16 Limited Warranty ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
... @@@@The Home Center icon will appear on your desktop. @@@@or A4 sheets · Iron-on transfers -- all inkjet varieties on 8.5 x 11-in. or A4 sheets · Paper sizes 4 x 6 in. / 10 x 15 cm to 8.5 x 14 in. / 22 x 36 cm For more information about paper types and sizes, see the Extended User Guide at [www.kodak.com/go/manuals](http://www.kodak.com/go/manuals).

4 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP C310 All-in-One Printer Loading paper 1. Lift the input tray. 2. Pull out the output tray until it is fully extended. [www.kodak.com](http://www.kodak.com).

5 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) Printer Overview Loading plain paper The input tray capacity is 100 sheets of plain paper. To load plain paper: 1. Fan and stack the paper. 2. Make sure the left and right paper-edge guides are in the plain-paper position, then insert the paper into the input tray. 6

7 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP C310 All-in-One Printer Loading photo paper The paper tray capacity is 20 sheets of photo paper. To load photo paper: 1. Remove any plain paper from the tray.

2. Insert the paper (short side first) into the input tray with the logo side facing away toward the tray and the glossy side toward you. IMPORTANT: If the photo paper is loaded the wrong way, the image quality will be affected. 3. Move the paper-edge guides until they touch the paper.

[www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 7 2 Printing Basic Functions Printing documents To print a document from your computer: 1. 2. 3.

4. Open the document. Select File > Print. In the Print window, select your KODAK Printer. Choose the pages to print, number of copies, etc, then click OK (on a computer with WINDOWS OS) or Print (on a computer with MAC OS). Printing pictures You can print pictures with your all-in-one printer from: · A memory card inserted into the memory card slot. · An iPhone/iPod Touch. For information, go to [www.kodak.com/go/picflick](http://www.kodak.com/go/picflick).

@@Home Center Software lets you edit and enhance your pictures quickly. @@@@Use or to browse to the picture you want to print, then press OK. 3.

@@4. Select a print size. a. Press Back. b. Press to select Print Size. c.

Press to navigate to the size picture you want to print. 5. Press Start to begin printing. @@@@Close the lid. 3.

Press Home. 4. Press or to select Copy Document or Copy Photo, then press OK. 5. Press Start to begin copying.

@@To scan a document or picture: 1. @@Close the lid. 3. Open Home Center Software on your computer. @@4. @@@@Open Home Center Software. 2. Select Order Supplies. 3. @@Wait five seconds.

Turn on the printer. @@@@· Make sure that your printer is plugged in and turned on. @@@@To check: a. On the printer, press Home. b. Press to select Network Settings, then press OK. c. Press to select View Network Configuration, then press OK. Make sure that the Active Connection Type is WiFi, and that the IP Address is not zeros. your router is transmitting data.

@@For more information, go to [www.kodak.com/go/inkjetnetworking](http://www.kodak.com/go/inkjetnetworking). @@@@Do not use any liquid or chemical cleaners. · If the LCD screen is damaged, contact Kodak immediately.

@@@@If any discomfort or change in vision persists after washing, seek medical attention immediately. [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) 15 Safety and Warranty Information Ink Cartridge Safety · Keep all ink cartridges out of the reach of children. · If ink gets on your skin, wash with soap and water.

If ink gets into your eyes, flush your eyes immediately with water. If any discomfort or change in vision persists after washing, seek medical attention immediately. · For Material Safety Data Sheets for inks, go to [www.kodak.com/go/MSDS](http://www.kodak.com/go/MSDS). Warranty Information Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to send Products, at your expense, to the authorized service facility for the country where the Products were purchased.

Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein.

Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. @@@@If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. 16 [www.kodak.com/go/aiosupport](http://www.kodak.com/go/aiosupport) KODAK ESP C310 All-in-One Printer Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. KODAK MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY FOR THIS PRODUCT, AND DISCLAIMS THE IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PA.



[You're reading an excerpt. Click here to read official KODAK ESP C310 user guide](http://yourpdfguides.com/dref/3664819)

<http://yourpdfguides.com/dref/3664819>