



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ESP C315. You'll find the answers to all your questions on the KODAK ESP C315 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK ESP C315
User guide KODAK ESP C315
Operating instructions KODAK ESP C315
Instructions for use KODAK ESP C315
Instruction manual KODAK ESP C315

User Guide • Guide d'utilisation
Guía del usuario • Guia do Usuário



Kodak ESP C315

All-in-One Printer • Imprimantes tout-en-un
Impresoras multifunción • Impressoras Multifuncionais



[You're reading an excerpt. Click here to read official KODAK ESP C315 user guide](http://yourpdfguides.com/dref/3664839)

<http://yourpdfguides.com/dref/3664839>

Manual abstract:

Resources Support is available! Go to www.kodak.com/go/aiosupport for: · answers to questions · software or firmware upgrades · Extended User Guide · and more! If you prefer, you can chat online, send us an e-mail, or call for technical support. Go to www.kodak.com/go/contact. Table of contents 1 Printer

Overview Components....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.2 Control panel....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....

3 Home Center Software

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 4 Paper .

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..@@@4 Loading paper

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..5 2 Basic Functions Printing ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....8 Printing documents

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
..8 Printing pictures...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...8 Copying

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

10 Scanning

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....11 Ordering supplies....

.11 3 Troubleshooting Basic troubleshooting

..... 12 Getting help on the Web...

...14 4 Safety and Warranty Information Safety Information ..

the paper. www.kodak.com/go/aio-support 7 2 Printing Basic Functions Printing documents To print a document from your computer: 1. 2.

3. 4. Open the document. Select File > Print. In the Print window, select your KODAK Printer.

Choose the pages to print, number of copies, etc, then click OK (on a computer with WINDOWS OS) or Print (on a computer with MAC OS). Printing pictures
You can print pictures with your all-in-one printer from: · A memory card inserted into the memory card slot. · An iPhone/iPod Touch. For information, go to
www.kodak.com/go/picflick.

You can also print pictures using Home Center Software from your computer with WINDOWS OS. Home Center Software lets you edit and enhance your pictures quickly. On a computer with either MAC OS or WINDOWS OS, you can print pictures from KODAK EASYSHARE Software or any picture-editing or photo-management software. For more information, see the Extended User Guide at www.kodak.com/go/manuals. Printing pictures from a memory card Your printer accepts the following memory cards: · · · · SD Card SDHC Card MMC Card MEMORY STICK Variations of the memory cards above that require an adapter (for example, MEMORY STICK Duo, miniSD, and microSD) 8 www.kodak.com/go/aio-support KODAK ESP C315 All-in-One Printer To print a picture from a memory card: 1.

Insert the memory card into the memory card slot. 2. Use or to browse to the picture you want to print. 3. @@4. Press OK to select your picture. 5. @@6. Select a print size. a.

Press Back. b. Press to select Print Size. c. Press to navigate to the size picture you want to print.

7. Press Start to begin printing. @@@@Close the lid. 3. Press Home.

4. Press or to select Copy Document or Copy Photo, then press OK. 5. Press Start to begin copying. @@To scan a document or picture: 1. @@Close the lid.

3. Open Home Center Software on your computer. @@4. @@@@Open Home Center Software.

2. Select Order Supplies. 3. @@Wait five seconds. Turn on the printer. @@@@ · Make sure that your printer is plugged in and turned on. @@@@To check:
a. On the printer, press Home. b. Press to select Network Settings, then press OK.

c. @@@@For more information, go to www.kodak.com/go/inkjetnetworking. @@@@Do not use any liquid or chemical cleaners.

· If the LCD screen is damaged, contact Kodak immediately. @@@@ · If ink gets on your skin, wash with soap and water. If ink gets into your eyes, flush your eyes immediately with water. If any discomfort or change in vision persists after washing, seek medical attention immediately. · For Material Safety Data Sheets for inks, go to www.kodak.com/go/MSDS.

Warranty Information Limited Warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair. Limited Warranty Coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to send Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. @@@@Repair, replacement, or refund of the purchase price are the sole remedies under this warranty.



[You're reading an excerpt. Click here to read official KODAK ESP C315 user guide](http://yourpdfguides.com/dref/3664839)

<http://yourpdfguides.com/dref/3664839>

If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials.

*If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. 16
www.kodak.com/go/aiosupport KODAK ESP C315 All-in-One Printer Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's o.*



[You're reading an excerpt. Click here to read official KODAK ESP](http://yourpdfguides.com/dref/3664839)

[C315 user guide](http://yourpdfguides.com/dref/3664839)

<http://yourpdfguides.com/dref/3664839>