



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK K620E. You'll find the answers to all your questions on the KODAK K620E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK K620E User guide KODAK K620E Operating instructions KODAK K620E Instructions for use KODAK K620E Instruction manual KODAK K620E



[You're reading an excerpt. Click here to read official KODAK K620E user guide](http://yourpdfguides.com/dref/2702114)
<http://yourpdfguides.com/dref/2702114>

Manual abstract:

Features · Charges AA and AAA Ni-MH rechargeable batteries. · Charge up to 4 AA or up to 4 AAA batteries. Recommended Temperature Ranges for Use Ni-MH To use (discharge) the batteries To charge the batteries To store the batteries 32°113°F (0°45°C) 32°113°F (0°45°C) -13°140°F (-25°60°C) Using the batteries outside the above temperatures may shorten battery life and decrease efficiency. Operating Instructions CHARGE INDICATOR LIGHTS One or both lights are on (steady) during charging, depending on whether you are charging 2 or 4 batteries. HOW TO CHARGE 1. Place 2 or 4 AA or AAA size batteries into the charger so that the + (positive) and (negative) ends (terminals) of the batteries correspond to the same + and marking in the charger. When charging only 2 AA or AAA size batteries, place them together in either the left or right side (channel) of the charger. CAUTION: Do not mix AA and AAA size batteries in the same channel. 2. Plug the charger into an electrical receptacle (outlet).

The charge indicator lights are illuminated and battery charging begins. @@See specification chart. TIPS · For best performance, use only Kodak Ni-MH batteries. @@· Do not use charged and discharged batteries together. @@@@ @@@@ @@@@ @@@@ @@@@ This product contains a small amount of lead in the circuit boards.

Disposal may be regulated. For disposal or recycling information, please contact your local authorities or, in the U.S.A., contact the Electronics Industry Alliance website at www.eiae.org.

Guarantee: This battery charger and batteries are guaranteed against defects in material and workmanship for one year after date of purchase. Any device damaged by these batteries due to such defect will be repaired or replaced (at our option) if sent with batteries to Kodak. To Claim: In the U.S. and Canada call toll free, 1-888-375-6325 or 1-800-242-2424, between the hours of 9:00 a.m. and 8:00 p.m.

(EST) Monday through Friday for authorization and mailing address. Send charger or batteries prepaid with your address and phone number, copy of proof of purchase and description of usage. Replacement charger or batteries will be mailed prepaid. No cash refunds will be given. Outside the U.S. @@@

Eastman Kodak Company, 2009. MC/MR/TM: Kodak. www.kodak.com/go/batteries 4H5410 .



[You're reading an excerpt. Click here to read official KODAK K620E user guide](#)

<http://yourpdfguides.com/dref/2702114>