



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK NI-MH 1-HOUR CHARGER K6200. You'll find the answers to all your questions on the KODAK NI-MH 1-HOUR CHARGER K6200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual KODAK NI-MH 1-HOUR CHARGER K6200**
- User guide KODAK NI-MH 1-HOUR CHARGER K6200**
- Operating instructions KODAK NI-MH 1-HOUR CHARGER K6200**
- Instructions for use KODAK NI-MH 1-HOUR CHARGER K6200**
- Instruction manual KODAK NI-MH 1-HOUR CHARGER K6200**



[You're reading an excerpt. Click here to read official KODAK NI-MH 1-HOUR CHARGER K6200 user guide](http://yourpdfguides.com/dref/1083583)
<http://yourpdfguides.com/dref/1083583>

Manual abstract:

HOW TO CHARGE 1. Place up to 4 AA or up to 2 AAA size batteries into the charger so that the + (positive) and (negative) ends (terminals) of the batteries correspond to the same + and - marking in the charger. When charging 2 AA batteries, insert them together into either end positions. For charging 2 AAA batteries, use inside positions. Note: For best performance, use only Kodak Ni-MH batteries. 2 AA battery charge 2 AAA battery charge 4 AA battery charge 2. Plug the charger into an electrical outlet of 100-240V AC. The charge indicator light is illuminated and battery charging begins. (NOTE: Do not insert or remove batteries during this charging process). The charging cycle time depends on battery type.

3. Be careful when removing the batteries right after charging. The temperature of batteries can be high. **IMPORTANT SAFETY INSTRUCTIONS-- Save These Instructions · DANGER--TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.** · For connection to a supply not in the U.

S.A., use an attachment plug adapter of the proper configuration for the power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position. **CAUTION:** · Charge only Ni-MH AA/AAA rechargeable batteries.

@@ · Risk of electric shock. Dry location use only. · Do not operate charger if it has been damaged. @@@@ · Be sure to use charger with correct voltage: AC 100~240V. @@ · Do not modify or disassemble. @@ · Keep out of reach of infants. Children may use only under strict parental supervision. @@ · Do not modify or disassemble. · Never expose to heat or fire. @@@@ · Do not use charged and discharged batteries together.

· When charging do not mix Ni-MH type batteries. Use same brand batteries when charging. @@ · Charge the batteries before using. @@@@ (2500mAh) 3-4 batteries 154 min. Ni-MH AA 1-2 batteries 64 min. (2100mAh) 3-4 batteries 128 min. Ni-MH AA 1-2 batteries 55 min. (1800mAh) 3-4 batteries 110 min. Ni-MH AAA 1-2 batteries 63 min. @@@@ @@@@ Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. Please dispose of this product in accordance with all applicable regulations. Disposal may be regulated. For disposal or recycling information, please contact your local authorities or, in the U.S.

A., contact the Electronics Industry Alliance website at www.eiae.org. **Guarantee:** This battery charger and batteries are guaranteed against defects in material and workmanship for one year after date of purchase.

Any device damaged by these batteries due to such defect will be repaired or replaced (at our option) if sent with batteries to Kodak. **To Claim:** In the U.S. and Canada call toll free, 1-888-375-6325 or 1-800-242-2424, between the hours of 9:00a.m. and 8:00p.m. (EST) Monday through Friday for authorization and mailing address. Send charger or batteries prepaid with your address and phone number, copy of proof of purchase and description of usage.

Replacement charger or batteries will be mailed prepaid.

No cash refunds will be given. Outside the U.S. @@@@.



[You're reading an excerpt. Click here to read official KODAK NI-MH 1-HOUR CHARGER K6200 user guide](http://yourpdfguides.com/dref/1083583)
<http://yourpdfguides.com/dref/1083583>