



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK P725. You'll find the answers to all your questions on the KODAK P725 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KODAK P725**  
**User guide KODAK P725**  
**Operating instructions KODAK P725**  
**Instructions for use KODAK P725**  
**Instruction manual KODAK P725**

---

## KODAK EASYSHARE Digital Frame



**Extended user guide**  
**P725/P825**

[www.kodak.com](http://www.kodak.com)

For help with your digital frame, [www.kodak.com/go/digitalframesupport](http://www.kodak.com/go/digitalframesupport)



[You're reading an excerpt. Click here to read official KODAK P725 user guide](http://yourpdfguides.com/dref/2430756)

<http://yourpdfguides.com/dref/2430756>

**Manual abstract:**

*kodak.com For help with your digital frame, [www.kodak.com/go/digitalframesupport](http://www.kodak.com/go/digitalframesupport) Eastman Kodak Company Rochester, New York 14650 © Eastman Kodak Company, 2009 All screen images are simulated. Kodak and EasyShare are trademarks of Eastman Kodak Company. P/N 4H6588\_en Product features Top--buttons and controls Delete from frame Copy to frame Play speed/transition Slow w/Wipe Medium w/Pan Zoom Fast w/Fade Play order Shuffle By Date Navigation Next picture OK/Play/Pause Previous picture [www.kodak.com/go/support](http://www.kodak.com/go/support) i Side--power and connectors Power USB connector Memory card slot SD/SDHC/MMC/MS/XD Memory card slot MS/MS Pro Duo Stand DC-in\* \* See Attaching the power cable, page 1 and Attaching the stand, page 2. ii*

*www.kodak.*

*com/go/support Table of contents 1 1 Getting started .....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....1 Attaching the power cable ....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.. 1 Attaching the stand.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.... 2 Turning your frame on and off .*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*.....*

*2 Inserting a memory card.....*

*.....*

*.....*

*.....*

.....  
.....  
.....  
.....

*3 Connecting a USB device.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*..... 3.2 Viewing pictures .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...4 Viewing pictures from internal memory.....*

.....  
.....  
.....  
.....  
.....  
.....

*. 4 Viewing pictures from a memory card .....*

.....  
.....  
.....  
.....  
.....  
.....

*. 4 Navigating through your pictures.....*

.....  
.....  
.....  
.....  
.....  
.....

*..... 5 Changing play speed, transitions, and order ..*

.....

..... @@@@ @10 4 Troubleshooting and support ..

*11 Learning more about your frame.....*

*..... 11 Picture frame problems ....*

*..... 11 Identifying graphic messages.....*

*..... 13 Identifying error messages....*

*. 14 5 Appendix .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

....15 Digital frame specifications.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 15 Important safety instructions ..

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.... 16 Additional care and maintenance .

.....

.....  
.....  
.....  
.....

.....  
.....  
.....

... 17 Limited warranty .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 17 Regulatory compliance and advisory .....

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 19 [www.kodak.com/go/support](http://www.kodak.com/go/support) iii 1 Getting started Welcome to your KODAK EASYSHARE Digital Frame. Viewing your pictures couldn't be simpler! Attaching the power cable CAUTION: Do not use this power cable with other devices, including digital cameras. Your power cable may look different from the one pictured. Use the plug that accommodates your type of power outlet. 1 [www.kodak.com](http://www.kodak.com)

[com/go/support](http://www.kodak.com/go/support) Getting started Attaching the stand 2 1 1 Snap the stand onto the frame. 2 Route the power cord through the cutout in the stand. Turning your frame on and off Power button - press and hold (for about 2 seconds), then release NOTE: Your frame may contain pre-loaded sample pictures, which play only when there are no other pictures loaded (from a memory card, USB device, or internal memory). Sample pictures may not be deleted.

[www.kodak.com/go/support](http://www.kodak.com/go/support) 2 Getting started Inserting a memory card To insert a card, push it firmly into the slot until it clicks and stops. To remove a card, pull it out of the slot. Top slot\*: SECURE DIGITAL/SECURE DIGITAL High Capacity (SD/SDHC) MMC (MULTIMEDIA Card) XD MS (MEMORY STICK) Bottom slot: MS/MS Pro Duo (MEMORY STICK) \*IMPORTANT: Do not insert an MS Pro or MS Pro Duo card in the top slot. It may be difficult to remove. Connecting a USB device Supported USB devices include a flash drive, card reader, hard drive\*, etc. USB devices and cables are sold separately. \* External hard drives must be self-powered and formatted as FAT32. 3 [www.kodak.com](http://www.kodak.com)

[com/go/support](http://com/go/support) 2 Viewing pictures Pictures play from the frame's internal memory when no card or USB device is inserted. Pictures play from a memory card or USB device when one is inserted in the frame. NOTE: Your frame may contain pre-loaded sample pictures, which play only when there are no other pictures loaded (from a memory card, USB device, or internal memory). Sample pictures may not be deleted. Viewing pictures from internal memory Turn on the frame.

The pictures in your frame's internal memory play automatically. NOTE: Make sure no memory card or USB device is inserted in the frame. To copy pictures into the frame's internal memory, see page 8. Viewing pictures from a memory card Turn on the frame. Insert a memory card, USB flash drive, or other USB device (see page 3). Your pictures start playing automatically. [www.kodak.com/go/support](http://www.kodak.com/go/support) 4 Viewing pictures Navigating through your pictures Press the arrow buttons to navigate through your pictures. Previous picture Next picture Play/Pause Navigation and play buttons To move more quickly through your pictures, press and hold an arrow button.

Previous picture--Go to the previous picture. Play/Pause--Start or pause play. Next picture--Go to the next picture. 5 [www.kodak.com/go/support](http://www.kodak.com/go/support) Viewing pictures Changing play speed, transitions, and order Move the sliders to change the setting. Play speed/transition Play order Play speed and transition Change how long each picture stays on the screen and the type of transition between pictures. Slow--pictures change every 60 seconds, with wipe transition. Medium (default)--pictures change every 10 seconds, with pan and zoom transition. Fast--pictures change every 5 seconds, with fade transition. Play order Change the order in which your pictures play. Shuffle (default)--pictures play in random order. By date--pictures play by date, from oldest to newest. [www.kodak.com](http://www.kodak.com)

[com/go/support](http://com/go/support) 6 3 Doing more with your frame Deleting pictures from the frame You can delete pictures from your frame's internal memory, but not from a memory card or USB device. 1 Remove a memory card or USB device from the frame, if inserted. 2 While pictures are playing from internal memory, press the Delete button. 3 Select the pictures to delete: To delete the currently displayed picture: Press the Next arrow button once to highlight Delete single Delete all Delete single Exit delete To delete all of the pictures in the current picture source: Press the Next arrow button twice to highlight Delete all. 4 Press OK to confirm the deletion. 7 [www.kodak.com/go/support](http://www.kodak.com/go/support) Doing more with your frame Copying pictures to internal memory Copy pictures from a memory card or USB device into your frame's internal memory. Copying to a memory card or USB device is not supported. @@@@See page 3. The pictures start playing. @@@@arrow button to highlight 4 Press OK. @@@@The Install Firmware screen appears on your frame. @@@@When the upgrade is complete, your frame automatically restarts.

@@@@Gently wipe the frame and screen with a clean, dry, lint-free cloth. @@@@Frame does not turn on. @@@@release. Reset the frame. Press the Play and Power buttons (see page i) at the same time, and hold for 5 seconds. (Resetting your frame does not erase your saved files.) 11 [www.kodak.com/go/support](http://www.kodak.com/go/support) Troubleshooting and support If..

. Try one or more of the following Nothing happens when Insert a certified SD/SDHC/MMC/XD Card, with images, into the upper designated card slot, then push to seat it (see page 3). a memory card or USB device is connected. Insert a certified MS/MS Pro Duo Card, with images, into the lower designated card slot only, then push to seat it (see page 3). NOTE: Do not insert an MS Pro or MS Pro Duo card in the top slot. It may be difficult to remove. Make sure the USB device is connected securely (see page 3). Make sure the file format of your pictures is supported.



[You're reading an excerpt. Click here to read official KODAK P725 user guide](http://www.kodak.com/go/support)  
<http://yourpdfguides.com/dref/2430756>

(See page 15). NOTE: Pictures may take a longer time to display when the files are large or when using a large capacity memory card or other connected device.

[www.kodak.com/go/support](http://www.kodak.com/go/support) 12 Troubleshooting and support Identifying graphic messages Graphics appear on the screen to let you know what's happening with yplace frame near open flame sources such as lighted candles or heaters. Do not expose this product to liquid, moisture, or extreme temperatures.

[www.kodak.com/go/support](http://www.kodak.com/go/support) 16 Appendix Additional care and maintenance To clean the frame or screen, use a soft, lint-free cloth dampened with lens cleaning solution or a water-based cleaning solution. Use light pressure. Do not allow chemicals, such as suntan lotion, to contact painted surfaces. Service agreements are available in some countries.

Contact a dealer of Kodak products for more information. For digital frame disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance at [www.eiae.org](http://www.eiae.org) or visit [www.kodak.com/go/digitalframesupport](http://www.kodak.com/go/digitalframesupport). Limited warranty Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair. Limited warranty coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid.

Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be 17 [www.kodak.com/go/support](http://www.kodak.com/go/support) Appendix replaced with a remanufactured Product.

Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction. [www.kodak.com/go/support](http://www.kodak.com/go/support) 18 Appendix Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. Regulatory compliance and advisory FCC compliance and advisory This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. @ @ @ @ @ @ @ @ @ @ An independent license for such use is required.

For details, please visit <http://mp3licensing.com>. [www.kodak.com/go/support](http://www.kodak.com/go/support) 20 Appendix Australian C-Tick N137 Waste Electrical and Electronic Equipment labeling In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste).

For more information, contact your retailer, collection facility, or appropriate local authorities; or visit [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle). Product weight with adapter and stand: P725, 441 gm. P825, 599 gm Russian GOST-R Eastman Kodak Company Rochester, New York 14650 VCCI Class B ITE Korean Class B ITE 21 [www.kodak.com/go/support](http://www.kodak.com/go/support)

[www.kodak.com/go/support](http://www.kodak.com/go/support) Appendix China RoHS [www.kodak.com/go/support](http://www.kodak.com/go/support) 22 Index A AC adapter attaching, 1 safety information, 16 specifications, 15 appendix, 15 B By date play order, 6 C cable power, connecting, 1 USB, connecting, 3 card, memory inserting, 3 slot, ii supported types, 15 viewing pictures from, 4 cleaning frame, 10, 17 copying to internal memory, 8 D delete pictures, 7 disposal, recycling, 17 download firmware, 9 duration, changing, 6 E error icons, 14 F file formats, supported, 15 firmware, upgrading, 9 flash drive connecting, 3 viewing pictures from, 4 frame, picture resetting, 11 specifications, 15 troubleshooting, 11 turn on/off, 2 freeze or lock screen, reset, 11 G graphic messages, 13 1 H help frame, 11 support URLs, 11 troubleshooting and support, 11 I icons, screen, 13 inserting memory cards, 3 USB device, 3 internal memory capacity, 15 copying into, 8 playing from, 4 23 [www.kodak.com/go/support](http://www.kodak.com/go/support)



[You're reading an excerpt. Click here to read official KODAK P725 user guide](http://yourpdfguides.com/dref/2430756)  
<http://yourpdfguides.com/dref/2430756>

*kodak.com/go/support Index L locked screen, reset, 11 M memory card. See card, memory messages on screen, 13, 14 N navigating through pictures, 5 next play, 5 P pictures copying to internal memory, 8 deleting, 7 navigating through, 5 playback speed, 6 sample, pre-loaded, 4 viewing, 4 play by date, 6 play/pause button, 5 playing pictures, 4 power button, 2 connecting, 1 power supply, specifications, 15 previous play, 5 R recycling, disposal, 17 regulatory compliance, 19 reset frame, 11 S safety information, 16 www.kodak.com/go/support screen cleaning, 10, 17 error icons, 14 settings, changing, 6 shuffle play, 6 specifications, frame, 15 speed, changing play, 6 stand, attaching, 2 storage capacity, internal memory, 15 T thumb drive. See flash drive.*

*transitions, changing, 6 troubleshooting error messages, 14 frame, 11 turn on frame, 2 U upgrade firmware, 9 USB device, connecting, 3 type, 15 W warranty, 17 Web sites, help, 11 24 .*



**[You're reading an excerpt. Click here to read official KODAK P725 user guide](#)**

**<http://yourpdfguides.com/dref/2430756>**