



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK PLAYFULL WATERPROOF ZE2. You'll find the answers to all your questions on the KODAK PLAYFULL WATERPROOF ZE2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK PLAYFULL WATERPROOF ZE2
User guide KODAK PLAYFULL WATERPROOF ZE2
Operating instructions KODAK PLAYFULL WATERPROOF ZE2
Instructions for use KODAK PLAYFULL WATERPROOF ZE2
Instruction manual KODAK PLAYFULL WATERPROOF ZE2

KODAK PLAYFULL Waterproof Video Camera / Ze2



Extended user guide

www.kodak.com
For help with your camera:
www.kodak.com/go/Ze2support



[You're reading an excerpt. Click here to read official KODAK PLAYFULL WATERPROOF ZE2 user guide](http://yourpdfguides.com/dref/4732968)
<http://yourpdfguides.com/dref/4732968>

Manual abstract:

kodak.com For help with your camera: www.kodak.com/go/Ze2support Eastman Kodak Company Rochester, New York 14650 © Kodak, 2011 All screen images are simulated. Kodak and Playfull are trademarks of Eastman Kodak Company. ArcSoft and MediaImpression are trademarks of ArcSoft, Inc. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. 4H8517_en Product features

Front view Lens Microphone www.kodak.com/go/support i Product features Back view Settings button Record mode button Review button Speaker Record/OK Delete button Share button On bottom: • USB Arm • A/V ii www.

kodak.com/go/support Product features Side view Power button Camera Reset button HDMI Slot for accessory SD/SDHC Card Strap post Resetting the camera page 15 www.kodak.com/go/support iii Understanding the status icons Video length Recording Recording Battery status icon appears for a few seconds after turning on camera Zoom indicator Playback Video/picture number Volume indicator Elapsed time iv www.kodak.

com/go/support Table of contents 1 1 Setting up your camera

.....

.....

.....

.....

.....

.....

.....

.....

.....1 Opening the USB/battery charging door..

.....

.....

.....

.....

.....

.....

.....

..... 1 Charging the non-removable battery

.....

.....

.....

.....

.....

.....

.....

..... 2 Turning on the camera

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 3 Setting the language and date/time..

.....

.....

.....

.....

.....

.....

.....

.....

. 3 Inserting an accessory SD or SDHC Card

.....
.....
.....
.....

.. 4 Attaching the strap ...

.....
.....
.....
.....

.....
.....
.....
.....

.... 5 2 The basics .

.....
.....
.....
.....

.....
.....
.....
.....

...6 Recording videos, taking pictures ..

.....
.....
.....
.....

.....
.....
.....

.... 6 Changing recording modes.....

.....
.....
.....
.....

.....
.....
.....
.....

@@@@@@@9 Viewing videos/pictures on a TV

.....
.....
.....

.....
.....
.....

. 10 Using the settings menu....

.....
.....
.....
.....
.....
.....
.....
.....

.... 11 Trimming a video

.....
.....
.....
.....
.....
.....
.....
.....

.. @@@@14 Resetting the camera

.....
.....
.....
.....
.....
.....
.....
.....

.... 15 Getting help on the Web

.....
.....
.....
.....
.....
.....
.....

. 16 www.kodak.com/go/support v 5 Appendix ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.17 Specifications...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

17 Safety

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 18 Care and maintenance

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 19 Limited warranty

.....
.....
.....
.....

.....
.....
.....
.....

.... 20 Regulatory compliance

.... @@@@Date/Time At the prompt, press OK.

to change current field. for previous/next field. @@@@If so, new pictures/videos are stored on the card. If no card is inserted, new pictures/videos are stored in the camera internal memory. If pictures/videos are detected in internal memory and a card is inserted, the camera prompts you to move the pictures to the card (and erase those in internal memory).

Purchase cards www.kodak.com/go/accessories 4 www.kodak.com/go/support Setting up your camera Attaching the strap www.kodak.com/go/support 5 2 The basics Change between picture and video recording modes. (In Review or in a menu, return to Liveview.) Zoom in/out. Recording videos, taking pictures When you turn on the camera, it's ready to record.

Start/stop recording. Turn on the Glare Shield (if enabled in the Settings menu) to improve LCD viewability. Changing recording modes To change recording modes, press to Liveview.) HD 720p (30 fps) . (If you're in Review mode, press WVGA (iPad Compatible, 30 fps) Still to return for viewing on a TV or computer, and for conserving memory card for sharing on YouTube and space FACEBOOK for 1 MP 16:9 pictures IMPORTANT: For the best experience, we strongly suggest purchasing a Class 4 or higher SDHC Card. www.kodak.com/go/accessories 6 www.kodak.com/go/support The basics Reviewing videos/pictures 2 Previous/next video/picture.

1 Review Delete video/pictures. Play/Pause. (Press and hold to Stop.) Adjust volume. While playing, fast-forward/ fast rewind.

3 Deleting videos/pictures 2 Previous/next video/picture. 1 Review. 3 Delete. 4 Highlight Delete or OK, then press the OK button. www.kodak.com/go/support 7 The basics Transferring, sharing online, editing 1 Connect the camera to the computer USB port. (It turns on automatically.) 2 If this is the first time you've connected to this computer, follow the prompts to install the KODAK Share Button App. 3 Follow the on-screen instructions to transfer and share videos. NOTE: It may be convenient to use a USB extension cable to connect the camera to the computer. WINDOWS OS-based computers: Install ARCSOFT MEDIAIMPRESSION for KODAK Software to help organize and edit videos. MAC OS-based computers: Use the APPLE ILIFE suite of products to edit, personalize, and make DVDs. Share Button App doesn't install? Download the right version for your computer operating system: www.kodak.com/go/camerasw www.arcsoft.com/support Get ArcSoft product support See HD video system requirements for www.kodak.com/go/HDSysreq playback on your computer 8 www.kodak.com/go/support 3 Advanced features Using the camera under water The camera does not float. Secure it to your wrist with the strap (see a floating accessory strap at www.kodak.com/go/accessories).

To keep the camera waterproof, tightly close and latch all doors. Do not open doors in water or when hands are wet. Waterproof integrity may be compromised if the camera is dropped. For more information, see page 18. For the best focus and color balance under water: 1 Press the Settings button 2 Press OK, then , then to choose Underwater Correction.

to choose Scene mode: Water, then press OK. @@IMPORTANT: Verify that all doors are tightly closed. @@Wipe off water or debris. @@If water has entered the camera, remove the card. @@@@ (See page 6.

) Use when taking videos/pictures under water. @@Turn on/off sounds. @@Choose the setting (NTSC, PAL) for your region. Choose your language. Return all settings to their factory default. Erase, format the card. @@Settings Make Picture—See page 13. @@I Press the Review button , then to find a video to trim. Optional: Play, then pause the video at the desired new start point. 2 Press the Settings button .

3 Press to choose Trim Video, then press OK. An instruction screen appears. After you read it, press OK. @@Press to move the End marker to the new position, then press OK. @@When finished, press OK. @@@@3 Press the Settings button 4 Press . @@@@ to choose a picture.

@@@@@@@@Refer servicing to qualified service personnel. @@@@If the LCD breaks, do not touch the glass or liquid. @@For approved accessories, go to www.kodak.com/go/accessories. @@@@For additional health-related information, contact your local Kodak customer support. Go to www.kodak.com/go/reach for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH). For more information, go to www.kodak.com/go/batteries.

□ □ Care and maintenance □ □ Before inserting or removing the card, make sure your hands, the camera, and the card are completely dry. If water has entered the camera, allow all components to air-dry for at least 24 hours before using the camera. Do not subject the camera to temperatures lower than 0 (32° F) or higher than 40° C (104° F) for an extended time. Wait until camera reaches operating temperatures before using. Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. @@@@Service agreements may be available in your country. @@In the US, go to the Electronics Industry Alliance Web site at www.eiae.org or go to Kodak at www.kodak.com.

www.kodak.com/go/support. After using the camera in water □ □ When finished using under water, go to Step 1 and turn off Underwater Correction.



[You're reading an excerpt. Click here to read official KODAK PLAYFULL WATERPROOF ZE2 user guide](#)

Wipe off water or debris. @If water has entered the camera, remove the card. Allow the camera to air-dry for at least 24 hours before using. Limited warranty Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging. Rction against harmful interference in a residential installation. @@Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. The KODAK Adapter K20-AM complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. 22 www.kodak.com/go/support Appendix Waste Electrical and Electronic Equipment labeling/battery disposal In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.

) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to www.kodak.com/go/recycle. Product weight: 85 g (3 oz) with memory card. VCCI Class B ITE Korean Class B ITE www.

kodak.com/go/support 23 Appendix Korean Li-ion Regulatory Russian GOST-R Eastman Kodak Company 24 www.kodak.com/go/support Appendix China RoHS Canadian DOC statement DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003. Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Australian C-Tick N137 MPEG-4 Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

www.kodak.com/go/support 25 Index A about this camera, 11 accessories, purchase, 16 B brightness, LCD, 11 button, reset, ii, iii C calendar, 11 card, loading, 4 care and maintenance, 19 cautions, 19 clock, setting, 3, 11 connecting strap, 5 to a computer, 8 to a TV, 10 D date & time, 11 date, initial setting, 3 delete pictures, videos, 7 disposal, recycling, 20 E edit video, 12 editing video using ArcSoft software, 8 effects, 11 erase pictures, videos, 7 extract picture from video, 13 F FF video, 7 filters, LCD glare, 6 format card, 11 G gain, sounds, 11 glare shield, LCD, 6, 11 H help, Web links, troubleshooting, 14 I icons, iv iLife, edit using, 8 K Kodak Web sites, 14 L language, 11 LCD brightness, 11 LCD glare shield, 6 lens, i lens, cleaning, 19 M Mac OS, edit videos, 8 maintenance, camera, 19 make picture from a video, 13 memory card, loading, 4 microphone, i www.kodak.

com/go/support 26 Index microphone gain, 11 modes, recording, 6 O on/off, camera, 3 output, video, 11 P panning pictures, 13 pictures panning, 13 zooming, 13 playing a video, 7 playing on a TV, 10 R recording modes, 6 recycling, disposal, 20 removing card, 4 repair, 16 reset button, ii, iii reset settings, 11 resolving problems, 14 rewind video, 7 S SD/SDHC card loading, 4 set date & time, 11 language, 11 setting date and time, initial, 3 setting up the camera, 1 settings menu, 11 Share, 11 sharing online, 8 www.kodak.com/go/support slow motion playback, 7 solving problems, 14 speaker, ii, iii specifications, 17 start recording, 6 status icons, iv strap, connecting, 5 T taking a video, picture, 6 taking videos, pictures, 6 telephoto, 6 time and date, initial setting, 3 time, setting, 11 tips, care, & maintenance, 19 transferring videos, 8 trim video, 12 troubleshooting, 14 turning on camera, 3 TV playback, 10 U underwater correction, 9 URLs, Kodak Web sites, 14 V video delete, 7 edit, 12 FF, rewind, slow motion, 7 modes, 6 output, 11 playback, 7 resolution, 11 trim, 12 27 Index volume, 7 W warranty, 20 Z zoom, 6 zooming pictures, 13 28 www.kodak.com/go/support .



[You're reading an excerpt. Click here to read official KODAK PLAYFULL WATERPROOF ZE2 user guide](http://yourpdfguides.com/dref/4732968)
<http://yourpdfguides.com/dref/4732968>