



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK PLAYSPORT ZX3. You'll find the answers to all your questions on the KODAK PLAYSPORT ZX3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK PLAYSPORT ZX3
User guide KODAK PLAYSPORT ZX3
Operating instructions KODAK PLAYSPORT ZX3
Instructions for use KODAK PLAYSPORT ZX3
Instruction manual KODAK PLAYSPORT ZX3

KODAK PLAYSPORT Video Camera



Extended user guide

Model Zx3
www.kodak.com
For interactive tutorials:
www.kodak.com/go/howto
For help with your camera:
www.kodak.com/go/support



[You're reading an excerpt. Click here to read official KODAK PLAYSPORT ZX3 user guide](http://yourpdfguides.com/dref/2430761)
<http://yourpdfguides.com/dref/2430761>

Manual abstract:

kodak.com For interactive tutorials: www.kodak.com/go/howto For help with your camera: www.kodak.com/go/support Eastman Kodak Company Rochester, New York 14650 © Kodak, 2009 All screen images are simulated. Kodak and PlaySport are trademarks of Eastman Kodak Company. ArcSoft and MediaImpression are trademarks of ArcSoft, Inc. Apple, iLife, iWeb, MobileMe, iTunes, iPhone, iPod, and Apple TV are trademarks of Apple, Inc. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Facebook and the Facebook logo are trademarks of Facebook, Inc. YouTube and the YouTube logo are trademarks of YouTube, LLC. 4H6810_en Product features Front view Microphone Video Recording light Lens IR receiver, for optional remote control Battery compartment, SD/SDHC card slot Strap post www.kodak.com/go/support i Product features Back view Record/OK Liveview/LCD Glare Shield Review mode Delete Settings Power button/ Charging light AV Out HDMITM Out USB, 5V DC In Tripod socket Speaker ii www.kodak.com/go/support

Product features Understanding the status icons Video length Recording Recording Zoom Capture mode Underwater mode Playback Elapsed time Battery level (or DC-In connected) No card inserted Video length Volume Video/picture number (or direction/speed) Battery level (or DC-In connected) Card inserted See important Alert icons see page 14 www.kodak.com/go/support iii Table of contents 1 1 Setting up your camera ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.1 Charging the battery (approximately 2 hours)

.....

.....

.....

.....

.....

.... 1 Charging using external charger or USB.

.....

.....

.....

.....

.....

.....

.....

. 2 Inserting an SD or SDHC Card....

.....

.....

.....

.....

.....

.....

.....

.....

..... 3 Connecting a strap..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....
.....
.....
.....
.....

12 Using the optional remote control

.....
.....
.....
.....
.....
.....
.....

... 13 3 Getting help

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.14 Troubleshooting

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 14 Getting help on the Web

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 16 4 Appendix ..

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.17 Specifications.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 17 Safety

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

18 Care and maintenance

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

20 Limited warranty

.....
.....
.....

.....
.....
.....

TV Video Out--Choose the setting (NTSC, PAL) for your region. LCD Brightness--Set LCD brightness.

(Auto lets the camera set it for you.) Volume/Sounds--Turn sounds on/off. (When off, the Video Recording light is also turned off.) Microphone Gain--Choose sensitivity of the internal microphone. Underwater Mode--Turn on if taking videos/pictures under water. (See page 12.) LCD Glare Shield--Turn on to improve LCD viewability in bright, outdoor conditions. Electronic Image Stabilization--Turn on to reduce video blur. Face Detection--Turn face detection on/off. Format Card--Erase, format the card.

Camera Info--View firmware and ARCSOFT Software versions. www.kodak.com/go/support 11 Using your camera Using the camera under water CAUTION: The camera does not float. To prevent it from sinking, secure it with the strap.

To keep the camera waterproof, tightly close all doors. Do not open doors in water or when hands are wet. Waterproof integrity may be compromised if the camera is dropped. For more information, see page 20. 1 Press the Settings button, then choose Underwater Mode 2 Press to choose the checkmark, then press OK.

button, then take videos/pictures as you normally do. . 3 Press the Liveview 4 When finished taking underwater videos/pictures, turn Underwater Mode off. 3 meters (9.8 feet) After using the camera in water Wipe off water or debris. @@If water has entered the camera, remove the battery/card. @@@@Charge the battery. Card or internal memory is nearly full. Transfer videos/pictures to your computer. Corrupt or unusable card.

@@@@@@Transfer videos/pictures to your computer. An error has occurred. @@ Ensure the camera is clean and dry. @@LCD is B&W. @@ Choose a different LCD Glare Shield (page 11). @@Videos are blurry. video playback (see page 8). Ensure that the computer system requirements are met. Go to www.arcsoft.com/support. Ensure that the lens is clean. Ensure that the subject is at least 1 m (3.3 ft) from the lens. Turn on Electronic Image Stabilization (see page 11).

When using a tripod, turnzards. If the LCD breaks, do not touch the glass or liquid. @@@@Contact your computer manufacturer if you have questions. @@When removing batteries, allow them to cool; they may be hot. @@@@Keep batteries out of the reach of children.

Do not allow batteries to touch metal objects, including coins. @@@@Remove the batteries when the product is stored. @@@@ @@@@1907/2006 (REACH). Dispose of batteries according to local and national regulations. Go to www.kodak.com/go/kes. @@In water, do not use below a depth of 3 meters (9.8 ft). Do not open/close camera doors in water.

The camera will not float. Use the strap at all times. If water has entered the camera, remove the battery/card. Allow all components to air-dry for at least 24 hours before using the camera. @@Wipe off dirt or sand from the door seals--debris could compromise the seal and cause a leak in water. Do not subject the camera to temperatures lower than 0 (32° F) or higher than 40° C (104° F) for an extended time--the integrity of the seals may be compromised. Wait until camera reaches operating temperatures before using. Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses.

Do not allow chemicals, such as suntan lotion, to contact painted surfaces. Service agreements may be available in your country. Contact a dealer of KODAK Products for more information. For camera disposal or recycling information, contact your local authorities. In the US, go to the Electronics Industry Alliance Web site at www.eiae.org

or go to Kodak at www.kodak.com/go/support. Limited warranty Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty 20 www.kodak.com/go/support

Appendix period specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair. Limited warranty coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty.

If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be the length of the express warranty period specified on your KODAK Product packaging. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this www.kodak.com/go/support

21 Appendix product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



[You're reading an excerpt. Click here to read official KODAK PLAYSPORE ZX3 user guide](http://yourpdfguides.com/dref/2430761)
<http://yourpdfguides.com/dref/2430761>

Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. Regulatory compliance FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. @@@@Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

The KODAK Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CE Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Waste Electrical and Electronic Equipment labeling/battery disposal In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to www.kodak.com/go/recycle. Product weight: 145 g (5.1 oz) with battery and card.

www.kodak.com

www.kodak.com/go/support 23 Appendix Korean Li-Ion Regulatory Korean Class B ITE 24 www.kodak.com/go/support Appendix VCCI Class B ITE Russian GOST-R Eastman Kodak Company China RoHS Canadian DOC statement DOC Class B Compliance--This Class B digital apparatus complies with Canadian ICES-003. Observation des normes-Classe B--Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

www.kodak.com/go/support 25 Appendix Australian C-Tick N137 MPEG-4 Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities. 26 www.kodak.com

[com/go/support](http://www.kodak.com/go/support) Index A about the camera, 11 accessing settings, 11 accessories, purchase, 16 B battery loading, charging, 1 brightness, LCD, 11 C camera info, 11 card, loading, 3 care and maintenance, 20 cautions, 20 charging battery, 1 clock, setting, 5 connecting strap, 4 to a computer, 8 to a TV, 10 D date setting, 5 delete pictures, videos, 9 disposal, recycling, 20 E editing videos, 8 electronic image stabilization, 11 erase card, 11 erase pictures, videos, 9 F face detection, 11 FF video, 7 filters, LCD, 6 format card, 11 G glare shield. LCD, 6 1 H help, Web links, troubleshooting, 14 I icons, iii image stabilization, 11 info, 11 K Kodak Web sites, 14 L LCD brightness, 11 LCD glare shield, 6 lens, i lens, cleaning, 20 loading battery, 1 M maintenance, camera, 20 memory card, loading, 3 menus, 11 microphone, i 27 www.kodak.com/go/support Index microphone gain, 11 modes, recording, 6 O on/off, 5 P playing a video, 7 playing on a TV, 10 R recording, 6 recording light, i recording modes, 6 recycling, disposal, 20 remote control, 13 repair, 16 rewind video, 7 S SD/SDHC card loading, 3 setting date and time, 5 setting up the camera, 1 settings menu, 11 sharing online, 8 slow motion playback, 7 sounds, 11 speaker, ii specifications, 17 start recording, 6 status icons, iii strap, connecting, 4 T taking a video, picture, 6 28 taking videos, pictures, 6 telephoto, 6 time and date, setting, 5 tips, care, & maintenance, 20 transferring videos, 8 troubleshooting, 14 turning on camera, 5 TV playback, 10 TV video out, 11 U underwater cautions, 20 underwater mode, 12 URLs, Kodak Web sites, 14 V video delete, 9 FF, rewind, slow motion, 7 modes, 6 out, 11 playback, 7 volume, 7 volume, 11 W warranty, 20 water mode, 12 Z zoom, 6 www.kodak.com

[com/go/support](http://www.kodak.com/go/support)



[You're reading an excerpt. Click here to read official KODAK
PLAYSPORT ZX3 user guide
<http://yourpdfguides.com/dref/2430761>](http://www.kodak.com/go/support)