



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK PLAYSPORT ZX5. You'll find the answers to all your questions on the KODAK PLAYSPORT ZX5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK PLAYSPORT ZX5
User guide KODAK PLAYSPORT ZX5
Operating instructions KODAK PLAYSPORT ZX5
Instructions for use KODAK PLAYSPORT ZX5
Instruction manual KODAK PLAYSPORT ZX5

Quick start

① Charge until the light stops blinking.



② Insert an accessory SD or SDHC card.



③ Set language, date/time.



④ Take videos, pictures.



⑤ Install software, then share.



Keep learning!
Take and share your best videos, pictures!



www.kodak.com/go/support

ENGLISH

1



[You're reading an excerpt. Click here to read official KODAK PLAYSPORT ZX5 user guide](#)
<http://yourpdfguides.com/dref/4732971>

Manual abstract:

book Page 1 Friday, March 18, 2011 12:37 PM Quick start 1 Charge until the light stops blinking. 2 Insert an accessory SD or SDHC card. 3 Set language, date/time. On 4 Take videos, pictures. Record OK 5 Install software, then share. Keep learning! Take and share your best videos, pictures!
www.kodak.com/go/support 1 ENGLISH urg_01216.book Page 2 Friday, March 18, 2011 12:37 PM ENGLISH Product features: Front view Watertight door * Microphone IR Receiver Video Recording light Lens HDMI™ Out Camera Reset button USB, 5V DC In * Watertight door latches must be tightly closed and latched. Door Latch See the Extended user guide See How-To videos to open to close/seal www.kodak.com/go/Zx5manuals www.kodak.com/go/Zx5demos 2 www.kodak.com/go/support urg_01216.book Page 3 Friday, March 18, 2011 12:37 PM Back view Power button/Charging light Watertight door Ambient light sensor Mode (Video/Still) Review Delete Settings Share • Volume (during playback) • Digital zoom (during capture) • Turn on the Glare shield • View previous/next picture or video SD/SDHC Card (accessory) Record/OK See the Extended user guide See How-To videos www.kodak.com/go/Zx5manuals www.kodak.com/go/Zx5demos www.kodak.com/go/support 3 ENGLISH urg_01216.book Page 4 Friday, March 18, 2011 12:37 PM □ Get started: Charge the battery Use this procedure to charge the battery or power the camera with AC power. Charge the battery as often as you like—you can't over-charge—but always fully charge before using. IMPORTANT: The battery is not removable. Charging light: •Blinking = charging •Steady On = charged (approx. 4.5 hours) ENGLISH KODAK Camera USB Cable, Micro B / 5-Pin (Use only the cable included with this camera.) See other charging solutions Keep doors watertight see page 5 see page 2 4 www.kodak.com/go/support urg_01216.book Page 5 Friday, March 18, 2011 12:37 PM Charge using USB The battery charges when the computer is on and awake; so disable the computer's hibernation, sleep, and standby modes. Charging light: •Blinking = charging •Steady On = charged (approx. @@ @@@@Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera. 1 Turn off the camera. 2 Insert the card until it clicks. To remove the card, press and release it, then pull it out. Accessory When you turn on the camera, it checks to see if a card is inserted. If so, new pictures/videos are stored on the card. @@@@ @@@@Date/Time At the prompt, press OK. to change current field. for previous/next field. @@ When you turn on the camera, it's ready to record. Start/stop recording. Zoom in/out. Turn on the Glare Shield (if enabled in the Settings menu) to improve LCD viewability. In Liveview, press to change recording modes (video/pictures). In Review or in a menu, press to go to Liveview. Recording Modes 1080p For viewing on an HDTV 720p/60 fps For sports and action 720p WVGA (iPad Compatible) Still For viewing on For conserving For a computer, memory card pictures sharing online space www.kodak.com/go/Zx5manuals www.kodak.com/go/Zx5demos See the Extended user guide See How-To videos www.kodak.com/go/support 9 ENGLISH □ Record videos, take pictures urg_01216.book Page 10 Friday, March 18, 2011 12:37 PM □ Review videos and pictures 1 2 3 Review. Previous/next video/picture. ENGLISH OK Play/Pause. (Press and hold to Stop.) Adjust video volume (or magnify a picture). Delete video/pictures. While playing a video, press: OK Play/Pause. Play fast-forward. Play in reverse. (Press again to fast-reverse.) While paused, press: Play in slow motion. (Press again to play even slower.) Play in reverse slow motion. (Press again to play even slower.) See the Extended user guide See How-To videos www.kodak.com/go/Zx5manuals www.kodak.com/go/Zx5demos 10 www.kodak.com/go/support urg_01216.book Page 11 Friday, March 18, 2011 12:37 PM 1 Connect the camera. @@@@ @@@@ @@@@ @@@@ 1 Press the Share button to share anytime—in Liveview or in Review. Social networking sites and email addresses are offered. To edit the list of social networking sites, see page 14. To add an email address or KODAK PULSE Display, see page 14. 2 Press to choose a picture/video to share. 3 Press and OK to choose social networking sites or email addresses. 4 Press to choose Done, then press OK. When you transfer these pictures/videos to your computer, they are sent to the sharing destinations you chose. See the Extended user guide See How-To videos www.kodak.com/go/Zx5manuals www.kodak.com/go/Zx5demos www.kodak.com/go/support 13 urg_01216.book Page 14 Friday, March 18, 2011 12:37 PM Doing more with your camera Choose which networking sites to display 1 Press the Settings button 2 Press 3 Press 4 Press . to choose Share Settings, then press OK. to highlight a site, then press OK. to choose Show or Hide, then press OK. to choose Done, then press OK. 5 Press When you are in Review and press the Share button, your favorite sites appear. Press the Mode button to return to liveview. Manage email addresses, KODAK PULSE Displays 1 Press the Settings button 2 Press . to choose Share Settings, then press OK. 3 To add an email address, press to choose New Email, then use the on-screen keyboard. When finished, press to choose OK, then press the OK button. To delete an email address, press to choose Delete Email, choose the address to delete, then press OK. 4 Press to choose Done, then press OK. to return to liveview. Press the Mode button 14 www.kodak.com/go/support urg_01216.book Page 15 Friday, March 18, 2011 12:37 PM Doing more with your camera Adjust the LCD to improve viewability Let the camera automatically adjust LCD brightness Leave the LCD Brightness setting at Automatic. (See page 18.) The LCD automatically adjusts to changing light conditions. @@ Press OK. 3 Press OK to uncheck Automatic. @@ The LCD stays relatively dim to save power. @@ Press OK. to highlight Enable Glare Shield. Press OK to check it. @@@@ @@@@ (Cables may be sold separately.) HDMI Cable AV Cable NOTE: Set your TV's input setting to HDMI or AV, according to your TV's specifications. Keep doors watertight Purchase cables see page 2 www.kodak.com/go/accessories www.kodak.com/go/support 17 urg_01216.book Page 18 Friday, March 18, 2011 12:37 PM Doing more with your camera Using the Settings menu Press the Settings button. Effects—Normal Color, High Saturation, 70's Film, B&W, or Sepia Underwater Correction—Turn on if taking videos/pictures under water. (See page 20.) Video Resolution—HD 1080p, HD 720p, HD 720p 60 fps, WVGA Microphone Gain—Adjust sensitivity of the internal microphone. Sounds & LED—Turn sounds and the Video Recording light on/off. @@@@ @@@@ @@@@ Language—Choose your language. Reset Settings—Return settings to their factory default. Format Memory Card—CAUTION: Everything is erased from the card. About—View firmware and ARCSOFT Software versions. @@@@ @@@@ Do not open doors in water or when hands are wet.



[You're reading an excerpt. Click here to read official KODAK PLAYSPORT ZX5 user guide](#)

