




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK Z950. You'll find the answers to all your questions on the KODAK Z950 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK Z950
User guide KODAK Z950
Operating instructions KODAK Z950
Instructions for use KODAK Z950
Instruction manual KODAK Z950

IMPORTANT: Before connecting any cables, install the software that was included with your camera. Then return to this user guide.

1 Loading the battery

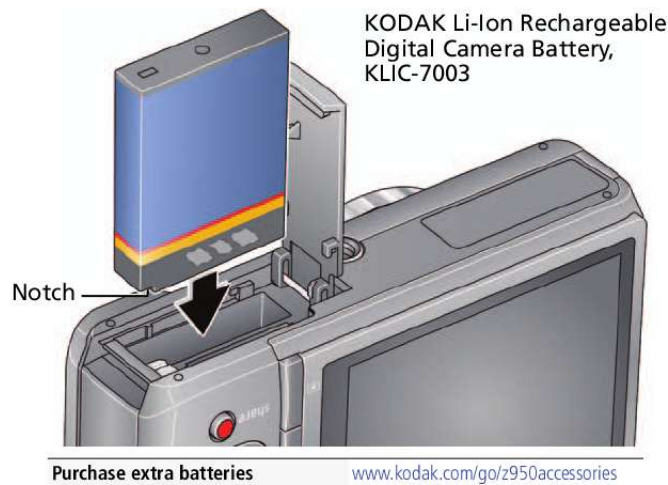

www.kodak.com/go/z950support

1

ENGLISH



[You're reading an excerpt. Click here to read official KODAK Z950 user guide](http://www.kodak.com/go/z950support)
<http://yourpdfguides.com/dref/2430780>

Manual abstract:

Then return to this user guide. Loading the battery KODAK Li-Ion Rechargeable Digital Camera Battery, KLIC-7003 Notch Purchase extra batteries www.kodak.com/go/z950accessories www.kodak.com/go/z950support 1 ENGLISH ENGLISH 2 Charging the battery Battery Charging light: · Blinking: charging · Steady: finished charging Charge the Li-Ion battery frequently, even if power remains. Other charging options KODAK 5V AC Adapter (optional accessory) KODAK USB Cable, Model U-8 See the Extended user guide www.kodak.com/go/z950support www.kodak.com/go/easysharecenter Inserting an SD or SDHC Card Your camera has internal memory. You can purchase an SD or SDHC Card to store more pictures and videos. (Maximum supported card size is 32 GB.) CAUTION: A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card when the camera is on may damage the pictures, the card, or the camera.
1 Turn off the camera. 2 Insert or remove the card. 3 Turn on the camera. Purchase cards www.kodak.com/go/z950accessories www.kodak.com/go/z950support 3 ENGLISH ENGLISH 4 Attaching the strap Turning on the camera www.kodak.com/go/easysharecenter Setting the language and date/time Language: to change. OK to accept. Date/Time: At the prompt, press OK. to change current field. for previous/next field. OK to accept.

OK See the Extended user guide www.kodak.com/go/z950support www.kodak.com/go/z950support 5 ENGLISH ENGLISH 6 Taking a picture 1 2 Turn the Mode dial to Smart Capture . Press the Shutter button halfway to lock the focus. When the framing marks turn green, press the Shutter button completely down. Framing marks See the Extended user guide www.kodak.com/go/z950support Learn more about Smart Capture and other modes see page 13 www.kodak.com/go/easysharecenter Reviewing pictures/videos Press the Review button to enter/exit Review. View previous/next picture/video. Play a video. Review See the Extended user guide www.kodak.com/go/z950support www.kodak.com/go/z950support 7 ENGLISH ENGLISH 8 Transferring pictures/videos 1 Turn off the camera. 2 Connect the KODAK USB Cable, Model U-8.
3 Turn on the camera. @@@@ describes every setting for every menu choice. @@@@ You have: · set up your camera · taken pictures · transferred pictures to your computer Keep learning! Finish reading this book, so you can take and share your best pictures! Visit www.kodak.com/go/z950support: · the extended user guide · interactive troubleshooting and repairs · interactive tutorials · FAQs · downloads · accessories · printing information · product registration 10 www.kodak.com/go/easysharecenter Front view 1 11 10 9 7 8 23 4 5 6 1 2 3 4 5 6 Shutter button Flash button Self-timer/Burst button Power button Power/Charging status light Mode dial 7 8 9 Self-timer/Video/AF Assist light Lens/Lens cover Microphone 10 Flash 11 Zoom Telephoto (+), Wide Angle (-) lever www.kodak.com/go/z950support 11 ENGLISH ENGLISH Back view 1 2 3 4 5 6 10 8 9 7 1 2 3 4 5 Delete/Menu/Info/Review buttons Speaker Strap post 5V DC-In USB/AV out 6 7 8 9 Share button , OK SD/SDHC Card slot Battery compartment 10 Tripod socket 12 www.kodak.com/go/easysharecenter 1 Doing more with your camera Choose the mode that best suits your subjects and surroundings. Capture mode Smart Capture Sport Panorama For General picture taking--it offers excellent image quality and ease of use. Subjects that are in motion. Shutter speed is fast. Stitching 2 or 3 pictures into 1 panoramic scene. Point-and-shoot simplicity when taking pictures under special conditions. More creative control. SCN P A S M Scene Program Aperture Shutter Manual Video Video with sound. www.kodak.com/go/z950support See the Extended user guide www.kodak.com/go/z950support 13 Doing more with your camera Using the flash Press the flash button repeatedly to scroll through flash modes. The current flash mode is shown on the LCD. Flash modes Auto Fill (Flash On) Flash fires When the lighting conditions require it.
Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: (Not available in Smart Capture mode.) Preflash Red Eye A preflash fires, shrinking the eye pupil, before the picture is taken. Your camera can correct red-eye using 2 methods.
To choose A preflash does not fire; the camera corrects red eye. Digital Correction a red eye setting, see the Setup menu. Off Never See the Extended user guide www.kodak.com/go/z950support 14 www.kodak.com/go/easysharecenter Doing more with your camera Using the zoom 1 Use the LCD to frame your subject. 2 Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out. 3 Take the picture or video.

Using digital zoom Use digital zoom to get up to 5X beyond optical zoom while taking pictures. Digital zoom is not available in Smart Capture mode. NOTE: You may notice decreased image quality when using digital zoom. The slider on the LCD turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print. See the Extended user guide www.kodak.com/go/z950support www.kodak.com/go/z950support 15 Doing more with your camera Using the menu button to change settings 1 Press the Menu 2 Press 3 Press button.
to highlight a tab: to highlight a setting, then press OK. .) 4 Highlight an option, then press OK. (Some options let you use IMPORTANT: Your camera offers a built-in Help system. See page 9.
. Understanding the picture-taking icons Self timer/Burst Picture size Flash mode Capture mode Tag name Exposure bracketing Date stamp Image stabilizer Pictures/time remaining Auto Focus Control White balance Exposure metering Focus zone Battery level Aperture Shutter speed Exposure compensation ISO Focus mode Flash Compensation 16 www.kodak.com/go/easysharecenter Doing more with your camera P, A, S, and M modes Use these modes when you want more control over your camera and pictures. Mode When to use Program mode offers the ease of auto shooting with full access to all menu options. The camera automatically sets the shutter speed and aperture (f-stop) based on the scene lighting. Press , to control Exposure compensation (how much light enters the camera), flash compensation, focus mode, and ISO Aperture Priority mode controls depth of field (the Aperture, exposure range of sharpness).
@@@@@ Press to access a setting. @@@@ Flash Compensation--adjust flash brightness. Focus Mode--choose Auto, Close-up, Landscape, or Manual Focus. ISO--adjust the camera's sensitivity to light. Higher ISO indicates greater sensitivity.
@@@@@ Charge rechargeable battery. Remove the battery, then reinsert or replace it.



[You're reading an excerpt. Click here to read official KODAK Z950 user guide](http://yourpdfguides.com/dref/2430780)
<http://yourpdfguides.com/dref/2430780>

If the camera still Camera does not turn on.

@@@@picture. @@@@ Wipe the contacts with a clean, dry cloth before inserting a battery in the camera. Insert a new or charged battery (see page 1). www.kodak.com/go/z950support 21 5 Appendix CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid.

Contact Kodak customer support. The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, see www.kodak.com/go/accessories.

Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions. If using this product in an airplane, observe all instructions of the airline. When removing the battery, allow it to cool; it may be hot. Follow all warnings and instructions supplied by the battery manufacturer.

Use only batteries approved for this product to avoid risk of explosion. Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak. Do not disassemble, install backward, or expose batteries to liquid, or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction. Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. FCC compliance and advisory This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. @@@@Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. CE Hereby, Eastman Kodak Company declares that this

KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/E. 24

www.kodak.com/go/easysharecenter Appendix Canadian DOC statement DOC Class B Compliance--This Class B digital apparatus complies with Canadian ICES-003. Observation des normes Classe B--Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Australian C-Tick N137 VCCI Class B ITE Korean Class B ITE www.kodak.com/go/z950support 25 Appendix China RoHS Eastman Kodak Company Rochester, New York 14650 © Kodak, 2009 Kodak and EasyShare are trademarks of Eastman Kodak Company. 4H8345_en 26 www.kodak.com/go/easysharecenter.



[You're reading an excerpt. Click here to read official KODAK Z950 user guide](http://yourpdfguides.com/dref/2430780)

<http://yourpdfguides.com/dref/2430780>