



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ZX1. You'll find the answers to all your questions on the KODAK ZX1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK ZX1
User guide KODAK ZX1
Operating instructions KODAK ZX1
Instructions for use KODAK ZX1
Instruction manual KODAK ZX1

KODAK Zx1 Pocket Video Camera



Extended user guide

www.kodak.com
For interactive tutorials:
www.kodak.com/go/howto
For help with your camera:
www.kodak.com/go/Zx1support



[You're reading an excerpt. Click here to read official KODAK ZX1 user guide](http://www.kodak.com/go/Zx1support)
<http://yourpdfguides.com/dref/2430796>

Manual abstract:

kodak.com For interactive tutorials: www.kodak.com/go/howto For help with your camera: www.kodak.com/go/ZxIsupport Eastman Kodak Company Rochester, New York 14650 © Eastman Kodak Company, 2008 All screen images are simulated. Kodak is a trademark of Eastman Kodak Company. ArcSoft and MediaImpression are trademarks of ArcSoft, Inc. Apple, iLife, iWeb, MobileMe, iTunes, iPhone, iPod, and Apple TV are trademarks of Apple, Inc. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

4H5155_en Product features Front view Speaker Infrared receiver (for optional remote control) Microphone Recording light Lens HDMITM Out USB/AV Out 5V DC-in Power www.kodak.com/go/support i Product features Back view LCD Recording mode Record/OK Delete Stop Review mode/ Slow motion Previous/Next Reverse/Forward Video/picture size Strap post Tripod socket Volume/Zoom ii www.kodak.com/go/support Product features Understanding the status icons Recording icons Recording status Video length Zoom indicator Mode Card is inserted Battery level Playback icons Elapsed time Volume No card is inserted Video/picture number DC power (plugged in) Direction/Speed Indicator Video length www.

kodak.com/go/support iii Table of contents 1 1 Setting up your camera

.....

.....

.....

.....

.....

.....

.....

.....

.....1 Charging, loading the rechargeable batteries.

.....

.....

.....

.....

.....

.....

... 1 Using an optional KODAK SD or SDHC Card ..

.....

.....

.....

.....

.....

..... 2 Connecting the strap..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 3 2 Using your camera

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...4 Turning on the camera

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

4 Setting the date/time.....

.....
.....
.....
.....

.....
.....
.....
.....

4 Recording

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 5 Playing videos

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... @@@@ @@@@ @10 3 Getting help

.....
.....
.....
.....

.....
.....
.....
.....

....11 Getting help on the Web

.....
.....
.....
.....
.....
.....
.....

. 11 Getting help on the telephone....

.....
.....
.....
.....
.....
.....
.....

12 4 Troubleshooting

.....
.....
.....
.....
.....
.....
.....

..13 5 Appendix ...

.....
.....
.....
.....
.....
.....
.....

15 Specifications.....

.....
.....
.....

.....
.....

.....
.....
.....
.....

.....
.....

.... *15 Safety* .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.... *16 Care and maintenance*

.....
.....

.....
.....
.....

.....
.....

.... *17 Warranty*.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *18 Regulatory compliance*

.....
.....

.....
.....
.....

.....
.....
.....

..... 20 iv www.kodak.com/go/support 1 Setting up your camera **IMPORTANT: Your camera is water resistant--it is not waterproof. Do not submerge your camera in liquid. Charging, loading the rechargeable batteries 1 2 3 Lights are on while the charger is plugged in.**

(Charge for approximately 12 hours.) Compatible · KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-8000 KODAK Batteries · KODAK Lithium Digital Camera Battery CRV3 · KODAK AA Batteries (Ni-MH, alkaline) www.kodak.com/go/support 1 Setting up your camera Using an optional KODAK SD or SDHC Card Your camera has internal memory, but we recommend a KODAK SD or SDHC Card to conveniently store more videos/pictures. CAUTION: A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera. optional 1 Turn off the camera. 2 Insert or remove the optional card. 3 Turn on the camera. Purchase accessories www.kodak.com/go/Zx1accessories 2 www.kodak.com/go/support Setting up your camera Connecting the strap www.kodak.com/go/support 3 2 Using your camera Turning on the camera Setting the date/time Date/Time: At the prompt, press OK. to change current field. for previous/next field. OK to accept. NOTE: To change the date & time later, see page 10.

4 www.kodak.com/go/support Using your camera Recording When you turn on the camera, it's ready to take videos. (OK) Start/stop recording Zoom in/out Choose a mode: · HD: 16:9, 720p @ 30 fps (HDTV) · HD60: 16:9, 720p @ 60 fps (HDTV) · Still (3 MP pictures) · VGA: 4:3, 640 x 480 @ 30 fps (Web-ready) NOTE: To take even more videos, insert an SD or SDHC Card. Purchase accessories Use the optional remote control www.kodak.com/go/Zx1accessories see page 8 www.kodak.com/go/support 5 Using your camera Playing videos Review button (press again for thumbnails, timeline) (OK) Play/Pause Stop video playback Delete the current or all videos/pictures Volume Previous/next video During playback, press to fast-forward or fast-rewind 2X, 4X, 8X, 16X. While paused, press to forward/ reverse one frame at a time.

To use the optional remote control, see page 8. 6 www.kodak.com/go/support Using your camera Playing back on a TV HDMI cable (for HD quality) AV cable (for VGA quality) To set Video Out (NTSC/PAL), see page 10. Save battery power To save battery power, use the optional AC adapter to power the camera. Visit www.kodak.com/go/Zx1accessories. www.kodak.com/go/support

7 Using your camera Using the optional remote control Use the optional remote control to start/stop recording, take a picture, and review videos and pictures. @@@@ Removing a card during formatting may damage the card. @@@@ Then format the card in the camera or card reader. An error may have occurred while formatting the card. @ Then format the card in the camera or card reader.

The memory card is either unrecognized by the device, or is not formatted. @ Then format the card in the camera. Try another card. cable or an optional card reader. Card is nearly full.

@@@ Then format the card in the camera. Try another card. Low batteries. Charge the batteries. Internal memory is full. Transfer videos/pictures to your computer using the USB cable. @ Charge the batteries. @@@ Ensure TV menu settings are correct for an HDMI or AV connection. @@ optional remote control. Ensure batteries are correctly inserted in the camera.

@@ Images are blurry. Videos are jumpy, not stable. Questions or problems with ARCSOFT Software. @@ Ensure subject is at least 70 cm (27 in.) from camera lens. Use a tripod or mini tripod to steady the camera. Visit www.arcsoft.com/support. @@@ Focusing System--Fixed Focus Mode--Normal Focus Range--70 cm (27.

6 in.)infinity Aperture--f/2.8 White Balance--Auto Exposure--Auto Shutter Speed--Auto File Format--Still: JPEG (2048 x 1536); Video: H.264 (MOV), AAC LC HD: 16:9, 720p @ 30 fps (HDTV) HD60: 16:9, 720p @ 60 Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. @@@@ Repair, replacement, or refund of the purchase price are the sole remedies under the warranty.

If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this 18

www.



[You're reading an excerpt. Click here to read official KODAK ZX1 user guide](http://yourpdfguides.com/dref/2430796)

<http://yourpdfguides.com/dref/2430796>

kodak.com/go/support Appendix warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. Your rights Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act. www.kodak.com/go/support 19 Appendix Regulatory compliance FCC compliance and advisory KODAK Zx1 Pocket Video Camera This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. @@@@ This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 20 www.

kodak.com/go/support Appendix Waste Electrical and Electronic Equipment labeling In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility, or appropriate local authorities; or visit www.kodak.com/go/recycle.

VCCI Class B ITE Korean Class B ITE Russian GOST-R Eastman Kodak Company Rochester, NY 14650 AIO-40 www.kodak.com/go/support 21 Appendix China RoHS Canadian DOC statement DOC Class B Compliance--This Class B digital apparatus complies with Canadian ICES-003. Observation des normes-Classe B--Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. FCC and Industry Canada This device complies with Industry Canada RSS-210 and FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Australian C-Tick NI37 22 www.kodak.com/go/support 1 Index M maintenance, camera, 17 memory card, loading, 2 P playing a video, 6 playing on a TV, 7 R recording, 5 recycling, disposal, 18 remote control, 8 repair, 11 S saving battery power, 7 SD/SDHC card loading, 2 service and support telephone numbers, 12 setting date and time, 4 setting up the camera, 1 settings, 10 sharing online, 9 solving problems, 13 specifications, 15 support, technical, 12 T taking a video, picture, 5 telephone support, 12 time, setting, 4 tips, care, & maintenance, 17 23 A accessing settings, 10 accessories, buying, 11 B battery loading, charging, 1 types, 1 C card, loading, 2 care and maintenance, 17 clock, setting, 4 conserving battery power, 7 customer support, 12 D date setting, 4 disposal, recycling, 18 E editing videos, 9 H help, Web links, 11 K Kodak Web sites, 11 L lens, cleaning, 17 loading batteries, 1 www.kodak.com/go/support transferring videos, 9 troubleshooting, 13 turning on camera, 4 TV playback, 7 U URLs, Kodak Web sites, 11 W warranty, 18 24 www.kodak.com/go/support .



[You're reading an excerpt. Click here to read official KODAK ZX1 user guide](http://yourpdfguides.com/dref/2430796)
<http://yourpdfguides.com/dref/2430796>