



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK ZX1. You'll find the answers to all your questions on the KODAK ZX1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK ZX1
User guide KODAK ZX1
Operating instructions KODAK ZX1
Instructions for use KODAK ZX1
Instruction manual KODAK ZX1

Front view



www.kodak.com/go/zx1support

1

ENGLISH



[You're reading an excerpt. Click here to read official KODAK ZX1 user guide](http://yourpdfguides.com/dref/2702236)
<http://yourpdfguides.com/dref/2702236>

Manual abstract:

www.kodak.com/go/zx1support 1 ENGLISH ENGLISH Back view LCD Recording mode Record/OK Delete Stop Review mode/ Slow motion Previous/Next Reverse/Forward Video/picture size Strap post Tripod socket Volume/Zoom 2 www.kodak.com/go/easysharecenter Understanding the status icons Recording icons Recording status Video length Zoom indicator Mode Card is inserted Battery level Playback icons Elapsed time Volume No card is inserted Video/picture number DC power (plugged in) Direction/Speed Indicator Video length www.kodak.com/go/zx1support 3 ENGLISH 1 Setting up your camera IMPORTANT: Your camera is water resistant--it is not waterproof. Charging, loading the rechargeable batteries 1 2 3 Lights are on while the charger is plugged in. (Charge for approximately 12 hours.) Compatible KODAK Batteries · KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-8000 · KODAK Lithium Digital Camera Battery CRV3 · KODAK AA Batteries (Ni-MH, alkaline) 4 www.kodak.com/go/easysharecenter Setting up your camera Using an optional KODAK SD or SDHC Card Your camera has internal memory, but we recommend a KODAK SD or SDHC Card to conveniently store more videos/pictures. CAUTION: A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera. optional 1 Turn off the camera. 2 Insert or remove the optional card.

3 Turn on the camera. Purchase accessories www.kodak.com/go/Zx1accessories www.kodak.com/go/zx1support 5 Setting up your camera Connecting the strap 6 www.kodak.com/go/easysharecenter 2 Using your camera Turning on the camera Setting the date/time Date/Time: At the prompt, press OK. to change current field. for previous/next field. OK to accept. NOTE: To change the date & time later, see page 13. www.kodak.com/go/zx1support 7 Using your camera Recording When you turn on the camera, it's ready to take videos.

(OK) Start/stop recording Zoom in/out Choose a mode: · HD: 16:9, 720p @ 30 fps (HDTV) · HD60: 16:9, 720p @ 60 fps (HDTV) · Still (3 MP pictures) · VGA: 4:3, 640 x 480 @ 30 fps (Web-ready) NOTE: To take even more videos, insert an SD or SDHC Card. Purchase accessories Use the optional remote control www.kodak.com/go/Zx1accessories see page 11 8 www.kodak.com/go/easysharecenter Using your camera Playing videos Review button (press again for thumbnails, timeline) (OK) Play/Pause Stop video playback Delete the current or all videos/pictures Volume Previous/next video During playback, press to fast-forward or fast-rewind 2X, 4X, 8X, 16X. While paused, press to forward/ reverse one frame at a time. To use the optional remote control, see page 11. www.kodak.com/go/zx1support 9 Using your camera Playing back on a TV HDMI cable (for HD quality) AV cable (for VGA quality) To set Video Out (NTSC/PAL), see page 13. 10 www.kodak.com/go/easysharecenter Using your camera Using the optional remote control Use the optional remote control to start/stop recording, take a picture, and review videos and pictures. @@@@@@ Sounds Video Out Choose the regional setting that lets you connect the camera to a television or other external device.

Format SD/SDHC Card Deletes everything on the card; formats the card. On Off NTSC PAL CAUTION: Formatting deletes all videos/pictures. Removing a card during formatting may damage the card. NOTE: The firmware version is displayed at the top of the Settings screen. www.kodak.com/go/zx1support 13 3 Camera Getting help Getting help on the Web Email, write, or phone Kodak Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.) Get support for accessories Purchase camera accessories (lenses, cards, etc.) Download the latest camera firmware and software See online demonstrations of your camera Register your camera www.kodak.com/go/contact www.kodak.com/go/Zx1support www.kodak.com/go/support www.kodak.com/go/Zx1accessories www.kodak.com/go/Zx1downloads www.kodak.com/go/howto www.kodak.com/go/register Software Get information on ARCSOFT Software www.arcsoft.com/support Get help with the WINDOWS OS and working with www.kodak.com/go/pcbasics digital pictures 14 www.kodak.com/go/easysharecenter 4 Status Troubleshooting Solution Unrecognized or corrupt file. Transfer videos/pictures to your computer using the USB cable or an optional card reader.

Then format the card in the camera or card reader. An error may have occurred while formatting the card. Transfer videos/pictures to your computer using the USB cable or an optional card reader. Then format the card in the camera or card reader. The memory card is either unrecognized by the device, or is not formatted.

Transfer videos/pictures to your computer using the USB cable or an optional card reader. Then format the card in the camera. Try another card. Card is nearly full. Transfer videos/pictures to your computer using the USB cable or an optional card reader. Unrecognized or corrupt file. Transfer videos/pictures to your computer using Try another card. Low batteries. Charge the batteries. the USB cable or an optional card reader.

Then format the card in the camera. www.kodak.com/go/zx1support 15 Troubleshooting Status Solution Internal memory is full. Transfer videos/pictures to your computer using the USB cable. Use an SD/SDHC card to take more video/pictures. Status Camera will not turn on. Solution Ensure batteries are correctly inserted. Charge the batteries. If camera still does not turn on, visit www.kodak.com/go/Zx1support and click Step-by-Step Solutions & Repair. Videos do not play on a TV. Ensure an HDMI or AV cable is properly connected directly to the TV input(s). Ensure TV menu settings are correct for an HDMI or AV connection.

@@@ optional remote control. Ensure batteries are correctly inserted in the camera. @@ Images are blurry. Ensure lens is clean of fingerprints. @@ Questions or problems with ARCSOFT Software.

@@ Visit www.arcsoft.com/support. @@ Refer servicing to qualified service personnel. @@@@ If the LCD breaks, do not touch the glass or liquid. @@ For approved accessories, visit www.kodak.com/go/accessories. @@ Contact your computer manufacturer if you have questions. @@ When removing batteries, allow them to cool; they may be hot.

@@@@ Keep batteries out of the reach of children. Do not allow batteries to touch metal objects, including coins. @@ Remove the batteries when the product is stored. @@@@ Dispose of batteries according to local and national regulations. Visit www.kodak.com/go/kes. Do not charge non-rechargeable batteries. @@@@ Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue.

Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.



[You're reading an excerpt. Click here to read official KODAK ZX1 user guide](http://yourpdfguides.com/dref/2702236)

<http://yourpdfguides.com/dref/2702236>

Service agreements may be available in your country. Contact a dealer of KODAK Products for more information. For camera disposal or recycling information, contact your local authorities.

In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or www.kodak.com/go/Zx1support. Limited Warranty Kodak warrants KODAK Consumer Electronic Products and Accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for the duration specified on the KODAK Product packaging. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair. Limited warranty coverage Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. @@@@If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product.

Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer. 20 www.kodak.com/go/easysharecenter Appendix Limitations This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the iPhone, iPod, and Apple TV are trademarks of Apple, Inc. www.kodak.com/go/zx1support 25 .



[You're reading an excerpt. Click here to read official KODAK ZX1 user guide](#)

<http://yourpdfguides.com/dref/2702236>