



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KONICA MINOLTA BIZHUB 162. You'll find the answers to all your questions on the KONICA MINOLTA BIZHUB 162 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KONICA MINOLTA BIZHUB 162
User guide KONICA MINOLTA BIZHUB 162
Operating instructions KONICA MINOLTA BIZHUB 162
Instructions for use KONICA MINOLTA BIZHUB 162
Instruction manual KONICA MINOLTA BIZHUB 162



KONICA MINOLTA

IC-205

Software Kit

GB

The essentials of imaging



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>

Manual abstract:

@@1-4 2. @@1-4 3. @@1-4 4. RESTRICTIONS

.....
.....
.....

.....
.....
.....

.....
.....

.. 1-5 5. LIMITED WARRANTY ..

.....
.....
.....
.....

.....
.....
.....

... 1-5 6. LIMITATION OF REMEDIES

.....
.....
.....
.....

.....
.....

.... 1-5 7.

TERMINATION

.....
.....
.....
.....

.....
.....
.....
.....

..... 1-5 8. GOVERNING LAW

.....
.....
.....

.....
.....
.....
.....

.....
.....

1-5 9. GOVERNMENT END USERS

.....
.....
.....
.....

..... 1-6 Trademark acknowledgements .

.....
.....
.....

.....
.....
.....
.....

.... 1-7 User instructions

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 1-8 CE Marking (Declaration of conformity)

.....
.....
.....
.....

... 1-8 For U.S.A. users FCC part 15-Radio frequency devices

.....
.....
.....

.....
.....

... 1-8 For Canada users Interference-causing equipment standard (ICES-003 issue 3) ..

.. 1-10 For users in countries subject to class B regulations

.....
.....

1-10 For users in countries not subject to class B regulations

.....
.....

.. 1-10 1.2 1.3 2 Getting ready 2.1 2.2 System requirements

.....
.....
.....
.....

.....
.....
.....
.....

..... 2-3 Features of Image Controller IC-205 ...

.....
.....
.....

.....
.....
.....

... 2-5 Various printing functions

.....
.....

.....
.....

.....
.....
.....

..... 2-5 3 Connecting to a computer 3.1 Types of connections

.....
.....
.....

.....
.....
.....

..... 3-3 Parallel port connection ...

.....
.....
.....

.....
.....
.....

.. 3-3 USB port connection ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 3-3 Network connection

.....
.....
.....

.....
.....
.....

.. 3-3 Parallel port connection

.....
.....
.....

.....
.....
.....

..... 3-4 Connecting the machine to the parallel port of the computer .

.....
.. 3-4 USB port connection
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.5-8 Cancel

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....5-8 Apply

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....5-8 Help .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.5-8 Easy Set List

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....5-9 Save .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

5-9 Delete

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....5-9 Page Layout/Printer Figure .

.....
.....
.....
.....

.....
.....

...5-10 "Setup" tab ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

5-11 N-up

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....5-12 N-up List .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.5-12 Border Line

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....5-12 N-up Style .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....5-13 5.2 5.3 5.3.1 x-4 IC-205 5.3.
2 Watermark

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.... 5-14 Watermark List

.....
.....

.....
.....
.....

.....
.....
.....

. 5-14 First Page Only

.....
.....
.....

.....
.....
.....

..... 5-14 Edit Watermark ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 5-14 How to edit a watermark

.....
.....
.....

.....
.....
.....

..... 5-15 Paper Source

.....
.....
.....

.....
.....
.....

.....
.....
.....

5-17 Paper Source List

.....

.....
.....
.....
.....

..... 5-17 Detail of Paper Source ..

.....
.....
.....
.....
.....
.....
.....
.....

... 5-18 Media type

.....
.....
.....
.....
.....
.....
.....
.....

..... 5-19 Media Type List

.....
.....
.....
.....
.....
.....
.....
.....

.. 5-19 Duplex ...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.. 5-19 Security ...

.....
.....
.....
.....

.....
.....

.....
.....
.....

5-20 Lock Job

.....
.....

.....
.....
.....

.....
.....
.....

..... 5-20 Password

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 5-20 Using lock job

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 5-20 Specifying settings with the printer driver .

.....

.....
.....
.....

..... 5-20 Printing a locked job

.....
.....
.....

.....
.....
.....

... 5-21 "Paper" tab

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 5-22 Original Document Size .

.....
.....
.....

.....
.....
.....

.. 5-23 Original Document Size List

.....
.....
.....

.....
.....
.....

..... 5-23 Edit Custom .

.....
.....
.....

.....
.....
.....

.....
.....
.....

5-23 Output Paper Size

.....
.....
.....

.....
.....
.....

.. 5-25 Fit to Paper

.....
.....
.....

.....

.....
.....
.....

..... 5-25 Output Paper Size List

.....
.....
.....
.....
.....
.....
.....

5-25 Scaling

.....
.....
.....
.....
.....
.....
.....
.....

..... 5-26 Copies .

.....
.....
.....
.....
.....
.....
.....
.....

..... 5-26 Collate .

.....
.....
.....
.....
.....
.....
.....
.....

..... 5-26 Orientation .

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

... 5-26 Rotate

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 5-26 "Quality" tab

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 5-27 Adjustment ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 5-27 Contrast

..... 5-27 Brightness ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 5-27 Resolution

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 5-27 Toner Save

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 5-28 Rendering Mode .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 5-28 Font Setting

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
..... 5-28 5.3.3 5.3.4 5.

3.5 5.3.6 5.4 5.4.1 5.4.2 5.4.
3 5.4.4 5.4.5 5.
5 5.5.1 5.5.2 5.

5.3 5.5.4 5.5.5 IC-205 x-5 5.6 5.6.1 5.7 "Device Options" tab .

.....
.....
.....
.....

.....
.....
.....
.....

.....
5-29 Device Options

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....5-29 "About" tab ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...5-30 6 Control panel operations 6.1 Printer operations

.....
.....
.....
.....

.....
.....
.....
.....

.....
..6-3 General guide ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....6-4 [Printer] indicator

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.6-5 Starting the Print Operation

.....
.....
.....
.....

.....
.....
.....

.6-5 Canceling a print job

.....
.....
.....
.....

.....
.....
.....
.....

..6-6 Using the bypass tray

.....
.....
.....

.....
.....
.....
.....

.....

.6-8 Energy save mode

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....6-9 Outputting a report

.....

.....
.....
.....
.....
.....
.....
.....

.....6-9 7 Using PageScope Web Connection 7.1 7.
2 7.3 7.4 7.5 7.6 7.
7 7.8 When using PageScope Web Connection

.....
.....
.....

.....7-3 What is PageScope Web Connection?

.....
.....
.....
.....

.....7-3 System requirements .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..7-5 Accessing PageScope Web Connection

.....
.....
.....
.....

..7-6 How to access to PageScope Web Connection

.....
.....
.....

7-6 Using PageScope Web Connection

.....
.....
.....

.....
.....
.....

....7-7 About the screen layout .

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....7-7 Logging in as an administrator ...

.....
.....
.....

.....
.....
.....

...7-9 Logging in to administrator mode

.....
.....
.....

....7-9 Checking/Deleting print jobs .

.....
.....

.....
.....
.....

..7-10 Checking a print job ...

.....
.....

.....
.....
.....

.....
.....
.....

..7-10 Deleting a print job

.....
.....
.....

.....
.....
.....

....7-11 Downloading files

.....
.....
.....

.....
.....
.....

.....
.....
.....

7-12 How to download files

.....
.....
.....
.....

.....7-12 *Checking/Changing printer settings*

.....
.....
.....
.....

.....7-13 *Checking the printer settings*

.....
.....
.....
.....
.....

.....7-13 *Changing the printer settings* ...

.....
.....
.....
.....
.....
.....

.....7-14 *Printing a test page*

.....
.....
.....
.....
.....
.....

.....7-15 *How to print a test page*

.....
.....
.....
.....

.....7-15 *Displaying the PCL font list* ..

.....
.....
.....
.....
.....
.....

...7-16 Resetting the network interface card and image controller ..

.....7-17 How to reset the network interface card shared by Windows servers and clients. Clients inherit the driver settings from the server, such as the device options, watermark, and Easy set setup, and are unable to modify the server settings if the user does not have administrator access of the server. Supported by Windows Server 2003, Windows XP, Windows 2000, Windows Me, and Windows 98 SE. If the optional network interface card is installed, the network port can be used. For details, refer to the User's Guide for the Network Interface Card (NC-502).

*2 *3 2-4 IC-205 Getting ready 2 2.2 Features of Image Controller IC-205 Various printing functions The various printing functions are as follows: - Prints multiple copies at one time. In addition, the printed pages can be sorted into complete sets, which contain a copy of each page, or into groups where each contains all copies of the same page. - Prints two pages (one on each side) on a single sheet of paper. This function is not supported by 162. Left binding Top binding - Prints an enlarged or reduced image of the original. IC-205 2-5 2 - Getting ready Prints two or four pages of the original on a single sheet of paper. A maximum of 16 pages can be printed on a single sheet of paper. When two pages are printed on one page When four pages are printed on one page - Prints text in the background. - Prints only the cover on a different type of paper (such as colored paper).

2-6 IC-205 3 Connecting to a computer Connecting to a computer 3 3 3.1 Connecting to a computer Types of connections You can use either of the following two methods to connect the machine to a computer. Parallel port connection Use this type of connection when you want to connect the machine directly to a computer's parallel port. Refer to "Parallel port connection" on page 3-4. USB port connection Use this type of connection when you want to connect the machine directly to a computer's USB port.

Refer to "USB port connection" on page 3-5. Network connection In order to use the machine as a network printer, the Network Interface Card (NC-502) must be installed. For details on connecting the machine to a network, refer to the User's Guide for the Network Interface Card (NC-502). IC-205 3-3 3 3.2 Parallel port connection Connecting to a computer Use the parallel cable to connect the parallel port of the machine to the parallel port of the computer.



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>

2 *Reminder Be sure to use a shielded parallel cable. Use of an unshielded cable may result in radio frequency interference. The parallel port is compatible with IEEE1284 Type B standards. Connecting the machine to the parallel port of the computer* 1 2 3 Turn off both the machine and your computer. Connect one end of the parallel cable to the parallel port (printer port) of the computer. Connect the other end of the cable to the parallel port on the left side of the machine. Secure the interface cable connectors using the two clips. This completes connection of the machine to the computer. 3-4 IC-205 Connecting to a computer 3.3.3 USB port connection Use the USB cable (type B) to connect the machine's USB port to the USB port on your computer.

IC-205 3-5 3 Connecting to a computer 3-6 IC-205 4 Installing the printer driver Installing the printer driver 4 4 Installing the printer driver This section describes the procedure for installing the printer driver. The printer driver can be installed in two ways: by using "Plug and Play" or by using the "Add Printer Wizard". 2 Note If the machine is to be connected to a USB port, install the printer driver by using Plug and Play. If the machine is to be connected to a parallel port, install the printer driver by using the Add Printer Wizard. Connection Method USB port connection Compatible Operating Systems Windows XP, Windows Server 2003, Windows 2000, Windows Me, and Windows 98 SE Windows XP, Windows Server 2003, Windows 2000, Windows NT 4.0, Windows Me, Windows 98 SE, and Windows 98 Printer Driver Installation Install using Plug and Play. Follow this procedure: "Installing the TWAIN driver/printer driver using "Plug and Play"" on page 4-5 "Installing the printer driver using the "Add Printer Wizard"" on page 4-10 Parallel port connection Install using the Add Printer Wizard. For network printing, use the "Add Printer Wizard" to install the printer driver. During installation, select "LPT1" as the printer port. For details on specifying network connection settings, refer to the User's Guide for the Network Interface Card.

2 Note In order to use IPP (network) printing, the IPP printing settings must be specified when the printer driver is installed. For details on specifying the IPP printing settings, refer to the manual provided with the network interface card. If the image controller is used on Windows 98, Windows 98 SE or Windows Me, the Network Setup utility cannot be used. IC-205 4-3 4 4.1 Installing the printer driver Outline of Printer Driver Installation The printer driver is installed according to the following outline.

Installation using Plug and Play When installing the printer driver by using Plug and Play, the installation procedure differs with operating systems other than Windows Me and Windows 98 SE. With Windows Me and 98 SE With operating systems other than Windows Me and 98 SE Install the TWAIN driver. Install the USB printing support driver. Install the printer driver. Installation using the Add Printer Wizard When installing the printer driver by using the Add Printer Wizard, the installation procedure is the same for all operating systems.

All operating systems Install the printer driver. 4-4 IC-205 Installing the printer driver 4 4.2 Installing the TWAIN driver/printer driver using "Plug and Play" Installation using "Plug and Play" is not possible on Windows 98 and NT 4.0. Refer to the procedure for using the "Add Printer Wizard". 2 Note If the printer driver is installed using Plug and Play, first the TWAIN driver is installed, and then installation of the printer driver begins. This manual describes the installation of the TWAIN driver followed by that of the printer driver. Installing the TWAIN driver/printer driver using "Plug and Play" under Windows XP/Server 2003 1 2 3 With Windows running, insert the CD-ROM into your computer's CDROM drive. Turn on the machine. When the machine is ready, connect it to the computer with the USB cable.

The "Found New Hardware Wizard" dialog box appears. First, install the TWAIN driver. When using Windows XP (SP2), select do not connect. in the "Found New Hardware Wizard" dialog box, and then click [Next]. 4 5 6 Select Install from a list or specific location Advanced, and then click [Next]. Select Include this location in the search: under Search for the best driver in these locations., and then click [Browse]. Browse to "Driver\(\language)2k_XP" on the CD-ROM, and then click [OK]. Select the language you prefer. For example, if you prefer English, browse to: Driver\English\2k_XP 7 Click [Next].

The "Completing the Found New Hardware Wizard" dialog box appears. IC-205 4-5 4 8 Click [Finish]. Installing the printer driver This completes the installation of the TWAIN driver. The "Found New Hardware Wizard" dialog box appears again. Next, install the printer driver.

9 Repeat steps 4 through 8 to install the printer driver. 4-6 IC-205 Installing the printer driver 4 Installing the TWAIN driver/printer driver using "Plug and Play" under Windows 2000 1 2 3 With Windows running, insert the CD-ROM into your computer's CDROM drive. Turn on the machine. When the machine is ready, connect it to the computer with the USB cable. The "Found New Hardware Wizard" dialog box appears.

First, install the TWAIN driver. 4 5 6 7 Click [Next]. Select Search for a suitable driver for my device (recommended) in the "Install Hardware Device Drivers" dialog box, and then click [Next]. The "Locate Driver Files" dialog box appears. Select Specify a location, and click [Next]. Click [Browse...] on the next dialog box, browse to "Driver\(\language)2k_XP" on the CD-ROM, and then click [Open]. Select the language you prefer.

For example, if you prefer English, browse to: Driver\English\2k_XP 8 9 Click [OK], and follow the instructions that appear on the screen until the "Completing the Found New Hardware Wizard" dialog box appears. Click [Finish]. This completes the installation of the TWAIN driver. The "Found New Hardware Wizard" dialog box appears again. Next, install the printer driver. 10 Repeat steps 4 through 9 to install the printer driver. IC-205 4-7 4 1 2 3 Installing the printer driver Installing the TWAIN driver/printer driver using "Plug and Play" under Windows Me/98 SE With Windows running, insert the CD-ROM into your computer's CDROM drive. Turn on the machine. When the machine is ready, connect it to the computer with the USB cable. The "Add New Hardware Wizard" dialog box appears and installation of the TWAIN driver begins.

4 With Windows Me, select Specify the location of the driver (Advanced).



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>

With Windows 98 SE, click [Next], and then select Search for the best driver for your device. (Recommended) in the dialog box that appears. 5 6 7 Click [Next]. Select Specify a location, and then click [Browse].

..]. Browse to "Driver\language\Win9x" on the CD-ROM, and then click [OK]. Select the language you prefer.

For example, if you prefer English, browse to: Driver\English\Win9x 8 9 Click [Next], and then follow the instructions that appear on the screen until you can click [Finish]. Click [Finish]. This completes the installation of the TWAIN driver. The "Add New Hardware Wizard" dialog box appears again. Next, install the USB printing support driver. 10 11 Repeat steps 4 through 9 to install the USB printing support driver. The "Add New Hardware Wizard" dialog box appears again. Next, install the printer driver. Repeat steps 4 through 9 to install the printer driver. 4-8 IC-205 Installing the printer driver Reinstalling the printer driver by using Plug and Play 4 When reinstalling the printer driver using Plug and Play, remove the CD-ROM and disconnect the machine from the computer before performing the reinstallation procedure described below.

1 Open the Printers folder. If Windows XP or Server 2003 is being used, click the [Start] button, and then click "Printers and Faxes". If Windows 2000, Me or 98 SE is being used, click the [Start] button, point to "Settings", and then click "Printers". 2 Delete the appropriate printer. If Windows XP, Server 2003 or 2000 is being used, continue with step 3. If Windows Me or 98 SE is being used, skip to step 4. 3 4 5 6 Click [Server Properties] from the [File] menu, display the "Drivers" tab, delete the appropriate printer, and then click [OK]. Restart the computer. Use the USB cable to connect the machine to the computer. Follow the on-screen instructions to reinstall the printer driver.

When the dialog box for specifying the folder appears, insert the CD-ROM, and then continue the installation. If Windows 98 SE is being used, click [OK] when the "Insert Disk" dialog box appears, and then continue the installation. If Windows 2000 is being used, begin the installation. IC-205 4-9 4 4.3

Installing the printer driver Installing the printer driver using the "Add Printer Wizard" Installing the printer driver using the "Add Printer Wizard" under Windows XP/Server 2003 1 2 3 4 5 6 7 With Windows running, insert the CD-ROM into the CD-ROM drive of your computer.

Click the Windows [Start] button, and then click [Printers and Faxes]. Select [Add a printer] from the [Printer Tasks] menu. The "Add Printer Wizard" starts. Click [Next]. Select Local printer attached to this computer, and then click [Next].

Select Use the following port, and then select "LPT1: (Recommended Printer Port)". Click [Have Disk]. 4-10 IC-205 Installing the printer driver 4 8 Click [Browse], select "Driver\language\2k_XP" on the CD-ROM, and then click [Open]. Select the language you prefer. For example, if you prefer English, browse to: Driver\English\2k_XP. 9 10 11 12 Click [Open] again, and then click [OK]. Select the printer to be installed, and then click [Next]. Continue selecting the appropriate settings according to your printer setup and clicking [Next] until [Finish] appears. Click [Finish]. IC-205 4-11 4 1 2 3 4 Installing the printer driver Installing the printer driver using the "Add Printer Wizard" under Windows 2000/NT 4.

0 With Windows running, insert the CD-ROM into the CD-ROM drive of your computer. Click the Windows [Start] button, point to [Settings], and then click [Printers]. The "Printers" window appears. Double-click the "Add Printer" icon. The "Add Printer Wizard" starts. Select the connection method for the printer, and then click [Next]. If Windows 2000 is being used, click [Next], and then select Local printer. If Windows NT 4.0 is being used, select My computer. 5 6 Select "LPT1" as the printer port, and then click [Next].

Click [Have Disk]. 4-12 IC-205 Installing the printer driver 4 7 Click [Browse], select the folder on the CD-ROM, and then click [Open]. If Windows 2000 is being used, select "Driver\language\2k_XP". Select the language you prefer. For example, if you prefer English, browse to: Driver\English\2k_XP.

If Windows NT 4.0 is being used, select "Driver\language\WinNT". Select the language you prefer. For example, if you prefer English, browse to: Driver\English\WinNT. 8 9 Click [Open] again, and then click [OK].

Select the printer to be installed, and then click [Next]. IC-205 4-13 4 10 11 Installing the printer driver Continue selecting the appropriate settings according to your printer setup and clicking [Next] until [Finish] appears. Click [Finish]. Installing the printer driver using the "Add Printer Wizard" under Windows Me/98 SE/98 1 2 3 4 5 6 7 8 9 10 11 1 With Windows running, insert the CD-ROM into the CD-ROM drive of your computer. Click the Windows [Start] button, point to [Settings], and then click [Printers]. The "Printers" window appears. Double-click the "Add Printer" icon. The "Add Printer Wizard" starts. Click [Next]. Select Local printer, and then click [Next].

Click [Have Disk]. In Folder, select "Driver\language\Win9x" on the CD-ROM, and then click [OK]. Select the language you prefer. For example, if you prefer English, browse to: Driver\English\Win9x. Click [OK]. Click [OK] again. Select the printer to be installed, and then click [Next]. Select "LPT1" as the printer port, and then click [Next]. Click [Finish]. Reinstalling the printer driver by using the Add Printer Wizard Open the Printers folder.

If Windows XP or Server 2003 is being used, click the [Start] button, and then click "Printers and Faxes". If Windows 2000, NT 4.0, Me, 98 SE or 98 is being used, click the [Start] button, point to "Settings", and then click "Printers". 4-14 IC-205 Installing the printer driver 4 2 Delete the appropriate printer. If Windows XP, Server 2003 or 2000 is being used, continue with step 3.

If Windows Me or 98 SE is being used, skip to step 4. 3 4 5 Click [Server Properties] from the [File] menu, display the "Drivers" tab, delete the appropriate printer, and then click [OK]. Restart the computer. Reinstall the printer driver. IC-205 4-15 4 Installing the printer driver 4-16 IC-205 5 Configuring printer driver settings Configuring printer driver settings 5 5 Configuring printer driver settings From the Windows printer window, select the printer, and then display the printer driver property dialog box.



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>

All settings specified in this dialog box are applied to the printer when it is used with all applications. 5.1 Displaying printer driver properties for configuring global settings Displaying settings under Windows XP/Server 2003 1 2 3 Click the Windows [Start] button, and then click [Printers and Faxes]. In the "Printers and Faxes" window, select the "KONICA MINOLTA 162 PCL6", or "KONICA MINOLTA 210 PCL6" icon. Click [Printing Preferences...] from the [File] menu. The "Printer Driver Setup" dialog box appears. To display the "Device Options" tab, click [Properties] from the [File] menu.

IC-205 5-3 5 1 2 3 Configuring printer driver settings Displaying settings under Windows 2000/NT 4.0/Me/98 SE/98 Click the Windows [Start] button, point to [Settings], and then click [Printers]. Select the "KONICA MINOLTA 162 PCL6", or "KONICA MINOLTA 210 PCL6" icon. To display the printer driver settings: Windows 2000 -- Select [Printing Preferences...] from the [File] menu. Windows NT 4.0 -- Select [Document Defaults...].] from the [File] menu. Windows Me/98 SE/98 -- Select [Properties] from the [File] menu. The following printer setup dialog box appears. To display the "Device Options" tab in Windows 2000 or Windows NT 4.

0, click [Properties] from the [File] menu. 2 Note Use the four tabs ("Setup", "Paper", "Quality", and "Device Options") to configure the printer driver settings. @@@@Afterward, you can recall the settings by selecting them from a list. @@@@The Fit to Paper check box on the "Paper" tab is selected. @@@@Available settings: Horz.

Ascending Horz. Descending Vert. Ascending Vert. @@@@Make any settings you want. To create a new watermark, type the desired text in the box. @@You can have up to 31 different watermarks configured at one time. @@@@Style Use these check boxes to turn bold style and italic style on (check box selected) or off (check box cleared). Italic: Bold: Italic text Bold text Font Use the settings in this group box to specify the typeface and the point size of the watermark text. Type Face: You can specify any of the typefaces currently installed on your computer's operating system as the typeface of the watermark text. Size: Specify text size between 8 and 200 points.

Angle Use this setting to specify the angle of the watermark text relative to the paper. The setting range is -90° to +90°. A negative (-) value rotates the characters clockwise, 0 specifies the text should be parallel to the paper, and a positive (+) value rotates the characters counterclockwise. 5-12 IC-205 Configuring printer driver settings 5 Position Use this setting to specify the position where the watermark text should be printed. You can specify a position by using horizontal and vertical values. IC-205 5-13 5 5.3.3 Paper Source Configuring printer driver settings Use the settings in this group box to specify the source for the printing paper. Paper Source List Click the down arrow button, and then select the tray from which paper should be fed. Available settings: Auto, Tray 1, Tray 2-Tray 5(option), Bypass 2 Note If the optional paper feed unit is installed, "Tray 2-Tray 5" appears.

For details, refer to "'Device Options" tab" on page 5-26. In addition, only plain paper can be loaded into tray 2-tray 5. Tray 2 through tray 5 do not support the following paper sizes. Paper sizes: Hagaki, Env. Com10, Env. C6, Env. C6 Envelope, Env. DL, Env. You-1, Env. You-4, Env.

You-6 Selecting "Auto" tells the machine to use the tray that contains paper of the size specified under Output Paper Size on the "Paper" tab. 5-14 IC-205 Configuring printer driver settings Detail of Paper Source 5 Click this button to display a dialog box for specifying settings for the cover page. Cover Page Use the settings in this group box to specify how to print a document with front and back cover pages. Setting Front Cover Page: With Image: Back Cover Page: With Image: Cover Paper Source: Available settings: Cover Paper Media Type: Available settings: Description Select this check box to print the document with a front cover. Select this check box to print an image on the front cover. Select this check box to print the document with a back cover. Select this check box to print an image on the back cover. Select the paper source for the front and back cover pages. Tray 1, Tray 2-Tray 5 (option), Bypass Select the paper media type for the front and back cover pages. Plain Paper, Thick Paper, OHP, Envelope 2 Note If "Tray 2-Tray 5" (option) is selected in the Cover Paper Source list, the only Cover Paper Media Type setting available is "Plain Paper".

IC-205 5-15 5 5.3.4 Media type Configuring printer driver settings Use the settings in this group box to specify the paper media type for the printing paper. Media Type List Click the down arrow button, and then select the type of media to be used for printing. Available settings: Plain Paper, Thick Paper, OHP, Envelope 2 Note If "Auto" or "Tray 2-Tray 5" (option) is selected in the Paper Source list, the only Media Type setting available is "Plain Paper". 5.3.5 Duplex 2 Note The "Duplex" option can be used only if the 210 is equipped with the optional automatic duplex unit. Click the down arrow button, and then select the settings for duplex (twosided) printing. If "Off" is selected, the printer does not print on both sides of the paper.

When duplex printing is selected, select "Long Edge" or "Short Edge" for the binding position. 2 Note The automatic duplex unit is required in order to use duplex printing. In addition, the "Duplex" option must be added to the list of installed options in the "Device Options" tab for the printer driver. When using duplex printing, select "Plain Paper" as the media type. 5-16 IC-205 Configuring printer driver settings 5 5.

3.6 Security If the lock job function is used, printing cannot be performed unless the unlocking password is entered from the machine's operation panel. 2 Note The lock job function can be used if the expanded memory unit is installed. Lock Job Select this check box to use the lock job function. Password Specify the password for unlocking jobs.

Type in a four-digit number (between 0000 and 9999). Using lock job Specifying settings with the printer driver 1 2 3 Select the Lock Job check box on the "Setup" tab. In the Password box, type in the password (between 0000 and 9999). Send the print job. IC-205 5-17 5 Printing a locked job Configuring printer driver settings 1 Press the [Printer] key to display the PC Print mode screen. 2 Check that er's display.



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>

appears in the print appears If there are locked jobs, in the printer's display. 3 Press the [Access] key. 4 When LOCK NO. = - - - appears, type in the password.

If the password specified for the printer driver consists of less than four digits, add "0" so that four digits are typed in. For example, if the specified password is "12", type in "0012". 5 If the password is correct, the job is printed. 2 Note If there are multiple locked jobs with the same password, all of those locked jobs are printed. 5-18 IC-205 Configuring printer driver settings 5 5.4 "Paper" tab Use this tab to configure settings related to your original and to the medium on which you are printing. You can also specify the number of copies to be printed and the orientation of the print image. IC-205 5-19 5 5.4.1 Original Document Size Configuring printer driver settings Use the settings in this group box to specify the size of the original document.

Original Document Size List The list that appears when you click the down arrow button shows all of the paper sizes that are supported by your machine. Specify the original document size by clicking it in the list. Available settings: A3, A4, A5, B4 (JIS), B5 (JIS), FLS, Letter, Half Letter, Legal, 11 × 17 in, 11 × 14 in, 16K, 8K, Hagaki, Env.Com10, Env.C6, Env.

C6Envelope, Env.DL, Env.You-1, Env.You-4, Env.You-6 Edit Custom To specify a custom document size, click the [Edit Custom] button, and then specify the desired document size.

The specified custom document size appears in the Original Document Size list. Paper List This is a list of all currently specified custom paper sizes. Select the name for the paper size that you want to edit. You can specify up to 32 custom paper sizes. New Click this button to display settings for specifying a custom paper size. 5-20 IC-205 Configuring printer driver settings 5 Edit Click this button to display a dialog box for editing the paper size settings of the custom paper size currently selected in the list. Delete Click this button to delete the custom paper size currently selected in the list. Name Type in the name for the custom paper size. The name can be up to 20 characters long. Size Specify the size for the custom paper size.

Width: 90.0 mm to 297.0 mm (metric units), or 3.54 inches to 11.69 inches (inch units) Height: 140.0 mm to 431.8 mm (metric units), or 5.51 inches to 17.00 inches (inch units) Unit Select whether the measurement units are metric (0.1 mm) or inches (0.

01 inch). IC-205 5-21 5 5.4.2 Output Paper Size Configuring printer driver settings Use the settings in this group box to specify the size of paper you want to use for printing. You can also configure other settings that affect the size of the print image on the paper.

2 Note Output Paper Size group box settings are not available whenever the Nup setting on the "Setup" tab is anything besides "Off". Fit to Paper Selecting this check box causes the printed image to be resized automatically so it matches the size selected in the Output Paper Size list. 2 Note The Fit to Paper check box is not available if Scaling is set to any setting other than 100 %. Output Paper Size List To specify a paper size that is different from the size specified under Original Document Size, click the down arrow button, and then select a paper size from the list that appears. Available settings: A3, A4, A5, B4 (JIS), B5 (JIS), FLS, Letter, Half Letter, Legal, 11 × 17 in, 11 × 14 in, 16K, 8K, Hagaki, Env.

Com10, Env.C6, Env.C6Envelope, Env.DL, Env.You-1, Env.You-4, Env.You-6 2 Note The Output Paper Size list is available when the Fit to Paper check box is selected. 5-22 IC-205 Configuring printer driver settings Scaling Specify the zoom ratio for enlarging or reducing the print image. Type or select a value between 20 % and 400 %. 5 2 Note The Scaling setting is not available while the Fit to Paper check box is selected.

5.4.3 Copies Use this setting to specify the number of copies to be printed. Type or select a value between 1 and 99. 5.4.4 Collate Use this setting when printing multiple copies of the same document, to specify whether each copy of the document should be printed individually or if all copies of each page should be printed as a set. Selecting On prints each copy of the document separately. If you have "5" specified for Copies, for example, this setting would print the document from the first page to the last page five times. Selecting Off prints all copies of each page as a set.

If you have "5" specified for Copies, for example, this setting would print five copies of page one, followed by five copies of page two, etc. 2 Note The Collate setting may not be available with some applications. Collating is not available when "1" is specified in the copies box. If Collate is set to "On" in the printer driver, be sure to disable the application's collate function. 5.

4.5 Orientation Use this setting to specify whether your document should be printed in Portrait (vertical) or Landscape (horizontal) format. Rotate Select the Rotated check box to rotate the print image 180° to the paper orientation. IC-205 5-23 5 5.5 "Quality" tab Configuring printer driver settings Use this tab to control the quality of the printed output.

5.5.1 Adjustment Contrast Use this setting to adjust the contrast of the print image. Type or select a value between 0 and 100. Brightness Use this setting to adjust the brightness of the print image. Type or select a value between 0 and 100. 5.5.2 Resolution Click the down arrow button, and then select either "600 × 600 dpi" or "1200 × 600 dpi" as the printing resolution. 2 Note "1200 × 600 dpi" provides better quality, but it also takes longer to print at this setting than at "600 × 600 dpi".

5-24 IC-205 Configuring printer driver settings 5 5.5.3 Toner Save Selecting On prints using less toner. Selecting Off prints using the usual amount of toner.

5.5.4 Rendering Mode Use this setting to specify the image format. Selecting Send Graphics as Vector prints using vector graphics. Selecting Send Page as Raster prints using raster graphics. If the data is not printed correctly, selecting Send Page as Raster may print correctly.

5.5.5 Font Setting Use this setting to specify how the TrueType fonts are downloaded from the computer to the printer. Send True Type as Outline: Select this setting to download the TrueType fonts as outline data. Send True Type as Bitmap: Select this setting to download the TrueType fonts as bitmap data.

2 Note If Rendering Mode is set to "Send Page as Raster", no setting can be selected for Font Setting. IC-205 5-25 5 5.6 "Device Options" tab Configuring printer driver settings Use this tab to specify the options that are currently installed on the machine.



[You're reading an excerpt. Click here to read official KONICA](http://yourpdfguides.com/dref/586630)

[MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)

<http://yourpdfguides.com/dref/586630>

1 Device Options 2 Note The option "Duplex" is only supported by 210. Use this setting to specify the options installed in your machine. To add an available option from the Installable Options list to the Installed Options list, select the option, and then click the [Add] button. To remove an option from the Installed Options list, select the option, and then click the [Remove] button. 5-26 IC-205 Configuring printer driver settings 5 5.7 "About" tab Use this tab to display version and copyright information about this printer driver. IC-205 5-27 5 Configuring printer driver settings 5-28 IC-205 6 Control panel operations Control panel operations 6 6 Control panel operations This section covers printer operations you can perform on the control panel of the machine. 6.1 Printer operations The machine's default mode is the copy mode. Normally, when printing is performed from a connected computer, printing begins automatically.

See "Starting the Print Operation" on page 6-5 for more information. When printing with "Bypass" selected in the Paper Source list on the "Setup" tab, refer to "Using the bypass tray" on page 6-8. IC-205 6-3 6 General guide Control panel operations 1 2 3 4 5 6 7 10 8 9 No. 1 2 Name [Error] indicator [Printer] indicator Description · Lights up in orange if an error or malfunction occurs. · Blinks while the machine is receiving print data. · Lights while the machine is performing a print operation (even if data is being received simultaneously). · Goes out when there is no print data. · See "[Printer] indicator" on page 6-5. · Press while the machine is receiving print data (indicated by the [PRINT] indicator blinking) to display the PC print mode screen. · Press while the PC print mode screen is displayed to return to the previous screen.

- The PC print mode will not be entered if there is no print data in machine memory when the [Printer] key is pressed. Pressing the [Fax], [Scan], or [Copy] key, a copy function key, or a fax function key exits the PC print mode. · Press to print the configuration page and PCL font list. · While print data is being received, "PC:PRN" appears in the display. · If the [Printer] key is press while the machine is receiving print data (the [Printer] indicator is lit), the paper source and paper size for the print job are indicated in the display.
- Press to reply "NO" to the confirmation message that appears when a print job is canceled. · Press to reply "YES" to the confirmation message that appears when a print job is canceled. · Lights up in orange when the machine is receiving print data. · To cancel the current print job while print data is being received, press the [Printer] key, and then press this key when the PC print mode screen appears. See "Canceling a print job" on page 6-6.
- Press when printing a locked job. · Refer to "Security" on page 5-17. 3 [Printer] key 4 5 [Status] key Display 6 7 8 9 [No/C] key [Yes] key [Start] indicator [Stop] key 10 [Access] key 6-4 IC-205 Control panel operations 6 2 Note The [Fax] key and the fax function keys are available only if the optional Fax Kit (FK-505) is installed. The [Scan] key is available only when the optional Network Interface Card (NC-502) and the optional Scanner Unit (SU-502) are installed with the optional Fax Kit (FK-505). [Printer] indicator The [Printer] indicator shows the current status of PC printing. [Printer] indicator Blinking On Description · Machine is receiving print data, even while in another mode. · A machine error has occurred. · When in another mode, indicates that machine memory contains print data. · In the PC print mode, indicates that machine is printing print data. The indicator remains lit (without blinking) even if data is being received while printing is in progress.

- No print data in machine memory. Off Starting the Print Operation Normally, when printing is performed from a connected computer, printing begins automatically. - If the machine is in the copy mode when a print command is executed on a connected computer, printing begins automatically if no operation is performed in the copy mode for 30 seconds. - If print data is received while a fax operation is being performed, printing begins. (only if the Fax Kit (FK-505) is installed) IC-205 6-5 6 Canceling a print job Control panel operations You can cancel a print job from the control panel of the machine only while the machine is in the PC print mode. 1 Check that the [Printer] indicator is flashing or is lit, and then press the [Printer] key. 2 Make sure the machine's display shows *PC PRINT* PRINTING. The message that appears differs depending on the status of the machine. 3 Press the [Stop] key. The PC JOB CANCEL? confirmation message appears.

4 Press the [Yes] key to cancel the print job. Press the [No/C] key to resume printing. If no key is pressed within 5 seconds, printing will resume. JOB CANCELED appears on the display and the print job is canceled. 6-6 IC-205 Control panel operations 6 2 Note You can use steps 2 and 3 of the above procedure to cancel a print job while any of the following messages is indicated on the display: PAPER EMPTY, INCORRECT PAPER SIZE, NO SUITABLE PAPER, PAPER SIZE ERROR, LOAD PAPER, PAPER JAM, FRONT COVER OPEN, FUSER COVER OPEN, TONER EMPTY, MEDIA TYPE ERROR, REMOVE PAPER IN BYPASS TRAY, RECEIVING.

IC-205 6-7 6 Using the bypass tray Control panel operations Use the procedure described below to print onto paper that is fed (one sheet at a time) from the bypass tray. 1 2 3 On your computer, display the "Setup" tab of the printer driver, and then specify "Bypass" for the Paper Source setting (page 5-14). Execute the print operation from your computer. When the message LOAD PAPER appears on the machine's display, load paper onto the bypass tray. This causes the print operation to be performed using the paper from the bypass tray.

4 Repeat step 3 as many times as necessary until printing of the document is complete. 2 Note Be sure to execute the print operation from the computer first, and then place the paper onto the bypass tray. If there is already paper on the bypass tray when you execute the print operation, remove it, and then place it again onto the bypass tray. Load the paper into the manual bypass tray one sheet at a time. If the multi bypass tray (optional) is installed, it can used in the same way as any other paper tray since the multi bypass tray can hold 100 sheets of paper. The multi bypass tray can be loaded with a maximum of 10 envelopes, 20 OHP transparencies, 20 postcards, 20 label sheets, or 100 sheets of plain paper.



You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide
<http://yourpdfguides.com/dref/586630>

6-8 IC-205 Control panel operations Energy save mode If print data is received while the machine is in energy save mode, energy save mode is canceled. 6 When print data is received, the data is printed after the machine has finished warming up. Outputting a report When the image controller is installed, the following reports can be outputted. 0 Configuration Page 0 PCL Font List 1 2 Press [Status] key.

Using the + and , keys, select PRINT REPORT?. 3 Press the [Yes] key. A menu appears, showing the reports and lists that can be printed. 4 Using the + and , keys, select the report/list that you wish to print, and then press the [Yes] key. CONFIGURATION PAGE PCL FONT LIST IC-205 6-9 6 Control panel operations 6-10 IC-205 7 Using PageScope Web Connection Using PageScope Web Connection 7 7.1 Using PageScope Web Connection When using PageScope Web Connection In order to use PageScope Web Connection, the optional Network Interface Card (NC-502) must be installed. 7.2 What is PageScope Web Connection? PageScope Web Connection is a device control utility program provided by the HTTP server built into the network interface card. This utility can be used with a web browser as an interface for remotely controlling the machine and network interface card. HTTP server Access IC-205 7-3 7 Using PageScope Web Connection Here are some examples of the types of tasks that can be performed with PageScope Web Connection. - Change settings Change network settings Change printer settings (Only for machines equipped with the optional image controller) - Remote status monitoring Check the details of machine trays, information about consumables, or the total number of prints Check the status of jobs that are being printed, or held in the print queue (Jobs can also be deleted if you have logged in to the administrator mode.) - Maintenance Reset the network interface card (NIC), or image controller Initialize the image controller 7-4 IC-205 Using PageScope Web Connection 7 7.3 System requirements PageScope Web Connection can be used in the following system environments. System requirements OS Windows 98, Windows 98 SE, Windows Me, Windows NT 4.0, Windows 2000, Windows XP, or Windows Server 2003 Microsoft Internet Explorer 4.

0 or later Netscape Navigator 4 or later Browser 2 Note In order to use PageScope Web Connection, the optional Network Interface Card (NC-502) must be installed. IC-205 7-5 7 7.4 Using PageScope Web Connection Accessing PageScope Web Connection PageScope Web Connection is accessed directly using a web browser. How to access to PageScope Web Connection 1 2 Start up your web browser. Enter the IP address of the machine into the URL box, and then press the [Enter] key.

http://<machine_IP_address>/ (Example) If the machine IP address is 192.168.0.10, enter: http://192.168.0.10/ 3 The PageScope Web Connection screen appears. 2 Note In order to access PageScope Web Connection, an IP address must be assigned to the machine. 7-6 IC-205 Using PageScope Web Connection 7 7.5 Using PageScope Web Connection PageScope Web Connection is used in the same way as other internet web pages.

Click on links in the page to jump to that page, and use the [Back] and [Next] buttons to navigate through pages that have already been loaded. 7.6 About the screen layout The following screen appears when you access PageScope Web Connection. 2 Note Screen images used in this manual may differ from the actual screen display. They are also subject to change without notice. 1 2 3 5 6 4 7 IC-205 7-7 7 No. 1 2 Name Logo Logo Description Using PageScope Web Connection Click on this to jump to the manufacturer's web site. Click to display the new screen containing the version information. If the PageScope Web Connection logo is clicked in the screen that appeared, the Web site for PageScope is displayed. Displays the current status of the machine.

Enter the administrator password to log in to the administrator mode. These are used to select the various categories of settings. This is used to select various setting items or display information. Displays the details for the item selected from the menu. 3 4 5 6 7 Status display Administrator password Tabs Menu Information/settings display 7-8 IC-205 Using PageScope Web Connection 7 7.

7 Logging in as an administrator Some of the settings available in PageScope Web Connection can only be changed by an administrator. These settings are only displayed when you log in to the administrator mode. Logging in to administrator mode 1 2 3 Enter the administrator password in the "Admin Password:" box at the left of the screen. Click the [Login] button to log in to the administrator mode. To log out again, click the [Logout] button.

2 Note The default password for administrator mode is "sysadm". Be sure to change the administrator password before using administrator mode. The machine cannot be used while you are logged into PageScope Web Connection with administrator mode. In addition, if the machine is being operated, the administrator cannot log on. After logging on with Administrator mode, you will automatically be logged off if no operation is performed for ten minutes.

IC-205 7-9 7 7.8 Checking a print job Using PageScope Web Connection Checking/Deleting print jobs Click [Print Job Management] in the menu on the "Job" tab to view details for the print jobs. 2 Note A maximum of 50 print jobs can be displayed, and jobs that have been printed will automatically be deleted. 7-10 IC-205 Using PageScope Web Connection Deleting a print job In order to delete a print job, you must be logged in to the administrator mode. 7 1 2 3 Log in to the administrator mode.

Click [Print Job Management] in the menu on the [Job] tab to display a sub-menu. Select the print job that you wish to delete, and then click the [Delete Selected Job] button to delete the job. 2 Note The lock job cannot be deleted. IC-205 7-11 7 7.9 Downloading files Using PageScope Web Connection A specified file can be downloaded to the machine to be printed. Only the following types of files can be downloaded. - PCL files - Text files (English text only) 2 Note If a file type other than a PCL or text file is downloaded, it will not be printed, or will be printed with corrupt or incorrect characters. How to download files 1 2 3 Click [File Download] in the menu on the "Job" tab. Click the [Browse] button, and then select the file. Click the [Send] button beside "Send File to Printer".

The file is downloaded to the machine, then printed. 7-12 IC-205 Using PageScope Web Connection 7 7.10 Checking/Changing printer settings The default settings for the printer can be viewed and changed.



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>

A print job sent with no settings specified is printed with these settings. Checking the printer settings Click [Settings] in the menu on the "Print" tab to display the following submenu.

Click each option in the sub-menu to check the various settings. - Paper Handling - Page Layout - Printer Setting (PCL Settings) Sub-menu option Paper Handling Parameter Copies Paper Source Media Path Description Specifies the default number of copies. Specifies the default paper source. Specifies the default media path. Specifies the default paper size.

Specifies the default printing orientation. Specifies the default font size. Specifies the default character pitch. Specifies the default font number. Specifies the default symbol set. Specifies the default number of lines per page. Page Layout Printer Setting (PCL Settings) Paper Size Orientation Size Pitch Font No. Symbol Set Form Length IC-205 7-13 7 Changing the printer settings Using PageScope Web Connection In order to change printer settings, you must be logged in to the administrator mode. 1 2 3 Log in to the administrator mode. Click [Settings] in the menu on the "Print" tab to display a sub-menu.

Change the settings, and then click the [Apply] button. To erase the changed setting, click the [Clear] button. To return the setting to its default, click the [Restore Factory Default] button. 7-14 IC-205 Using PageScope Web Connection 7 7.11 Printing a test page The following test pages can be printed. - Configuration page - PCL font list How to print a test page 1 2 3 Click [Test Print] in the menu on the "Print" tab. Select the test page that you wish to print.

Click the [Print] button to print the selected test page. IC-205 7-15 7 7.12 Displaying the PCL font list The PCL font list can be checked.

Using PageScope Web Connection Click [Font Information] in the menu on the "Print" tab to display the font list. 7-16 IC-205 Using PageScope Web Connection 7 7.13 Resetting the network interface card and image controller The network interface card and image controller can be restarted. How to reset the network interface card and image controller In order to reset the network interface card and image controller, you must be logged in to the administrator mode. 1 2 3 4 5 Log in to the administrator mode.

Click [Maintenance] in the menu on the "System" tab. Click [NIC and Printer Controller Reset] in the sub-menu that appeared. Click the [Reset] button. In the confirmation dialog box that appeared, click the [Yes] button. To stop resetting, click the [No] button.

2 Note Job being processed are not saved when the reset operation is performed. IC-205 7-17 7 7.14 Using PageScope Web Connection Initializing the network interface card and image controller The network interface card and image controller can be initialized. How to initialize the network interface card and image controller In order to initialize the network interface card or image controller, you must be logged in to the administrator mode. 1 2 3 4 Log in to the administrator mode. Click [Maintenance] in the menu on the "System" tab. Click [Initialize] in the sub-menu that appeared. Click the [Restore] button beside either "Printer Controller" or "NIC". 5 In the confirmation dialog box that appeared, click the [Yes] button. To stop initializing, click the [No] button.

7-18 IC-205 8 Troubleshooting Troubleshooting 8 8 Troubleshooting This section describes the errors that can appear during PC printing and what you need to do to correct the situation. @@@@Action Load paper of the correct size into the tray. Tray 1: Change the paper size in the Utility mode, and load the correct paper into the tray. Tray 2-Tray 5 (option): Use a paper feed unit loaded with paper of the corresponding size. Multi Bypass Tray: Change the paper that is loaded. (NO SUITABLE PAPER) Press the [Start] key to begin printing with the paper source specified in Utility mode. (INCORRECT PAPER SIZE) Press the [Start] key to begin printing with the paper size loaded in the tray selected from the printer driver. (Tray 1 and Tray 2-Tray 5) Load paper into the tray or load tray in the machine. Load the correct paper into the tray, and change the media type in the Utility mode. Press the [Start] key to begin printing with the media type loaded in the tray selected from the printer driver.

(Tray 1 and Tray 2-Tray 5) Press any key, and then turn the machine off, then on again. NO SUITABLE PAPER INCORRECT PAPER SIZE PAPER EMPTY There is no paper in the specified tray or the specified tray is not loaded in the machine. The media type specified by the printer driver is not loaded in the specified paper tray. MEDIA TYPE ERROR MEMORY FULL The memory is full of stored data. 2 Note If the data is not printed correctly, selecting "Send Page as Raster" from the printer driver may print correctly.

Refer to "Rendering Mode" on page 5-25. 8-4 IC-205 Troubleshooting 8 8.3 Errors and print data What happens to your print data when an error occurs depends on the error type. "MACHINE TROUBLE" error This error indicates a serious operational problem. The machine is unable to receive any data while this error message is on the display.

Contact your service representative. Temporary errors The machine retains current print data in memory whenever any of the easily correctable errors listed below occurs. As soon as the condition causing the error is corrected, the machine automatically resumes printing. - PAPER JAM - INCORRECT PAPER SIZE - PAPER SIZE ERROR - FRONT COVER OPEN - FUSER COVER OPEN - NO SUITABLE PAPER - PAPER EMPTY - MEDIA TYPE ERROR - TONER EMPTY - INCORRECT T/C TYPE 2 Note You can cancel a print job stored in memory due to one of the above errors. See "Canceling a print job" on page 6-6 for more information. IC-205 8-5 8 Troubleshooting 8-6 IC-205 9 Specifications Specifications 9 9 Specifications Print speed* bizhub 210 · 21 pages/min. (A4 v, 600 × 600 dpi) · 20 pages/min. (Letter v, 600 × 600 dpi) · 13 pages/min. (A4 v/Letter v, 1200 × 600 dpi) bizhub 162 · 16 pages/min. (A4 v/Letter v, 600 × 600 dpi) · 13 pages/min.

(A4 v/Letter v, 1200 × 600 dpi) Standard memory · 32 MB (for image processing) · 16 MB (for the file system and input buffer) Optional expanded memory unit (standard DIMM for the file system) For details, contact your service representative. · 600 × 600 dpi · 1200 × 600 dpi (Resolution enhance and smoothing) · IEEE 1284 parallel (Compatible, Nibble, ECP) · USB Revision 1.1 (except for Windows 98 and Windows NT 4.0) · Network (optional, when Network Interface Card NC-502 is installed) PCL6 8 bitmap fonts, 45 scalable fonts Windows Server 2003/Windows XP (SP2 or later)/Windows 2000 (SP4 or later)/Windows NT 4.



[You're reading an excerpt. Click here to read official KONICA](http://yourpdfguides.com/dref/586630)

[MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)

<http://yourpdfguides.com/dref/586630>

0 (SP6a or later)/Windows Me/Windows 98 Second Edition/Windows 98/Windows Terminal Server (Windows NT 4.0 Terminal Server Edition/Windows 2000 Server/Windows Server 2003) RAM Resolution Interfaces Printer language Resident fonts Supported operating systems IC-205 9-3 9 Specifications Point & print Domain Server: Windows Server 2003 Specifications Client: Windows XP, Windows 2000 Professional, Windows NT 4.0 Workstation, Windows 98 (SE), Windows Me Client: Windows 2000 Professional, Windows NT 4.0 Workstation, Windows 98 (SE), Windows Me Client: Windows NT 4.0 Workstation, Windows 98 (SE), Windows Me Client: Windows XP, Windows 2000 Professional, Windows NT 4.0 Workstation, Windows 98 (SE), Windows Me Client: Windows 2000 Professional, Windows NT 4.0 Workstation, Windows 98 (SE), Windows Me Client: Windows NT 4.0 Workstation, Windows 98 (SE), Windows Me Server: Windows 2000 Server Server: Windows NT 4.0 Server Workgroup Server: Windows XP Server: Windows 2000 Professional Server: Windows NT 4.0 Workstation *The print speed is measured under the following printing conditions. - Single-sided printing - Paper supplied from Tray 1 9-4 IC-205 .



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB 162 user guide](http://yourpdfguides.com/dref/586630)
<http://yourpdfguides.com/dref/586630>