



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KONICA MINOLTA DIMAGE Z10. You'll find the answers to all your questions on the KONICA MINOLTA DIMAGE Z10 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KONICA MINOLTA DIMAGE Z10
User guide KONICA MINOLTA DIMAGE Z10
Operating instructions KONICA MINOLTA DIMAGE Z10
Instructions for use KONICA MINOLTA DIMAGE Z10
Instruction manual KONICA MINOLTA DIMAGE Z10



DIMAGE Z10



E INSTRUCTION MANUAL



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

.....
.....
.....
.....

.....10 Getting up and running....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....12 Attaching the strap and lens cap...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

12 Inserting batteries

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....13 Battery condition indicator

.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

...14 Auto power save.

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..14 Connecting the optional AC adapter...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

15 Changing the memory card

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....16 Turning on the camera and displays

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....

...17 Setting the date and time .



[You're reading an excerpt. Click here to read official KONICA
MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....18 Setting the menu language ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...19 Basic recording ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

20 Handling the camera

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.20 Using the zoom lens.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...20 Recording images automatically..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..21 Basic recording operation...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.22 Automatic Digital Subject Program Selection.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
23 Focus lock

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

..24 Focus range.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....24 Focus signals..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..27 i+ button.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....28 Adjusting monitor brightness .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...28 Digital subject programs

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....29 Basic playback .

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.30 Single-frame playback and histogram display.....

.....

.....

.....

.....

.....

...30 6 TABLE OF CONTENTS Viewing and rotating images

.....

.....

.....

.....

.....

.....

.....

.....

...31 Deleting single images ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.31 i+ button.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
...32 Enlarged playback ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....33 Advanced recording ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
...34 Recording mode display ..

.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

.37 Manual (M) exposure mode ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..64 Frame rate ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....64 Movie file sizes .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

...64 Movie mode .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...65 A short guide to photography

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

66 Advanced playback

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.68 Playing back movies.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...68 Capturing a movie frame ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....69 Navigating the playback-mode menu ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

....70 Frame-selection screen

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.72 Delete

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...73 Format

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....74 Lock

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
..75 Copy and E-mail Copy ...
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....76 Slide Show....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..78 About DPOF ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.80 DPOF setup....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.80 Date print

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

81 Index print.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....81 Viewing images on a television ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
...82 Setup menu ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....83 Opening the setup menu

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

83 Navigating the setup menu.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....*.87 Language*.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.87 File number (#) memory

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.87 Folder name

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....88 Noise reduction.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....

.....88 Date and time setup

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....89 Date imprinting ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....89 Reset default ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

90 Audio signals

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...91 Focus signal

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....92 Shutter FX ...

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
...92 Video output .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
...92 Transfer mode ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
...92 Self-timer .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....92 8 TABLE OF CONTENTS Data-transfer mode ..

....93 System requirements.....

.....93 Connecting the camera to a computer

....94 Connecting to Windows 98 and 98SE.

.....
.....
.....
.....

.....
.....
....95 Automatic installation .

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..95 Manual installation

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....96 Memory card folder organization.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....98 Auto power save - data-transfer mode...

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.99 Disconnecting the camera

.....
.....
.....

.....
.....
.....

.....
.....
.....

.100 Windows 98 and 98 Second Edition....

.....
.....

.....
.....
.....

.....
.....
.....

....100 Windows Me, 2000 Professional, and XP

.....
.....
.....

.....
.....
.....

.....100 Mac OS ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....101 Changing the memory card

.....
.....
.....

.....
.....
.....

.....
.....
.....

.106 Appendix

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.110 Troubleshooting

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

...110 Care and storage ..

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
...112 Camera care ..
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..112 Storage.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

112 Cleaning
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....112 LCD monitor care....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....113 Batteries ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....113 Operating temperatures and conditions.....

.....
.....
.....

.....
.....
.....

..113 Memory cards ...

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....114 Before important events and journeys .

.....
.....
.....
.....

.....
.....

.....
.....
.....115 Copyright.

.....
.....
.....

.....
.....
.....
.....

....115 Questions and service

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....115 QuickTime system requirements ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....116 Technical specifications .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....118 9 NAMES OF PARTS * This camera is a sophisticated optical instrument. Care should be taken to keep these surfaces clean. Please read the care and storage instructions in the back of this manual (p. 112). Shutter-release button Exposure-mode dial (p. 21, 29, 36 - 40) AF window* Flash* (p.

26) Flash-mode button (p. 26) Card slot (p. 16) Lens* Self-timer lamp (p. 46) USB port/Video-out terminal (p. 82, 94, 104) Strap eyelet (p. 12) The battery-chamber door (p. 13) and tripod socket are located on the bottom of the body. 10 NAMES OF PARTS Diopter-adjustment dial (p. 17) Viewfinder* (p. 17) Macro button (p.

35) Zoom lever (p. 20) Controller LCD monitor* Access lamp Menu button DC terminal (p. 15) Quick View / Delete button (p. 30, 31) Information button (p. 28, 32) Main switch Mode switch 11 GETTING UP AND RUNNING ATTACHING THE STRAP AND LENS CAP Always keep the strap around your neck in the event that the camera is accidentally dropped.

An optional leather neck strap, NS-DG1000, is also available from your Konica Minolta dealer. Availability varies with region. Pass the end of the neck strap through the strap eyelet on the camera body (1). 1 2 Thread the strap through the inside of the buckle as shown (2). Repeat with the other end of the strap.

Using your thumb and index finger, pinch the outside tabs of the lens cap to remove or attach. When the camera is not in use, always replace the lens cap. 12 GETTING UP AND RUNNING INSERTING BATTERIES This digital camera uses four AA-size alkaline or Ni-MH batteries. Do not use other types of AA batteries. The camera should be off when replacing batteries. 3 To open the battery-chamber door, slide the lock to the open position (1). Slide the door to the front of the camera (2) to release the safety catch. Lift the door to open (3). 2 1 Insert the batteries as indicated on the diagram on the inside of the battery-chamber door. Confirm the positive and negative battery terminals are oriented correctly.

Close the battery-chamber door and slide it toward the back of the body (4) to engage the safety catch. Slide the batter-chamber lock to the close position (5).

4 5 13 BATTERY CONDITION INDICATOR This camera is equipped with an automatic battery-condition indicator. When the camera is on, the battery-condition indicator appears on the monitor. If the monitor is blank, the batteries may be exhausted or installed incorrectly. Full-battery indicator - the battery is fully charged. This indicator is displayed for three seconds on the monitor when the camera is turned on. Low-battery indicator - battery power is low. The monitor will turn off while the flash is charging to save power. Low-battery warning - battery power is very low.

The monitor indicator is red. The battery should be replaced as soon as possible. This warning automatically appears and remains on the monitor until the battery is changed. The monitor will turn off while the flash is charging to save power. If power falls below this level, the battery-exhausted message will be displayed just before the camera shuts down.

If the low-battery warning is displayed, movie recording cannot be used. AUTO POWER SAVE To conserve battery power, the camera turns off displays and unnecessary functions if an operation is not made within a minute. To restore power, press any button or key, or turn the exposure-mode dial to another position. The length of the auto-power-save period can be changed in section 1 of the setup menu (p. 86).

14 GETTING UP AND RUNNING CONNECTING THE OPTIONAL AC ADAPTER Always turn off the camera before changing between power supplies. The AC Adapter allows the camera to be powered from an electrical household outlet. The AC Adapter is recommended when the camera is interfaced with a computer or during periods of heavy use. AC Adapter model AC-1L is for use in North America and Japan, and AC-11 is for use in all other areas. Insert the mini plug of the AC adapter into the DC terminal (1). 1 Insert the AC adapter plug into an electrical outlet. 15 CHANGING THE MEMORY CARD An SD Memory Card or MultiMediaCard must be inserted for the camera to operate. If a card has not been inserted, a no-card warning is displayed on the monitor. For more about memory cards see page 114. Always turn off the camera and confirm the access lamp is not lit before removing a memory card; damage and data loss may result.

1 2 1. Insert the memory card all the way into the card slot and release; the card should catch in the slot. Insert the card so the face is toward the back of the camera.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

Always push the card in straight, never at an angle. Never force the card. If the card does not fit, check that it is oriented correctly. 2. To eject a memory card, press the card into the slot and release. The card can then be pulled out. Take care when removing the card as it becomes hot with use.

A memory card used in another camera may have to be formatted before being used. If the unable-to-use-card message appears, the card should be formatted with the camera. A memory card can be formatted in section 1 of the playback menu (p. 74). When a card is formatted, all the data on the card is permanently erased.

If the card-error message appears, press the central button of the controller to close the window; check the Konica Minolta web site for the latest compatibility information: North America: <http://www.konicaminolta.us/> Europe: <http://www.konicaminoltaeurope.com/> 16 GETTING UP AND RUNNING TURNING ON THE CAMERA AND DISPLAYS Press the main switch to turn the camera on.

Pressing the switch again turns the camera off. Around the main switch is the mode switch. This switch is used to change between the recording and playback modes as well as the selecting the between the monitor and viewfinder display. Recording mode (Viewfinder display) - the camera can record images and the monitor is viewed through the viewfinder. The viewfinder has a built-in diopter. While looking through the viewfinder, turn the diopter adjustment dial until the monitor image is sharp Recording mode (Monitor display) - the camera can record images and the monitor is viewed directly. Playback mode (Monitor display) - images can be played back and edited. The monitor is viewed directly. Camera notes To use the viewfinder in the playback mode, press and hold the flash mode button (1) and then press and hold the information (i+) button (2) until the monitor switches to the viewfinder position. 1 2 17 SETTING THE DATE AND TIME 1 After initially inserting a memory card and batteries, the camera's clock and calendar must be set.

When images are recorded, the image data is saved with the date and time of recording. If the clock and calendar have not been set, a message is displayed for a few seconds each time the camera is turned on. This message is also displayed if the clock and calendar are reset when the camera is stored without batteries for a long period. Use the left and right keys of the controller (1) to select "Yes." "No" cancels the operation. No Set date/time? Yes Press the center of the controller to open the date/time setup screen. Date/Time set 2004 . 01 . 01 00 : 00 MM / DD / YYYY :move :sel. :enter Use the left and right keys to select the item to be changed.

Use the up and down keys to adjust the item. Press the central button to set the clock and calendar. The date/time setup screen can be opened in section 2 of the setup menu. Date/Time setup screen 18 GETTING UP AND RUNNING SETTING THE MENU LANGUAGE 2 For customers in certain areas, the menu language may have to be set. Press the menu button (1) to open the menu; the appearance of the menu will depend on the position of the camera's controls. Navigating the menu is simple. The up/down and left/right keys of the controller (2) move the cursor and change settings on the menu. The central button of the controller selects menu options and sets adjustments. 1 Drive m Image Quality Auto D Digital Drive mode Image size Quality Auto DSP Digital zoom Single 2048x1536 Standard On Off Use the right key of the controller to highlight "SETUP" at the top of the menu. Press the central button of the controller to open the setup menu.

LCD brightness Power save Inst. Playback Lens acc. English Language Use the down key to highlight the language menu option, then press the right key. Press the central button of the controller to open the language screen. /JPN English Deutsch Français Español /CHN Use the four-way keys of the controller to highlight the new menu language. Press the central button of the controller to set the language. 19 BASIC RECORDING This section covers the basic operation of this camera. Thoroughly familiarize yourself with the operations in this section before moving on to the other sections in the manual. Turn on the camera. Set the mode switch to a recording position.

HANDLING THE CAMERA While using the viewfinder or LCD monitor, grip the camera firmly with your right hand while supporting the body with your left. Keep your elbows at your side and your feet shoulder-width apart to hold the camera steadily. Take care not to cover the lens with your fingers or the strap. USING THE ZOOM LENS Zoom scale The zoom lever controls the lens (1). Pressing the right (T) side of the lever will zoom in to the telephoto position of the lens. Pressing the left (W) side of the lever will zoom out to the wide-angle position. 1 After zooming, the zoom scale is displayed briefly. If the digital zoom (p. 53) is active, the yellow section of the scale indicates the digital zoom range. 20 BASIC RECORDING RECORDING IMAGES AUTOMATICALLY Turn the exposure-mode dial to the auto-recording position (1); all camera operations are now fully automatic.

The autofocus, exposure, and imaging systems will work together to bring beautiful results effortlessly. 1 While many of the camera's systems in this mode are automatic. The flash mode (p. 26) and drive mode (p. 45) can also be changed.

Image size and quality can be set on the auto-recording menu (p. 44, 51-52). Metering mode Camera sensitivity (ISO) Flash mode Focus area Focus control Drive mode Color mode White balance Multi-segment (fixed) Auto (fixed) Autoflash (can be changed*) Wide focus area (can be changed*) Autofocus - single-shot AF (fixed**) Single-frame advance (can be changed*) Natural Color (fixed) Auto (fixed) * Changes to the flash mode, focus area, or drive mode are reset when the exposure mode dial is turned to another position. ** When the sports action subject program is selected with Automatic Digital Subject Program Selection (p. 23), the camera continues to focus when the shutter-release button is held partway down (continuous AF).

Camera notes The camera uses the exposure system to control the brightness of the live monitor image. This is achieved by varying the CCD sensitivity and controlling the aperture. The aperture can sometimes be heard stopping down or opening up with changes in subject brightness. 21 BASIC RECORDING OPERATION The example uses auto recording. Except for movie recording, the operation for other exposure modes is the same. Automatic Digital Subject Program Selection is only available in the auto recording mode. Place the subject anywhere within the focus frame. Make sure the subject is within the focus range of the lens (p. 24). For very close subjects, use the macro function (p.

35). Press the shutter-release button partway down to lock the focus and exposure.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

An AF sensor (a) is displayed to indicate the subject. Automatic Digital Subject Selection will choose the appropriate exposure mode, see the facing page. The focus signal (b) on the monitor will confirm focus lock. If the focus signal is red, the camera was unable to locate the subject. Repeat the previous steps until the signal is white. The shutter speed (c) and aperture (d) appears and turns black to indicate the exposure is locked. Press the shutter-release button all the way down to take the picture. The access lamp lights indicating image data is being written to the memory card.

Never remove a memory card while data is being transferred. a c d b Camera notes The recorded image can be previewed by continuing to hold down the shutter-release button after the image is captured. The instant-playback function can also be used (p. 86). 22 BASIC RECORDING AUTOMATIC DIGITAL SUBJECT PROGRAM SELECTION Automatic Digital Program Selection chooses between program autoexposure and one of five digital subject programs. The digital subject programs optimize camera setting for various conditions and subjects. Automatic Digital Subject Program Selection is only available in auto recording and can be disabled in the auto-recording menu. For information on individual subject programs, see page 29. A row of gray indicators at the top on the monitor display will indicate Automatic Digital Subject Selection is active. Place the subject in the focus frames; the procedure is the same as the basic recording operation described on page 22.

Press the shutter-release button partway down; the AF system will locate the subject and the Automatic Digital Subject Selection function will choose a subject program. If no indicators are displayed, program autoexposure is active. Press the shutter-release button all the way down to take the picture. Hold the camera steadily when the sunset subject program is selected as exposures can be long. Program autoexposure (the Digital Subject Program indicators disappear) Portrait Sports action Landscape Sunset 23 FOCUS LOCK Focus lock prevents the AF system from focusing. This can be used with off-center subjects or when a special focusing situation prevents the camera from focusing (p. 25). Place the subject within the focus frame. Press and hold the shutter-release button partway down. · The focus signal indicates the focus is locked.

The shutter speed and aperture value change from white to black indicating the exposure is locked. · When the focus is set, an AF sensor is displayed on the live image to indicate the point of focus. Without lifting your finger from the shutter-release button, recompose the subject within the image area. Press the shutter-release button all the way down to take the picture. FOCUS RANGE All distances are measured from the CCD. See page 35 for the marco focus range. Wide-angle position 0.57m - (1.9ft -) Telephoto position 1.57m - (5.

1ft -) Approximate location of CCD plane 24 BASIC RECORDING FOCUS SIGNALS The focus signal in the lower right corner of the LCD monitor indicates the focus status. The shutter can be released even if the camera cannot focus on the subject. Focus locked. Focus confirmed (P, A, S, and M continuous AF focus mode and sports action digital subject program). Exposure continuously adjusts.

Cannot focus. The subject is too close or a special situation is preventing the AF system from focusing. When using the sports action digital subject program, the camera continually focuses when the shutter-release button is pressed partway down; the focus frames turn red. Keep the subject within the red focus frames. Focus lock cannot be used.

If the AF system cannot focus, focus lock can be used with object at the same distance as the main subject or the camera can be focused manually in the Digital Subject Program or program (P) exposure modes (p. 54). SPECIAL FOCUSING SITUATIONS The camera may not be able to focus in certain situations. If the autofocus system cannot focus on a subject, the focus signal will turn red. In this situation, focus-lock on an object at the same distance as the main subject and then recompose the image on the monitor to take the picture. The subject in the focus frame is low in contrast. Two subjects at different distances overlap in the focus frame. The subject is near a very bright object or area. The subject is too dark. 25 FLASH MODES To change the flash mode, simply press the flash mode button (1) until the appropriate mode is indicated.

Autoflash - the flash fires automatically in lowlight and backlit conditions. Red-eye reduction - multiple flashes are used before the main flash burst to reduce red-eye; an effect caused by light reflected from the retina. Use in low-light conditions when taking photographs of people or animals. The preflashes contract the pupils of the subject's eyes. Fill-flash - the flash fires with each exposure regardless of the amount of ambient light. Fillflash can be used to reduce harsh shadows caused by strong direct light or sunshine. Slow sync. - flash and ambient light exposures are balanced; red-eye reduction is used. Use slow sync. when in dark locations to reveal background details.

Ask your subject not to move after the flash burst; the shutter may still be open for the background exposure. Because exposures can be long, the use of a tripod is recommended. Flash cancel - the flash cannot fire. 1 Autoflash Autoflash with red-eye reduction Fill-flash Slow sync. with red-eye reduction Flash cancel Fill-flash 26 BASIC RECORDING FLASH RANGE - AUTO-RECORDING MODE The camera controls the flash output automatically.

For well-exposed images, the subject must be within the flash range. Distance is given from the CCD plane. @@Wide-angle position 0.57 - 5.3m (1.87 - 17.39 ft) Telephoto position 1.57 - 5.3m (5.15 - 17.39 ft) Approximate location of CCD plane If the flash output was sufficient to illuminate the subject, the OK indicator briefly replaces the flash-mode indicator after the exposure. The access lamp turns red and blinks slowly while the flash is charging; if battery power is low, the monitor turns off during this period. Camera Notes If using continuous AF or the sports action subject program with flash, the monitor image reflects the exposure required for the flash when the shutter-release button is pressed partway down. This may cause the monitor image to appear dark in low-light situations. CAMERA-SHAKE WARNING If the shutter speed falls below the point where the camera can be safely hand held, the camera-shake warning appears on the LCD monitor.

Camera shake is slight blurring caused by subtle hand motion and is more pronounced at the telephoto position of the lens than at the wide-angle. Although the warning appears, the shutter can still be released. If the warning appears, place the camera on a tripod, use the built-in flash, or zoom the lens towards the wide-angle position until the warning disappears. Camera-shake warning 27 i+ BUTTON Pressing the information (i+) button changes the monitor display.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

The display cycles among the standard display, real-time histogram, and live image only. Standard display Real-time histogram Live image only The real-time histogram shows the approximate luminance distribution of the live image. This histogram cannot show the affect of flash illumination. The histogram of a recorded image may not show the same distribution as the real-time histogram. Information button ADJUSTING MONITOR BRIGHTNESS The monitor image can be made lighter or darker. The brightness level can be set individually for viewfinder and direct viewing.

Turn the mode switch to the appropriate position. Press and hold the information (i+) button to open the LCD brightness screen. Use the left/right keys of the controller to adjust the brightness; the monitor image changes accordingly. Press the center of the controller or the menu button to set the brightness level.

Set LCD brightness Low High :adjust 28 BASIC RECORDING :enter DIGITAL SUBJECT PROGRAMS Digital subject programs optimize the camera's exposure, white-balance, and image-processing systems for specific conditions and subjects.

Simply turn the exposure mode dial to select the appropriate subject program; the active subject program is displayed in the bottom left corner of the monitor Subject program indicator Portrait - optimized to reproduce warm, soft skin tones and a slight defocusing of the background. Most portraits look best at a telephoto setting; the longer focal length does not exaggerate facial features and the shallower depth of field softens the background. Use the built-in flash with strong direct sunlight or backlight to reduce harsh shadows. Sports action - used to capture action by maximizing shutter speeds. The AF system continuously focuses; see page 21.

When using flash, the subject must be within the flash range (p. 27). A monopod is more flexible and compact than a tripod when shooting events. Landscape - optimized to produce sharp, colorful landscapes. Used with bright outdoor scenery. Sunset - optimized to reproduce rich, warm sunsets. When the sun is above the horizon, do not point the camera toward the sun for prolonged periods of time. The intensity of the sun could damage the CCD. Between exposures, turn off the camera or cover the lens. Night portrait - for deep, subtle night scenes.

The use of a tripod is recommended. When used with flash, the subject and background exposures are balanced. The flash can only be used with close subjects such as with a portrait of a person. When using the flash, ask your subjects not to move after the burst; the shutter will still be open for the background exposure. 29 BASIC PLAYBACK Images can be viewed in the Quick View or playback modes. This section covers the basic operations in both modes. The playback mode has additional functions, see page 68. To view images from the playback mode, turn the mode switch to the playback position (1). To view images from the recording mode, press the Quick View / delete button (2). 1 2 Mode indicator SINGLE-FRAME PLAYBACK AND HISTOGRAM DISPLAY Image size (p.

51) Image quality (p. 51) Aperture value Shutter speed Time of capture Date of capture Degree of exposure compensation (p. 41) White-balance setting (p. 55) Sensitivity setting (p. 59) Folder name Folder number - image file number Histogram Lock indicator (p.

75) DPOF indicator (p. 80) Frame number/ total number of images To display the histogram display, press the up key of the controller. Press the down key to return to single-frame playback. 30 BASIC PLAYBACK The histogram shows the luminance distribution of the image from black (left) to white (right). The 256 vertical lines indicates the relative proportion of that light value in the image.

The histogram can be used to evaluate exposure, but displays no color information. VIEWING AND ROTATING IMAGES In Quick View or the playback mode, use the left/right keys of the controller to scroll through the images. To rotate a vertical image, press the down key to cycle through the three positions: 90° counterclockwise, 90° clockwise, and horizontal. To return to the recording mode from Quick View, press the menu button or shutter-release button partway down. Quick View / Delete button DELETING SINGLE IMAGES The displayed image can be deleted. Once deleted, an image cannot be recovered. To delete the displayed image, press the Quick View / delete button. A confirmation screen will appear. Use the left/right keys to highlight "Yes," "No" will cancel the operation. Delete this frame? Yes No Press the central button of the controller to delete the image.

31 i+ BUTTON The information (i+) button controls the display format. Each time the button is pressed, the display cycles through to the next format: full display, image only, index playback. Full display Image only Index playback Information button In index playback, the four-way keys of the controller will move the yellow border. When the image is highlighted with the border, the date of recording, the lock and printing status, and the frame number of the image are displayed at the bottom of the screen. The highlighted image can be deleted using the Quick View / delete button (p. 31), or a movie clip can be played by pressing the central button of the controller. When the information (i+) button is pressed again, the highlighted image will be displayed in the single-frame playback mode. 32 BASIC PLAYBACK ENLARGED PLAYBACK In single-frame playback in Quick View or the playback mode, a still image can be enlarged up to 6X in 0.2 increments for closer examination. With the image to be magnified displayed, press the right (T) side of the zoom lever to activate the enlarged playback mode.

The degree of magnification is displayed on the LCD monitor. Press the right (T) side of the zoom lever to increase the image magnification. Press the left (W) side of the lever to decrease the magnification. Use the four-way keys of the controller to scroll the image. When scrolling, the arrows in the display will disappear when the edge of the image has been reached.

The locator in the top right corner of the monitor indicates the area of the image being displayed. The information (i+) button switches between showing the full display and the image only. To exit the enlarged playback mode, press the menu button or the central button of the controller. 33 ADVANCED

RECORDING This section cover the advanced recording features of this camera. Read the basic recording section before moving on to this section. RECORDING MODE DISPLAY 1. Wide-angle converter indicator (p. 87) 2. Mode indicator 3. Flash-mode indicator (p. 26) 4. Flash-compensation display (p. 57) 5. Sharpness display (p. 61) 6.

Contrast display (p. 60) 7. White-balance indicator (p. 55) 8. Camera-sensitivity (ISO) display (p. 59) 9. Exposure-compensation display (p. 41) 10. Camera-shake warning (p. 27) 11.

Exposure-mode indicator (p. 36 - 38) 12. Metering-mode indicator (p.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

58) 13. Shutter-speed display 14.

Aperture display 15. Macro-mode indicator (p. 35) 16. Focus-mode indicator (p. 54) 17.

Date-imprinting indicator (p. 89) 18. Frame counter (p. 52) 19. Drive-mode indicator (p. 45) 20. Manual-focus scale (p. 54) 21. Battery-condition indicator (p. 14) 22.

Image-quality indicator (p. 51) 23. Image-size display (p. 51) 24. Digital-zoom display (p. 53) 25. Color-mode indicator (p. 60) A. Focus frame B. Spot metering area (p.

58) 34 **ADVANCED RECORDING MACRO** Macro mode allows the camera to focus as close as 1 cm (0.4 in.) from the front of the lens or 8 cm (3.1 in.) from the CCD.

The focus range changes with the zoom's focal length, see below. Press the macro button (1) to select the macro mode. Press the macro button again to cancel the macro mode. The following chart lists the macro ranges. All distances are measured from the CCD.

Wide-angle position: 8 - 107cm (3.1 - 42.1 in.) 26.5 - 30.8mm: 107 - 237cm (42.1 - 93.3 in.) Telephoto position: 67 - 207cm (26.3 - 81.

5 in.) Macro indicator 1 Approximate location of CCD plane 35 **PROGRAM (P) EXPOSURE MODE** The program exposure mode controls both the shutter speed and aperture to ensure correct exposures. This exposure mode allows photographers to shoot without worry about exposure settings. The shutter speed and aperture values of the exposure are displayed on the monitor when the shutter-release button is pressed partway down. If shutter speed and aperture displays turn red, the scene is beyond the exposure control range of the camera. **APERTURE PRIORITY (A) EXPOSURE MODE** The photographer selects the aperture and the camera sets the appropriate shutter speed to ensure the correct exposure. When aperture priority is selected, the aperture value on the monitor turns blue and a double arrow indicator appears next to it. The flash mode can be set to fill-flash, fill-flash with red-eye reduction, or slow sync. with red-eye reduction (p. 26).

1 Use the up/down keys of the controller (1) to set the aperture. The aperture has a three stop range. Press the shutter-release button partway down to activate the exposure system; the corresponding shutter speed will be displayed on the monitor. As the lens is zoomed, the maximum aperture will automatically shift. If the aperture value is beyond the shutter-speed range, the shutter-speed display will turn red on the monitor.

36 **ADVANCED RECORDING SHUTTER PRIORITY (S) EXPOSURE MODE** The photographer selects the shutter speed and the camera sets the appropriate aperture to ensure correct exposure. When shutter priority is selected, the shutter speed on the monitor turns blue and a double arrow indicator appears next to it. The shutter speed can be set between 1/2000 and 15 seconds. If the shutter speed is beyond the aperture range, the aperture display will turn red. The flash mode can be set to fill-flash, fillflash with red-eye reduction, or slow sync.

with red-eye reduction (p. 26). 1 **Shooting Tips** Use the up/down keys of the controller (1) to set the shutter speed. Press the shutter-release button partway down to activate the exposure system; the corresponding aperture will be displayed on the monitor. The shutter speed and aperture control more than the exposure. The shutter speed determines how sharp a moving subject is. The aperture controls the depth of field; the area in front of the camera that appears sharp. For more on exposure controls, see the Short Guide to Photography on page 66. **Camera notes** When the shutter speed is one second or longer, the shutter sound indicates both the beginning and end of the exposure. 37 **MANUAL (M) EXPOSURE MODE** Manual exposure mode allows individual selection of shutter speeds and apertures.

This mode overrides the exposure system giving the photographer total control over the final exposure. Use the up/down keys of the controller to change the shutter speed. Use the left/right keys of the controller to change the aperture. The changes made to the exposure will be visible in the live image on the monitor. The monitor shutter-speed and aperture display will turn red if the image is significantly underexposed or overexposed. If the monitor is black, increase the exposure until the image is visible; decrease the exposure if the monitor is white. When the shutter-release button is pressed partway down, the brightness of the live image may change while the camera focuses. In manual exposure mode, the auto camera-sensitivity setting will fix the ISO value at 100. The camera sensitivity can be changed in section 3 of the recording menu (p. 59).

The flash mode can be set to fill-flash, fill-flash with red-eye reduction, or slow sync. with red-eye reduction (p. 26), but the live image will not reflect the flash exposure. **Camera notes** When the shutter speed is one second or longer, the shutter sound indicates both the beginning and end of the exposure. 38

ADVANCED RECORDING TIME EXPOSURES Time photographs can be taken in the manual-exposure mode.

Exposures up to thirty seconds can be made. The use of a tripod is recommended. The camera's exposure system cannot be used to calculate time exposures. A separate light meter can be used to determine the exposure. 1 Use the down key of the controller to decrease the shutter speed below 15 seconds until "T" is displayed.

Set the aperture using the left/right keys of the controller. To take the picture, press the shutter-release button (1) once to begin the exposure. Press it again to end the exposure. A message is displayed during the exposure. Noise-reduction processing is applied to the image after the exposure. Noise reduction can be canceled in section 2 of the setup menu (p. 88). 39 **MOVIE RECORDING** This camera records digital video without audio. Total recording time varies with the image size and frame rate, see page 64. Exposure compensation and the macro mode can be used.

Other changes can be made with the movie recording menu (p. 44). **Image size Frame rate** Before recording, the frame counter shows the maximum time in seconds that can be recorded on the next movie clip. **Recording time Frame** the picture as described in the basic recording operation section (p. 22). Press the shutter-release button partway down to set the focus and exposure. Press the shutter-release button all the way down and release to start recording. The camera continues to focus during recording. The camera will continue to record until the recording time is used or the shutter-release button is pressed again. **Recording indicator Remaining time** 40 **ADVANCED RECORDING EXPOSURE COMPENSATION** The camera exposure can be adjusted to make the final picture lighter or darker by as much as $\pm 2\text{Ev}$ in 1/3 increments.

Exposure compensation can only be used with Digital Subject Programs, the P, A, and S exposure modes, and movie recording mode. With movie recording mode, exposure compensation is reset when the camera is turned off. In Digital Subject Programs, P, A, and S exposure modes, exposure compensation remains in effect until reset.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

To adjust the exposure, press the left or right controller key; the exposure-compensation screen appears. Use the left/right keys of the controller to adjust the exposure-compensation value.

Changes to exposure are visible in the live image. Press the shutter-release button partway down or press the central button of the controller to set the adjustment. When adjusting the exposure, the amount of compensation is shown in EV (p. 50). After the setting is made, the shutter-speed and aperture displays indicate the actual exposure.

Because the exposure can be adjusted in fine steps, the shutter speed or aperture value displayed may not change. When set to any value other than zero, the exposure-compensation indicator remains on the monitor as a warning. Camera notes Exposure compensation is used when the camera's exposure meter is deceived by high-key or low-key scenes. In the example, the dark water caused the camera to overexpose the image making it too bright and washed-out. By compensating the exposure, detail is brought out in the leaves, and the stones and water appear richer. 2.0Ev 1.0Ev Camera exposure 41 FOCUS AREA SELECTION Individual focus areas can be selected when recording still images. With auto recording and Digital Subject Programs, focus area selection is reset when the exposure-mode dial is moved to another position or the camera is turned off. In P, A, S, and M exposure modes, the selected focus area remains active until reset.

Press and hold the central button of the controller until the three spot focus areas are displayed. Use the left/right keys of the controller to highlight the desired autofocus area; the active area is blue. Press the shutter-release button partway down or press the central button of the controller to select the area; the other two areas disappear. Only when a focus area has been selected, can the controller be used for other camera operations. Take the picture as described in the basic recording section; press the shutter-release button partway down to lock focus and exposure. Press the shutter-release button all the way down to take the picture. Once a focus area is selected, it will remain active even after the picture has been taken. Press and hold the central button of the controller to return to the standard focus frames. 42 ADVANCED RECORDING NAVIGATING THE RECORDING MENUS The recording menu displayed varies with the position of the exposure-mode dial. There are four menus depending on if auto recording, movie recording, Digital Subject Programs, or the P,A,S, and M exposure modes are selected.

See next page for details. Pressing the menu button (1) turns the menu on and off. The four-way keys of the controller (2) move the cursor in the menu.

Pressing the central button of the controller enters a setting. Activate the menu with the menu button.

On the P, A, S, and M menu, use the left/right keys of the controller to highlight the appropriate menu tab; the menu changes as the tabs are highlighted. Use the up/down keys to scroll through the menu options. Highlight the option whose setting needs to be changed. With the menu option highlighted, press the right controller key; the settings are displayed with the current setting highlighted. To return to the menu options, press the left key.

Use the up/down keys to highlight the new setting. Press the central button of the controller to select the highlighted setting; some options open a selection screen. 2 1 Once a setting has been selected, the cursor will return to the menu options and the new setting will be displayed. To return to the recording mode, press the menu button. 43 Drive mode Image size Quality Auto DSP Digital zoom Single 2048x1536 Standard On Off Drive mode Image size Quality Focus

mode Digital zoom Single 2048x1536 Standard Autofocus Off Focus mode Color mode Image size Frame rate White balance Movie mode Cont. AF NaturalColor 320x240 15fps Auto STD. movie Auto-recording menu Digital Subject Program menu Movie menu Drive mode Image size Quality White balance Key func. Single 2048x1536 Standard Auto Flash mode Focus mode Full-time AF Flash mode Flash comp. Metering mode Single AF On Autoflash 0 MultiSegment Sensitivity Digital zoom Color mode Sharpness Contrast Auto Off NaturalColor Normal Normal P, A, S, and M exposure-mode menu Index to menu functions Auto DSP, 53 Color mode, 60 Contrast, 60 Digital zoom, 53 Drive mode, 45 Flash compensation, 57 Flash mode, 57, 26 44 ADVANCED RECORDING Focus mode, 54 Frame rate, 64 Full-time AF, 57 Image size, 51 Image size (movie), 64 Key function, 62 Metering mode, 58 Movie mode, 65 Quality, 51 Sensitivity, 59 Sharpness, 61 White balance, 55 DRIVE MODES The drive modes control the rate and method images are captured. The drive mode is set on all menus except the movie menu.

In auto recording mode, the drive mode is reset to single-frame advance when the exposure-mode dial is moved to another position or the camera is turned off. In Digital Subject Programs and P, A, S, and M exposure modes, the drive mode remains in effect until changed. Refer to the following sections for descriptions of the drive modes. Single-frame advance - to take a single image each time the shutter-release button is pressed (p. 22). Self-timer - to delay the release of the shutter. Used for self-portraits. Continuous advance - to take multiple images when the shutter-release button is pressed and held. Progressive Capture - to continuously record when the shutter-release button is pressed and held. Releasing the button saves the last six images.

Bracketing - to take a series of three images with differing exposures. 45 SELF-TIMER Used for self-portraits, the self-timer will delay the release of the shutter for approximately ten seconds or two seconds after the shutter-release button is pressed. The self-timer is set in section 1 of the recording menus (p.

44). The length of the self-timer delay is set in section 4 of the setup menu (p.

92). 1 With the camera on a tripod, compose the picture so the subject is within the focus frames. Press the shutter-release button partway down to lock the exposure and focus (1). Press the shutter-release button all the way down to begin the countdown (2). Because focus and exposure are determined when the shutter-release button is pressed, do not stand in front of the camera when taking a self-timer image.

Always confirm the focus with the focus signals before beginning the countdown (p. 25). 2 3 The self-timer is counted down on the monitor. During the countdown, the self-timer lamp on the front of the camera (3) will start to blink and is accompanied by an audio signal. A few seconds before the exposure, the self-timer lamp will blink rapidly. The lamp will glow steadily just before the shutter fires. To stop the countdown, press the right (T) side or the left (W) side of the zoom lever. When using a 10-second delay, the self-timer drive mode is reset to single-frame advance after the exposure.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)

<http://yourpdfguides.com/dref/2713146>

The audio signal can be turned off in section 3 of the setup menu (p. 91).

Shooting tips The self-timer can be used to minimize camera shake with long exposures. When using the camera on a tripod, photographs of static subjects (landscapes, still-lives, or close-up photographs) can be made with the self-timer. Because no contact is made with the camera during exposure, there is no risk of camera shake caused by the operator. 46 **ADVANCED RECORDING CONTINUOUS-ADVANCE MODE** The continuous-advance drive mode allow a series of images to be captured while holding down the shutter-release button. The number of images that can be captured at one time and the rate of capture depend on the image-size and image-quality settings. The maximum rate of capture is approximately 1.5 fps. This drive mode is set in section 1 of the recording menu. Compose the picture as described in the basic recording operation section (p. 22).

Press the shutter-release button partway down (1) to lock the focus exposure for the series. Press and hold the shutter-release button all the way down (2) to begin taking pictures; focus is locked with the first frame. When the shutter-release button is pressed and held, the camera will begin recording images until the maximum number has been taken or the shutter button is released. If the continuous AF focus mode (p. 54) is selected, the focus for the series is not locked.

The AF system focuses between each frame. The exposure for the series is locked when the shutter-release button is pressed partway down. The use of the built-in flash, the continuous-AF focus mode, or date imprinting (p. 89) reduces the rate of capture. The maximum number of images that can be captured with different image quality and size is as follows: 2048 X 1536 Fine Standard Economy 5 10 19 1600 X 1200 8 16 30 1280 X 960 13 24 42 640 X 480 42 67 94 47 Drive mode Image size Quality White balance Key func.

Single Self-timer Continuous Progressive Bracketing 1 2 **PROGRESSIVE-CAPTURE MODE** The Progressive-Capture drive mode continuously records images while holding down the shutter-release button. When the shutter button is released, the last six images stored in the camera's buffer memory are recorded. This drive mode is set in section 1 of the recording menu. When the red lowbattery warning is displayed, these drive modes cannot be used.

Compose the picture as described in the basic recording operation section (p. 22). Press the shutter-release button partway down (1) to lock the focus exposure for the series. Press and hold the shutter-release button all the way down (2) to begin taking pictures; focus is locked with the first frame. When the shutter-release button is pressed and held, the camera will begin recording. Release the shutter (3) to save the images in the camera memory.

The Progressive Capture records the last six images saved in the camera's buffer memory. When a series is captured, a thumbnail of each image is shown in an index display while being saved. If the continuous AF focus mode (p. 54) is selected, the focus for the series is not locked. The AF system focuses between each frame. The exposure for the series is locked when the shutter-release button is pressed partway down. The maximum rate of capture is approximately 1.3 fps. The use of the continuous-AF focus mode reduces the rate of capture. The built-in flash and date imprinting (p.

89) cannot be used. 48 **ADVANCED RECORDING Drive mode Image size Quality White balance Key func. Single Self-timer Continuous Progressive Bracketing 1 2 3 BRACKETING** This mode makes a three-image bracket of a scene. Bracketing is a method of taking a series of images of a static subject in which each image has a slight variation in exposure. The bracketing mode is set in section 1 of the recording menus.

Immediately after selecting the bracketing option on the menu, a selection screen is displayed to select the bracketing increment. Press the left/right keys of the controller to select the bracketing increment. Press the central button of the controller to set the value. To change the increment, select the bracketing drive mode again with the menu. :select :enter Drive mode Image size Quality White balance Key func.

Single Self-timer Continuous Progressive Bracketing Compose the picture as described in the basic recording operation section (p. 22). Press the shutter-release button partway down (1) to lock the focus exposure for the series. Press and hold the shutter-release button all the way down (2) to make the bracket series; three consecutive images will be captured. Focus is locked with the first frame. If the continuous AF focus mode (p. 54) is selected, the focus for the series is not locked. The AF system focuses between each frame. The exposure for the series is locked when the shutter-release button is pressed partway down. 1 2 49 Number of frames in bracketing series Frame counter The remaining number of frames in the bracket series is displayed on the monitor next to the bracketing indicator.

If the memory is filled or the shutter button is released before the series has completed, the camera will reset and the entire bracket must be made again. If the red low-battery indicator appears, the bracketing drive mode is disabled. The flash cannot be used with the bracketing drive mode. The order of the bracket series is normal exposure, underexposure, and overexposure. The exposure bracket can be made in 0.3, 0.5, or 1.0 Ev increments. The larger the number, the greater the difference in exposure between the images in the bracketed series. Normal Under Over 0.

3 Ev bracket 0.5 Ev bracket 1.0 Ev bracket When using exposure compensation (p. 41), the bracketing series will be made in relation to the compensated exposure. Under extreme conditions, one of the bracketed exposures may be inaccurate because it is outside the exposure control range of the camera.

WHAT IS AN EV? Ev stands for exposure value. A change of one Ev adjusts the exposure calculated by the camera by a factor of two. 50 **ADVANCED RECORDING +2.0 Ev +1.0 Ev ±0.**

0 Ev 1.0 Ev 2.0 Ev 4X as much light 2X as much light Calculated exposure 1/2 as much light 1/4 as much light **IMAGE SIZE AND IMAGE QUALITY** Changing image size affects the number of pixels in each image. The greater the image size, the larger the file size. Choose image size based on the final use of the image - smaller images will be more suitable for web sites whereas larger sizes will produce higher quality prints. LCD monitor Number of pixels (hor. X vert.) 2048 1600 1280 640 2048 X 1536 1600 X 1200 1280 X 960 640 X 480 **FINE STD. ECON.** Fine - high-quality JPEG image.

Standard - the default setting. (JPEG) Economy - the smallest file sizes. (JPEG) Image quality controls the rate of compression, but has no effect on the number of pixels in the image. The higher the image quality, the lower the rate of compression and the larger the file sizes. If economical use of the memory card is important, use the economy mode.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>

Standard image quality is sufficient for normal usage. The fine mode will produce the highest quality image and the largest image files. Image size and quality must be set before the picture is taken. Changes are displayed on the LCD monitor. Changes made on one menu affects all exposure modes except movie.

Image size and quality must be reset manually. See navigating the recording mode menu section on page 43. If image size or quality are changed, the frame counter will display the approximate number of images that can be recorded at that setting on the installed memory card. One memory card can contain images with differing sizes and qualities. The number of images that can be stored on a memory card is determined by the size of the card and the file size of the images.

The actual file size is determined by the scene; some subjects can be compressed further than others. See the chart on the following page. 51 Approximate file sizes. 2048 X 1536 1600 X 1200 1280 X 960 640 X 480 Fine 1.3MB 770KB 550KB 170KB Standard 830KB 440KB 300KB 120KB Economy 440KB 290KB 210KB 100KB Approximate number of images that can be stored on a 16MB memory card.

Fine 9 14 22 69 Standard 17 27 39 100 Economy 32 47 69 150 Camera Notes The frame counter indicates the approximate number of images that can be stored on the memory card at the camera's image quality and size settings. If the settings are changed, the frame counter adjusts accordingly. Because the counter uses approximate file sizes, the actual image taken may not change the counter or may decrease it by more than one. When the frame counter displays zero, it indicates no more images at the image size and quality settings can be captured. Changing those settings may allow more images to be saved to the card. 52 ADVANCED RECORDING AUTO DSP Automatic Digital Subject Program Selection can be temporarily disabled in the auto-recording menu. When disabled, the program exposure mode is active. If the camera is turned off, Automatic Digital Subject Program Selection is activated. Drive mode Image size Quality Auto DSP Digital zoom Single 2048x1536 Standard On Off DIGITAL ZOOM The digital zoom is activated in the auto-recording, Digital Subject Program, and section 3 of the P, A, S, and M exposure-mode menus (p. 44).

The digital zoom extends the power of the telephoto position of the optical zoom by up to 4X in 0.1X increments. The transition between the optical zoom and digital zoom is seamless. When the digital zoom is active, the image magnification is displayed on the monitor and the focus frames change to a single focus area. Because of the degree of magnification, the use of a tripod is recommended. Zoom scale Magnification The digital zoom is operated by the zoom lever (1). Press the right (T) side of the lever to zoom in to the telephoto position of the lens. When the digital zoom activates, the image magnification will be displayed on the monitor. Press the left (W) side of the lever to zoom out. After zooming, the zoom scale is displayed briefly.

The yellow section indicates the digital zoom range. Digital-zoom images are interpolated to the set image size. Some loss of quality may be evident. 53 1 FOCUS MODES This camera has autofocus and manual focus control. The focus mode is selected separately in the Digital Subject Program, movie, and P, A, S, and M exposure-mode menus.

The selected focus mode is not reset when the camera is turned off With the P, A, S, or M exposure modes or movie recording, the autofocus mode can be specified between single-shot AF (AF-S) and continuous AF (AF-C) in section 2 of the menu (p. 44). Single-shot AF allows the focus to be locked before recording the image, see the basic recording section. Continuous AF continually focuses the camera. When capturing still images, the camera continues to focus when the shutter-release button is held partway down.

In movie recording, focus is locked when the shutter-release button is partway down, but it is continually adjusted during recording. When focusing manually, a scale shows the approximate subject distance. The scale changes depending on the focusing range. Use the up/down controller keys to focus; the monitor image is automatically magnified by a maximum of 2.5X depending on the digital zoom setting. The live image returns to normal after two seconds, when zooming, or when the shutter-release button is pressed partway down. When using the shutter-priority, aperture-priority, or manual exposure modes (p. 36 - 38) with manual focus, press the central button of the controller to switch between using the up/down keys to focus or to adjust the exposure. The active function is indicated in blue. 54 ADVANCED RECORDING WHITE BALANCE White balance is the camera's ability to make different types of lighting appear neutral.

The effect is similar to selecting daylight or tungsten film, or using color compensating filters in conventional photography. An indicator will be displayed on the monitor if a setting other than auto white-balance is chosen. White balance is set independently in section 1 of the movie, and P, A, S, and M exposure-mode menus (p. 44). Automatic White Balance The automatic white balance compensates for the color temperature of a scene. In most cases, the auto setting will balance the ambient light and create beautiful images, even under mixed-lighting conditions. When the built-in flash is used, the white balance is set for the color temperature of the flash. Preset White Balance Preset white-balance settings must be set before the image is taken. Once set, the effect is immediately visible on the LCD monitor. Immediately after selecting the preset whitebalance option on the menu, a selection screen is displayed.

Press the left/right keys of the controller to select the preset white balance. Press the central button of the controller to apply it. The following preset options are available: Daylight - for outdoor and sunlit subjects. Cloudy - for overcast outdoor scenes. Tungsten - for incandescent lighting; household light bulbs. :select :enter Drive mode Image size Quality White balance Key func. Cust.set CustRecall Auto Preset Fluorescent - for fluorescent lighting; office ceiling lights. Flash - for use with the built-in flash. 55 Custom White Balance Custom white-balance allows the camera to be calibrated to a specific lighting condition.

The setting can be used repeatedly until reset. Custom white balance is especially useful with mixed-lighting or when critical control over color is needed. The object used to make a calibration must be neutral. A blank piece of white paper is an ideal surface and can easily be carried in a camera bag. To calibrate the camera, select custom setup (Cust.set) from the white balance option in section 1 of the movie, and P, A, S, and M exposure-mode menus (p. 44); the custom white-balance calibration screen opens. Fill the image area with a white object; the object does not need to be in focus. Press the central button of the controller to make the calibration or press the menu button to cancel the routine.



[You're reading an excerpt. Click here to read official KONICA MINOLTA DIMAGE Z10 user guide](http://yourpdfguides.com/dref/2713146)
<http://yourpdfguides.com/dref/2713146>