



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KONICA MINOLTA FS-501. You'll find the answers to all your questions on the KONICA MINOLTA FS-501 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KONICA MINOLTA FS-501**  
**User guide KONICA MINOLTA FS-501**  
**Operating instructions KONICA MINOLTA FS-501**  
**Instructions for use KONICA MINOLTA FS-501**  
**Instruction manual KONICA MINOLTA FS-501**

---

## INSTALLATION MANUAL

# FS-501

---

## Finisher

---

### for Product Code 4036

---

**NOTES**

- Before installing, be sure to unplug the power cord of the machine.
  - Keep all packing materials out of the reach of children.
- 

4684-7761-01

Printed in Japan

---



[You're reading an excerpt. Click here to read official KONICA MINOLTA FS-501 user guide](http://yourpdfguides.com/dref/594187)  
<http://yourpdfguides.com/dref/594187>

**Manual abstract:**

· Keep all packing materials out of the reach of children. 4684-7761-01 Printed in Japan FS-501 I Outline of Installation Procedures for 4036 System When installing the machine and associated options as a system, follow the order shown on the left. DK-501 NOTE For the detailed installation procedures for each option, follow the instructions given in the corresponding Installation Manual and perform the procedures correctly. PC-101 PC-201 PC-401 Dehumidifier Heater 1C Copier/Printer Machine Electron System Options Electron System Options AD-501 EM-301 FS-501 FS-601 HD-501 JS-601 PK-501/PK-4/ PK131 EK-501 VI-501 DF-601 OC-501 DT-105 D-103 4684U057AB WT-501 I FS-501 I Before Installing the Finisher In order to adjust the height of the machine to the height of the finisher, the Paper Feed Cabinet PC-101, or PC-201, or PC-401, or Desk must be installed. @@Check that the following accessories are available in the box. @@@@Remove all tape and packing brackets. Tape NOTES · Make sure that the installation site is flat and level. · After the Finisher has been set up, avoid moving it unless it is absolutely necessary. When the Finisher needs to be moved, perform the steps by referring to "Removing the Rail" on p. 7.

After the Finisher has been moved, perform the steps given in "Installing the Horizontal Transport Unit" on p. 5 and step 5, 6 on p. 4. Packing bracket C4683U006AB 4684U074AA NOTE Do not remove these parts. C4683U008AA Packing bracket 4643U003AA C4683U005AA 3 FS-501 I Installing the Accessories I.

Peel off the seal covering the area where the stabilizing pin and magnet plate will be attached. 5. Insert the rail into the Rail Guide B. 6. Protrude the leading edge of the rail out about 60 mm to the right from the right end of the machine.

NOTE If the rail is pulled out more than necessary, it is caught by the flat spring fitted to the machine as it is brought back into the original position. 4583U016AA 4684U065AA 2. Attach the enclosed stabilizing pin and magnet plate with the enclosed screws A to the left side of the machine as shown. 7. Insert the spacer that comes with the finisher into the rail. @@8. @@NOTE Insert the rail until it snaps into place. @@@@. @@@@. Is the horizontal transport unit not extremely tilted? @@@@. @@Push the horizontal transport unit in. @@3. @@Secure the horizontal transport unit with the lock.

@@@<Two rear casters> If the stabilizing pin is too high: Turn the bolt clockwise If the stabilizing pin is too low: Turn the bolt counterclockwise <Two front casters> If the magnet plate is too high: Turn the bolt clockwise If the magnet plate is too low: Turn the bolt counterclockwise 4684U069AA 1. Remove the connector covers from the horizontal transport unit and the machine. 2. Connect the hookup cord to the horizontal transport unit and the machine. 4684U068AA 4643U022AB 3. Secure the hookup cord of the Horizontal Transport Unit using the cord clamp (large) of the finisher. 5. If the finisher tilts toward the machine, check the following: a · Are distances a and b equal? b \* 4684U067AA If a and b are not equal, refer to step 4 above and turn the adjusting bolt (lower bolt) as indicated to adjust the tilt of the finisher. Securing bolt Adjusting bolt 6. After the adjustment is finished, without turning any of the adjusting bolts (lower bolts), tighten the four securing bolts (upper bolts).

7. @@@@. 2. Disconnect the two hookup cords. 3. Remove the horizontal transport unit from the finisher, and then place it on top of the machine. 4. Carefully pull the finisher away from the machine. 5. Slide the rail under the machine, and then remove it from the right side of the machine. 4684U076AA C4651U020AA 7.



[You're reading an excerpt. Click here to read official KONICA MINOLTA FS-501 user guide](http://yourpdfguides.com/dref/594187)  
<http://yourpdfguides.com/dref/594187>